

All audio sources will be transmitted, TV, DVD, CD, MP3 or external video sources. To disable this you may press the remote control or enter the menu as shown above and select 'Disable'

FM transmitter emission frequency: 88.1MHz; 88.3MHz; 88.5MHz; 88.7MHz; 88.9MHz