

If you have questions concerning the operation of this Whistler product please call:

Customer Service

1-800-531-0004

Monday - Friday
8:00 am - 5:00 pm CT

or visit our website
www.whistlergroup.com

Please keep the receipt in a safe place. You may register your product online at www.whistlergroup.com

For warranty verification purposes, a copy of your dated store receipt must still accompany any unit sent in for warranty work. If the unit is returned without a dated store receipt, the unit will be processed as a standard warranty service charge applies.

Note: Your warranty period begins at the time of purchase. The warranty is validated only by the dated store receipt! Now is the time to record the serial number of the unit in the space provided in the warranty section of the manual.

OPERATION

Compass Calibration Set-up
The unit will need to be calibrated in order for the compass to provide accurate readings. To calibrate the unit, perform the following procedure:

1. Mount the unit level in the center of the vehicle's windshield in which it will be used. Make sure there are no other magnetic sources near the detector (i.e., speaker).

2. Select a large clear area (parking lot or field) without any power lines.

3. While parked, press both volume buttons simultaneously until unit displays:

CAL MODE

4. Drive vehicle slowly in at least two complete circles. If calibration does not automatically finish press both volume buttons simultaneously to complete calibration. The unit will beep twice and display, for example:

CAL DONE

NE 45

Note: If unit mounting is relocated in the vehicle, (i.e., rear to windshield mounting or dash mounting), or if the unit is moved to another vehicle, you must recalibrate the compass.

- 8 -

INTRODUCTION

Dear Whistler Owner,

For many of us, a vehicle is more than just transportation. It can be a mobile office, communications or entertainment center, or simply an expression of our personality. Whistler products are designed to make the time you spend in your vehicle more productive, more fulfilling, safer, or just simply more fun. Our mission is to provide products that improve your driving experience.

Our new units offer not only bold new styling but also many features not found on other detectors at any price. We start with a proven detector circuitry with All Band™ and added top-of-the-line features such as:

- **Whistler's exclusive Safe Driving System** Incorporates the Safety Warning System (SWS), keeping you informed of road hazards as well as our unique Stay Alert system, it tests your alertness on long solo trips.
- **High Visibility Text Display** - Shows laser-radar information, VG-2 alerts, SWS messages and detector settings.
- **Real Voice®** - (1753 only) allows you to keep your eyes on the road.
- **Digital Compass** - (1763 only) provides cardinal points and direction in 5 degree increments.

Even though these units are packed full of features, they're still very easy to use. To fully utilize your unit's potential, we recommend reading this entire manual or visit our FAQ page on our web site www.whistlergroup.com.

Note: On 1763 model the compass must be calibrated before use! See Compass Calibration set-up section.

Enjoy your new Whistler and please drive safely.

Sincerely,

The Whistler Group, Inc.

OPERATION

Power On and Self-Test
Each time your Whistler detector is turned on, an automatic self-test sequence confirms that the speaker and visual displays are functional.

Press Power or apply Power.
Display reads:

WHISTLER

KA 9

LASER

SR ON

VG2 OFF

B SVR ON

HIGHWAY

COMBO

Self-Test Display for 1763 Model

Memory / Beep Confirmation
All features selected (except Stay Alert and Quiet) are retained in memory. Each time a button is pressed one beep confirms feature "on", two beeps confirm feature "off".

Audio Level Adjustment
The audio level can be adjusted high to low, or low to high, in eight steps: (0) is no audio level, (7) the highest, (8) for 1753.

Press Volume ▲ up to increase audio level.

Press Volume ▼ down to decrease audio level.

As audio level is adjusted, beeps are provided and the display indicates volume level. 1763 example shown:

VOL 0 VOL 8

No Audio Level Highest Level B

- 9 -

TABLE OF CONTENTS

Topic	Page
Model Features Summary	3
• Features Listing of 1753 / 1763	4 - 5
• Installation	6 - 7
• Mounting Guidelines	5
• Windshield Mounting	6
• Power Connection and Fuse Replacement	7
Operation	8 - 16
• Compass Calibration Set-Up Operation	8
• Power On And Self-Test	9
• Memory / Beep Confirmation	9
• Audio Level Adjustment	9
• Integrated Real Voice®	10
• Compass Mode	10
• Auto Quiet (Quiet Mode)	10 - 11
• City Mode	11 - 12
• Dim/Dark Mode	12
• Engaging / Disengaging VG-2 Detection	13
• Stay Alert	13
• Option Select Mode	14
• Teach / Tutorial Mode	16
• Vehicle Battery Saver Mode	16
Radar, Laser and VG-2 Alerts	17
• Radar Alert	17
• Pulse Protection®	17
• Laser Audio / Visual Alerts	17
• Safety Warning System®	18
• VG-2 Audio / Visual Alerts	19
• Alert Priority	19
• Reset Features	20
• Care and Maintenance	20
Troubleshooting Guide	21
Are Detectors Legal?	22
Speed Monitoring Technologies	23
• Radar Alerts	23
• Laser Facts	24
• Other Speed Detection Systems	25
• Radar Detector Packages	25
• Whistler Information	26 - 28
Specifications	29
Accessories	30

OPERATION

Integrated Real Voice®
When selected, Real Voice™ will be used to articulate the following:

1. Band Identification

2. Safety Warning System messages

Note: In certain cases the voice message does not replicate the text message.

3. Feature Selection

Compass Mode
The 1763 is programmed from the factory in "Combo Mode". Combo mode means that the unit provides both readings as well as detecting laser/radar signals. Through the "Option Select Mode", either laser / radar or compass features can be turned off meaning, Radar equals detection of all police bands and laser; Compass equals no detection of police laser/radar.

Note: The unit must be calibrated to provide accurate compass readings. See Compass Calibration Set-up section on page 8.

Auto Quiet Mode
Auto Quiet reduces the selected audio level to level (1) approximately 5 seconds after a radar or safety radar signal is detected. The alert for any new signal within 20 seconds will resume at level (1). Auto Quiet does not affect VG-2 or laser alerts.

Press City/Menu (before a signal is detected) to engage Auto Quiet. Display reads:

AUTO

QUIET

Once the Auto Quiet mode is engaged, you may cancel the audio alarm by pressing Quiet.

Press Quiet (when the unit is not quieting) to cancel Auto Quiet mode.

- 10 -

WHISTLER FEATURES

1753 FEATURES

- All Band™
- Real Voice® Alerts
- Text Display
- 360° Total Perimeter Protection
- Patented VG-2 Cloaking Technology™
- Safety Warning System™
- 3 City Modes
- Vehicle Battery Saver
- Setting Saver
- Stay Alert™
- Tutorial Mode
- Quiet Mode

1763 FEATURES

- All Band™
- Digital Compass Headings
- 360° Total Perimeter Protection
- Patented VG-2 Cloaking Technology™
- 3 City Modes
- Vehicle Battery Saver
- Setting Saver
- Stay Alert™
- Tutorial Mode
- Quiet Mode

- 3 -

OPERATION

Quiet Mode
Quiet cancels audio during an alert and any new alert within 20 seconds. After 20 seconds, approximately 2 beeps are provided on any new alert and unit then resumes quiet.

Press Quiet to cancel the audio.

Press Quiet a second time during an alert to restore the standard audio alert pattern; or turn the unit off, then on.

City / City 1 / City 2 Mode
Whistler's Three Stage City Mode is designed to reduce the annoyance of automatic door openers, intrusion alarms and other devices which share frequencies with police radar.

Press City to engage City. Display reads:

CITY

Pressing City a second time engages City 1. Display reads:

CITY 1

Pressing City a third time engages City 2. Display reads:

CITY 2

Pressing City a fourth time cancels City, City 1, and City 2. Display reads:

HIGHWAY

- 11 -

WHISTLER FEATURES

- Whistler's ergonomic and user-friendly design provides a new level of operating convenience. Special features include:
1. **Bracket Release Button** - Provides quick and easy release of the mounting bracket.
 2. **Speaker** - Provides distinct audio warnings for X, K, Ka band radar, safety radar, laser and VG-2.
 3. **Mounting Bracket Location** - Slot holds mounting bracket firmly.
 4. **Radar Antenna** - Compact, high-efficiency antenna receives radar signals.
 5. **Laser Antenna (Front)** - High gain optical lens provides increased sensitivity and field of view.
 6. **Laser Antenna (Rear)** - An integrated optical waveguide provides superior detection of laser signals transmitted from behind.
 7. **City/CITY1/CITY2 Button** - Switches out of highway mode to reduce the annoyance of false alerts typically encountered in urban driving areas.
 8. **Quiet Button** - Pressing QUIET before a signal is detected engages Auto Quiet Mode which automatically reduces the audio level after the initial warning to a low audio level setting. Pressing QUIET during a radar/laser encounter silences audio alerts, while allowing visual alerts to keep you informed.
 9. **Power/Dim/Dark Button** - Turns unit on/off and engages Dim/Dark mode (press and hold for 2 seconds).
 10. **Volume Up/Down Buttons** - Adjust volume up or down. Pressing both buttons enters compass calibration mode (1763 only).

- 4 -

OPERATION

In City Mode, weak speed/radar radar signals give an initial alarm of two beeps, and then remain quiet unless the signal becomes very strong. When the signal strength increases, two additional beeps are provided. In City 1 Mode, only the X band sensitivity is lowered. In City 2 Mode, X-band is not detected. CAUTION: When selecting this mode, some towns/small cities may still be using X band radar.

If Auto Quiet is engaged in City 1 or City 2 modes and the unit receives a strong radar signal, the unit performs the Auto Quiet feature. City Modes do not change the audio alert for laser or VG-2.

Dim / Dark Mode
Dim/Dark Mode reduces the illumination of the display.

Press and hold Power for 2 seconds to reduce illumination to a Dim setting. Display reads:

DIM

Pressing and holding the power button for 2 seconds a second time engages Dark Mode. Display reads:

DARK

Dim or dark can be engaged during an alert. In Dark Mode, the display goes dark for as long as a signal is being detected and for 2 seconds after, then the display returns to the dimmer setting.

Pressing and holding the power button a third time restores full illumination to the display.

- 12 -

WHISTLER FEATURES

11. **High Visibility Text Display** - Provides distinct visual confirmation of signals detected such as VG-2 Laser, X-Band, K-Band, Ka-Band, Highway Mode, City Mode, Signal Strength, and Compass.
- Note: Not all units have all features described.

INSTALLATION

Mounting Guidelines
Mount the unit as low and level as possible near the center of the windshield. Unit must be level for compass to function properly.

Do not mount your unit behind wipers, ornaments, mirrored sunscreens, etc. These obstructions have metal surfaces which can affect radar and laser signals and reduce critical warning time. (Regular tinted glass does not affect reception.)

Some windshields have an "interlayer" or "electrochromic" type coating, which affect radar signals. Consult your dealer or the owner's manual supplied with your vehicle to determine if your windshield has this coating.

Avoid placing unit in direct contact with windshield.

To reduce the possibility of theft, conceal your unit when not in use.

- 5 -

OPERATION

Engaging/Disengaging VG-2
See option select mode to turn this feature on.

Stay Alert Feature
The Stay Alert feature is designed to test a driver's alertness. It engages (when unit is not alarming):

Press and hold City for approximately 2 seconds. Release button during or immediately after the alert is given. Display reads:

RU ALERT

Within 30-60 seconds two beeps are sounded; to show alertness, the driver must press either the City or Quiet button within 3-5 seconds. If the button is pressed within 3-5 seconds, the cycle is repeated.

If a button was not pressed within 3-5 seconds alarm sounds and the display reads:

GET REST

Press Power to exit.

WARNING!!! Stay Alert is NOT intended as a substitute for adequate rest. You should NOT operate a vehicle if you are drowsy. During extended periods of vehicle operation, you should take frequent breaks. Improper reliance on the Stay Alert feature may result in vehicle damage, personal injury or death. NEVER OPERATE A VEHICLE IF YOU ARE DROWSY.

- 13 -

INSTALLATION

- Windshield Mounting**
- Install the two suction cups and rubber bumper onto the bracket by fitting them into their holes.
 - Press the suction cups onto the windshield at the location you have chosen. IMPORTANT: Some newer cars have a plastic safety coating on the inside of the windshield. The suction cups may leave permanent marks on this type of surface. To find out if your vehicle has this type of windshield, check the owner's manual or ask your dealer. We recommend that you do not leave the suction cup bracket on the window in direct sunlight. If the detector is removed, this may cause blistering of the dash in some vehicles.
 - Slide the detector onto the bracket until it locks into place.
 - If necessary, the unit may be leveled by bending the windshield bracket. Press the bracket release button and remove the detector before bending.



- 6 -

OPERATION

Option Select Mode
Entering Option Select Mode allows you to customize options such as Tone Select, Compass Select, Abbreviated Power Up Sequence and VG-2 Mode. When selecting options, the ▲ or ▼ or quiet must be pressed within 20 seconds or options mode will automatically be exited. To enter:

Press: Quiet

Display Reads:

Press to Change:

Option:

For 2 Seconds

CO/COMB

▲ or ▼

Combo = Radar and Compass
Radar = Radar Only
Compass = Comp

2nd Time

TO/NE3

▲ = yes
▼ = no

Tone 1, 2, or 3
(1 Different X, K, or Ka pattern)

3rd Time

TEST

▲ = ON
▼ = OFF

X, K, Ka Audio tones
(beep during powerup)

4th Time

VG-2

▲ = ON
▼ = OFF

Turns VG-2 On
Turns VG-2 Off

5th Time

SR ON

▲ = ON
▼ = OFF

Turns SWS On
Turns SWS Off

6th Time

B SVR ON

▲ = ON
▼ = OFF

Battery Saver On
Battery Saver Off

- 14 -

INSTALLATION

- Power Connection**
- Plug the small end of the power cord into the unit's power jack.
 - Plug the large end into the vehicle's cigarette lighter.
- Fuse Replacement**
- The lighter socket plug is equipped with a replaceable 2 amp 3AG fuse located behind the silver tip. To replace the fuse, carefully unscrew the tip of the plug. (IMPORTANT: Unscrew slowly. The tip contains a spring which may fly out when disassembling.) Insert the new fuse with the spring and screw on the tip. With use, screw cap on plug may loosen. Retighten occasionally.



Unscrew the tip of the lighter socket plug carefully when replacing the 2 amp fuse.

- 7 -

OPERATION

1753 Chart

Press: Quiet	Display Reads:	Press to Change:	Option:
For 2 Seconds	TO/NE3	▲ or ▼	Tone 1, 2, or 3 (1 Different X, K, or Ka pattern)
2nd Time	TEST	▲ = yes ▼ = no	X, K, Ka Audio tones (beep during powerup)
3rd Time	VG-2 (OFF)	▲ = ON ▼ = OFF	Turns VG-2 On Turns VG-2 Off
4th Time	SR ON	▲ = ON ▼ = OFF	Turns SWS On Turns SWS Off
5th Time	VO/CE	▲ = ON ▼ = OFF	Real Voice engaged (Real Voice Disabled)
6th Time	B SVR	▲ = ON ▼ = OFF	Battery Saver On Battery Saver Off

* Factory Settings.

Press Power anytime to exit.

- 15 -

OPERATION

Teach/Tutorial Mode
Provides simulated alerts for each type of signal.

Press City and Quiet simultaneously and release. Display reads:

TEACH

Press Power to exit.

Vehicle Battery Saver Mode
The Vehicle Battery Saver Mode automatically shuts off the detector within 3 hours if you forget to turn it off. The timer is reset if the detector is turned off, unplugged or any button is pressed before the 3 hours have expired. The detector will alert you with an audible and visual warning before it shuts off. Display reads:

PWR OFF

During this warning you can reset the unit by pressing any button. This will reset the timer.

If the unit has automatically turned itself off, press the Power button to turn the unit back on. You can manually engage the Vehicle Battery Saver Mode by pressing and holding the City button until one beep is heard.

Refer to "Option Select Mode" for instructions for deactivating battery saver mode feature.

- 16 -

RADAR ALERTS

Speed Radar Audio / Visual Alerts
When X, K or Ka is detected the band ID and signal strength is displayed. The audio alert is continuous and has a geiger counter-like pattern. The faster the beep the closer or stronger the radar source. Example:

1 = weak signal, 9 = strong signal

KA 9

Pulse Protection®
When a pulse type signal (instant on strong signal) is detected an urgent 3 second audio warning is sounded and the display reads:

PULSE

After 3 seconds standard alert pattern continues.

- 17 -

LASER ALERTS

Laser Audio / Visual Alerts
When a laser signal is detected the word "Laser" and signal strength is displayed, the audio alert is continuous for a minimum of 3 seconds. Example:

LASER

The more "lll" the closer the laser source.

- 18 -

SAFETY RADAR

In communities where transmitters are located, the Safety Warning System™ displays over 60 text messages. When Safety Radar is detected the audio alert is geiger counter-like.

Safety Warning System Text
Example: Poor - Road - Surface.

CAUTION

POOR

ROAD

SURFACE

Note: Not all areas have Safety Warning System™ transmitters.

- 18 -

VG-2 ALERTS

VG-2 Audio/Visual Alerts
Note: You must turn this feature on in option select mode before it will detect VG-2.

When a VG-2 signal is detected, the detector "hides" its own radiated signal and becomes undetectable by the VG-2.

VG2 VG2

Text message confirms detection of VG-2.

Every 30 seconds, the detector checks for a VG-2 signal. If a VG-2 signal is still present, the unit continues to hide and repeats the VG-2 alert. If no signal is detected, two beeps are provided, indicating an "all clear" condition. During VG-2 Alert X, K, and Ka band signals cannot be received (Reference page 25 for VG-2 information).

Alert Priority
When two or more signals are received at the same time, the alert priority is:

1. Laser

2. VG-2

3. Speed Radar

4. Safety Radar

Example:
If X band is alerting, then suddenly VG-2 is detected, the VG-2 signal will override the X band alert.

- 19 -

SPEED MONITORING TECHNOLOGIES

Laser Facts
It is well documented that many radar guns cannot reliably provide the speed of a targeted vehicle that is traveling in a group of vehicles. In contrast, a laser gun can target a specific vehicle out of a line of traffic and determine its speed.

The advantage of laser over radar in terms of target identification is the result of the laser gun's narrow beam. A radar transmission can cover more than a four-lane highway at a distance of 1,000 feet, compared with a laser transmission which covers about 3 feet at the same distance.

For best protection, keep these points in mind:

Because your vehicle's license plate or headlights are the laser gun's primary targets, mounting your Whistler detector on the dashboard can improve laser detection at short range.

Do not follow closely behind any vehicle you can not see through. If you can't see past a vehicle ahead of you, chances are your detector won't either.

The receiving range of your laser detector will not be the same as a radar detector. Laser guns are most often used at short range.

Whistler Laser/Radar detectors receive all current laser guns which operate at a laser wavelength of 905 +/- 10nm.

Pro Laser™ II III

LT1 20-20

Ultra Lyte

It is the responsibility of the individual radar detector owner to know and understand the laws in your area regarding the legality of the use of radar detectors.

- 24 -

SPEED MONITORING TECHNOLOGIES

Other Speed Detection Systems
Several techniques other than radar or laser are used to measure vehicle speeds. When these methods are being used, no detector can provide a warning. These techniques include:

Pacing - A patrol car drives behind you and matches your driving speed.

Vascar / Aircraft - The time it takes a vehicle to travel a known distance is measured.

Radar Detector Detectors (VG-2)
The Interceptor VG-2, or simply VG-2, is a microwave receiver used by police to detect signals radiated by the local oscillator of a radar detector. Because its purpose is to identify persons driving with radar detectors, the VG-2 is known as a "radar detector detector".

The VG-2 is the primary tool used by the police to identify radar detector equipped vehicles. If caught, in a state where detectors are illegal, (see page 22), drivers risk losing their radar detector and receiving a fine. In addition, instant-on radar is almost always used in combination with a VG-2, leaving unsuspecting motorists vulnerable to receiving two tickets - one potentially for speeding, the other for possession of a detector. Having a radar detector capable of detecting the VG-2 may alert you to the presence of a speed trap.

For more information on speed monitoring technologies, please visit our FAQ page on our website.

www.whistlergroup.com

It is the responsibility of the individual radar detector owner to know and understand the laws in your area regarding the legality of the use of radar detectors.

- 25 -

WARRANTY INFORMATION

Consumer Warranty
This Whistler Radar/Laser detector is warranted to the original purchaser for a period of one year from the date of original purchase against all defects in materials and workmanship. This limited warranty is void if the unit is abused, modified, installed improperly, if the housing has been removed, or if the serial number is missing. There are no express warranties covering this product other than those set forth in this warranty. All express or implied warranties for this product are limited to one year. Whistler is not liable for damages arising from the use, misuse, or operation of this product.

Service Under Warranty
During the warranty period, defective units will be repaired without charge to the purchaser when returned below. Units dated without a dated store receipt will be handled as described in section "Service Out Of Warranty." Due to the specialized equipment necessary for testing a radar/laser receiver, there are no authorized service stations for Whistler brand detectors other than the factory.

When returning a unit for service under warranty, please follow these instructions:

1. Ship the unit in the original carton or in a suitable sturdy container, fully insured, with return receipt requested to:

Whistler Repair Dept.
1201 North Divisadero Rd. • Rogers, AR, 72756

Please allow 3 weeks turnaround time.

IMPORTANT: Whistler will not assume responsibility for loss or damage incurred in shipping. Therefore, please ship your unit insured with return receipt requested.

- 26 -

WARRANTY INFORMATION

Service Under Warranty (Continued)

2. Include with your unit the following information, clearly printed:

Your name and street address (for shipping via UPS).

Daytime telephone number. (No P.O. Box please).

E-mail address (if applicable).

A detailed description of the problem (e.g., "Unit per forms self test but does not respond to radar").

A copy of your dated store receipt or bill of sale.

3. Be certain your unit is returned with its serial number. For reference, please write your unit's serial number in the following space: _____

Units without serial numbers are not covered under warranty.

IMPORTANT: To validate that your unit is within the warranty period, make sure you keep a copy of your dated store receipt. You may register your warranty online at www.whistlergroup.com, however, for warranty verification purposes, a copy of your dated store receipt must accompany any unit sent in for warranty work.

There are no authorized service stations for Whistler brand detectors other than the Whistler factory.

- 27 -

RESET FEATURES

Reset Features
All user features can be reset to factory settings.

Unplug Power Cord from unit.

Press and hold Power and Quiet.

Wait for 2 beeps.

Release Power and Quiet buttons.

Unit is now reset.

1. Audio to level (4).

2. Display reads Highway.

3. Dim/Dark Mode to full illumination of display.

4. Auto Quiet Mode OFF.

5. VG-2 Detection Mode OFF.

6. Combo ON (1763 only).

7. Safety ON.

8. Vehicle Battery Saver On.

9. Full Power Up Sequence.

10. Default TONE 3.

11. Unit ON/OFF.

Note: Must calibrate compass after resetting features (1763 only).

Care and Maintenance

Do not spray water, cleaners or polishes directly onto the unit. The spray may penetrate through the openings and damage the unit. Also, do not use any abrasive cleaners on the unit's exterior.

- 20 -

TROUBLESHOOTING

PROBLEM:
No display or audio.

Check fuse in Whistler plug; replace if necessary with a 2 amp 3AG type.

Check fuse for lighter socket; replace if necessary.

Make sure lighter socket is clean.

Problem:
Unit alarms when vehicle hits bumps.

Check for loose lighter socket; tighten and clean.

Check connections at both ends of power cord. Substitute another cord to determine if cord is defective. Return defective cord to the factory.

PROBLEM:
Unit alarms when using vehicle equipment or electrical accessories (brakes, power mirrors, windows, directional lights, etc.).

Vehicle's electrical system, including battery and alternator, may have electrical noise. Install a filter capacitor (470µF, 25 volt or larger capacitance value) on the back of the lighter socket.

PROBLEM:
Audio alerts are not loud enough.

Cancel Auto Quiet Mode or City Mode.

Check audio level setting (see page 9).

PROBLEM:
No X band signals.

Cancel City 2.

PROBLEM:
Unit gives laser alert when accelerating.

Possible bad or low quality distributor cap. Replace with high quality cap.

- 21 -

MODE DETECTORS LEGAL?

If difficulties occur which cannot be solved by information in this Troubleshooting Guide or our FAQ page at www.whistlergroup.com please call 1-800-531-0004 before returning your unit for service.

In Most States YES!

Laser/radar detectors are legal in every state (with the exception of Virginia and Washington, D.C., which have local regulations restricting the use of radar receivers in any vehicle) when used in automobiles or light trucks (under 10,000 lbs.). Similarly, when used in automobiles or light trucks, radar detectors are legal in almost every state. Exceptions are Virginia and Washington, D.C., which have local regulations restricting the use of radar detectors in trucks over 18,000 lbs. and in Illinois in trucks over 26,000 lbs.

- 22 -

ACCESSORIES

The following accessories can be ordered directly from Whistler by calling 1-800-531-0004 or visit our online store at www.whistlergroup.com

Order Code	Description	Price
202138	Visor Bracket	\$6.95
202140	Windshield Bracket Kit	\$9.95
206552	Straight Power Cord (5')	\$14.95
206553	Coiled Power Cord (7')	\$15.95
206880	Hardwire Kit (10') (for wiring to fuse box)	\$9.95
206666	Modular Cord Package (includes coiled and straight cords, and power adapter)	\$17.95
150032	Package of 8 Suction Cups	\$2.95
402081	Dash Pad	\$6.95
206660	Straight Modular Cord and Socket Multiplier	\$11.95
206661	Coiled Modular Cord and Socket Multiplier	\$12.95

* Modular: Interconnecting pieces cord and plug.

Shipping and handling (per order) \$5.00.

Prices are subject to change without notice.

- 30 -

OWNER'S MANUAL

<