



## 8. EUT Detail Photographs


### (1) FRONT VIEW OF EUT (TRANSPARENCY ADAPTER) W/ SCANNER

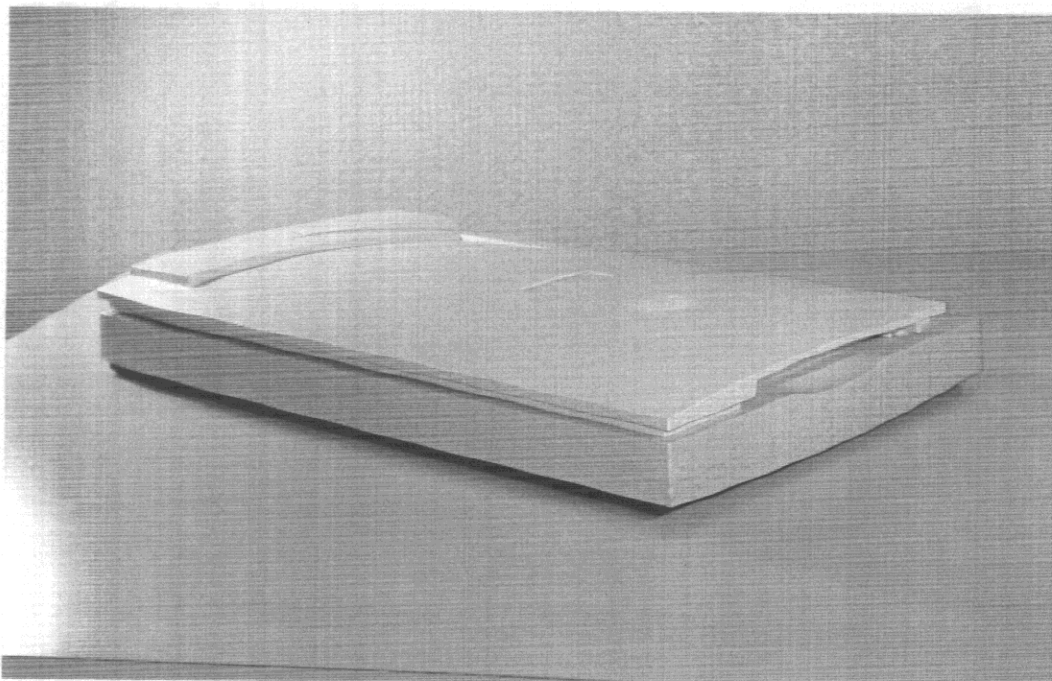


### (2) BACK VIEW OF EUT (TRANSPARENCY ADAPTER) W/ SCANNER

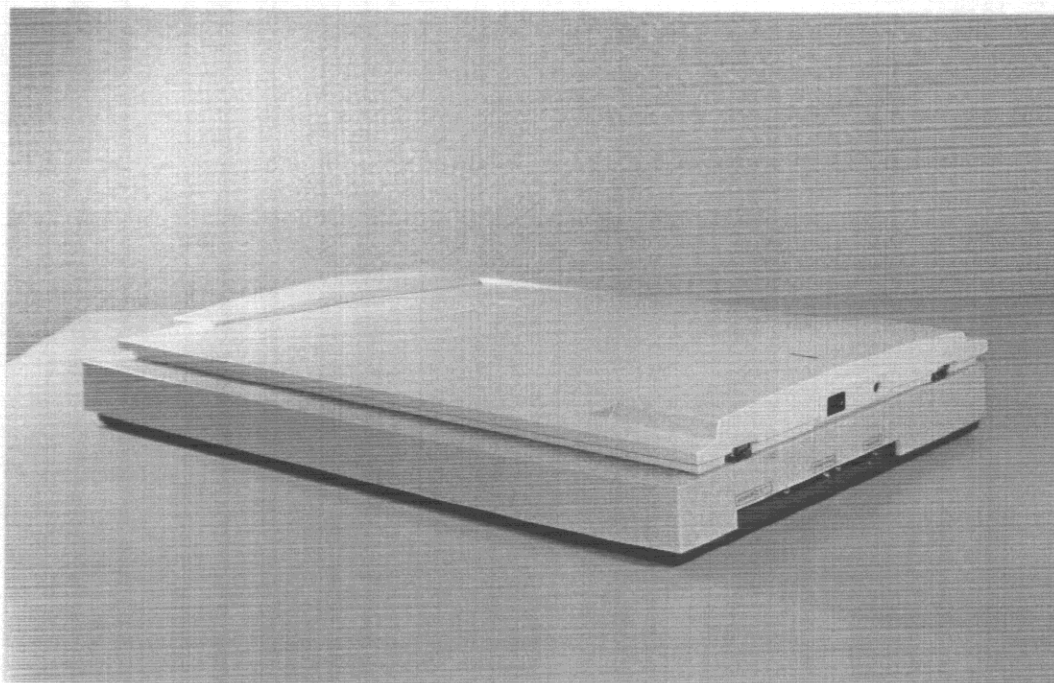


(3) TOP VIEW OF EUT (TRANSPARENCY ADAPTER)

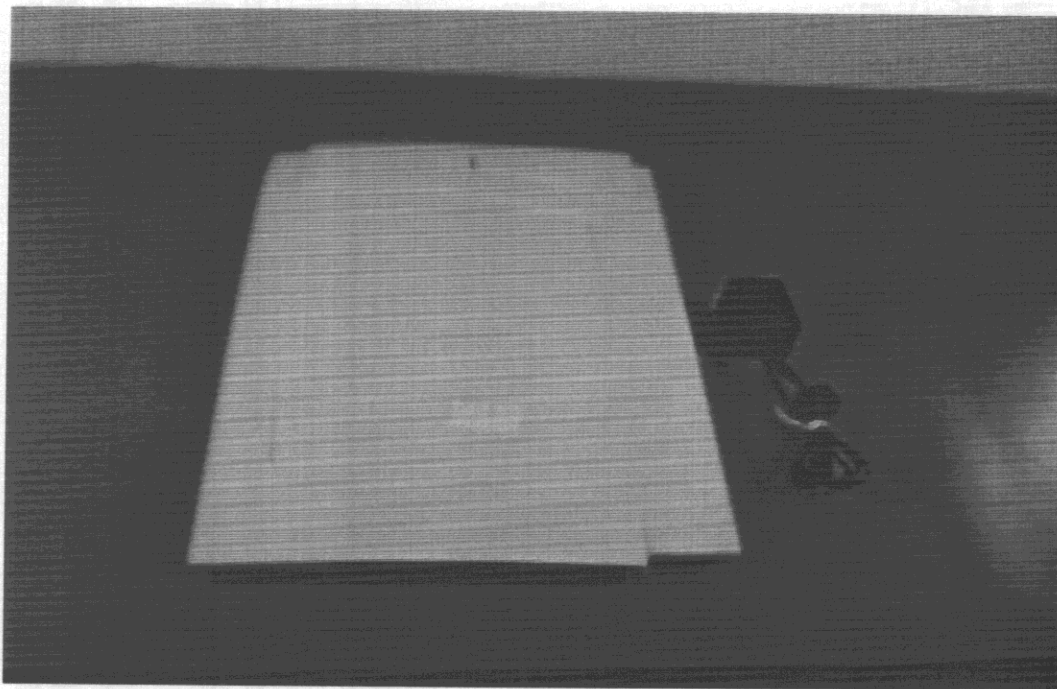


(4) BOTTOM VIEW OF EUT (TRANSPARENCY ADAPTER)

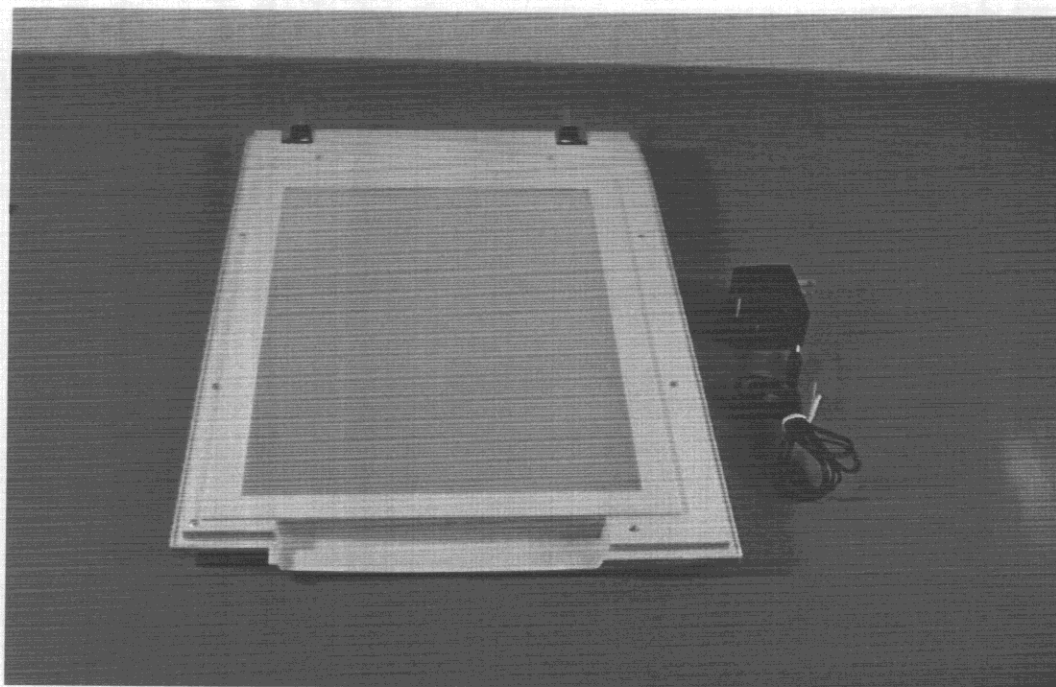


(5) INNER VIEW OF EUT (TRANSPARENCY ADAPTER)

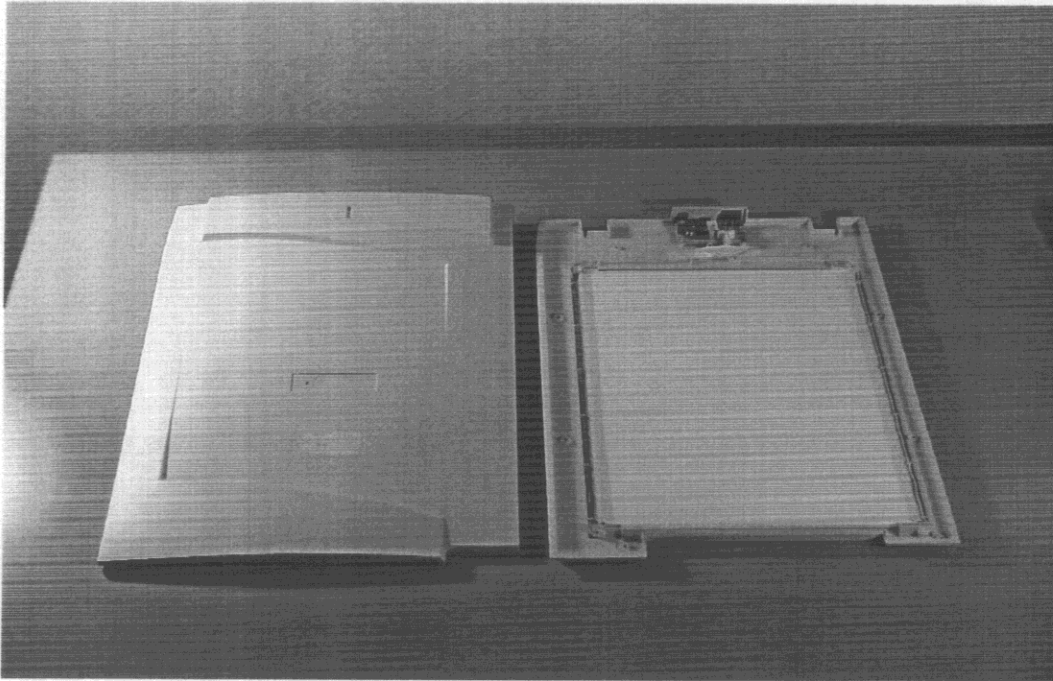


(6) INNER VIEW OF EUT (TRANSPARENCY ADAPTER)

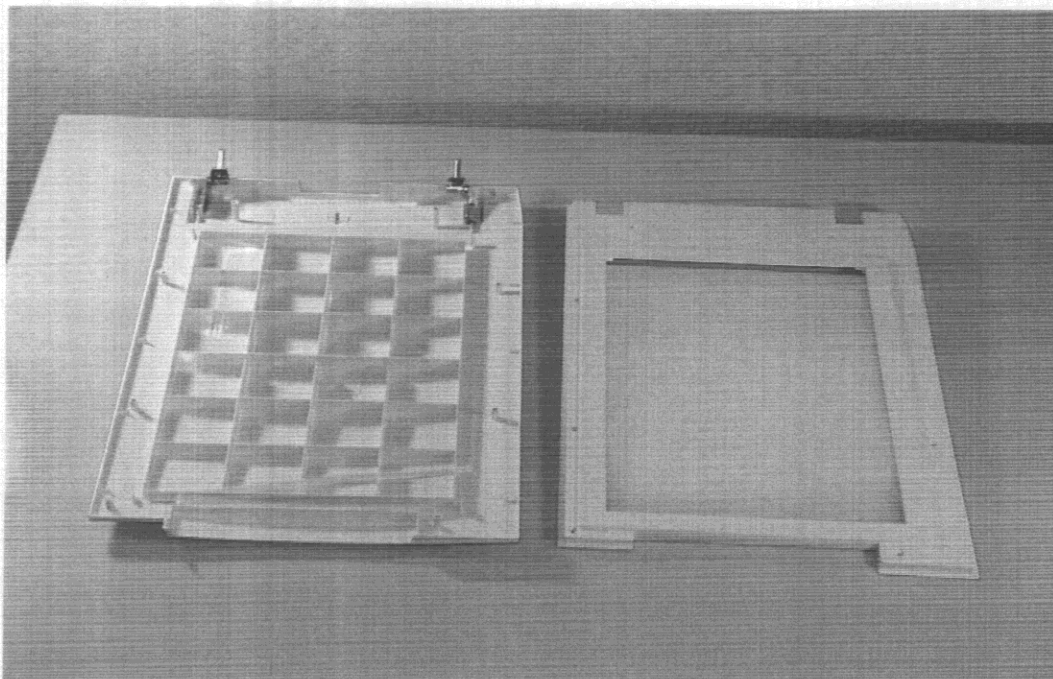


(7) INNER VIEW OF EUT (TRANSPARENCY ADAPTER)

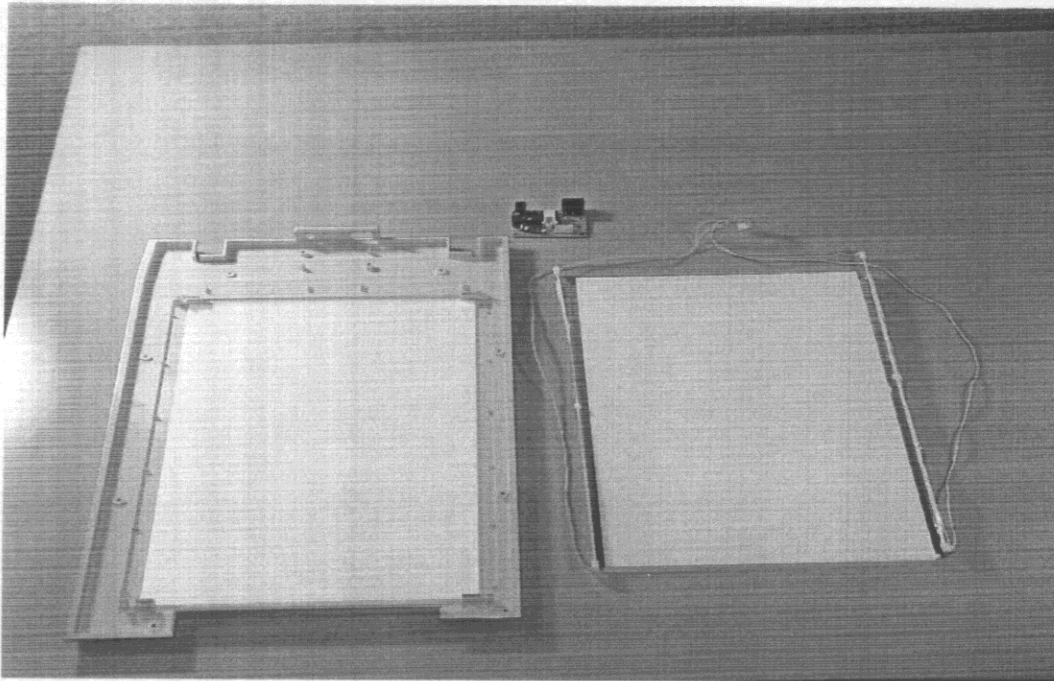


(8) INNER VIEW OF EUT (TRANSPARENCY ADAPTER)

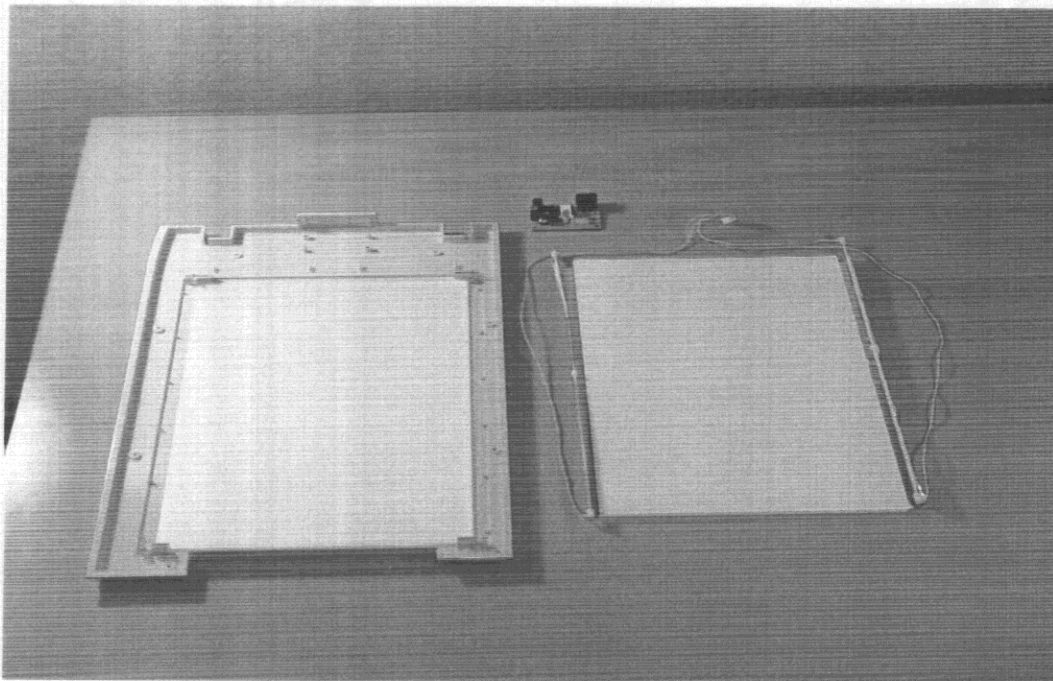

(9) INNER VIEW OF EUT (TRANSPARENCY ADAPTER)

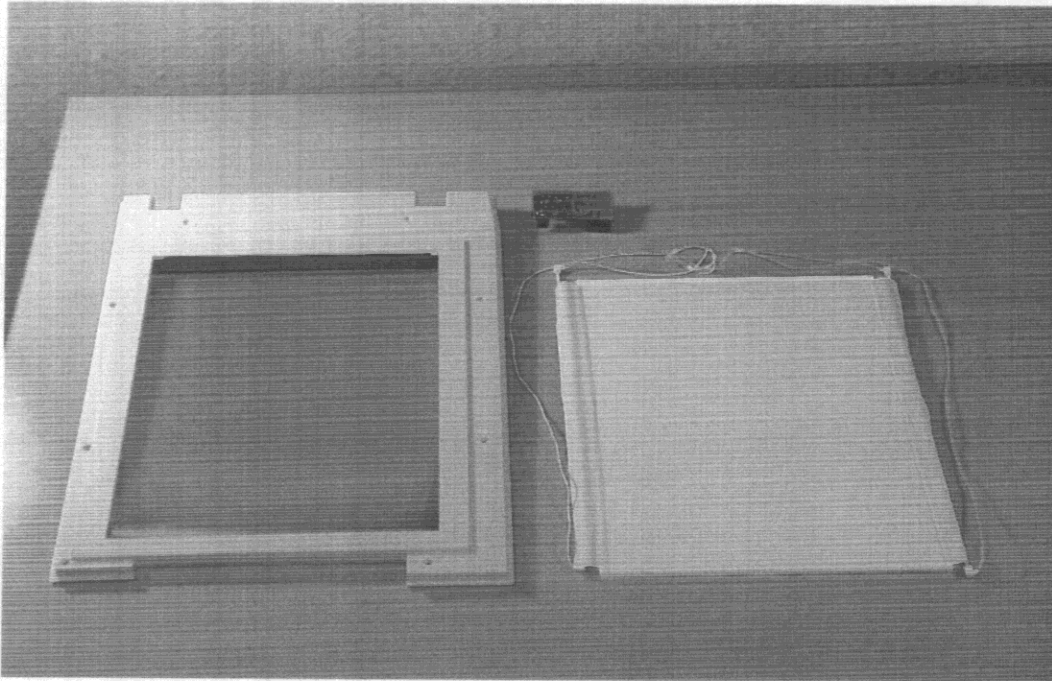

(12) BACK VIEW OF ADAPTOR (YHi) *MODEL YC-1015-15*

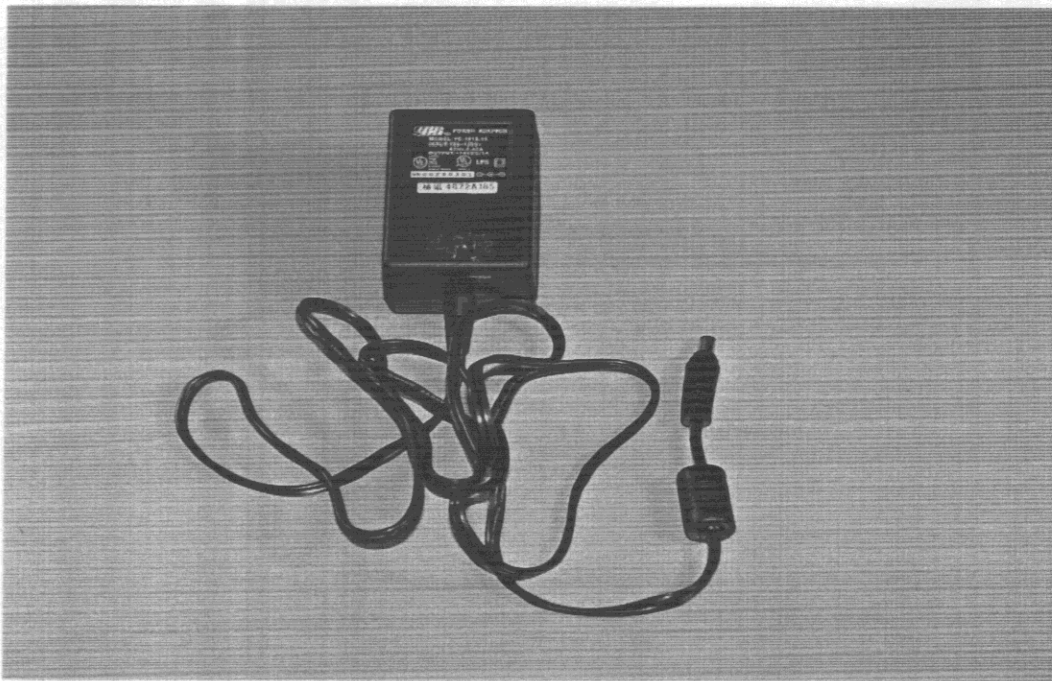

(13) FRONT VIEW OF ADAPTOR (YHi)

