


6.4 EUT Photos - Internal




EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA Open View 1




EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA Open View 2

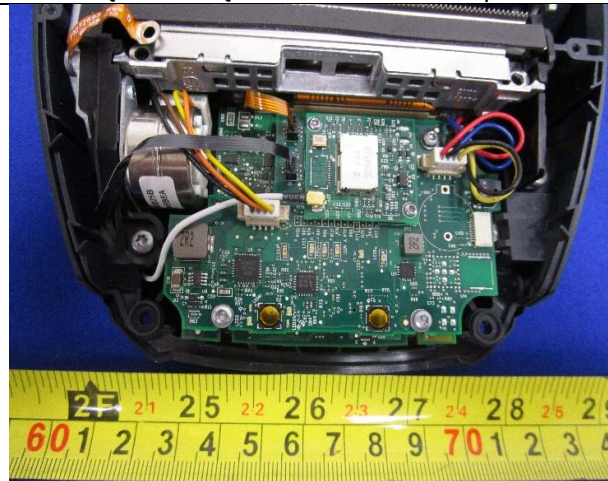

EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA Installed View

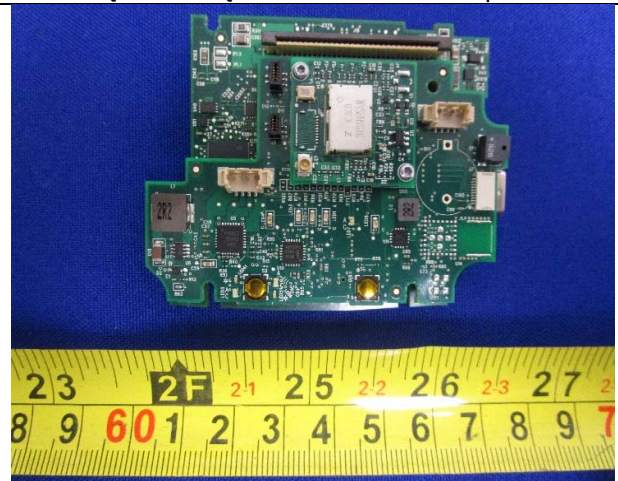

EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA – Top View

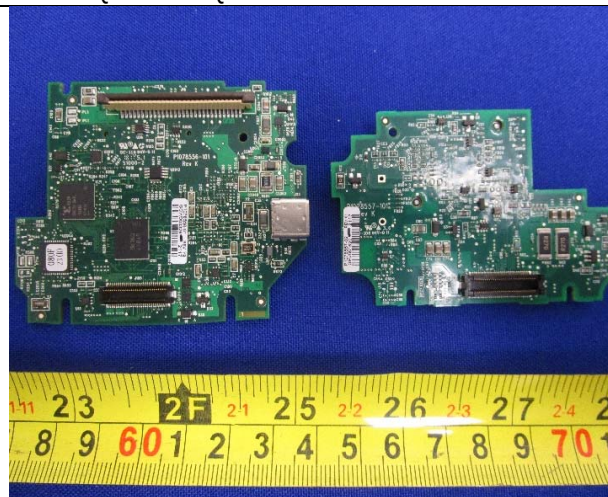


EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA A and B Top




EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA A - Top




EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA A – Bottom View

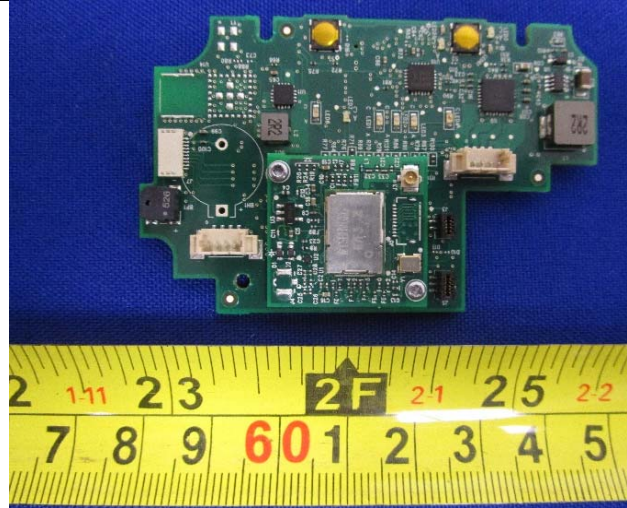


EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA B with Radio Module Top View

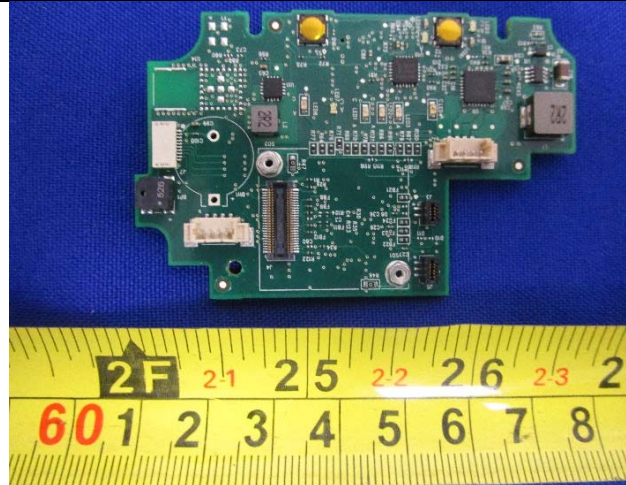

EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA B without Radio Module – Top View

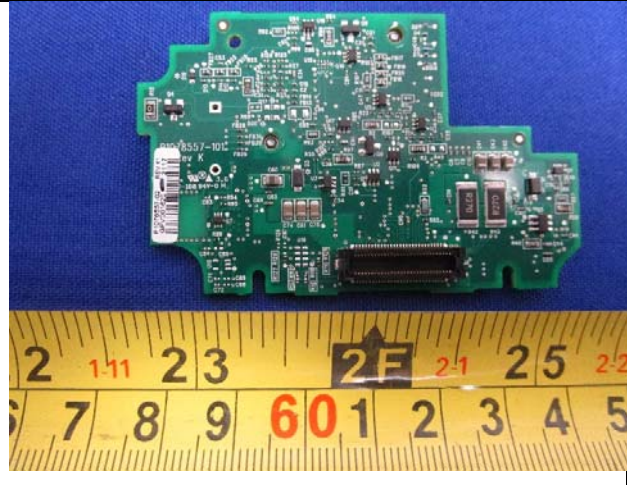

EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 PCBA B – Bottom View

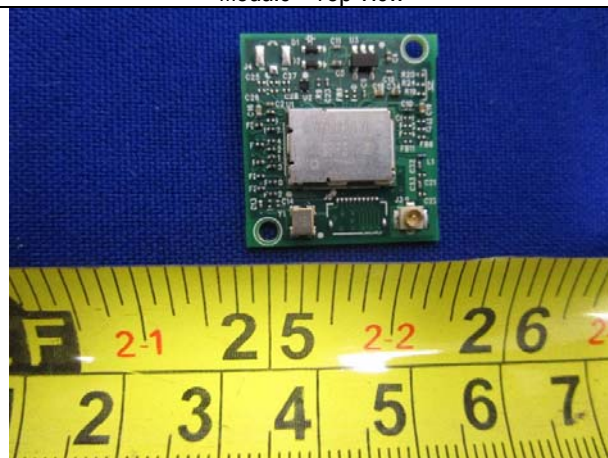

EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 Radio Module - Top view



EUT AC Radio Version
M/N: ZQ320 P/N: ZQ32-A0W01R0-001 Radio Module – Bottom

