



Stripe® Series Thermal Printer

User's Guide





Contents

Introduction

Hello!	1
What's in the Box?	2
Inspecting the Printer	3
Opening the printer	3
Closing the printer	5
Reporting Damage	6

Getting Started

Modes of Printing	7
Attaching Power Supply	8
Loading Roll Media	9
Placing the Roll in the Media Compartment	9
Adjusting the Guides	10
Loading Ribbon	11
Install the Ribbon Supply Roll	11
Install the Take-Up Core	11
Attach and Tighten the Ribbon	12
Auto Calibration	13
Operator Controls	14
Power Switch	14
Feed Button	14
Status Light	14
Printing a Test Label	15
Hooking Up the Printer and Computer	15
Parallel Interface Requirements	16
Interface Cable Requirements	16
Communicating with the Printer	17
Adjusting the Print Width	17
Adjusting the Print Darkness	17
Adjusting the Print Speed	17

Operation & Options

Thermal Printing	19
Replacing Supplies	20
Adding a New Transfer Ribbon	20

Replacing a Partially Used Transfer Ribbon	20
Printing in Peel-Mode	21
Printing on Fan-Fold Media	22

RFID Guidelines

Supported Transponders	24
Tag-it Transponders	24
I•Code Transponders	25
Picotag Transponders	26
ISO-15693 Transponders	27
ZPL II Commands for RFID	28
^WT – Write Tag	28
^RT – Read Tag	29
^RS – RFID Setup	31
^RI – RFID Get Tag Unique ID	31
Sample of RFID Programming	32

Maintenance

 
 
Cleaning	35
Lubrication	35
Replacing the Print Head	36
Removal	36
Assembly	37

Troubleshooting

Resolutions	39
Print Quality Problems	42
RFID Symptoms	44
RFID tags generally not programmed	44
VOID messages are printed across media	44
Nothing is printed	44
Manual Calibration	45

Troubleshooting Tests

Printing a Configuration Label	46
Recalibration	46
Resetting the Factory Default Values	47
Communications Diagnostics	47
Feed Button Modes	48



Introduction

This section describes what you get in your shipping box and provides an overview of printer parts. This section also has procedures that describe how to open and close the printer and report any problems.

Hello!

Thank you for choosing the Zebra® R402™ Printer, a high-quality thermal demand printer with RFID capability manufactured by the industry leader in quality, service, and value—Zebra Technologies Corporation. For over 25 years, Zebra Technologies Corporation has provided customers with the highest caliber of products and support.

 
This manual provides all of the information you will need to operate your printer on a daily basis. RFID specific ZPL II commands are contained in this manual. To create label formats, refer to the ZPL II Programming Guide (part # 46530L). This guide is available by contacting your distributor or Zebra Technologies Corporation.

NOTE: Many printer settings may also be controlled by your printer's driver or label preparation software. Refer to the driver or software documentation for more information.


The Zebra R402 printer, when connected to a host computer, functions as a complete system for printing and encoding “Smart” labels, tickets, and tags. The printer receives instructions from the host computer. Microprocessors continuously monitor these signals along with the inputs received from the control panel and various sensors. The microprocessors interpret this information and control the Zebra R402 printer's mechanical drive, print Head, RFID Subsystem communications, command interpretation, label formatting, and media and ribbon movement.

What's in the Box?


Save the carton and all packing materials in case you need to ship or store the printer later. After unpacking, make sure you have all parts. Follow the procedures for inspecting the printer to familiarize yourself with printer parts so you can follow the instructions in this book.

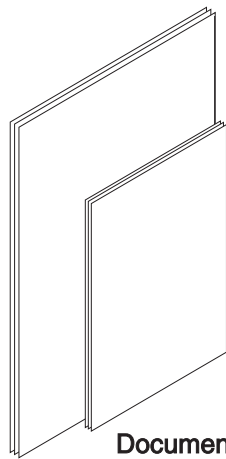


Documentation
and Warranty

 

Cleaning Pen

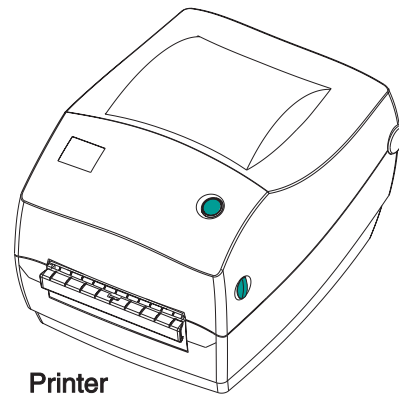 


Printer

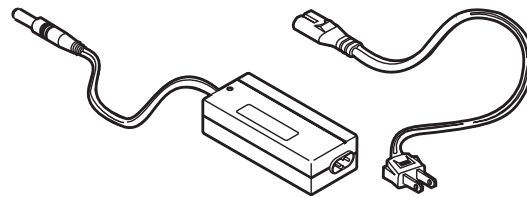 


Power Supply
and Cord

Inspecting the Printer

 Look at the outside of the printer and make sure that all parts are present.

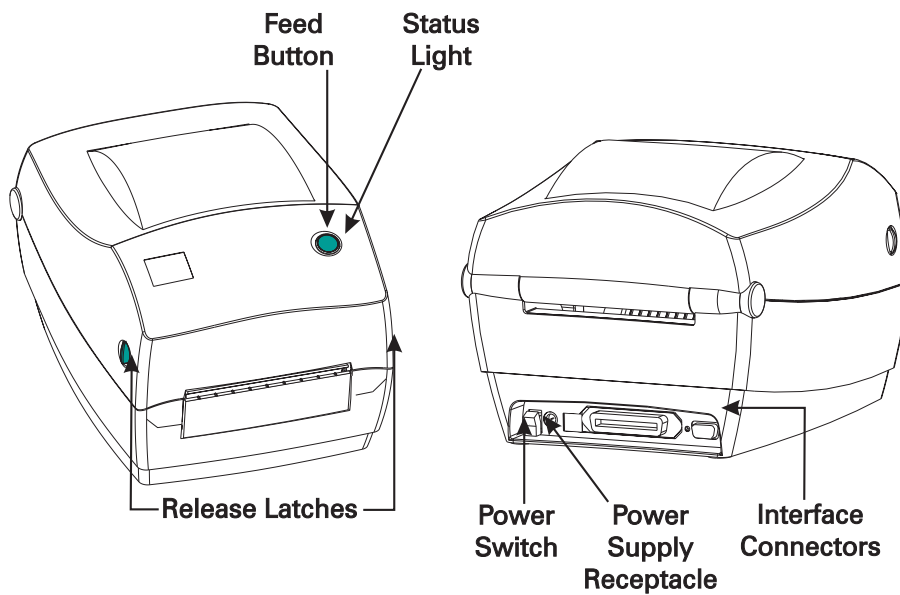

Opening the printer

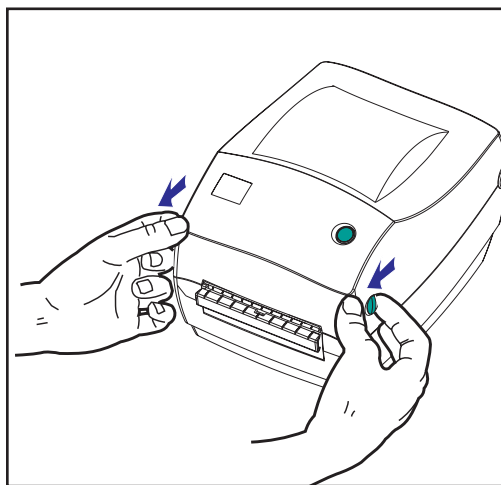 

To access the media compartment, you must open the printer.

Pull the release levers towards you and lift the cover.

INSPECTING THE PRINTER (continued)

After opening the printer, check the media compartment.

