 
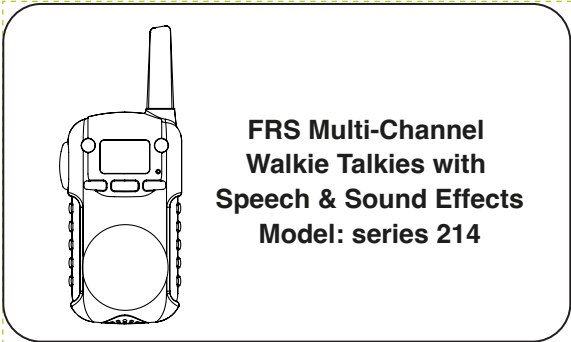 


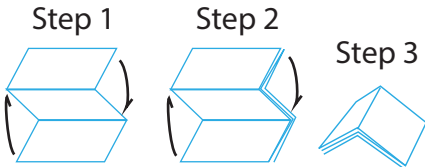

FRS Multi-Channel
Walkie Talkies with
Speech & Sound Effects
Model: series 214

Important Message to Customers

Thank you for purchasing one of our many top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.

For the Best Possible Performance

- Batteries shall be replaced by an adult.
- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Rechargeable batteries are to be removed from the device before being charged.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes into contact with eyes, IMMEDIATELY flush the eyes with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clean water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Do not dispose of batteries in the household trash or fire; batteries may leak or explode.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- The supply terminals are not to be short-circuited.
- Remove all packaging before giving to your child.

Maintenance

It is important to keep the unit as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Questions or Comments

For questions or comments regarding this, please visit our website:
<https://ekids.com/pages/contact>

©2026 eKids, LLC. All Rights Reserved.

Limited 1 Year Warranty Information

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please contact Customer Service at www.ekids.com/pages/contact to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty
NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money, order, cashier's check, or credit card) for purchase of your eKids products.

FCC Information

Safety Information for Radios

Your wireless handheld portable transceiver contains a low power transmitter. When the talk button is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless devices.

Important

FCC RF Exposure Requirements: For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Use only the supplied antenna. Unauthorized antennas, modifications or attachments could damage the transmitter and may violate FCC regulations.

Normal Position

Hold the transmitter approximately 25 mm from your face and speak in a normal voice, with the antenna pointed up and away.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)


Installing the Batteries

Note: Batteries should always be installed by an adult.

- Use a Philips screwdriver to open the battery compartment door.
- Install 3 "AAA" (R03) size batteries (not included) into the compartment, making sure that the + and - polarities match the diagram printed inside.
- Close the battery compartment door and tighten the battery door screw. Don't over tighten.

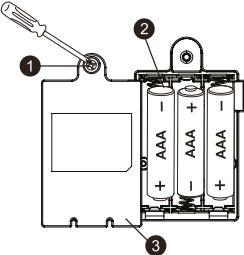

Controls

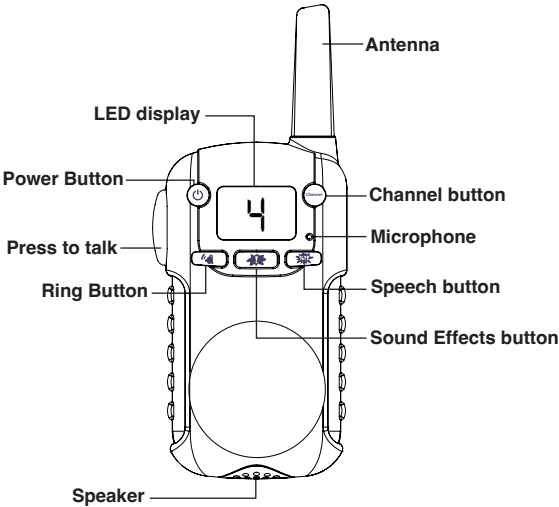 

Power Button

- Press and hold the Power button to turn the unit on or off.
- Both Walkie-Talkies must be turned on in order to send and receive messages.

Ring Button

Press this button to send a ringing alert to the other unit. Keep both units within a maximum range of 3 km/approximately 2 miles (in open, line-of-sight conditions) for reliable alert and communication functionality.

Channel Selection

Press the channel button to cycle through and select one of the 10 available channels. Ensure both walkie talkies are set to the same channel to communicate with each other. Maximum communication range is up to 3 km/approximately 2 miles in open areas.

Speech Button

Press this button to hear built-in speech and cycle through several different phrases.

While holding the Press to Talk button, press the Speech button to send the last selected speech file to the other unit.

Sound Effects Button

Press this button to hear built-in sound effects and cycle through several different sounds.

While holding the Press to Talk button, press the Sound Effects button to send the last selected sound effect file to the other unit.

Speaking/Listening

- Press and hold the Talk Button while speaking into the Microphone. Release Talk Button to listen.
- For clear transmission, keep the antenna pointing upwards and the microphone approximately two inches from your mouth.
- Both Walkie Talkies must be turned on and have their antennas pointing upwards in order to send and receive messages (speak and listen).
- Messages cannot be received while the Talk Button is being pressed. Release the Talk Button to listen.

Note: For maximum range and optimal performance, ensure that buildings, power lines, trees, and other obstructions do not interfere with signal transmission or reception.

Troubleshooting

- If one or both of the Walkie Talkies do not work, this may indicate that the batteries are weak. Insert 3 new AAA batteries into each unit.
- If the signal range of the Walkie Talkies decreases notably, this may again be an indication that the batteries are weak. Insert 3 new AAA batteries into each unit.
- If walkie-talkies fail to communicate with each other, check that both units are powered on and set to the same channel.
- If there is a sizable increase in static, it may be due to the proximity of electric motors, fluorescent lights, power lines, or other signal-disrupting objects. You may have to change your location.
- If problems persist, DO NOT ATTEMPT TO REPAIR THE UNIT. See the Warranty for factory services.

For more information please visit
[visit www.ekids.com](http://www.ekids.com)