

APPLICANT: MOTOROLA, INC.


FCC ID: IHDT6FH1

INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola C390 GSM wireless phone.

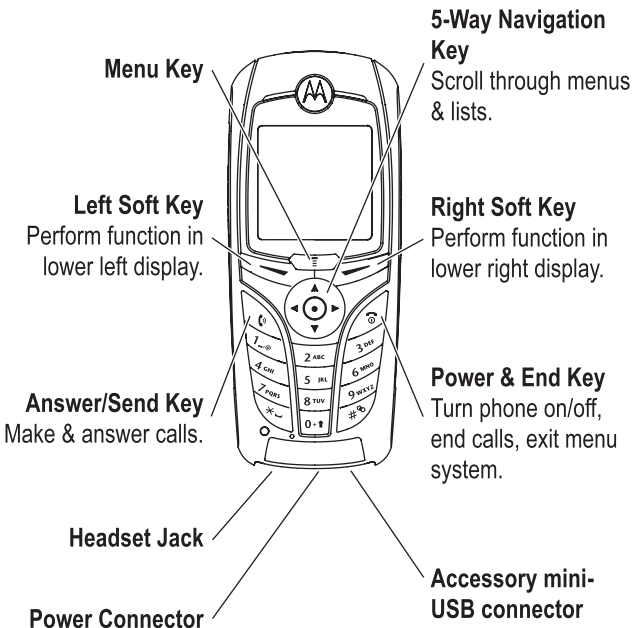

Note: Your model number may vary based on where you purchased your phone.

www.hellomoto.com

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2003.

The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

Contents

Safety and General Information	5
Menu Map	13
Getting Started	15
About This Guide	15
Installing the SIM Card	15
Battery Use	16
Installing the Battery	17
Charging the Battery	18
Turning Your Phone On	19
Adjusting Volume	19
Making a Call	20
Answering a Call	20
Viewing Your Phone Number	20
Highlight Features	21
Sending a Multimedia Message	21
Receiving a Multimedia Message	23
Playing Video Clips	24
Learning to Use Your Phone	25
Using the Display	25
Using the 5-Way Navigation Key	29
Using Menus	29
Entering Text	32
Using the Handsfree Speaker	41
Changing a Code, PIN, or Password	41
Locking and Unlocking Your Phone	42
If You Forget a Code, PIN, or Password	43
Locking and Unlocking the Keypad	44
Using the Phonebook	44

Setting Up Your Phone	47
Storing Your Name and Phone Number	47
Setting the Time and Date	47
Setting a Ring Style	48
Setting a Wallpaper Image	48
Setting a Screen Saver Image	49
Setting Display Colour	50
Adjusting the Backlight	50
Setting Display Timeout	51
Calling Features	52
Changing the Active Line	52
Redialling a Number	52
Using Automatic Redial	53
Using Caller ID	53
Cancelling an Incoming Call	54
Calling an Emergency Number	54
Dialling International Numbers	55
Viewing Recent Calls	55
Returning an Unanswered Call	56
Using the Notepad	57
Attaching a Number	57
Calling With Speed Dial	57
Calling With 1-Touch Dial	58
Using Voicemail	58
Using Call Waiting	60
Putting a Call On Hold	60
Transferring a Call	61
Phone Features	62
Feature Quick Reference	62
Specific Absorption Rate Data	77
Index	79

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television

or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:


- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with



- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

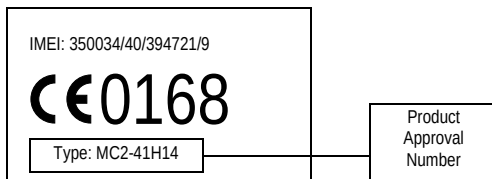

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

Menu Map

Main Menu



Phonebook



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Data Times
- Data Volumes



Messages

- Create Message
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates



Office Tools

- SIM Tool Kit Apps *
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Chat
- Dialling Services
 - Voice Dial
 - Fixed Dial
 - Quick Dial
 - Service Dial *



Games & Apps



Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions



Multimedia

- Themes
- Pictures
- Sounds
- Videos *



Bluetooth Link



Settings

- (see next page)

* optional features

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone.

Settings Menu



Personalise

- Home Screen
- Main Menu
- Colour Style
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- style Detail



Call Divert

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert Status



In-Call Setup

- In-Call Timer
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- Scroll
- Language
- Contrast
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Active Line
- Battery Meter
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Keypad
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt



Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP

Getting Started

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories




This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

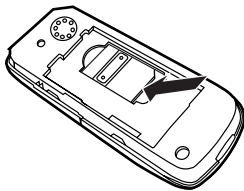

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to your phone's accessory connector; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.



Installing the Battery

Note: If necessary, remove the battery from its protective clear plastic case.



Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

- 1 Squeeze the sides of the front housing in the middle of the "Motorola" logo as shown in the diagram;
- 2 Simultaneously press the release button on the top of the phone with the thumb of your free hand;
- 3 While implementing Steps 1 and 2, pull the rear housing away from the phone.

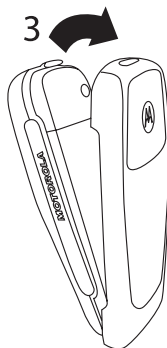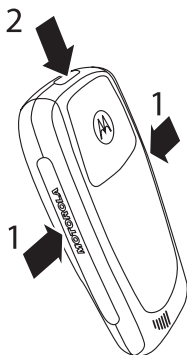


Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action

- 1 Plug the travel charger into the bottom of your phone.

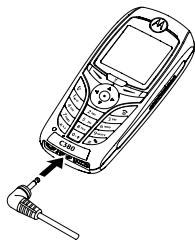


-
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
 - 3 When your phone indicates **Charge Complete**, remove the travel charger.
-

Tip: You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

Turning Your Phone On

Action

 - 1 Press and hold  for 2 seconds to turn on the phone.



-
- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.

-
- 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.
-

Adjusting Volume

Press the 5-way Navigation key () left or right to increase or decrease volume.

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible

Tip: At the lowest volume setting, press the key left once to switch to vibrate alert. Press it again to switch to silent alert. Press the key right to switch back to vibrate alert, then ring alert.

- turn off an incoming call alert

Alternatively the volume can also be accessed by pressing menu  > **Settings** > **Ring Styles**.



Making a Call

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and “hang up” the phone when you are finished

Alternatively access the Phonebook by pressing menu 
> **Phone Book** > scroll through to required entry > **Send** .

Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1  or ANSWER ()	answer the call
2 	end the call and “hang up” the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press



While you are on a call, press  > **My Tel. Numbers**.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 47. If you do not know your phone number, contact your service provider.

Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.

Sending a Multimedia Message



A Multimedia Messaging Service (MMS) message contains one or more slides with text and embedded media objects (including pictures, animations, sounds, voice records and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

Find the Feature



> **Messages > New Message**
> **New Multimedia Msg**

Press

1 keypad keys

To

enter slide text

Press  to open the **MMS Menu** and insert a **Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info.**

2 **OK** ()

store the message

Press

3 

To

scroll to a **Send To** option:

- Highlight **[One Time Entry]** to enter one or more phone numbers and/or email addresses.
- Highlight **[New Phonebook Entry]** to enter a number/address and add it to the phonebook.
- Or highlight an existing phonebook entry.

4 **SELECT** ()

select **[One Time Entry]** or **[New Phonebook Entry]** and enter a number/address. Press **OK** () or **DONE** () when you are finished.

or

ADD ()

add a phonebook entry to the list of recipients. Press **DONE** () when you are finished.

5 

scroll to **Subject**



6 **CHANGE** ()

select **Subject**

7 keypad keys

enter the subject

8 **OK** ()

store the subject

9 **CHANGE** ()

select **Attachments**

10 

scroll to **Picture**, **Sounds** or **Video**

11 **SELECT** ()

select the file type

12 

highlight the file you want

13 **SELECT** ()

attach the file

Press	To
14 BACK ()	return to the message editor
15 	scroll to Receipt
16 CHANGE ()	select Receipt
17 ADD () or REMOVE ()	activate/deactivate the delivery report
18 DONE ()	return to the message editor
19 SEND ()	send the message
or	
	send the message, view message details, save the message in the drafts folder, or cancel the message

Receiving a Multimedia Message



When you receive an MMS message, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press	To
READ ()	open the message

MMS messages that you receive can contain the following media objects:

- Pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its slide is displayed.

Attached files are added to the end of the message. To open the attachment, highlight the file indicator/filename and press **VIEW** () (image file type), **PLAY** () (sound file or video clip), or **OPEN** () (object such as phonebook or datebook entry, or unknown file type).

Playing Video Clips

You can download video clips with the micro-browser, and send and receive video clips in multimedia messages.

To play a video clip stored on your phone:

Find the Feature



> **Multimedia** > **Videos**

Press

To


1

scroll to the video clip

2 **PLAY** ()

start video clip playback

The video clip displays in the video clip playback screen.

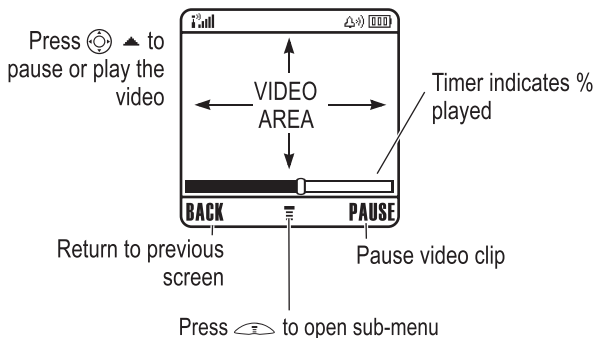


Note: Your phone may not have this feature enabled. Please contact your Service Provider should you have any questions on your particular model's capability with their network.

Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

The *home screen* displays when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

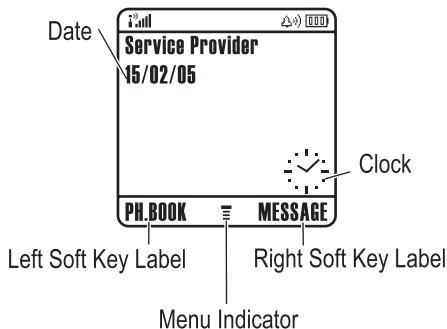


The  (menu) indicator indicates that you can press the menu key () to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the function indicated by the left or right soft key label.

Your phone can display an analogue or digital clock in the home screen (see page 67).

The following status indicators can display:

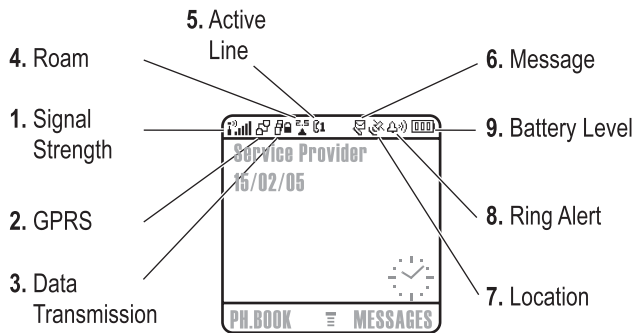

1. Signal Strength Indicator

Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator displays.

2. GPRS Indicator



Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:

 = GPRS PDP context active

 = GPRS packet data available

3. Data Transmission Indicator

Shows connection and data transmission status. Indicators can include:

 = secure packet data transfer

 = insecure packet data transfer

 = secure application connection

 = insecure application connection

 = secure Circuit Switch Data (CSD) call

 = insecure CSD call

 = Bluetooth® connection

4. Roam Indicator



Shows when your phone is seeking or using another network outside your home network. Indicators can include:

 = 2.5G home

 = 2.5G roam

 = 2G home

 = 2G roam

5. Active Line Indicator



Shows  or  to indicate the current active phone line. Other indicators can include:

 = line 1 active, call divert on

 = line 2 active, call divert on

 = alarm activated

6. Message Indicator



Displays when you receive a new message. Indicators can include:



= text message



= voicemail message



= active chat session



= voicemail and text message

When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size (multimedia message).

7. Location Indicator



Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:



= location on



= location off

8. Ring Style Indicator

Shows the ring style setting.



= loud ring



= soft ring



= vibrate



= vibrate and ring



= silent

9. Battery Level Indicator

Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

Using the 5-Way Navigation Key



Use the 5-way navigation key (⬆⬇⬅⬇⬆) to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press the centre select button to select a highlighted menu item.

Using Menus

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Games & Apps		Multimedia
	Office Tools		Settings
	Phonebook		Web Access
	Messages		Recent Calls

Selecting a Menu Feature

To select a menu feature, starting from the home screen:

Find the Feature




> **Recent Calls** > **Dialled Calls**

This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialled Calls**. Press  to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

Selecting a Feature Option

Some features require you to select an option from a list:

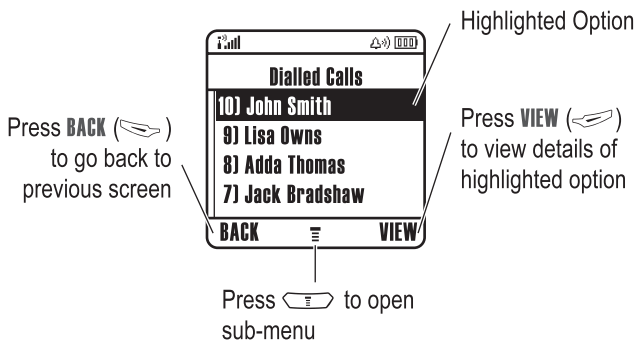

Press **⬅** to scroll up or down to highlight the option you want.


- In a numbered list, press a number key to highlight the option.
- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.

When an option displays a list of possible values, press **⬅** left or right to scroll through and select a value.


When an option displays a list of possible numeric values, press a number key to set the value.

Entering Text

Some features require you to enter information.

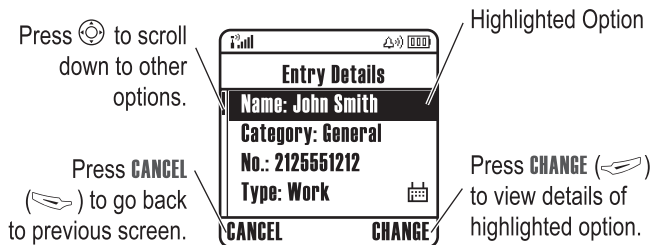

The message centre lets you compose and send text messages. A *Character Counter* indicates how many more characters will fit in a message.

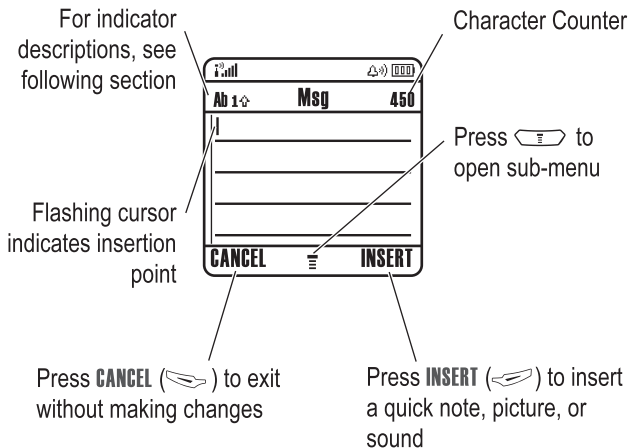

Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The method (for example, iTAP predictive text or TAP input mode) you select remains active until you select another method.

Press  in any text entry screen to select one of the following entry modes:

Primary	The primary text entry mode (see below to set).
Numeric	Enter numbers only (see page 39).
Symbol	Enter symbols only (see page 39).
Secondary	The secondary text entry mode (see below to set).

Alternatively, you can select a text entry mode in any text entry screen by pressing  > **Entry Mode**.

Tip: You can switch between text Entry Methods by pressing  whilst in edit mode.

Setting Up a Text Entry Mode

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

iTAP	Let the phone predict each word as you press keys (see page 37).
Tap	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting (available only for Secondary Setup).

Using Capitalisation

Press  in any text entry screen to change text case. The following indicators show capitalisation status:

abc = no capital letters

Abc = capitalise next letter only

ABC = all capital letters

Text Entry Mode Indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:

Primary	Secondary	Description
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalise next letter only
1↑↑	2↑↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalise next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry mode:

123 = numeric method

@ = symbol method

Using Tap Method

This is the standard method for entering text on your phone.

Tap method cycles through the letters and number of the key you press. Tap Extended method also cycles through additional symbols as shown in the chart on page 36.

Press

To

1 A keypad key one or more times

select a letter, number, or symbol

2 keypad keys

enter remaining characters

Tip: Press  right to accept a word completion, or  to insert a space.


3 **OK** ()

store the text

In a text entry screen, you can press  to switch entry modes. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry mode, see page 33.

When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

Character displays at insertion point

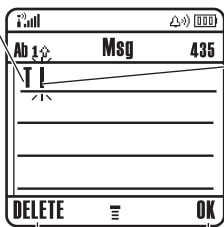


After 2 seconds, character is accepted and cursor moves to next position

Press **DELETE** () to delete character to left of insertion point

Press **OK** () to accept and store text

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

Character displays
at insertion point

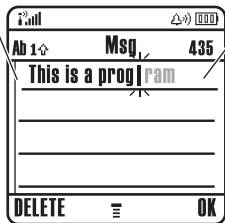

Press  to accept **PROGRAM**, or press  to reject it and enter a space after **prog**.

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart

Use this chart as a guide for entering characters with **Tap Extended** method.

	. ? ! , @ ' - _ : ; () & " ~ 1 0 ç i % £ \$ ¥ ¢ € + x * / \ [] = > < # §
	a b c 2 á à â ã ç æ
	d e f 3 é ê ë ì
	g h i 4 í î ï
	j k l 5
	m n o 6 ñ ò ó ô õ ö ø
	p q r s 7
	t u v 8 ú û ü ü
	w x y z 9
	change text case, for capital letters

	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.


Tap Method Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalised. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

Using iTAP™ Method

iTAP™ software provides a predictive text entry mode that lets you enter a word using one keypress per letter. This can be faster than **Tap** method, because your phone combines the key presses into common words.

For example, if you press    , letter combinations that match your keypresses display:

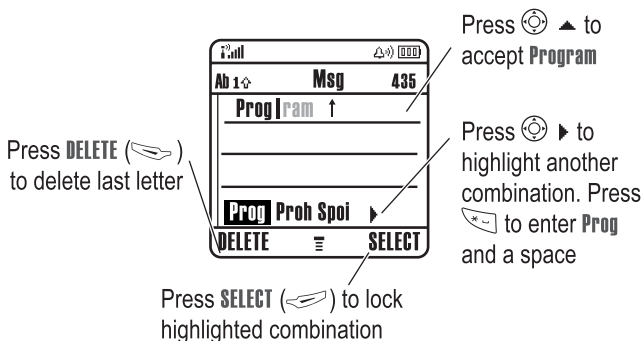

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press  to switch entry modes. An indicator shows which method is active (see page 34). If **ITAP** method is not available as the **Primary** or **Secondary** entry mode, see page 33.

Press	To
1 keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want

Press

3 **SELECT** 

To

lock a highlighted combination

You can press keypad keys to add more letters to the end of the combination.

or



enter the highlighted combination when it spells a word

A space is automatically inserted after the word.

If you enter a word your phone does not recognise, the phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words to add new words.

Using Numeric Method

In a text entry screen, press  to switch entry modes until the **123** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.

Using Symbol Method

In a text entry screen, press  to switch entry modes until the **@** (symbol) indicator displays.

Press

1 keypad keys (one press per symbol)

To

show possible symbol combinations at the bottom of the display

2  left or right

highlight the combination you want

Press

3 **SELECT** 

To

lock a highlighted combination

You can press keypad keys to add more symbols to the end of the combination.

or



enter the highlighted combination

Symbol Chart

Use this chart as a guide for entering characters with symbol method.

	. ? ! , @ ' - _ : ; () & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¢ € + x * / \ [] = > < # §
	@ _ \ ß
	/ : ;
	" & '
	() [] { }
	¿ ¡ ~
	< > =
	\$ £ ¥ ¢
	# % *
	+ - x * / = > < # §
	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action

Press **DELETE** () to delete one letter at a time.

Hold **DELETE** () to delete the entire message.

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** () to turn the handsfree speaker on or off while either dialling a call or during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** () again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature



> **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 54).

Locking Your Phone Manually

Find the Feature



> **Settings** > **Security** > **Phone Lock**
> **Lock Now**

Press

To

1 keypad keys

enter your unlock code

2 **OK** (👉)

lock the phone

Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK ()	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature  > **Settings** > **Security** > **Phone Lock**
> **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your unlock code
2 OK ()	activate automatic lock

If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Locking and Unlocking the Keypad

You can lock the keypad to prevent accidental key presses (for example, when carrying your phone in a purse or pocket).

Press



To

lock or unlock the keypad

Note: Incoming calls and messages temporarily unlock the keypad.

Using the Phonebook

This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 64.

Shortcut: To open your phonebook from the home screen, press  up or down.

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** () to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

Note: This option is not available for entries stored on the SIM card.

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (🗨️). When you are ready, press **RECORD** (🗨️) again and say the entry's name (within 2 seconds). When prompted, press **RECORD** (🗨️) and repeat the name. Press **DONE** (🗨️) to store the voice name.

Storing a Picture for Caller ID

Note: This option is not available for entries stored on the SIM card.

You can store a picture for a phonebook entry. The picture displays when you receive calls from the entry.

When creating a phonebook entry, scroll to **Picture** and press **CHANGE** (🗨️). Press Ⓞ to select a picture, and press **SELECT** (🗨️) to store it for the entry.

Dialling a Number

Press 📞 > **Phonebook** > entry to call 📞.

Note: You can also access the Phonebook from idle display by pressing Ⓞ, depending on local settings.

Tip: To quickly highlight entries in your **Phonebook** list: If your entries are sorted by **Speed No.**, press an entry's speed number to highlight it. For example, press [1 →] [5 JRL] for entry number 15. If your entries are sorted by **Name**, **Voice Name**, or **Email**, enter the first letter of the entry's name to highlight it. For example, press [5 JRL] [5 JRL] for the first entry that starts with "K".

Voice Dialling a Number

Press  > **Office Tools**, press **Dialling Services** > **Voice Dial**, and say the entry's name (within 2 seconds).

Tip: To create a shortcut to **Voice Dial**, press

 > **Office Tools** > **Dialling Services**, scroll to **Voice Dial**, and hold the . Your phone prompts you to save the shortcut. To use a shortcut, press  and the shortcut key number.

Sorting Phonebook Entries

Press  > **Phonebook**, press  > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 65.

Viewing Entries By Category

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 65.

Setting Up Your Phone

Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature



> **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

Setting the Time and Date

Your phone uses the time and date for the **Datebook**. Your phone can synchronise its time and date with the network:

Find the Feature



> **Settings** > **Initial Setup**
> **Time and Date** > **Autoupdate** > **On**

To set the time and date manually, set **Autoupdate** to **Off** and then set the **Time** and **Date** options:

Find the Feature



> **Settings** > **Initial Setup**
> **Time and Date** > **Time** or **Date**

Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an **alert**.

You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 28).

To set a ring style:

Find the Feature



> **Settings** > **Ring Styles** > **Style**

Press

To

1

scroll to the ring style

2 **SELECT** (

select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press

> **Settings** > **Ring Styles** > style **Detail**.

Shortcut: To change your ring volume from the home screen, press left or right.

Setting a Wallpaper Image

You can set a picture or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature



> **Settings** > **Personalise** > **Wallpaper**

Press

To

1

scroll to **Picture**

2 **CHANGE** (

open the picture viewer

Press	To
3  up or down	scroll to a picture/animation Scroll to (None) to turn off the wallpaper image.
4 SELECT ()	select the image
5 	scroll to Layout
6 CHANGE ()	change the image layout
7 	scroll to Centre , Tile , or Fit-to-screen Centre places the image in the centre of the display. Tile fills the display with multiple copies of the image. Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT ()	confirm the layout setting
9 BACK ()	save wallpaper settings

Setting a Screen Saver Image

Set a picture or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Turn off the screen saver to extend battery life.

Find the Feature



> **Settings** > **Personalise**
> **Screen Saver**

Press	To
1 	scroll to Picture
2 CHANGE ()	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to [None] to turn off the screen saver image.
4 SELECT ()	select the image
5 	scroll to Delay
6 CHANGE ()	set the delay interval
7 	scroll to the inactivity interval that starts the screen saver
8 SELECT ()	confirm the delay setting
9 BACK ()	save screen saver settings

Setting Display Colour

Select the colour palette that your phone uses to display indicators, highlights, and soft key labels.

Find the Feature



> **Settings** > **Personalise**
> **Colour Style**

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature



> **Settings** > **Initial Setup** > **Backlight**

Setting Display Timeout

Set the display to turn itself off when no activity is detected for a specified time.

Find the Feature



> **Settings** > **Initial Setup**
> **Display Timeout**

Calling Features

For basic instructions on how to make and answer calls, see page 20.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature



> **Settings** > **Phone Status**
> **Active Line**

The active line indicator in the display shows the currently active phone line (see page 27).

Redialling a Number

Press	To
1 	view the last 10 dialled calls list
2 	scroll to the entry you want to call
3 	redial the number

Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

To redial the phone number:

Press



To

activate automatic redial

Your phone redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

Using Caller ID

Incoming Calls



Calling line identification (Caller ID) displays the phone number for incoming calls in your phone's display.

The phone displays the caller's name (and picture, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID and/or light ID for specific entries stored in your phonebook. For more information, see page 64.

Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

Find the Feature



> **Settings** > **In-Call Setup**
> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialling (with digits visible in the display):

Press

 > **Hide ID/Show ID**

To

hide or show your caller ID for the next call

Cancelling an Incoming Call

While the phone is ringing or vibrating:

Press

IGNORE ()

To

cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be diverted to another number, go directly to your voice-mail, or the caller may hear a busy signal.

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press

1 keypad keys

To

dial the emergency number

2 

call the emergency number

Dialling International Numbers

Press and hold  to insert the local international access code (+) for the country from which you are calling.

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the dialled calls list.

Find the Feature



> **Recent Calls**

Press

To

1



scroll to **Received Calls** or **Dialled Calls**

2

SELECT ()

select the list

3



scroll to an entry

✓ means the call connected.

4



call the entry's number

or

Press and hold  for 2 seconds to send the number as DTMF tones during a call.

VIEW ()

view entry details

or



open the **Last Calls Menu** to view the options available for the entry

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 71).

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW 	see the received calls list
2 	select a call to return
3 	make the call

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature



> **Recent Calls** > **Notepad**

Press



or



or

STORE (

To

call the number

open the **Dialling Menu** to attach a number or insert a special character

create a phonebook entry with the number in the **No.** field

Attaching a Number

While dialling (with digits visible in the display):

Press



> **Attach Number**

To

attach a number from the phonebook or recent calls lists

Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique speed dial number.

To see an entry's speed dial number, press > **Phonebook**, scroll to the entry, press **VIEW** (

To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

Calling With 1-Touch Dial

To call phonebook entries 1 to 9, press and hold the single-digit speed dial number for one second.

Tip: You must specify which phone number list you want to use with this feature: phone memory phonebook or SIM card phonebook (see page 64).

Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find the Feature



> **Messages** > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a New Voicemail notification.

Press	To
CALL ()	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature		> Messages
		> Voicemail Setup

Press	To
1 keypad keys	enter your voicemail number
2 OK ()	store the number

You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received another call.

Press

1 

To

answer the new call

2 **SWITCH** ()

switch between calls

or

LINK ()

connect the 2 calls

or



> **End Call On Hold**

end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature



> **Settings > In-Call Setup**
> **Call Waiting**

Putting a Call On Hold

Press

HOLD () (if available)

To

put the call on hold

or



> **Hold**

Transferring a Call



You can announce that you are transferring an active call to another party, or you can transfer the call without announcing the transfer.

Announce the Call Transfer

Find the Feature



> **Hold**

Press

To

1 keypad keys

dial the number where you are transferring the call

2

call the number and speak to the person who answers

3

open the menu

4

scroll to **Transfer**

5 **SELECT** ()

select **Transfer**

6 **OK** ()

confirm the transfer

Do Not Announce the Call Transfer

Find the Feature



> **Transfer**

Press

To

1 keypad keys

dial the number where you are transferring the call

2

transfer the call

Phone Features

Feature Quick Reference

This section helps you locate features on your phone that are not described in this guide.

Calling Features

Feature	Description
Conference Call	During a call:  > Hold , dial next number, press  , press LINK () 
Call Diverting	Set up or cancel call diverting:  > Settings > Call Divert 
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring 

Messages

Feature	Description
Send Text Message	Send a text message:  > Messages > New Message > New Short Msg 

Feature	Description	
Send Multimedia Message	Send a multimedia message:  > Messages > New Message > New Multimedia Msg	
Use MMS Template	Open an MMS template with preloaded media:  > Messages > New Message > MMS Templates	
Read Message	Read a new text or multimedia message that you have received: Press READ ().	
Store Message Objects	Go to a multimedia message slide, then:  > Store	

Chat

Feature	Description	
Start Chat	Start a new chat session:  > Office Tools > Chat  > New Chat	
Receive Chat Request	When you receive a chat request: Press ACCEPT () or IGNORE ().	
End Chat	During a chat session:  > End Chat	

Phonebook

Feature	Description
Create Entry	Create a new phonebook entry: Type in telephone number > Store > <i>enter other details</i>
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List
Dial Number	Call a number stored in the phonebook:  > Phonebook , highlight the phonebook entry, press  to call
Voice Dial Number	Voice dial a number stored in the phonebook: > Office Tools > Dialling Services > Voice Dial When prompted, say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Ringer ID > <i>ringer name</i> <i>Note: The Ringer ID option is not available for entries stored on the SIM card.</i>

Feature	Description
Set Picture ID for Entry	Assign a picture to display when you receive calls from an entry:  > Phonebook > entry  > Edit > Picture > picture <i>Note: The Picture option is not available for entries stored on the SIM card.</i>
Set Category for Entry	Set the category for a phonebook entry:  > Phonebook > entry  > Edit > Category > category name <i>Note: The Category option is not available for entries stored on the SIM card.</i>
Set Category View	Set a phonebook category view:  > Phonebook  > Categories > category view
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > sort order
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook, scroll to entry, press  > Set Primary > phone number

Feature	Description
Copy Phonebook Entry to Another Device	Copy a phonebook entry to another phone, computer, or device:  > Phonebook, highlight the entry, press  > Send > Bluetooth
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > Settings > Initial Setup > 1-Touch Dial

Personalising Features

Feature	Description
Ring Style	Change the ring alert for an event:  > Settings > Ring Styles > style Detail > <i>select chosen alerts</i>
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > Settings > Ring Styles > style Detail > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > style Detail > Ring Volume Shortcut: Press  right or left in the home screen.
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > style Detail > Key Volume

Feature	Description
Clock View	Display an analogue clock or digital time readout in the home screen:  > Settings > Personalise > Home Screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalise > Main Menu > View
Main Menu	Reorder your phone's main menu:  > Settings > Personalise > Main Menu > Reorder
Change Soft Key Labels	Change soft key labels in the home screen  > Settings > Personalise > Home Screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Office Tools > Shortcuts > <i>shortcut name</i>

Menu Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > Settings > Initial Setup > Master Clear

Dialling Features

Feature	Description
Fixed Dial	When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.  Turn fixed dialling on or off:  > Settings > Security > Fixed Dial Use the fixed dial list:  > Office Tools > Dialling Services > Fixed Dial
Service Dial	Dial service phone numbers:  > Office Tools > Dialling Services > Service Dial 

Feature	Description
Quick Dial	Your service provider may program your phone with one or more quick dial numbers, such as the customer service number.  Dial preprogrammed phone numbers:  > Office Tools > Dialling Services > Quick Dial
DTMF Tones	Activate DTMF tones:  > Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones.

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times 
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer 

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Speaker-phone	When in an active call, press SPEAKER  .
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer 
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial 

Feature	Description	
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree	
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  > Settings > Car Settings > Power-Off Delay	
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:  > Settings > Car Settings > Charger Time	

Data and Fax Calls

Feature	Description	
Send Data or Fax	Connect your phone to the device, then place the call through the device application.	
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.	
Talk Then Fax	Connect your phone to the device, enter the number, then press  > Talk Then Fax , then press  to make the call.	

Bluetooth® Wireless Connections

Feature	Description
Make Phone Visible to Other Device	Allow an unknown Bluetooth device to discover your phone:  > Bluetooth Link > Setup > Find Me Tip: After the first connection, you do not need to select Find Me to reconnect. 
Connect to a Handsfree Device	Connect to a handsfree device:  > Bluetooth Link > Handsfree > [Look for Devices] <i>Note: If necessary, enter the Bluetooth PIN code for the device (consult the device user's guide, or try 0000).</i> 
Connect to a Handsfree Device During a Call	Switch to a headset or car kit during a call:  > Use Bluetooth 
Disconnect From Device	Disconnect from a device: Highlight the device name and press the DROP key. 
Set Bluetooth Options	Set your phone's Bluetooth options:  > Bluetooth Link > Setup Tip: If you leave Power set to On all the time, your battery will not last as long. 

Network Features

Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network 

Personal Organiser Features

Feature	Description
Create Datebook Event	Create a new datebook event:  > Office Tools > Datebook , highlight the day, press the centre select button, press  > New
View or Edit Datebook Event	View or edit event details:  > Office Tools > Datebook , highlight the day, press the centre select button, press VIEW ()
Event Reminder	View event reminder: VIEW () Close event reminder: BACK ()
Copy Datebook Event to Another Device	Copy a datebook event to another phone, computer, or device:  > Office Tools > Datebook , highlight the day, press the centre select button, highlight the event, press  > Send > Bluetooth

Feature	Description
Set Alarm	Set an alarm:  > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press DISABLE () or  . Set 8-minute delay: Press SNOOZE ().
Calculator	Calculate numbers:  > Office Tools > Calculator
Currency Converter	Convert currency:  > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press OK (), enter amount, and select \$ in the bottom of the display.

Security

Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application

News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > Web Access > Browser 
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT () , press STORE ().
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > Multimedia > Themes > theme 
Download Game or Application (micro-browser)	Download a Java game or application with the micro-browser:  > Web Access > Browser , highlight the application, press SELECT () , press DOWNLOAD () 
Download Game or Application (computer)	Download a Java game or application from a computer: Connect your phone to the computer, press  > Settings > Java Settings > Java App Loader . 

Feature	Description
Launch Game or Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT () 
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures 
Manage Sounds	Manage ring tones, sounds that you have composed or downloaded:  > Multimedia > Sounds
Manage Video Clips	Manage video clips:  > Multimedia > Videos
Create Ring Tones	Create ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody]

Specific Absorption Rate Data

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by

Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.60 W/kg, and when worn on the body, as described in this user guide, is 0.41 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

- accessories 15
- accessory mini-USB connector 1
- active line indicator 27
- active line, changing 52
- alarm clock 74
- alert
 - creating 76
 - defined 48
 - setting 19, 48, 66
 - turning off 19
- animation
 - downloading 75
 - screen saver 49
 - viewing 76
 - wallpaper 48
- answer/send key 1
- answering a call 20
- application, locking and unlocking 74
- automatic redial 53

B

- backlight 50
- barring calls 62

battery

- charging 18
- extending battery life 16, 50
- installing 17
- level indicator 29
- Bluetooth 66, 72, 73
- browser. See micro-browser

C

- calculator 74
- call
 - alert, turning off 19
 - answering 20
 - barring 62
 - barring password, changing 41
 - call waiting 60
 - dialled calls list 55
 - dialling 20
 - diverting 62
 - emergency number 54
 - ending 20
 - handsfree speaker 41
 - hold 60
 - international access code 55
 - making 20
 - received calls list 55

- receiving 20
- ring style 19, 48, 66
- speakerphone 70
- timers 70
- transferring 61
- unanswered call 56
- Call Failed, Number Busy
 - message 53
- call waiting 60
- caller ID 53
- calling line identification. *See*
 - caller ID
- category
 - phonebook entry 65
 - view 65
- centre select button 29
- character chart 36
- chat 63
- clock
 - selecting analogue or digital
 - 67
 - setting 47
- codes
 - Bluetooth PIN 72
 - changing 41
 - default 41, 43
 - forgetting 43
- colour, setting 50
- conference call 62
- customising the menu 67

D

- data call 71
- date, setting 47
- datebook 73
- dialled calls list 55
- dialling a number 20, 68, 69
- display
 - backlight 50
 - colour 50
 - description 25
 - home screen 25
 - language 68
 - personalising 67
 - timeout 51
- distinctive ringer alert 66
- diverting calls 62
- DTMF tones
 - activating 69
 - sending 69

E

- earpiece volume 19
- emergency number 54
- end key 1
- ending a call 20
- Enter Unlock Code message
 - 43

F

fax call 71
5-way navigation key 1, 29
fixed dial 68

G

games 75
GPRS indicator 26

H

handsfree speaker 41
headset jack 1
hold a call 60
home keys, personalising 67
home screen
 defined 25
 selecting clock view 67

I

incoming call
 answering 20
 diverting 62
Incoming Call message 53
indicators
 active line 27
 battery level 29
 GPRS 26
 location 28
 message 28

message waiting 23
ring style 28
roam 27
signal strength 26
text case 34
text entry method 28, 34
transmission 27
voicemail message 28, 59
international access code 55
iTAP software 37

J

Java applications 75
joystick 1

K

key
 answer/send 1
 centre select button 29
 end 1
 5-way navigation 1, 29
 left soft key 1, 25, 67
 menu 1
 power 1
 right soft key 1, 25, 67
 voice 1
 volume control 1, 19
keypad
 volume, setting 66

L

language, setting 68

left soft key

functions 1, 25

personalising 67

line, changing 52

location indicator 28

lock

application 74

phone 42

SIM card 74

Low Battery message 29

M

making a call 20

master clear 68

master reset 68

menu

entering text 32

icons, changing in home

screen 67

icons, converting to text 67

language, setting 68

personalising 67

rearranging features 67

using 29

view, changing 67

menu key 1

message

chat 63

MMS template 63

MMS, defined 21

multimedia message 63

reading 63

text 62, 63

message indicator 28

message waiting indicator 23

micro-browser

browser setup 75

Java applications 75

using 75

Web sessions 75

MMS template 63

MMS. See message

multimedia message

receiving 23

sending 21, 63

multimedia messaging service.

See message

my telephone number 20, 47

N

network settings 73

notepad 57

number

storing your number 47

viewing your number 20

numbers, entering 39

O

1-touch dial

- setting preference 66

- using 58

optional accessory, defined 15

optional feature, defined 15

P

passwords. *See* codes

phone

- active line indicator 27

- active line, changing 52

- alert, turning off 19

- clear stored information 68

- codes 41

- date, setting 47

- language, setting 68

- locking 42

- network settings 73

- open to answer 20

- reset all options 68

- ring style 19, 48, 66

- security code 41

- time, setting 47

- turning on/off 19

- unlock code 41

- unlocking 19, 42

phone number

- active line indicator 27

- active line, changing 52

- attaching 2 numbers 57

- international access code 55

- redialling 52

- storing in phonebook 64

- storing your number 47

- viewing your number 20

phone theme 75

phonebook

- attaching 2 numbers 57

- category for entry 65

- category view 65

- copying entries 66

- dialling a number 64

- group mailing list 64

- 1-touch dial 58

- picture ID 45, 53, 65

- primary number, setting 65

- ringer ID 64, 66

- sorting entries 46, 65

- speed dial number 57

- storing an entry 64

- voice dialling 64

photo

- downloading 75

- picture ID 53

picture

- downloading 75

- screen saver 49

- viewing 76

- wallpaper 48

- picture ID
 - caller ID 53
 - setting 45, 65
- PIN code
 - changing 41
 - entering 74
- PIN2 code, changing 41
- power key 1
- predictive text entry 37
- primary text entry method 33

Q

- quick dial 69

R

- received calls list 55
- recent calls 55
- redial
 - automatic redial 53
 - busy number 52
- right soft key
 - functions 1, 25
 - personalising 67
- ring style indicators 28
- ring style, setting 19, 48, 66
- ring tone
 - creating 76
 - downloading 75
 - managing 76
- ringer ID

- setting 64
- turning on/off 66
- ringer volume, setting 19, 66
- roam indicator 27

S

- screen saver 49
- secondary text entry method 33
- security code
 - changing 41
 - default 41
- service dial 68
- shortcuts 67
- signal strength indicator 26
- silent alert, setting 19, 48, 66
- SIM Blocked message 19, 74
- SIM card
 - defined 15
 - installing 15
 - locking 74
 - PIN code entry 19
 - PIN code, changing 41
 - PIN2 code, changing 41
 - precautions 15
 - SIM Blocked message 19, 74
- SIM PIN code
 - changing 41
 - entering 74

- SIM PIN2 code, changing 41
- soft keys
 - functions 25
 - illustration 1
 - personalising 67
- sound
 - creating 76
 - downloading 75
 - managing 76
- Speaker On message 41
- speakerphone
 - activating 70
 - automatic answer 70
- speed dial 57
- standby time, increasing 50
- symbol chart 40
- symbols, entering 39

T

- tap method text entry 34
- telephone number
 - storing your number 47
 - viewing your number 20
- text
 - capitalisation, changing 34
 - character chart 36
 - entering 32
 - entry method, selecting 33
 - entry method, setup 33

- iTAP software predictive text entry 37
- numeric method 39
- symbol chart 40
- symbol method 39
- tap method 34
- text case indicator 34
- text entry method
 - selecting 33
 - setup 33
- text entry method indicator 28, 34
- theme 75
- time, setting 47
- timers 70
- transfer a call 61
- transmission indicator 27
- travel charger 18

U

- unlock
 - application 74
 - phone 42
- unlock code
 - bypassing 43
 - changing 41
 - default 41, 43
 - entering 19

V

vibrate alert

setting 19, 48, 66

turning off 19

video clip

downloading 63

managing 76

playing 24

voice dial 64, 70

voice key

dialling a number 64

illustration 1

voicemail 58

voicemail message indicator

28, 59

volume

earpiece 19

keypad 66

ringer 19, 66

volume keys 1, 19

W

wallpaper 48

Web pages 75

Web sessions 75

Welcome 1