


DMX1058XR

Antenna Location


Top view

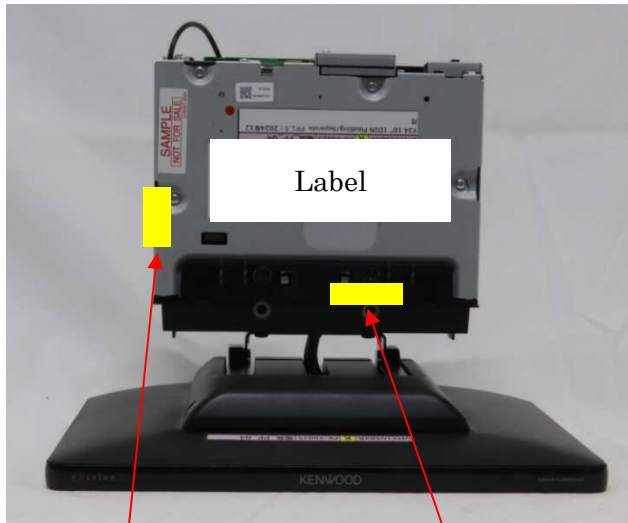

Antenna0 is located behind the case


Antenna1 is located behind the case

Side view (Left)

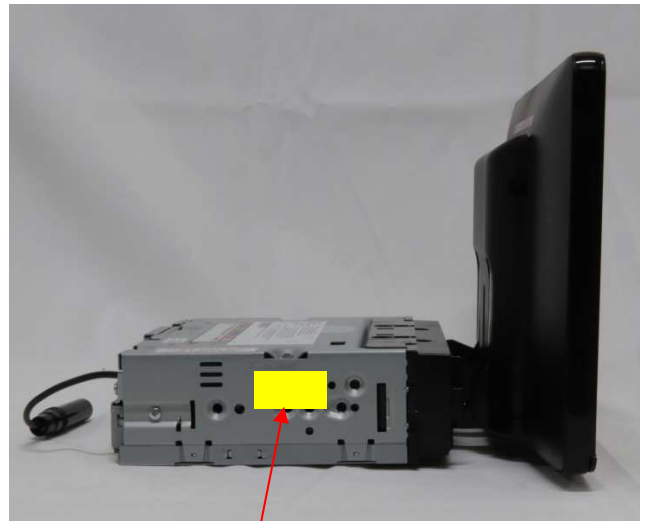

Antenna0 is located behind the case


Front panel (remove the monitor)

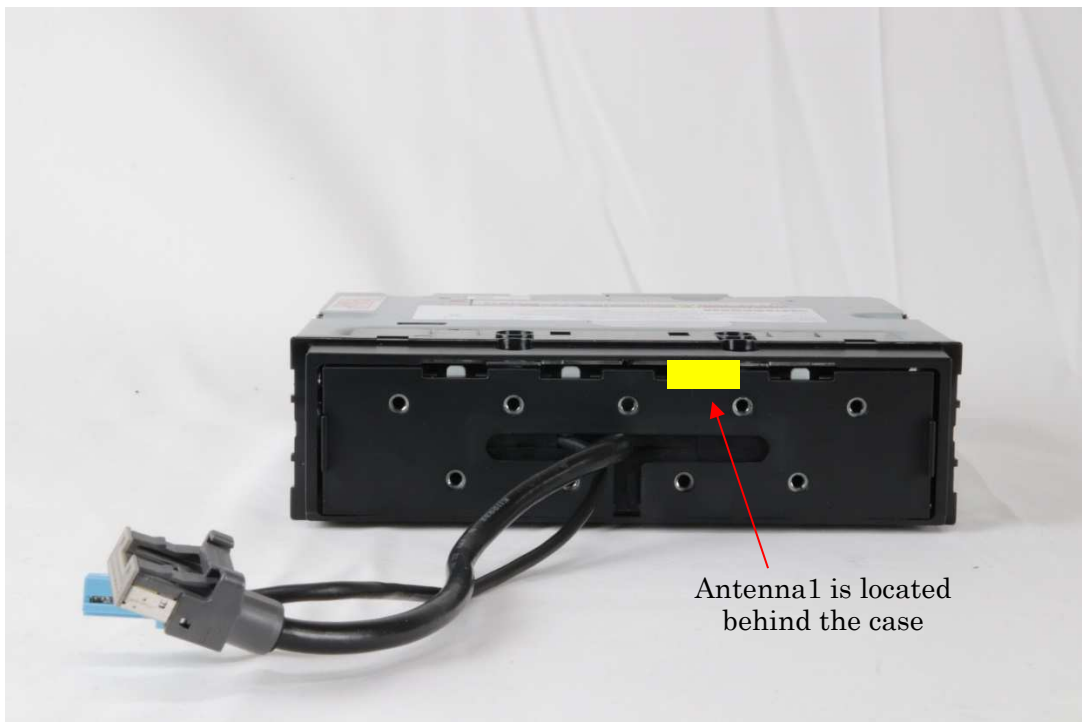


Antenna1 is located behind the case

DMX1058XR


PCB(A-side) with Radio module

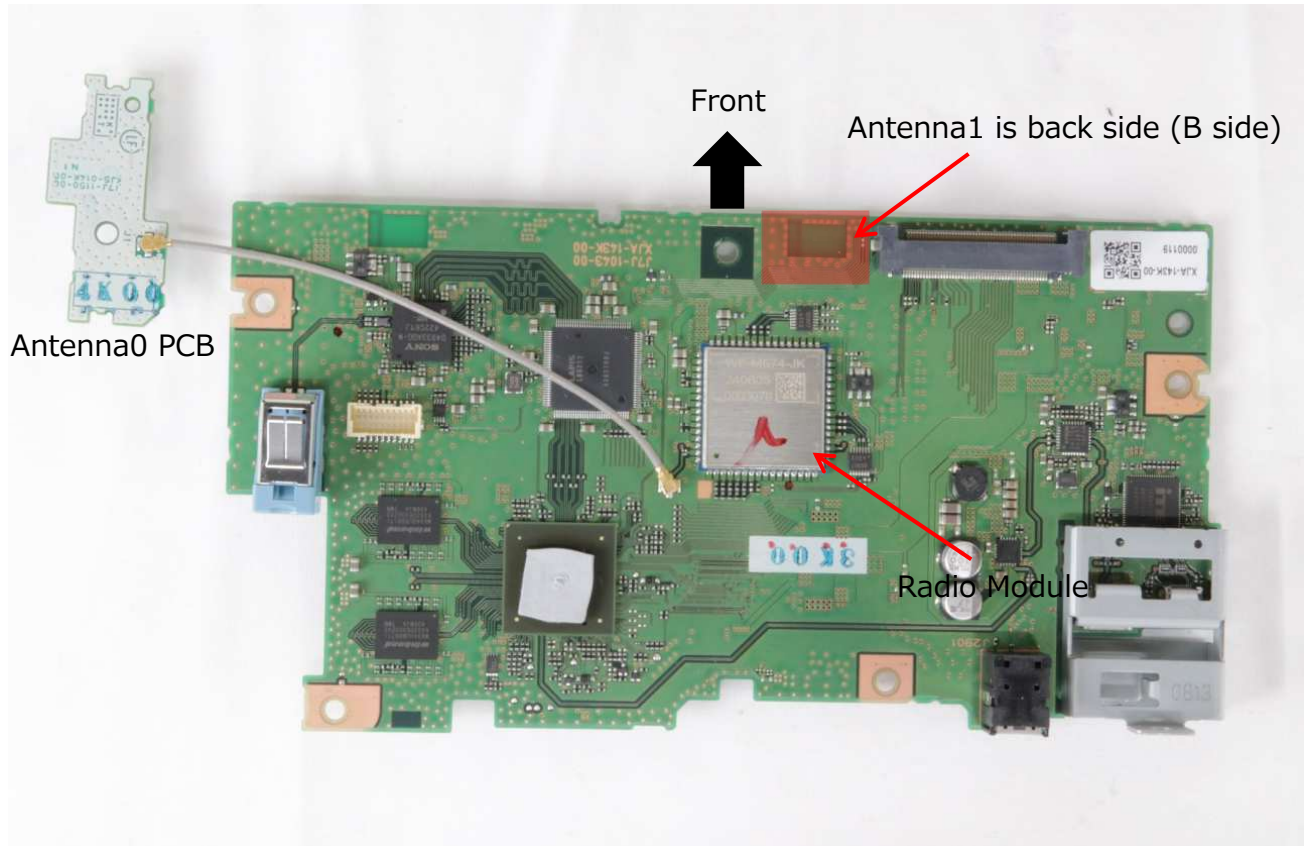

Antenna 0 PCB (A side)

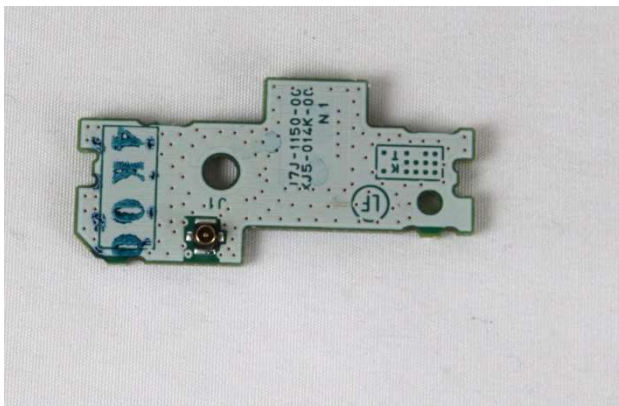


Antenna 0 PCB (B side)

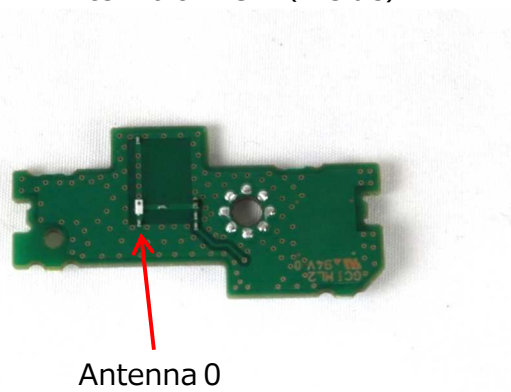


DMX1058XR

PCB(A-side)

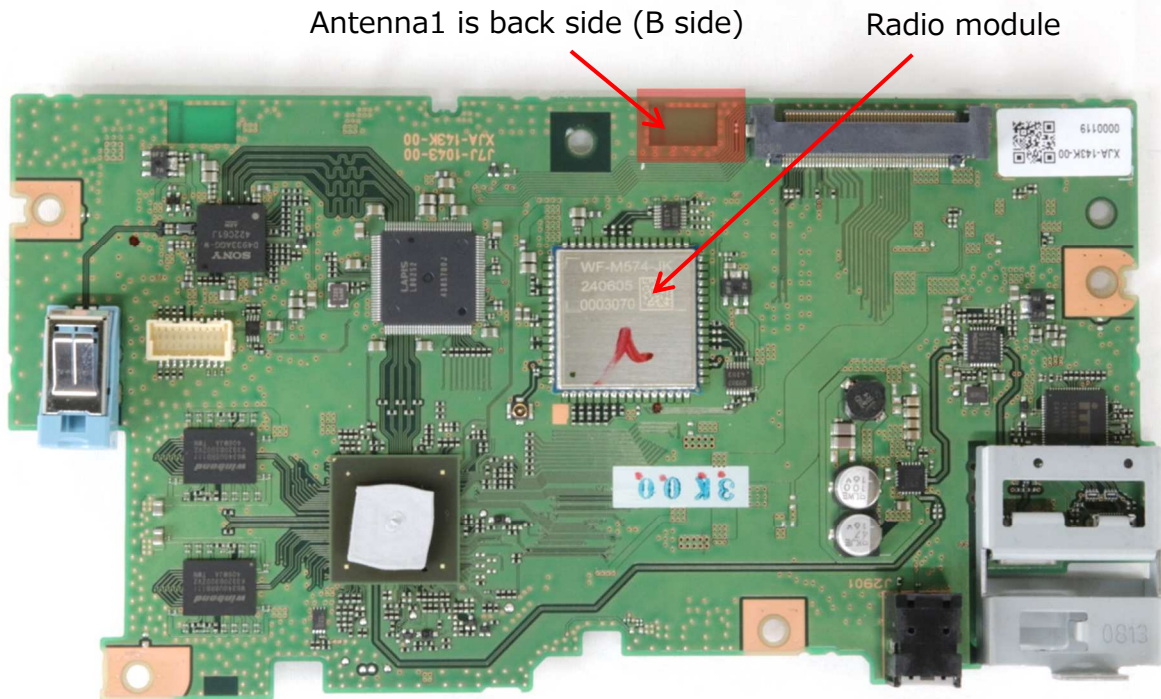

PCB(B side)

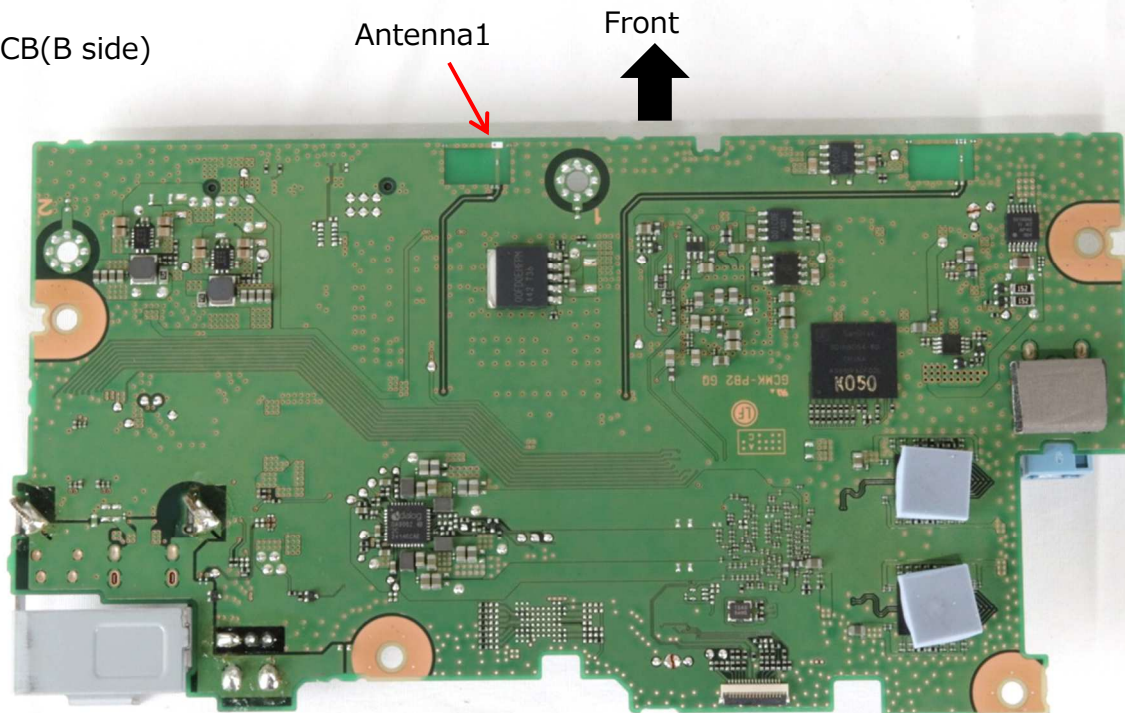

Setup Photo : DMX1058XR

Antenna Radiated pattern

