


- 5 Select the phone number from the list.

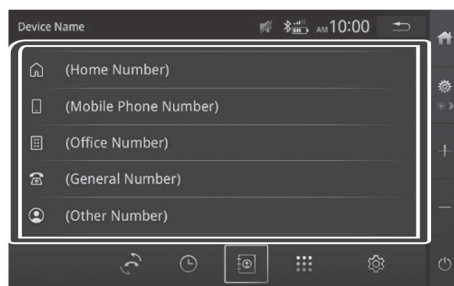


- 6 Touch  to turn back to phonebook screen.

Entering phone numbers to make a call

- 1 Touch .

- 2 Enter the phone number with dial pad.

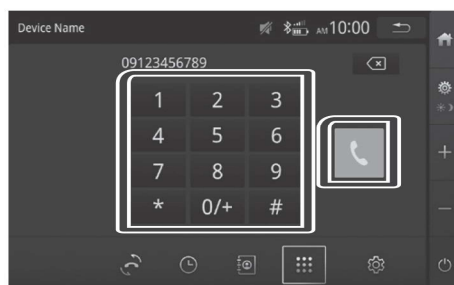

* The number can contain a maximum of 25 digits.
If over 25, the dial pad will be disabled.

- 3 Touch .


Receive Incoming call

When there's an incoming call, the Illumination Bar will turn green automatically.

It will flash until you touch , and then it will stay lit.

After the call ends, it will return to previous theme color.


- 1 Touch  to answer the phone call or touch  to reject the incoming call.

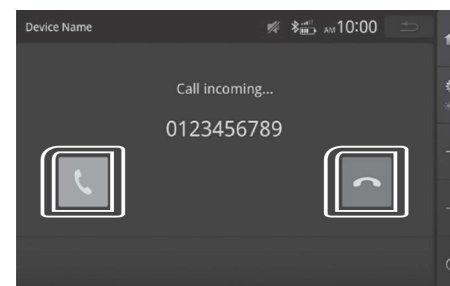

To end the call

While talking, touch  to end the call.

Operations during the call

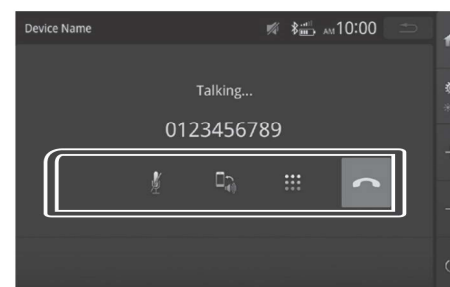

Adjust the reception volume up and down.

This operation is also possible with the steering control.

Press  and  or use two fingers swipe on the screen.

Swipe up is volume up and swipe down is volume down.

■ Mute


Touch  to mute or unmute the voice.

■ Voice switch

Touch  /  to switch the voice from the speaker to mobile phone or from mobile phone to the speaker.


■ Output the dial tone

Touch  to display dial pad.

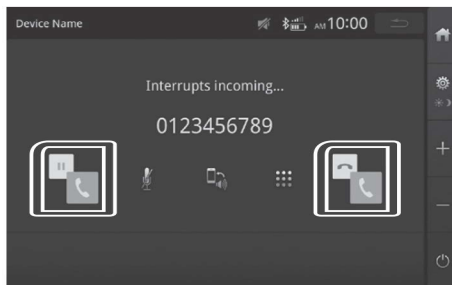

■ Interrupts incoming call

- When you are talking and receive a new incoming call, you can answer the newly received call by touching . The current call is put on hold.
- Touch  is to hang up the interrupts incoming call and keep current call.

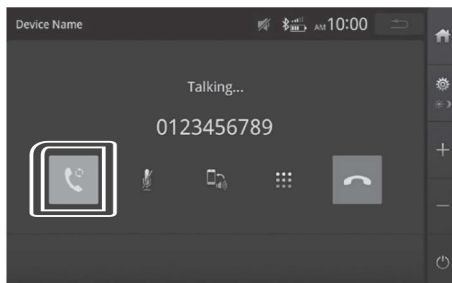


■ Handle multiple calls


- Each time you touch , the caller will change to the other one.

■ To delete the phonebook information

1 Touch .

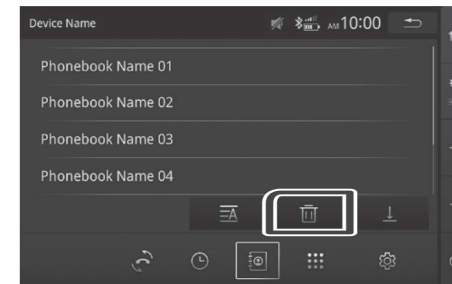


2 Select the phonebook name to delete.

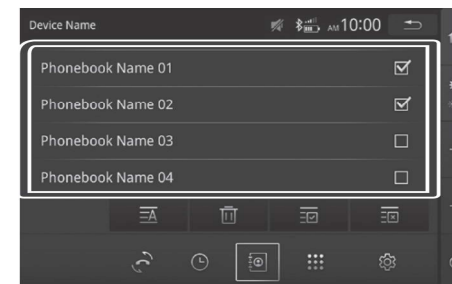

■ Select all phonebook information.

■ Clear all selected check marks.


- 3 Touch  and the confirmation message appears.

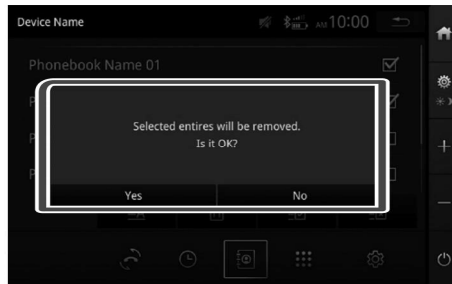

- 4 Touch [Yes].

Phone setup

- 1 Touch  .
- 2 Set up each function as follows.

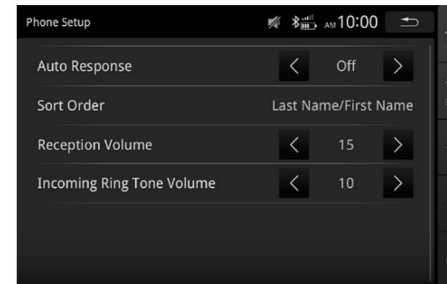

■ Auto Response

Set the automatic response time to pick-up the incoming call.

OFF (Default) : Turn off the automatic response.

1 / 5 / 10 / 15 / 20 / 25 / 30 seconds : Set the ringing duration.

■ Sort order

Set the way of sorting the data of phonebook.

First Name / Last Name : Sort data by the first name.

Last Name / First Name (Default) : Sort data by the last name.

■ Reception Volume

Adjust the reception volume (0-40).

Default value is "15".

■ Incoming Ring Tone Volume

Adjust the ring tone volume while talking (0-40).

Default value is "10".

WebLink

You can connect your smartphone to WebLink either through wired or wireless. You can use WebLink to display the smartphone's screen on the unit and also use other compatible applications within WebLink.

Setup for WebLink

- 1 Download 'WebLink Host' from App Store (for iPhone) or Google Play (for Android phone).



- 'WebLink Host' is a free application.
- WebLink may not work with certain iOS or Android version.
- Please check the compatibility at: <https://helloweblink.com>

- 2 Pair your smartphone with the unit via Bluetooth.

- See **Register the Bluetooth device** (see P. 18) and **Device List Settings** (see P. 19).

- 3 WebLink screen appears. Connect to WebLink successfully.

NOTE

- 2-way touch control may not work with some Smartphone due to Smartphone's OS version or technical spec.
- Some Smartphone Video Apps or Video contents cannot be displayed to Display Audio screen due to App specification or copy-right policy.
- If you recognize that your smartphone gets hot, please stop using WebLink and disconnect USB.
- Without Bluetooth connection, some functions, such as operation, cannot be realized.

Other connection methods

USB Connection

- 1 Connect your smartphone with the unit via USB cable.
- 2 Open the WebLink application on your smartphone.
- 3 Confirm the authorization.
- 4 WebLink screen appears. Connect to WebLink successfully.

Smartphone Connection (Only Android phone)

- 1 Touch WebLink application on your smartphone.
- 2 Connect to WebLink.
- 3 Confirm the authorization.
- 4 WebLink screen appears. Connect to WebLink successfully.

Wireless Connection

- 1 Short press button.
- 2 Touch [WebLink].
- 3 Touch [Wireless setup].



- 4 Open the WebLink application on your smartphone.**
- 5 Confirm the authorization.**
- 6 WebLink screen appears. Connect to WebLink successfully.**

NOTE

- You can check "how to" tutorial in 'HelloWebLink' Website <https://helloweblink.com/> for Display Audio.
- When you use WebLink first time, WebLink terms of service are displayed on smartphone. It is necessary to agree to the WebLink terms of service to use this function.
- While displaying the WebLink, you can switch to another audio source from "AV Source Select" on the WebLink setup screen.
- While you use the WebLink function with an iPhone, WebLink is discontinued by the following operations. To resume the WebLink functions, disconnect the USB cable and try connecting it again.
 - Receiving a call
 - iPhone's screen recording function is stopped.
 - iPhone screen is turned off.
- Due to a restriction in the smartphone, there may be no audio for some apps.
- You cannot use both WebLink and iPod source at the same time.
- You cannot use both WebLink and Bluetooth Audio source at the same time.

NOTE


- After you finish using the WebLink function, stop broadcast on iPhone's screen recording function. Otherwise, iPod, Apple CarPlay and Bluetooth Audio sources may not work correctly.
- For iPhone users, due to iOS system limitations, only one application can be opened at a time. When using any navigation application, please refrain from using other applications as this will interfere with WebLink operations.
For example, if you use Waze together with Spotify, Display Audio will stop displaying Waze Navigation screen and only Spotify sound comes from Display Audio.
- If you manually put your iPhone to sleep, the connection will be lost. It is recommended that you set your iPhone's auto-lock to "Never". (Settings->Display & Brightness->Auto Lock)
- When using 'WebLink Host', available content and functions will be limited while driving.

USB

Connect to the USB device

- 1 **Connect the USB device to the USB port.** (see P. 16)
- 2 **Short press**  **button.**
- 3 **Touch**  **.**
- 4 **Touch [USB].**
 - Supported USB profile FAT16, FAT32.

USB operation

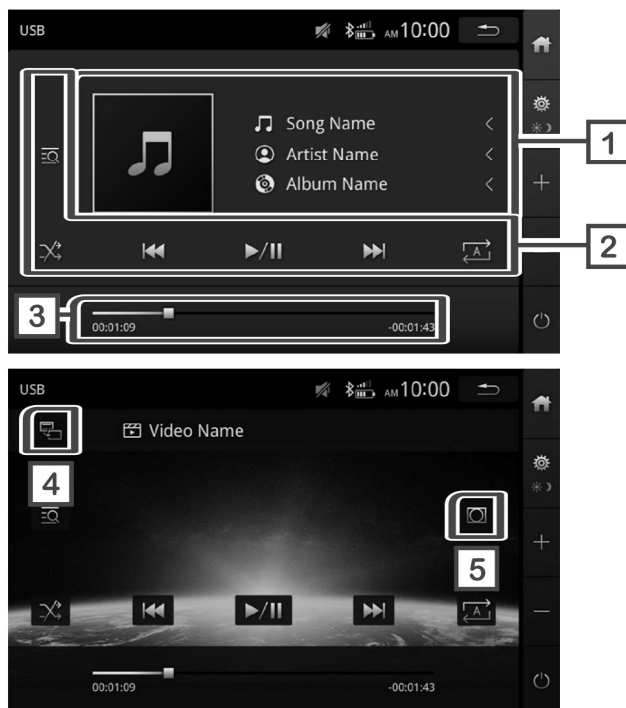

1 Track information display

Display the current track information, such as song name, artist name, album name, file name and folder name.

* Only a file name and a folder name are displayed if there is no tag information.

 
2 Operation keys

-  Search for tracks/files.
-  Shuffle play.
-  Shuffle play off.
-   Move to the previous / next content.
Long press to fast forward or fast backward.
* This operation is also possible with the steering control.
-  Play or pause.
-  Repeat all files.
-  Repeat a file.
-  Repeat the files in the folder.

3 Playing time

Display the current playing position.

You can drag the point left or right.

-  : Play
-  : Pause

4 Hide (Video file only)

Hide all information on the screen.

**NOTE**


- Touch to display the control screen.

5 Aspect Ratio Mode

-  Normal Mode (Default)
Displays in the original aspect ratio fitting by width or height.
-  Zoom Mode
Stretches the video with its original aspect ratio, until the video fulfills the entire screen. It may crop some parts of the picture.
-  Full Mode
Stretches the video evenly across the entire screen.

Searching files operation

You can search music or video files by the following operations.

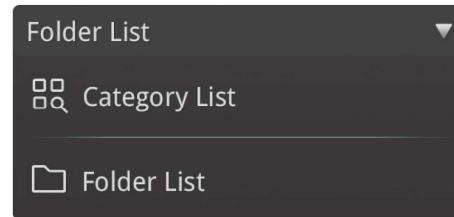
1 Touch .**2 Touch to select a listed type.****3 Touch the selected item in the content list.****NOTE**

- For operation of the List screen, please see **P. 15**.

Category search

You can search for files by selecting category.

- 1 Touch Category List.
- 2 Select which category you would like to search.

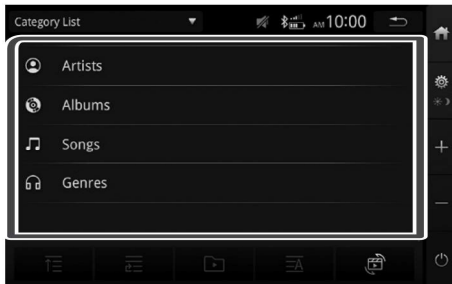

Music / Video file switching

- 3 Touch to select the desired item in the list.
Repeat this step until you find the desired file.


NOTE

- The list corresponding to your selection appears.

Folder search

You can search for a file according to hierarchy.

- 1 Touch Folder List.
- 2 Touch the folder you would like to select.

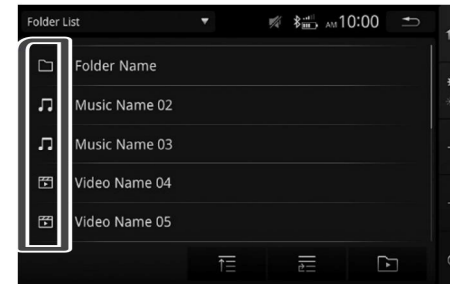

-  File folder.
-  Music file.
-  Video file.

NOTE

- Next file will be played automatically, regardless of music or video files in the folder list.
- Hierarchy of sorting result is folder > files.