

PTY Search (RDS/RBDS-compatible model only)

You can tune into a station by using PTY (Programme Type).

1 Touch  .

2 Select one from follows items.

 
RDS genre

- News / Current Affairs / Information / Sports / Education / Drama / Culture / Science / Varied / Pop Music / Rock Music / Easy Listening Music / Light Classical / Serious Classical / Other Music / Weather / Finance / Children's Programmes / Social Affairs / Religion / Phone In / Travel / Leisure / Jazz Music / Country Music / National Music / Oldies Music / Folk Music / Documentary / All Speech / All Music

RBDS genre

- News / Information / Sports / Talk / Rock / Classic Rock / Adult Hits / Soft Rock / Top 40 / Country / Oldies / Soft / Nostalgia / Jazz / Classical / Rhythm and Blues / Soft R&B / Foreign Language / Religious Music / Religious Talk / Personality / Public / College / Hablar Espanol / Musica Espanol / Hip-Hop / Weather / All Speech / All Music

3 Select one from follows items.

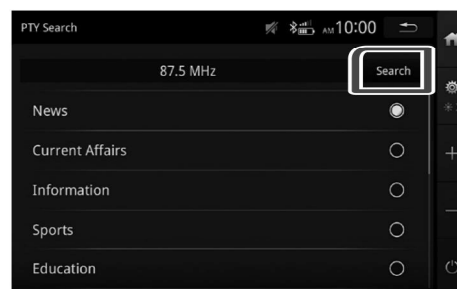

NOTE

- This function is available only when the FM tuner is selected.

Digital Radio (Only for DAB compatible model)

Starting procedure

- 1 Short press  button.
- 2 Touch .
- 3 Touch [DAB].

DAB operation

DAB can be received and played.



- 1 **TI**
Traffic information (ON / OFF).
- 2 **DAB/RDS switching indicator**
Display  when DAB signal becomes poor and alternative RDS station is available.
- 3 **Information display**
Display the current station information.

-  Switch the information page
-  Song Name
-  Artist Name
-  Dynamic Label.
-  Ensemble Label.
-  Program Type.
-  Audio Quality.

4 Operation keys

-  Station List.
-  Switch to the previous/next frequency manually.
Touch and hold to tune to a station with good reception automatically.
In the Home Screen Widget, the registered preset station can be selected.
-  Switch the band (DAB1 / DAB2 / DAB3).
-  DAB Setting.

 
5 Preset station

Recalls the memorized station.
When touch and hold for 2 seconds, stores the current receiving station in memory.

DAB setup

1 Touch  .

2 Setup each function as follows.

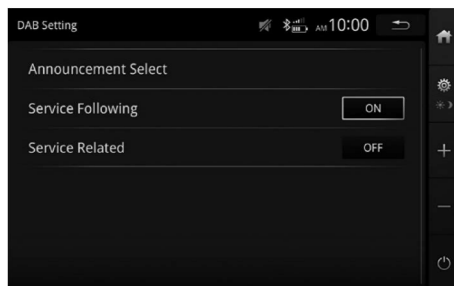

■ Announcement Select

You can select type of announcement.

After the type of announcement is selected, the original selected station is restored automatically.

■ Service Following

If the system cannot tune to the station for any reason (e.g., weak signal), it continues trying to tune to the station.

Maintaining the same audio or data content that the user has selected in varying reception conditions.

(ON / OFF)

■ Service Related

When the system cannot find an alternative service using Service Following, it tunes to a DAB service with Softlink.

(ON / OFF)

Cameras

This function is available for vehicles equipped with specific cameras, including Rear Wide Camera, LaneWatch Camera, or Multi View Camera.

For details on Multi View Camera operations, refer to the separate owner's manual.

Using the cameras

Driving Precautions

The cameras serve as auxiliary devices to help the driver check the surroundings of the vehicle. Before driving, please be sure that always perform a visual check of the vehicle's surroundings with a mirror before operating the vehicle. Please pay attention to the following notices and instructions when using the cameras.

CAUTION

- Drivers shall not depend on the cameras only. There have some difference tolerance from the images and the actual objects.
- When using the camera monitors, you should not only focus on the screen, but also use vehicle mirrors and eyes to check actual conditions.
- The position of guide line displayed on the monitor may differ from actual conditions. Please take the actual guide line as reference and check with eyes.
- When the tire size changed, the guide line position displayed on the screen may also differ.

NOTICE

- Do not use high-pressurized water column to wash the cameras to avoid damage.

- The distances between the vehicle and objects may differ from the actual distances.
- There are blind spots around the vehicle that will not be displayed on the camera monitors.

Display the camera image screen

Rear Wide Camera (RWC)

When you shift the gear to the reverse (R) position, the camera screen is automatically displayed.


Touch view button to switch between Wide/Normal/Top views.

-  Wide View (Default)
-  Normal View
-  Top View

NOTE


- Actual distances may vary slightly depending on the vehicle model.
- You can select to turn off guide line. (see **P. 52**)

Wide View (Default)

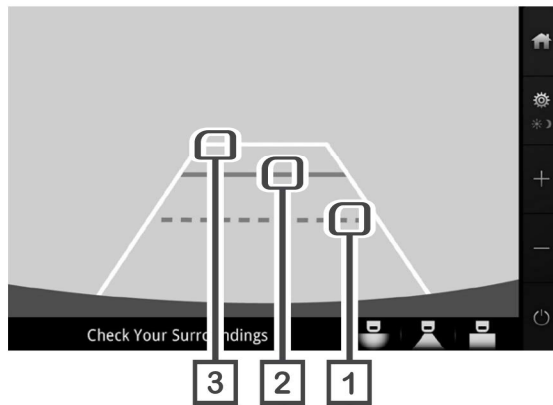


Number	Function
1	• The distance around 0.5m from the edge of the bumper.
2	• The distance around 1m from the edge of the bumper.
3	• The distance around 1.8 m from the edge of the bumper.

Normal View

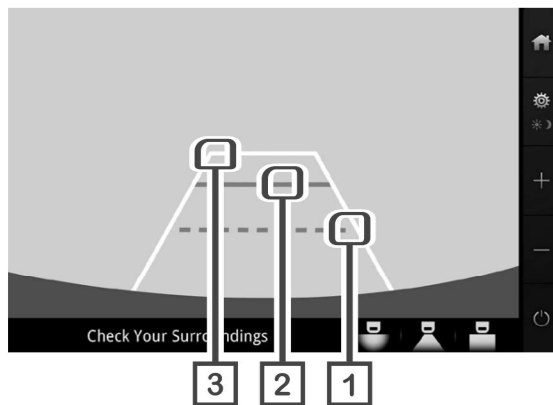

Number	Function
1	• The distance around 0.5 m from the edge of the bumper.
2	• The distance around 1 m from the edge of the bumper.
3	• The distance around 1.8 m from the edge of the bumper.

Top View

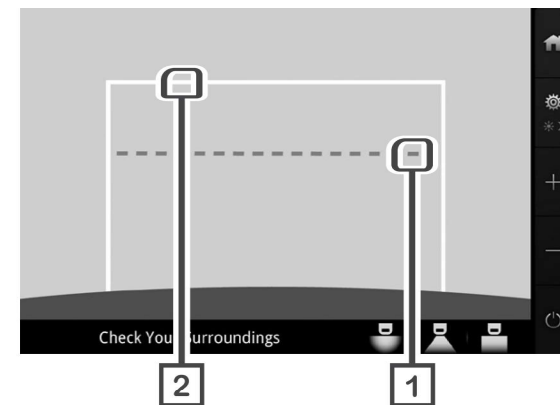


Number	Function
1	• The distance around 0.5m from the edge of the bumper.
2	• The distance around 1m from the edge of the bumper.

■ LaneWatch Camera (LWC)


The LaneWatch assistance system enhances visibility of side rear areas. Once activated, it displays the view from a camera on the passenger-side mirror, providing you an extra way to check surroundings and improve lane change safety.

- 1 Press the LWC switch button on the tip of turn signal lever or turn on the passenger-side turn signal while in P/N/D mode. (See P.53)

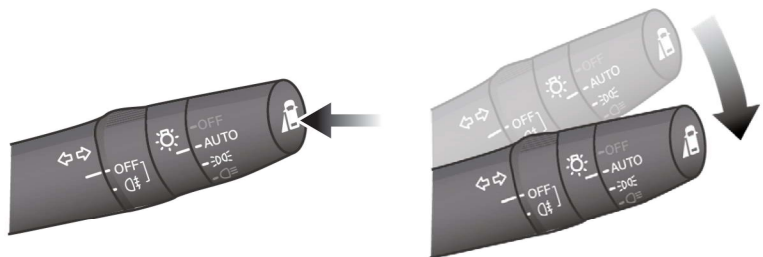

- 2 The passenger side view appears.


- When the LWC screen is displayed, the color of illumination bar will temporarily turn orange.
- Right-hand-drive : Flows from right to left
- Left-hand-drive : Flows from left to right

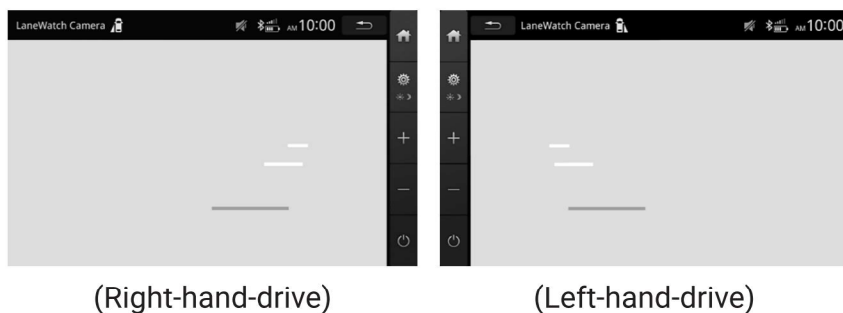

- 3 Press the LWC switch button again or pull the turn signal lever back to turn off the LWC screen.

■ LWC Reference Line

There are three lines to help you quickly judge relative distance. If an object is near **1** on the screen, it's closer to your car. If an object is near **3**, it's more distant.

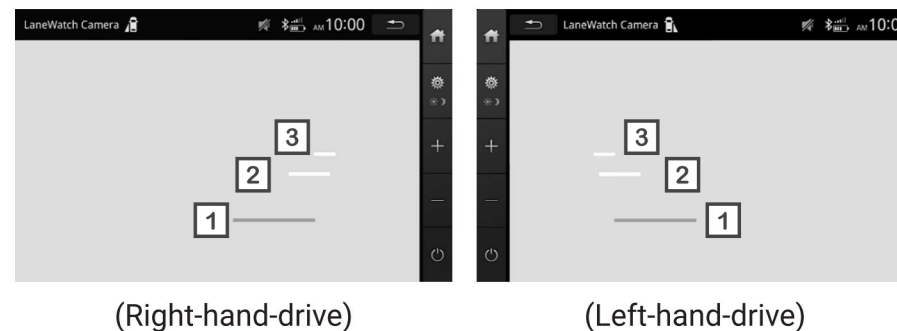

NOTE


- You can select to turn off reference line. (see P. 53)

Display Control


You can adjust brightness, contrast, and color of the camera images.

1 Touch any area with selection box.


RWC touch area

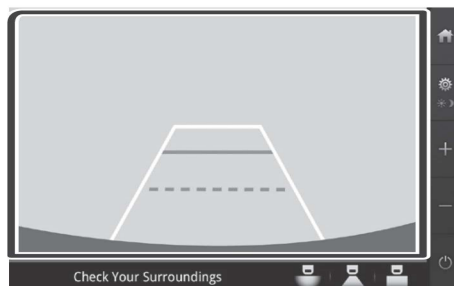


LWC touch area

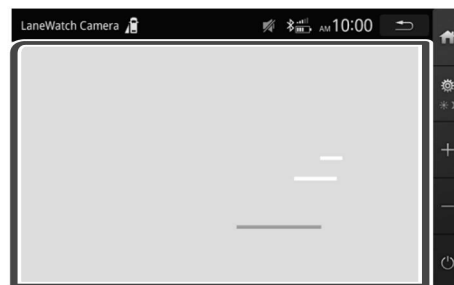

MVC touch area

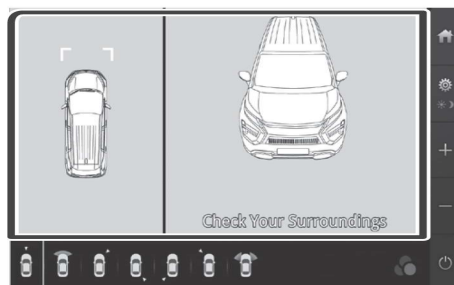 

 2 Adjust brightness, contrast and color.

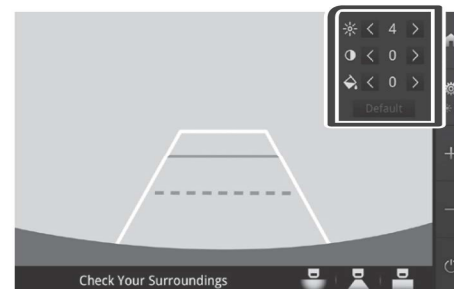

Brightness

Adjust brightness. (-7, -6, -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5, 6, 7)
(Default: 4 in Day Mode / -4 in Night Mode)

Contrast

Adjust contrast. (-4, -3, -2, -1, 0, 1, 2, 3, 4)
(Default: 0 in Day Mode / 0 in Night Mode)

Color

Adjust Color. (-4, -3, -2, -1, 0, 1, 2, 3, 4)
(Default: 0 in Day Mode / 0 in Night Mode)

Settings

You can adjust various Settings in the main menu.

Display the Settings menu

 
- 1 Short press  button to display the Settings menu.



NOTE

- For safety concerns, the settings cannot be set while the car is moving. If you would like to adjust settings, stop the car in a safe place and apply the parking brake.

Language Settings

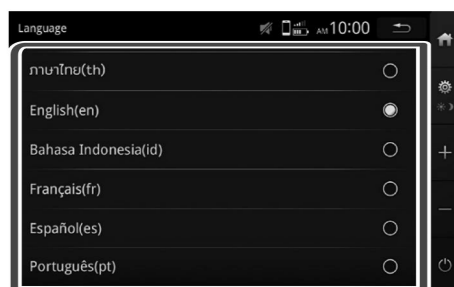

- Touch the language you would like to select.

 
Device List Settings

See P. 18, 19.

Bluetooth Settings

See P. 19 - 21.

Wi-Fi Settings

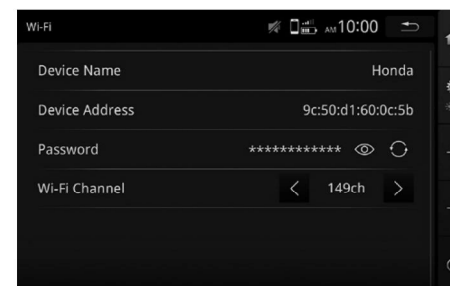

Device Name

Change the device name. (See P. 21)

Device Address

Display device address.

Password

-   Touch to show/Hide password.
-  Touch to generate new password.

 
Wi-Fi Channel

Switch between Wi-Fi channels 149 and 161.


NOTE

- The availability of Wi-Fi settings depends on the country.

Audio Settings

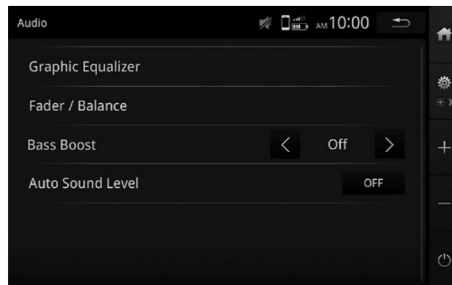

Graphic Equalizer

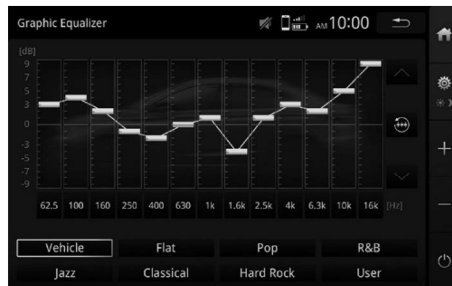 

Preset Select

- Select one of the items from follows.

Vehicle / Flat / Pop / R&B / Jazz / Classical / Hard Rock / User

Customized

 
- Touch the frequency of each bar to adjust the gain level (-9~9).
You can adjust gain level by touching / .
- To save the settings, press and hold the **[User]** button.

Reset

- Press to return all values to 0. The mode will become **[Flat]**.

Fader / Balance

Fader and Balance adjust the strength of the sound coming from each speaker. The balance adjusts side-to-side (L-R) strength and the Fader adjusts the front-to-back strength.

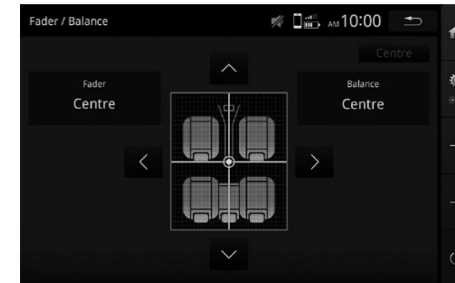

- Touch / to adjust the front and rear speaker balance.
- Touch / to adjust the left / right speaker balance.
- You also can touch and drag the control point to the appropriate place ,or touch **[Centre]** to reset to default.

Bass Boost

Adjust the bass boost. (Off/1/2/3) (Default: Off)

Auto Sound Level

The sound level is automatically adjusted to meet the current car speed to reduce driving road noise. (ON/OFF) (Default: OFF)