

FusionTM Quick Start Manual

Getting Started

Stereo Controls



①		- Select to open a menu. - Select to return to the previous screen or menu.
②		Select to cycle the available sources.
③		- Select to pause or resume. - AM, FM source: - Select to cycle through the tuning modes: auto, manual, and presets (when two or more presets are saved). - Hold to save this station as a preset. - SIRIUSXM source: Select to cycle through the tuning modes (auto and presets), when you have at least one preset channel.
④		- Select to skip to the previous track, when using an applicable source. - Hold to rewind the current track, when using an applicable source. - AM, FM source: - Select to tune to the previous station. - Hold for faster tuning (manual mode only). - Aux: Select to decrease the gain for the connected source. - SIRIUSXM source: Select to return to the previous channel.

⑤		- Select to skip to the next track, when using an applicable source. - Hold to fast forward the current track, when using an applicable source. - AM, FM source: - Select to tune to the next station. - Hold for faster tuning (manual mode only). - AUX1, AUX2 source: Select to increase the gain for the connected source. - SIRIUSXM source: Select to advance to the next channel.
⑥		- Select to mute the audio output. - Select to un-mute the muted audio output. The volume continues at the previously set level.
⑦		Select to adjust the screen and dial brightness.
⑧	Dial	- Turn to adjust the volume. - Press and hold for at least one second to adjust the subwoofer levels. - Turn to move through the menus or adjust a setting. - Press to select the highlighted option.
⑨		- Select to turn on the stereo. - Hold to turn off the stereo.


Using the Dial to Select Items

You can use the dial to highlight and select items on the screen.

- Turn the dial to select an item on the screen.
- Press the dial to select the highlighted option.

Stereo Screen

The information displayed on the stereo screen varies depending on the source selected. This example shows the stereo playing a track on an iPhone® mobile digital device.

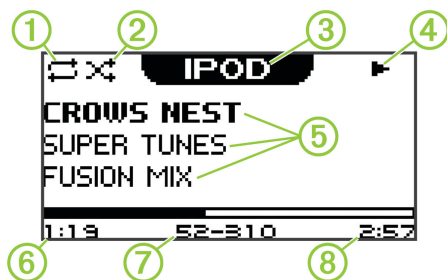

①	Repeat status icon
②	Shuffle status icon
③	Source
④	Play or pause
⑤	Track details (if available)
⑥	Elapsed time
⑦	Current track number out of total number of tracks in the playlist (if available)
⑧	Track duration

Connecting Media Players

⚠ CAUTION

You may need to remove the media player from a sleeve or case to fit inside the dock.

Insert the media player with display facing up.

Never force the media player into the dock.

Be careful when removing the media player from the dock, because the surfaces may be warm.

Always disconnect your media player from the stereo when not in use and do not leave in your vessel. This helps reduce risk of theft and damage from extreme temperatures.

Do not remove the media player or use your stereo in a distracting manner while operating the vessel. Check and obey all marine laws in association with use.

The stereo accepts a variety of media players, including smartphones and other mobile devices. You can connect a compatible media player using a Bluetooth® wireless connection or a USB connection to the integrated docking station (UD models only), the USB cable on the back of the stereo, or to an optional UNI-Dock™ external media dock.

Connecting a Media Player Using the Dock (UD Models only)

You can connect a compatible media player using the universal dock built into the UD models.

- 1 Slide the button on the top of the stereo, and pull down to open the door.
- 2 Slide out the device tray.
- 3 Insert the adapter cable ① into the USB port ②.

NOTE: You can connect a USB flash drive directly to the USB port.



- 4 Connect the adapter cable to the media player ③, and place it in the device tray.

- 5 Slide in the device tray, and close the door.

Media Player Compatibility

If you have a UD model, you can use the included adapter cables to connect popular media players to the internal docking station. If you have an AV model, you can use the USB cables that came with your media player to connect the player to the stereo.

Only media players with ports on the bottom, not on the sides, fit in the docking station. Media players larger than 144 × 71 × 13 mm (5.67 × 2.80 × 0.52 in.) do not fit in the docking station.

Cable Connector in Dock	Devices
Micro-USB connector	Supported media players. See www.fusionentertainment.com .
Apple® 30-pin connector	Apple iPhone 4s, iPhone 4, iPhone 3G, and iPhone 3GS. iPod touch® (2nd, 3rd, and 4th generation), iPod classic®, and iPod nano® (4th, 5th, and 6th generation).
Apple Lightning™ connector	Apple iPhone 6, iPhone 5s, iPhone 5c, and iPhone 5. iPod touch (5th generation) and iPod nano (7th generation).

You also can connect a FAT32- or NTFS-formatted USB flash drive directly to the USB port.

Connecting a USB Device Using the USB Cable

You can connect a USB device to the USB cable on the back of the stereo.

- 1 Locate the USB cable on the back of the stereo.
- 2 Connect the USB device to the USB port.

Connecting a Compatible Bluetooth Device

You can play media from a compatible Bluetooth device using the Bluetooth wireless connection.

- 1 Select the Bluetooth source.
- 2 Select  > **DISCOVERABLE** to make the stereo visible to your compatible Bluetooth device.
- 3 Enable Bluetooth on your compatible Bluetooth device.

- 4 Bring the compatible Bluetooth device within 10 m (33 ft.) of the stereo.
- 5 On your compatible Bluetooth device, search for Bluetooth devices.
- 6 Select the stereo from the list of detected devices.
- 7 Follow the on-screen instructions to pair and connect to the discovered stereo.

When pairing, your smartphone or media player may ask you to confirm a code on the stereo. The stereo does not display a code, but it does connect correctly when you confirm the message on the Bluetooth device.

To prevent interruption to audio streaming over Bluetooth wireless, turn off the DISCOVERABLE setting after pairing a Bluetooth device to the stereo.

Bluetooth Range Information

The stereo and Bluetooth wireless devices have a range of 10 m (33 ft.). For optimal performance, the Bluetooth wireless device should also have a clear line of sight to the stereo.

Inserting a DVD or CD

NOTE: For best results, before you insert the disc, make sure the disc is not scratched or damaged. If necessary, clean and dry the disc with a clean, soft, lint-free cloth. Avoid touching the surface of the disc and avoid exposure to direct sunlight.

DVD and CD playback is available on AV models only.

- 1 Slide the button on the top of the stereo, and pull down to open the door.
- 2 Insert the disc with the label facing up.
- 3 Close the door.

Setting the DVD Region

You must select the DVD region in order to play a DVD.

- 1 Select  > **SETTINGS** > **DVD REGION**.
- 2 Select the region.

Playing Media

Selecting a Source

- 1 Select .
- 2 Select an option:
 - Turn the dial to highlight a source.
 - Select  repeatedly to highlight a source.
- 3 Press the dial to select the source.

Setting the Tuner Region

You must select the region you are presently in to receive AM, FM, and SiriusXM® stations properly.

NOTE: SiriusXM is not available in all regions.

- 1 Select  > **SETTINGS** > **TUNER REGION**.
- 2 Select your present region.

Changing the Radio Station

- 1 Select an applicable source, such as **FM**.
- 2 Select  repeatedly to cycle through the tuning mode:
 - Select **AUTO** to scan and stop on the next available station.
 - Select **MANUAL** to select a station manually.
 - Select **PRESETS** to select a saved station preset.
- 3 Select  or  to tune to the station.

SiriusXM Satellite Radio

Only SiriusXM brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and subscription are required. For more information, go to www.siriusxm.com.

SiriusXM Satellite Radio service is available in the 48 contiguous United States and the District of Columbia, and with coverage limitations in Puerto Rico.

Controlling Pandora® Radio with the Stereo

You can control Pandora using the stereo instead of your mobile device. While you are controlling Pandora using the stereo, you cannot control Pandora using your mobile device.

- 1 Connect to the mobile device using a USB or Bluetooth connection.
- 2 Select  > **PANDORA**.
- 3 Select **ENABLE CONTROL** to fill the radio button.
- 4 If necessary, select an option:
 - To pause the stations, select .
 - To skip to the next track, select .
 - To tell Pandora you like this track and would like more tracks similar to this played on this station, select .
 - To tell Pandora not to play this track, select .

Controlling Pandora Radio with Your Mobile Device

- 1 Connect to the mobile device using a USB or Bluetooth connection.
- 2 Open the Pandora app on the mobile device.
- 3 Begin playing a station on the mobile device.
- 4 Control the playback with your mobile device.

Adjusting the Volume

- 1 Use the dial to adjust the volume.
- 2 If necessary, press the dial to switch between zones.

TIP: To control all zones at the same time, press the dial until all zones are highlighted.