

GARMIN.

A04967



..... 2


Quick Start Manual	8
Manuel de démarrage rapide	10
Manuale di avvio rapido	13
Schnellstartanleitung	15
Guía de inicio rápido	17
Manual de início rápido	20

Device Overview · Présentation de l'appareil · Panorámica del dispositivo · Übersicht über das Gerät · Descripción general del dispositivo · Visão geral do dispositivo




**Device Pairing · Couplage de l'appareil · Associazione del dispositivo
· Gerätekopplung · Vinculación del dispositivo · Emparelhamento de
dispositivo**


garmin.com/connectapp

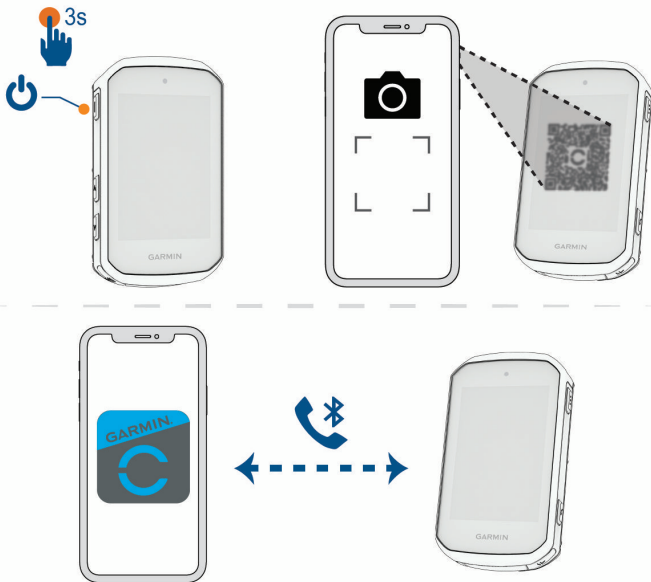


Device Charging · Appareil en cours de chargement · Ricarica del dispositivo · Aufladen des Geräts · Carga del dispositivo · O dispositivo está carregando

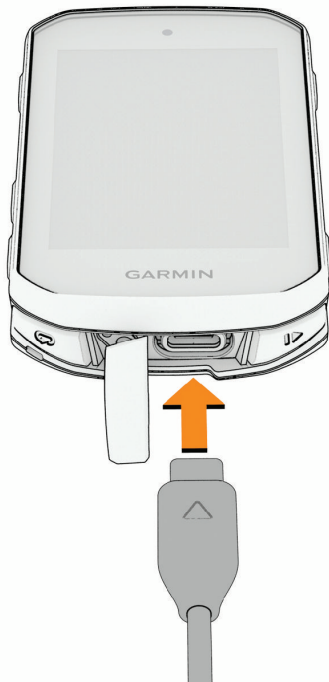


**Standard Mount Installation · Installation du support standard
· Installazione della staffa standard · Installation der
Standardhalterung · Instalación de montaje estándar · Instalação
do suporte padrão**

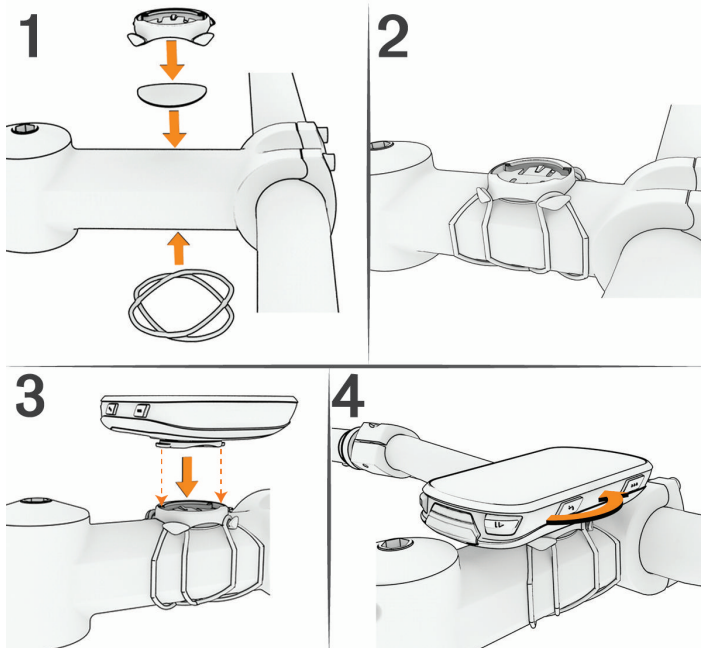

**Out-Front Mount Installation · Installation du support frontal ·
Installazione della staffa frontale per manubrio · Installation der
Aero-Halterung · Instalación del soporte frontal · Instalação do
suporte externo frontal**

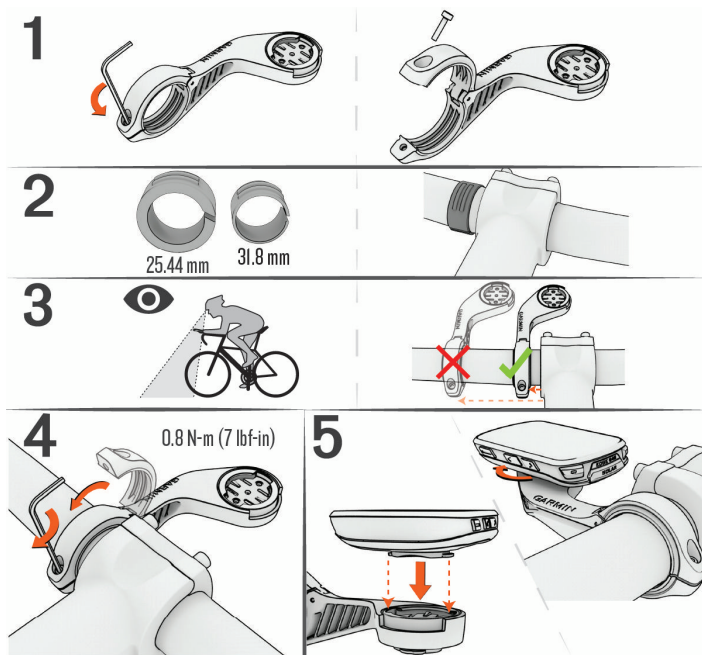

**Optional Accessories · Accessoires en option · Accessori opzionali ·
Optionales Zubehör · Accesorios opcionales · Acessórios opcionais**

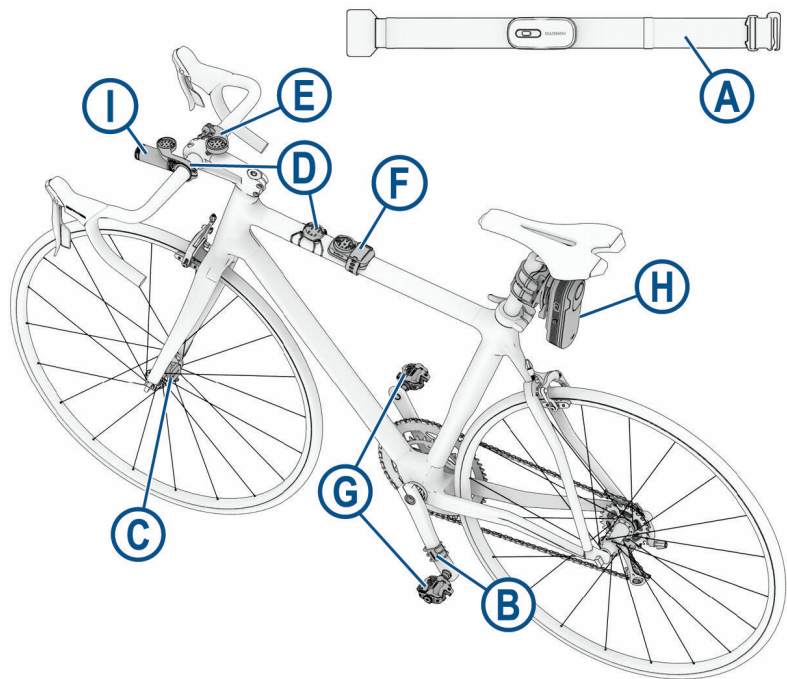

A04967 Quick Start Manual

WARNING

- See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.
- Always consult your physician before you begin or modify any exercise program.

NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

Optional Accessories

Go to www.buy.garmin.com to purchase optional accessories.

	HRM 200 or HRM 600 heart rate monitor
	Cadence sensor
	Speed sensor
	Standard and out-front mounts

	Mountain bike mount
	Top tube mount and strap
	Rally™ power meter system
	Varia™ rearview radar, tail light, or camera
	Varia headlight or camera

Device Buttons

	Press to enter sleep mode and wake the device. Hold to turn the device on and off.
	Press to scroll through the data screens, options, and settings. From the home screen, press to view the status widget.
	Press to scroll through the data screens, options, and settings.
	Press to mark a new lap or complete specific functions, such as creating timing gates.
	Press to start and stop the activity timer.

	Press to return to the previous screen. Hold to return to the home screen.
	Press to choose an option or to acknowledge a message. During a ride, press to view menu options such as alerts and data fields.

Device Information

Specifications

Edge® operating temperature range:

From -20° to 60°C (from -4° to 140°F)

Edge charging temperature range:

From 0° to 45°C (from 32° to 113°F)

Wireless frequencies: 2.4 GHz @ 18.5 dBm maximum

EU SAR: 0,28 w/kg torso, 0,28 w/kg limb

Charging Requirements

The power delivered by the charger must be between min 2,5 Watts required by the radio equipment, and max 15 Watts in order to achieve the maximum charging speed.



Product Updates

Your device automatically checks for updates when paired with a phone using

Bluetooth® technology or when connected to Wi-Fi®. You can manually check for updates from the system settings. On your phone, install the Garmin Connect® app.

This provides easy access to these services for Garmin® devices:

- Software updates
- Map updates
- Course updates
- Data uploads to Garmin Connect
- Product registration

NOTE: Map updates are available through Garmin Express®.

Getting More Information

- Go to **support.garmin.com** for additional manuals, articles, and software updates.
- Go to **buy.garmin.com**, or contact your Garmin dealer for information about optional accessories and replacement parts.

Getting Support

- Manuals
- Videos
- Support topics
- Regulatory information

Go to www.garmin.com/manuals/

A04967 Manuel de démarrage rapide

AVERTISSEMENT

- Consultez le guide *Informations importantes sur le produit et la sécurité* inclus dans l'emballage du produit pour prendre connaissance des avertissements et autres informations importantes sur le produit.
- Consultez toujours votre médecin avant de commencer ou de modifier tout programme d'exercice physique.

AVIS

Pour éviter tout risque de corrosion, essuyez soigneusement le port USB,

le capuchon étanche et la surface environnante avant de charger l'appareil ou de le connecter à un ordinateur.

Accessoires en option

Pour acheter des accessoires en option, rendez-vous sur le site www.buy.garmin.com.

A	Moniteur de fréquence cardiaque HRM 200 ou HRM 600
B	Capteur de cadence
C	Capteur de vitesse
D	Supports standard et frontal
E	Support pour VTT
F	Support de montage sur tube supérieur et sangle
G	Système de mesure de puissance Rallye
H	Radar arrière, feu arrière ou caméra Varia
I	Feu avant ou caméra Varia

support.garmin.com

© 2025 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin Logo, ANT+®, and A04967 are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin. Garmin Connect™, Garmin Express™, Rally™, and Varia™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Wi-Fi® is a registered mark of Wi-Fi Alliance Corporation. Other trademarks and trade names are those of their respective owners.

M/N: A04967



Printed in Taiwan
June 2025
190-03246-00_0A

