


GARMIN®

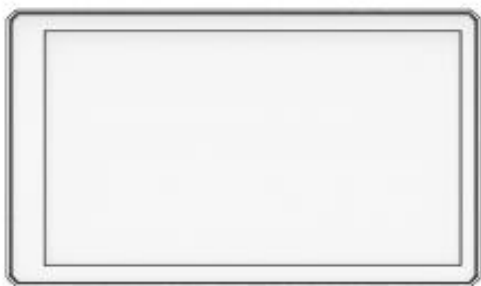

M/N: A05115

Owner's Manual

© 2025 Garmin Ltd. or its subsidiaries

All rights reserved. Under copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Table of Contents

Introduction	1
Charging the Device	1
Turning On the Device.....	1
Pairing Your Phone.....	1
Navigating to a Destination.....	1
Viewing Regulatory and Compliance Information	1
Specifications.....	2
 Important Safety and Product Information	 2
Warning	0
Notice	0

Introduction

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Charging the Device

NOTICE

To prevent corrosion, thoroughly clean and dry the contacts and the surrounding area before charging or connecting to a computer.

Adding text in new computer, old system.

- 1 Connect the charger to the device.
- 2 Plug the other end of the cable into an AC adapter or computer port.
The device displays the current battery charge level.

Turning On the Device

Press and hold .

Pairing Your Phone

- 1 During the initial setup, scan the QR code with your phone.
- 2 Follow the on-screen instructions to complete the pairing and setup process.

Navigating to a Destination

- 1 From the home screen, select **Navigate**.
- 2 Select a category.
- 3 Select a destination.
- 4 Select **Go**.
The map opens, and your route is marked with a magenta line.
- 5 Navigate using the map or compass.

Viewing Regulatory and Compliance Information

The label for this device is provided electronically. The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, as well as applicable product and licensing information. Not available on all models.

- 1 Select **Settings**.
- 2 Select **Device**.
- 3 Select **Regulatory**.

Specifications

Battery type	Rechargeable, built-in lithium-ion battery
Water rating	IPX7
Operating temperature range	From -15° to 55°C (from -4° to 131°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)

Important Safety and Product Information

WARNING

Failure to heed the following warnings could result in death, serious injury, or property damage.

Battery Warnings

A lithium-ion battery is used in this device.

If these guidelines are not followed, batteries may experience a shortened life span or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not force discharge, recharge, disassemble, heat above the temperature ranges specified in the printed manual, or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Do not modify, remanufacture, puncture, or damage the device or batteries.
- Do not remove or attempt to remove the non-user-replaceable battery.

NOTICE

Failure to heed the following notice could result in personal or property damage or negatively impact the device functionality.

Battery Notices

- Contact your local waste disposal department to dispose of the device/batteries in accordance with applicable local laws and regulations.

Device Pairing Notice

Not all wireless connections are secure. You should pair devices in a secure location. For more information, see garmin.com/connectiontypes.

