

**GARMIN®**



**M/N: B04281**

---

**Owner's Manual**

© 2020 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to [www.garmin.com](http://www.garmin.com) for current updates and supplemental information concerning the use of this product.

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries.

Apple® and Mac® are trademarks of Apple Inc, registered in the U.S. and other countries. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. microSD® is a trademark of SD-3C. Wi-Fi® is a registered trademark of Wi-Fi Alliance. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

# Table of Contents

## Getting Started..... 1

### Device Overview..... 1

Installing a Memory Card..... 2

Installing the Camera on Your  
Windshield..... 3

Connecting the device to Vehicle

Power ..... 4

Windshield..... 5

Connecting the Camera Cable..... 7

Mount..... 8

Using the Touchscreen..... 11

Home Screen..... 12

Status Bar Icons..... 13

Synchronizing Session Data with Your  
Garmin Account..... 13

Viewing Track Information..... 13

Viewing the Weather Forecast..... 13

## App..... 14

### Starting a Drive Session..... 14

Pausing a Drive Session..... 15

Drive Session Audio Settings..... 15

Audible Prompt and Coaching  
Settings..... 15

Race Timer..... 16

Adding a Track..... 17

Adding a Track Configuration..... 17

Adding a Driver Profile..... 17

Editing a Driver Profile..... 17

Changing the Units of Measure..... 17

Adding or Editing a Car Profile..... 18

Selecting a Car or Driver Profile..... 18

## Reviewing Drive Sessions..... 18

Session Summary..... 19

Viewing a Session Video..... 19

Saving a Session Video..... 19

Comparing Sessions..... 20

Deleting Sessions..... 20

Viewing Opportunities..... 20

Opportunities..... 21

Adding Opportunity Information to the

Race Coach..... 22

Reviewing Laps..... 22

Laps..... 23

Viewing Lap Speed Data..... 23

Viewing Acceleration and Deceleration

Data..... 24

Comparing Laps..... 24

## Settings..... 24

Connecting to a Wireless Network..... 24

Enabling Bluetooth Wireless

Technology..... 24

Pairing a Wireless Headset or Car

Stereo..... 24

Display Settings..... 24

Sound and Notification Settings..... 25

Adjusting Sound and Notification

Volume..... 25

Setting the Text Language..... 25

Date and Time Settings..... 25

Device Settings..... 25

Resetting Data and Settings..... 25

## Device Information..... 25

Viewing E-label Regulatory and

Compliance Information..... 25

Specifications..... 26

Charging the Device..... 26

## Device Maintenance..... 26

Garmin Support Center..... 26

Updating Software Using a Wi-Fi

Network..... 26

Updating Software with Garmin

Express™..... 27

Installing Garmin Express..... 28

Updating the Camera Software..... 28

Device Care..... 28

|                                                      |    |
|------------------------------------------------------|----|
| Cleaning the Outer Casing.....                       | 28 |
| Cleaning the Touchscreen.....                        | 28 |
| Cleaning the Camera Lens.....                        | 28 |
| Avoiding Theft.....                                  | 29 |
| Restarting the Device.....                           | 29 |
| Removing the Device, Mount, and<br>Suction Cup.....  | 29 |
| Removing the Mount from the Suction<br>Cup.....      | 29 |
| Removing the Suction Cup from the<br>Windshield..... | 29 |
| Removing the Adhesive Camera<br>Mount.....           | 29 |

## **Troubleshooting..... 29**

|                                                                  |    |
|------------------------------------------------------------------|----|
| The suction cup will not stay on my<br>windshield.....           | 29 |
| The mount does not hold my device in<br>place while I drive..... | 29 |
| My device is not acquiring satellite<br>signals.....             | 29 |
| The device does not charge in my<br>vehicle.....                 | 30 |
| My battery does not stay charged for<br>very long.....           | 30 |
| My camera feels warm while it is<br>operating.....               | 30 |
| My video recordings are blurry.....                              | 30 |

## **Appendix..... 30**

|                                                |    |
|------------------------------------------------|----|
| Data Management.....                           | 30 |
| Memory Cards.....                              | 30 |
| Replacing the Memory Card.....                 | 31 |
| Formatting the Memory Card.....                | 31 |
| Deleting Videos from the Memory<br>Card.....   | 31 |
| Connecting the Device to Your<br>Computer..... | 32 |
| Transferring Data From Your<br>Computer.....   | 32 |
| Disconnecting the USB Cable.....               | 32 |
| Purchasing Accessories.....                    | 32 |


# Getting Started

 **WARNING**

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

This device is only intended for recreational use in a circuit environment. Never use this device on public roadways. Failure to follow this warning may result in an accident causing property damage, serious personal injury, or death. You are responsible for using this device in a safe and prudent manner.

## Device Overview

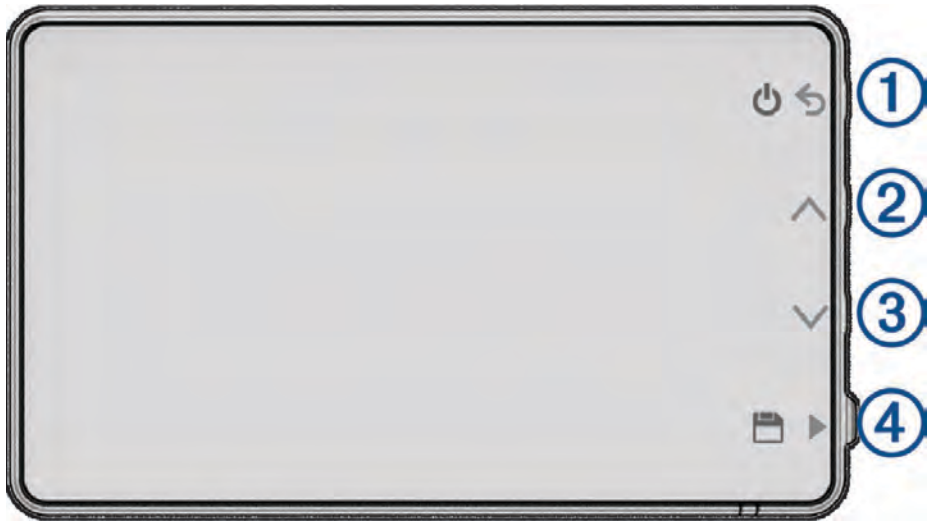


|   |                                                                                     |                                                                                                                     |
|---|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| ① |  | Press to turn the device on.<br>Hold for 3 seconds to turn the device off.<br>Press to return to the previous page. |
| ② |  | Press to scroll through menus or pages.                                                                             |
| ③ |  | Press to scroll through menus or pages.                                                                             |
| ④ |  | From the viewfinder, press to save a photo and a video.<br>Press to choose an option in a menu.                     |

## Installing a Memory Card

To record video, you must install a compatible memory card ([Memory Card Specifications, page 22](#)). A memory card is included with some device models.

- 1 Insert the memory card ① into the slot ②.

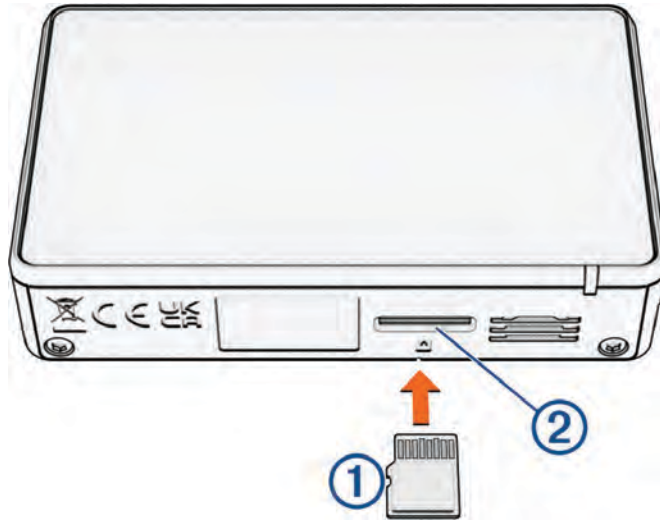

- 2 Press it in until it clicks.

## Formatting the Memory Card

The camera requires a memory card formatted using the exFAT file system. You can use the camera to format your card using this file system.

You should format your memory card at least one time every 6 months to help extend the useful life of the memory card. You must also format a brand new memory card if it is not formatted using the exFAT file system.

**NOTE:** Formatting the memory card deletes all videos, photos, and data on the card.

- 1 Connect the camera to power.
- 2 Select **Settings > Camera > Format Card**.
- 3 Keep the camera connected to power until the formatting is complete.

When formatting is complete, the camera displays a message and begins recording.

## Removing the Memory Card

### NOTICE

Removing the memory card while the device is turned on can result in a loss of data or damage to the device.

- 1 Turn off the device.
- 2 Press the card in until it clicks.
- 3 Release the card.

## Installing the Camera on Your Windshield


### NOTICE

The adhesive mount is intended for a long-term installation and can be difficult to remove. You should carefully consider the mounting location before you install the mount.


**NOTE:** You should choose a mounting location that allows you to easily remove the device from the magnetic mount for storage and camera operations.

Before you can install the adhesive mount onto your windshield, the ambient temperature must be from 21° to 38°C (from 70° to 100°F).

- 1 Clean the windshield using water or alcohol, and a lint-free cloth.  
The windshield must be free of dust, wax, oils, or coatings.
- 2 Remove the protective film from the mount adhesive.

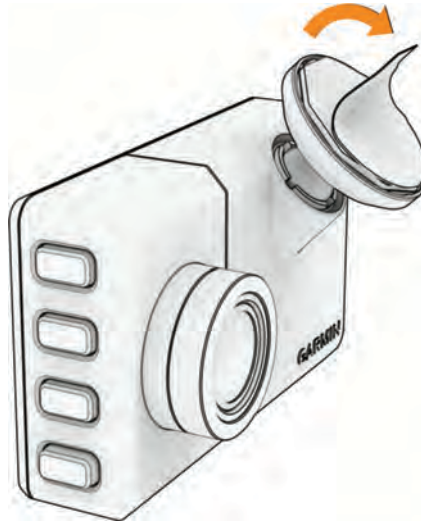


- 3 Position the mount over the mounting location.  
**TIP:** The adhesive is extremely sticky. Avoid touching the adhesive to the windshield until the mount is properly positioned and aligned.
- 4 Press the mount firmly onto the windshield, and maintain pressure for 30 seconds.  
This helps to ensure the mount adhesive has proper contact with the windshield.

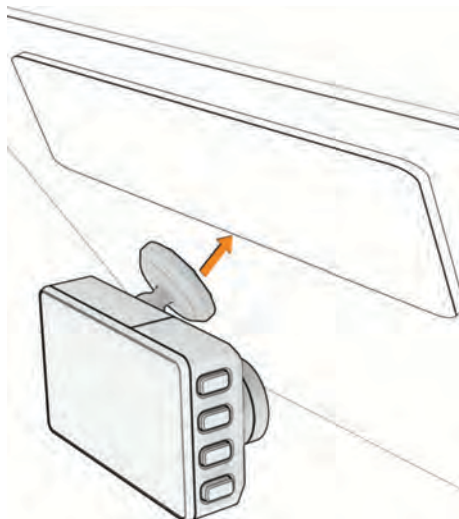

## Connecting the Device to Vehicle Power

- 1 Plug the power cable into the USB port on the camera.

You can use either of the included cables to provide power to the camera. The longer 4 m (13 ft.) cable connects with the cable pointing up. The shorter 1.5 m (5 ft.) cable connects with the cable pointing down.

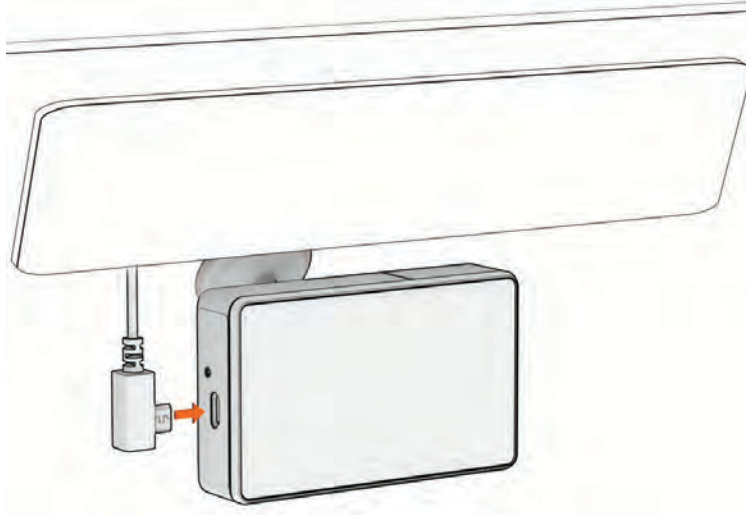


- 2 Route the power cable to your vehicle power outlet.

**NOTE:** You should power the camera using the included vehicle power adapter and avoid using a vehicle USB port. A vehicle USB port may not provide enough power for reliable camera operation. Also, the camera may enter USB mass storage mode if you connect it to a vehicle USB port using the shorter cable. The camera cannot record video or connect to your smartphone while it is in USB mass storage mode.

The longer, lightweight power cable is designed to be routed upward and out of sight. To hide the 4 m (13 ft.) cable, route it behind the vehicle trim along the windshield, doorframe, or dash.



The shorter cable is designed to be routed down to your vehicle power supply.

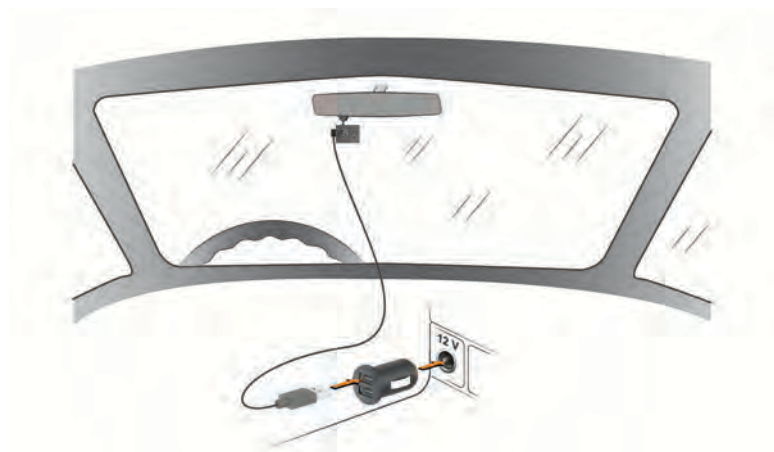

- 3 Plug the Garmin Dash Cam power cable into the included vehicle power adapter.
- 4 Plug the vehicle power adapter into the power outlet in your vehicle.
- 5 If necessary, turn on the vehicle ignition switch to provide power to the power outlet in your vehicle.  
The camera turns on and starts recording.

## Setting the Camera Placement

You can mount the device in the left, center, or right of your windshield. For the best performance of driver assistance features, you should set the Camera Placement option to indicate the location of your device in the vehicle.

- 1 Select **Settings > Driver Assistance > Camera Placement**.
- 2 Select **Horizontal Placement**, and select the horizontal placement of your camera.
- 3 Select **Vehicle Height**.
- 4 Select an option:
  - If you are driving a large vehicle, like a full size van or truck, select **Tall**.
  - If you are driving a car, select **Normal**.

## Turning On the Device Manually

**NOTE:** When the device is connected to an ignition-switched power outlet, it turns on automatically when you turn on the vehicle.

Select **Power On**.

The device turns on.

## Turning Off the Device Manually

**NOTE:** When the device is connected to an ignition-switched power outlet, it turns off automatically when you turn off the vehicle.

Hold **Power Off** for 3 seconds.

If the device is connected to a Wi-Fi® network, it uploads available videos to the Vault before it turns off.

If your device is connected to external power, it enables the Parking Guard feature after five seconds. If necessary, you can follow the on-screen instructions to turn off the device before it enables the Parking Guard feature.

# Using the Touchscreen

- Tap the screen to select an item.
- Drag or swipe your finger across the screen to pan or scroll.
- Pinch two fingers together to zoom out.
- Spread two fingers apart to zoom in.

## Home Screen

|   |                     |                                                             |
|---|---------------------|-------------------------------------------------------------|
| ① | Status bar          | Select an icon to view more information.                    |
| ② | Race profile        | Select to configure your driver or car profile.             |
| ③ | Settings            | Select to change the device settings.                       |
| ④ | DRIVE               | Select to start a drive session.                            |
| ⑤ | REVIEW              | Select to review the details of your recent drive sessions. |
| ⑥ | SYNC                | Select to synchronize data with your Garmin account.        |
| ⑦ | Weather information | Displays the weather conditions at the closest track.       |
| ⑧ | TRACKS              | Select to view information about any track on the device.   |

## Status Bar Icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device. You can select some icons to change settings or view additional information.

|                                                                                   |                                                                                                                                      |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
|  | Camera storage. The timer shows the estimated recording time remaining on the memory card. Select to clear space on the memory card. |
|  | Camera status. Select to align the camera.                                                                                           |
|  | GPS signal status. Select to view location accuracy and acquired satellite information.                                              |
|  | Bluetooth® technology status. Select to view the Bluetooth settings.                                                                 |
|  | Wi-fi signal strength. Select to change the wi-fi settings.                                                                          |
|  | Battery charge level.                                                                                                                |

## Synchronizing Session Data with Your Garmin Account

Before your Garmin device can sync session data with your Garmin account, you must have a Wi-Fi® connection.

Your Garmin device automatically syncs session data with your Garmin account. This allows you to view drive session and performance data on the app.

**NOTE:** The device does not sync video footage.

- 1 If the device does not automatically sync session data, select **SYNC**.
- 2 Select an option:
  - If the device prompts you to sign in to your Garmin account, select **Sign In** or **Create a New Account**.
  - If the device prompts you to connect to Wi-Fi, select **CONNECT**.
- 3 Follow the on-screen instructions.

## Multi-Factor Authentication

The multi-factor authentication feature uses a second factor to verify your identity when you log in to your Garmin account, such as your phone or e-mail.

**NOTE:** You must enable multi-factor authentication in your Garmin account to use this feature.

## Viewing Track Information

You can view information and statistics about all race tracks that are available in the device memory.

- 1 From the home screen, select **TRACKS**.
- 2 Select the search bar.
- 3 Enter all or part of a track name.

Suggested track names appear below the search bar.
- 4 Select a track.

## Viewing the Weather Forecast

Before you can use this feature, you must connect your device to the internet and sign in to your Garmin account.

- 1 From the home screen, select the weather bar.

The device displays the current weather conditions and an hourly forecast for your current location.
- 2 Select a tab to view additional weather forecast data.

# App

The app allows you to view performance data from your Garmin device, such as lap times, session summaries, and annual driving activity metrics. You can also view weather conditions for every session. The app provides customizable icons for your driver and vehicle profiles. You can download the app from the app store on your mobile device.

**NOTE:** The icons for your driver and vehicle profiles do not synchronize with your Garmin device.

## Starting a Drive Session

Before you can start a drive session, your device must acquire satellite signals. You can select  in the status bar to check the current signal strength and accuracy.

1 From the home screen, select **DRIVE**.

2 Select a track.

3 Select an option:

- To change your driver profile, select .
- To change your vehicle profile, select .
- To configure audio features, select .
- To change your track conditions, select  or .
- To configure lap timer settings, select .
- To enable or disable audio recording, select .

4 Select **CHECK ALIGNMENT**, and follow the on-screen instructions to adjust your camera alignment.

5 Select **START**.

6 Start driving.

The timer starts automatically when you cross the starting line.

## Pausing a Drive Session

You can pause a drive session that is already in progress. When you pause a drive session, the device stops recording audio and video and stops recording some race data. This is useful if your vehicle breaks down on the track, or if you make a long pit stop.

When you come to a stop, the device automatically prompts you to pause the drive session.

- 1 Stop the vehicle.
- 2 From the race timer, select an option:
  - When the device prompts you, select **PAUSE**.
  - If the device does not prompt you, select **STOP > PAUSE**.

The session automatically resumes when you begin driving again.

## Drive Session Audio Settings

Before you start a race, you can select **CHECK AUDIO** to adjust audio settings for the drive session.

**RECORD CAMERA AUDIO:** Enables or disables camera audio recording for drive session videos.

**AUDIBLE PROMPTS:** Sets the level of audio coaching feedback and audible prompts you receive during a drive session .

**AUDIO OUTPUT:** Sets the audio output device.

**VOLUME:** Sets the volume level for audio prompts. You can move the slider left or right to adjust the volume.

**TEST AUDIO:** Plays a sample audio clip to test the function and volume of your audio configuration.

## Audible Prompt and Coaching Settings

### **WARNING**

The Advanced Race Coach feature is intended for use by experienced high-speed drivers only. Use of the feature by an inexperienced driver could result in an accident involving property damage, personal injury, or death. Any use of or reliance on suggestions provided by the advanced race coach is at your own risk.

You can set the amount of audible coaching feedback you receive during a drive session. Before you start a drive session, select **CHECK AUDIO > AUDIBLE PROMPTS**.

**ADVANCED RACE COACH:** Sets the device to automatically give advanced coaching feedback as you drive, such as braking and turning advice.

**RACE COACH:** Sets the device to give you basic coaching feedback based on your performance. You can add additional prompts to your race coach feedback after you review your drive session

**LAP TIMES ONLY:** Sets the device to provide audio prompts that contain only lap time information.

**OFF:** Disables audio prompts.

## Race Timer

As you drive, the device keeps track of your progress and gives you audible coaching tips. The race timer keeps track of your lap number and shows your best lap times.

|              |                                                                                                   |
|--------------|---------------------------------------------------------------------------------------------------|
| ① LAST LAP   | Displays the last lap time during the current session.                                            |
| ② BEST LAP   | Displays the best lap time for the current session.                                               |
| ③ DELTA      | Displays the time difference between the current lap and the best lap during the current session. |
| ④ END        | Select to end the current session.                                                                |
| ⑤ LAP        | Displays the current lap number.                                                                  |
| ⑥ TOTAL TIME | Displays the total lap time.                                                                      |

## Adding a Track

You can add a track that is not already loaded on your device. The device uses your GPS location and your vehicle's movements to create a map of the track.

- 1 Select **DRIVE > ADD A TRACK**.
- 2 Follow the on-screen instructions to enter track details and information about your drive session.
- 3 Select **START**.
- 4 Start driving.  
Once you exit the pit area and enter the track, you must drive in a straight line for at least 0.5 seconds at a minimum of 55 mph (90 km/h), and complete one full lap.
- 5 Select **END** after you have completed the drive session.
- 6 Select  or  to position the starting line on the map.
- 7 Select **SAVE**.

## Adding a Track Configuration

You can add additional configurations for tracks that are stored on your device.

- 1 Select **DRIVE**.
- 2 Select a track.
- 3 Select **ADD A TRACK CONFIGURATION**.
- 4 Follow the on-screen instructions to enter track details and information about your drive session.
- 5 Select **START**.
- 6 Start driving.
- 7 Select **END** after you have completed the drive session.
- 8 Select  or  to position the starting line on the map.
- 9 Select **SAVE**.

## Adding a Driver Profile

- 1 From the home screen, select the race profile icon .
- 2 Select **DRIVER**.
- 3 Select **ADD A PROFILE**.
- 4 Follow the on-screen instructions.

## Editing a Driver Profile

You can edit a driver profile to adjust preferences and change units of measure.

- 1 From the home screen, select the race profile icon.
- 2 Select **DRIVER**.
- 3 Select .
- 4 Select a field to edit its contents.

## Changing the Units of Measure

You can customize the units of measure displayed on the device.

- 1 From the home screen, select the race profile icon.
- 2 Select **DRIVER >  > UNITS**.
- 3 Select a unit of measure.

## Adding or Editing a Car Profile

- 1 From the home screen, select the race profile icon ([Home Screen, page 12](#)).
- 2 Select **CAR**.
- 3 Select an option:
  - To add a car profile, select **ADD A CAR**.
  - To edit a car profile, select .
- 4 Select a field to enter information about the make, model, and year of your vehicle.
- 5 Select **DONE**.

## Selecting a Car or Driver Profile

- 1 From the home screen, select the race profile icon ([Home Screen, page 12](#)).
- 2 Select an option:
  - To change the driver profile, select **DRIVER**.
  - To change the car profile, select **CAR**.
- 3 Select a car or driver.

## Reviewing Drive Sessions

### **WARNING**

Do not review any drive sessions while driving. Failure to pay attention to your surroundings and road conditions can result in serious personal injury or death.

The device records detailed information about each drive session. You can view the results of each drive session individually or compare data with another session. The device prompts you to review each drive session automatically at the end of each session.

- 1 From the home screen, select **REVIEW**.
- 2 Select a track.
- 3 Follow the on-screen prompts to select a drive session.

## Session Summary

|                              |                                                                                                              |
|------------------------------|--------------------------------------------------------------------------------------------------------------|
| ① Track map                  | Displays a map of the track. You can select a highlighted segment to view opportunities for that segment.    |
| ② Session summary statistics | Displays a summary of track conditions and performance metrics for the selected session.                     |
| ③ Session video thumbnail    | Select to view a video of the entire session.                                                                |
| ④ OPPORTUNITIES              | Select to view all opportunities for improvement for the selected session ( <i>Opportunities</i> , page 21). |
| ⑤ LAPS                       | Select to view detailed information about each lap ( <i>Reviewing Laps</i> , page 22).                       |
| ⑥ SEGMENTS                   | Select to view detailed information about each track segment.                                                |

### Viewing a Session Video

While you drive, the device records video of your drive session. You can view the recorded footage for each session. This can be useful to help you visualize your performance data.

From the session summary screen, select the video thumbnail (*Session Summary*, page 19).

### Saving a Session Video

You can save a recorded session video with data overlays to your memory card.

- 1 From the session summary screen, select the video thumbnail, and select  (*Session Summary*, page 19).
- 2 Select a data overlay option, and select **NEXT**.
- 3 Select a delta timer option, and select **SAVE VIDEO**.

## Comparing Sessions

You can compare the results of two drive sessions. This can help you to see areas of improvement between two sessions.

- 1 From the session summary screen, select  > **Yes**.
- 2 Select a session.

## Deleting Sessions

You can delete drive sessions to clear space on your memory card. You cannot recover deleted drive sessions.

From the session summary screen, select .

## Viewing Opportunities

During a drive session, the device analyzes your performance and records opportunities for improvement. Opportunities are coaching tips that help you decrease your lap time. The opportunity page enables you to review opportunities and offers tips for improvement.

From the session summary page, select **OPPORTUNITIES**.

# Opportunities

|                         |                                                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| ① OVERVIEW              | Select to view an overview of the opportunity.                                                                |
| ② BRAKING               | Select to view optimal brake timing and coaching advice for the selected track segment.                       |
| ③ APEX                  | Select to view optimal track usage and coaching advice for the selected track segment.                        |
| ④ SPEED                 | Select to view optimal speed and coaching advice for the selected track segment.                              |
| ⑤ Track segment map     | Displays an animated map of your performance on the selected track segment.                                   |
| ⑥ Data graphs           | Displays graphs that show the acceleration, speed, or time in comparison to the optimal data.                 |
| ⑦ VIEW SEGMENT          | Select to view additional details about the current track segment, such as video clips and speed information. |
| ⑧ Add all opportunities | Select to add all available opportunities to the race coach.                                                  |

## Adding Opportunity Information to the Race Coach

You can add recorded opportunities to the race coach feature. The next time you approach the saved track segment, the device provides coaching information using your paired headset or car stereo.

**1** From the session summary page, select **OPPORTUNITIES**.

**2** Select an option:

- To add all opportunities, select .

**NOTE:** You must enable **ADVANCED RACE COACH** when you start the drive session to use this feature ([Audible Prompt and Coaching Settings, page 15](#)).

- To add one opportunity at a time, select an opportunity.

**3** Select an option:

- To view information about brake timing, select **BRAKING**.
- To view information about track usage during a turn, select **APEX**.
- To view information about speed, select **SPEED**.

**4** Select **ADD TO RACE COACH**.

## Reviewing Laps

The Laps page lets you review lap time and speed information for each lap. You can compare any two laps from the same session.

From the session summary page, select **LAPS**.

# Laps

|                              |                                                                                                                      |
|------------------------------|----------------------------------------------------------------------------------------------------------------------|
| ① POSITION                   | Select to view a map of your track position during the lap.                                                          |
| ② SPEED                      | Select to view a map showing your speed at different points during the lap.                                          |
| ③ ACCEL./DECEL.              | Select to view a map showing rates of acceleration or deceleration at different points during the lap.               |
| ④ COMPARE                    | Select to compare the selected lap with another lap.                                                                 |
| ⑤ Track map                  | Use the touchscreen controls ( <a href="#">Using the Touchscreen, page 11</a> ) to adjust your view of the lap data. |
| ⑥ Time and speed information | Displays the lap time, top speed, and average speed.                                                                 |
| ⑦ Video thumbnail            | Select to view a video of the selected lap.                                                                          |

## Viewing Lap Speed Data

You can view a map of detailed speed data at different points during the lap.

- 1 From the session summary page, select **LAPS**.
- 2 Select a lap.
- 3 Select **SPEED**.

## Viewing Acceleration and Deceleration Data

You can view a map of detailed acceleration data at different points during the lap.

- 1 From the session summary page, select **LAPS**.
- 2 Select a lap.
- 3 Select **ACCEL./DECEL.**

## Comparing Laps

You can compare any two laps from the same session.

- 1 From the session summary page, select **LAPS**.
- 2 Select a lap.
- 3 Select **COMPARE**.
- 4 Select a lap, and select **OK**.

# Settings

## Connecting to a Wireless Network

- 1 Select  > **Wi-Fi**.
- 2 If necessary, select the toggle switch to turn on wireless network technology.
- 3 Select a wireless network.
- 4 If necessary, enter the encryption key.

The device connects to the wireless network. The device remembers the network information and connects automatically when you return to this location in the future.

## Enabling Bluetooth Wireless Technology

Select  > **Bluetooth**.

### Pairing a Wireless Headset or Car Stereo

- 1 Place your headset and your Garmin device within 33 ft. (10 m) of each other.
- 2 On your Garmin device, select > **Bluetooth**.
- 3 On your Garmin device, verify Bluetooth wireless technology is enabled.
- 4 On your headset, enable Bluetooth wireless technology and make it visible to other Bluetooth devices.
- 5 Select your headset from the list of devices.

**TIP:** If your headset does not appear in the list, you can select  > **Refresh** to refresh the list of Bluetooth devices.

- 6 Follow the on-screen instructions to complete the pairing process.

## Display Settings

Select  > **Display**.

**Brightness Level:** Sets the display brightness level on your device.

**Adaptive Brightness:** Automatically adjusts the backlight brightness based on the ambient light when the device is out of the mount.

**Sleep:** Allows you to set the amount of idle time before your device enters sleep mode while using battery power.

**Screenshot:** Allows you to take a picture of the device screen. Screenshots are saved in the Screenshot folder of the device storage.

## Sound and Notification Settings

Select  > **Sound & Notification**.

**Volume Sliders:** Set the volume levels for audio features.

**Other sounds:** Allows you to enable or disable sounds for other device interactions, such as screen touches, screen locking, or charging.

### Adjusting Sound and Notification Volume

- 1 Select  > **Sound & Notification**.
- 2 Use the slider bars to adjust the sound and notification volume.

## Setting the Text Language

You can select the language for text in the device software.

- 1 Select  > **Language & Input** > **Language**.
- 2 Select a language.

## Date and Time Settings

Select  > **Date & Time**.

**Automatic time zone:** Automatically sets the time zone based on information from the connected network.

**Select time zone:** Sets the time zone on your device when Automatic time zone is disabled.

**Use 24-hour format:** Enables or disables the 24-hour time format.

## Device Settings

Select  > **About device**.

**Status:** Displays the system status and network information.

**Legal Information:** Allows you to view the end-user license agreement (EULA) and software license information.

**Regulatory information:** Displays e-label regulatory and compliance information.

**Garmin device information:** Displays hardware and software version information.

**Device Data Reporting:** Shares anonymous data to improve the device.

## Resetting Data and Settings

The device offers several options for deleting your user data and resetting all settings to the factory default values.

- 1 Select .
- 2 Select an option:
  - To remove all saved wireless networks and paired devices, select **Device Reset** > **Network settings reset**.  
This option does not delete any other user data.
  - To delete all user data and reset all settings to the factory default values, select **Device Reset** > **Factory data reset**.  
This option deletes your travel history, apps, accounts, settings, saved networks, paired devices, and all other user data. Installed maps are not deleted. User files in the Garmin folder may not be deleted.

## Device Information

### Viewing E-label Regulatory and Compliance Information

- 1 From the settings menu, swipe to the bottom of the menu.
- 2 Select **About device** > **Regulatory information**.

## Specifications

|                             |                                                                                                                            |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Operating temperature range | From -20° to 70°C (from -4° to 158°F)                                                                                      |
| Charging temperature range  | From 0° to 60°C (from 32° to 140°F)                                                                                        |
| Power input                 | Vehicle power using the included vehicle power cable. AC power using an optional accessory (for home and office use only). |
| Battery type                | Rechargeable lithium-ion                                                                                                   |
|                             |                                                                                                                            |

## Charging the Device

**NOTE:** This Class III product shall be powered by an LPS power supply.

You can charge the battery in the device using any of these methods.

- Install the device in the mount, and connect the mount to vehicle power.
- Connect the device to an optional power adapter accessory, such as a wall power adapter.

You can purchase an approved Garmin AC-DC adapter suitable for home or office use from a Garmin dealer or [www.garmin.com](http://www.garmin.com). The device may charge slowly when connected to a third-party adapter.

## Device Maintenance

### Garmin Support Center

Go to [support.garmin.com](http://support.garmin.com) for help and information, such as product manuals, frequently asked questions, videos, and customer support.

### Updating Software Using a Wi-Fi Network

#### NOTICE

Software updates may require the device to download large files. Regular data limits or charges from your internet service provider apply. Contact your internet service provider for more information about data limits or charges.

You can update the software by connecting your device to a Wi-Fi network that provides access to the internet. This allows you to keep your device up to date without connecting it to a computer.

- 1 Using the included USB cable, connect the device to external power.

**NOTE:** A USB power adapter is not included. Go to the product page on [garmin.com](http://garmin.com) to purchase a power adapter accessory.

- 2 Connect the device to a Wi-Fi network.

While connected to a Wi-Fi network, the device checks for available updates automatically and displays a notification when an update is available.

- 3 Select  > **System updates**.

The device displays available software updates. When an update is available, **Update Available** appears below Software.

- 4 Select **Download**.

- 5 If necessary, read the license agreements, and select **Accept All** to accept the agreements.

**NOTE:** If you do not agree with the license terms, you can select Reject. This stops the update process. You cannot install updates until you accept the license agreements.

- 6 Keep the device connected to external power and within range of the Wi-Fi network until the update process is complete.

## Installing Garmin Express

The Garmin Express application is available for Windows® and Mac® computers.

- 1 On your computer, go to [garmin.com/express](https://garmin.com/express).
- 2 Select an option:
  - To view the system requirements and verify the Garmin Express application is compatible with your computer, select **System Requirements**.
  - To install on a Windows computer, select **Download for Windows**.
  - To install on a Mac computer, select **Download for Mac**.
- 3 Open the downloaded file, and follow the on-screen instructions to complete the installation.

## Updating the Camera Software

Software updates for your Garmin device may include software updates for the remote camera. The device prompts you to install updates for the camera the next time you connect it to the powered magnetic mount.

- 1 Update the software on your Garmin device.
- 2 Connect the Garmin device to the powered magnetic mount.
- 3 If necessary, turn on the ignition in your vehicle to provide power to the mount and camera.  
If camera updates are available, the device prompts you to update the camera.
- 4 Follow the on-screen instructions to update the camera software.

## Device Care

### NOTICE

Avoid dropping your device.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Never use a hard or sharp object to operate the touchscreen, or damage may result.

Do not expose the device to water.

## Cleaning the Outer Casing

### NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

- 1 Clean the outer casing of the device (not the touchscreen) using a cloth dampened with a mild detergent solution.
- 2 Wipe the device dry.

## Cleaning the Touchscreen

- 1 Use a soft, clean, lint-free cloth.
- 2 If necessary, lightly dampen the cloth with water.
- 3 If using a dampened cloth, turn off the device and disconnect the device from power.
- 4 Gently wipe the screen with the cloth.

## Cleaning the Camera Lens

### NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

You should clean the camera lens regularly to improve the quality of recorded video.

- 1 Wipe the lens with a non-scratch lens cloth, optionally dampened with isopropyl alcohol.
- 2 Allow the lens to air dry.

## Avoiding Theft

- Remove the device and mount from sight when not in use.
- Do not keep your unit in the glove compartment.
- Register your device using the Garmin Express software ([garmin.com/express](https://garmin.com/express)).

## Restarting the Device

You can restart your device if it stops functioning.

Hold the power key for 10 seconds.

## Removing the Adhesive Camera Mount

The adhesive camera mount is intended for a long-term installation and can be difficult to remove.

- 1 Firmly grip the mount.
- 2 Pull the mount up and away from the window or surface, applying steady pressure until the adhesive releases.
- 3 Remove all remaining adhesive from the surface.

# Troubleshooting

- 3 Mount the suction cup.

## The mount does not hold my device in place while I drive

For the best results, you should keep the vehicle mount clean and position the device close to the suction cup. If the device shifts position while you are driving, you should complete these actions.

## My device is not acquiring satellite signals

- Take your device out of parking garages and away from tall buildings and trees.
- Remain stationary for several minutes.

## **The device does not charge in my vehicle**

- Verify the vehicle is turned on and is supplying power to the power outlet.
- Verify the interior temperature of the vehicle is within the charging temperature range indicated in the specifications.
- In the vehicle fuse box, verify the fuse for the vehicle power outlet is not broken.

## **My battery does not stay charged for very long**

- Decrease the screen brightness
- Shorten the display timeout
- Decrease the volume
- Turn off the wi-fi radio when it is not in use
- Put the device in power saving mode when not in use.
- Keep your device away from extreme temperatures.
- Do not leave your device in direct sunlight.

## **My camera feels warm while it is operating**

Garmin cameras are designed for the automotive environment. It is normal and expected for the products to become warm or hot and remain safe for use in warm climates with full sun exposure. The temperature of the device itself can exceed the specified maximum operating ambient temperature for the device and remain safe for use. Always follow the device use and care instructions contained in the product manual.

## **My video recordings are blurry**

- Clean the camera lens
- Clean the windshield in front of the camera.
- Verify the area of the windshield in front of the camera is cleared by the windshield wipers, and move the device, if necessary.

# **Appendix**

## **Data Management**

The device has a memory card slot for additional data storage.

**NOTE:** The device is compatible with Windows 7 and newer, and Mac OS 10.4 and newer.

## **Memory Cards**

You can purchase memory cards from an electronics supplier. Memory cards can be used to store video footage and data from your drive sessions.

## Connecting the Device to Your Computer

You can connect the device to your computer using a USB cable.

- 1 Plug the small end of the USB cable into the port on the device.
- 2 Plug the larger end of the USB cable into a port on your computer.

Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.

## Transferring Data From Your Computer

- 1 Connect the device to your computer

Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.

- 2 On your computer, open the file browser.
- 3 Select a file.
- 4 Select **Edit > Copy**.
- 5 Browse to a folder on the device.

**NOTE:** For a removable drive or volume, you should not place files in the Garmin folder.

- 6 Select **Edit > Paste**.

## Disconnecting the USB Cable

If your device is connected to your computer as a removable drive or volume, you must safely disconnect your device from your computer to avoid data loss. If your device is connected to your Windows computer as a portable device, it is not necessary to safely disconnect the device.

- 1 Complete an action:
  - For Windows computers, select the **Safely Remove Hardware** icon in the system tray, and select your device.
  - For Apple® computers, select the device, and select **File > Eject**.
- 2 Disconnect the cable from your computer.

## Purchasing Accessories

Go to [garmin.com/accessories](https://garmin.com/accessories).