

NetLink Wireless Telephone


Keypad & Indicators



Function	Button	Action
Power on	PWR	Press and hold PWR until double chirp, then release
Power off	PWR	Press and hold PWR until single chirp, then release
Answer call	START	Press START
Hang up	END	Press END
Place call	START	Press START , dial number
Select line	START LINE	Press START then press LINE , then select line number (1-9)
Adjust volume during call	VOL	Press VOL while you are talking to toggle between base volume level and a louder volume level
Put call on hold	HOLD	Press HOLD
Mute/Unmute microphone	FCN	Press FCN then 1

Indicator	Description
NO SVC	The Wireless Telephone cannot receive or place calls. You may be outside of the coverage area. Walk back into the covered area. A restore tone indicates service is re-established.
BATT	Your Battery Pack charge is low. You will also hear a beep in the earpiece. Your Battery Pack needs to be recharged.
MSG	You have a voice mail message.

Removing and Replacing the Battery Pack on the Wireless Telephone

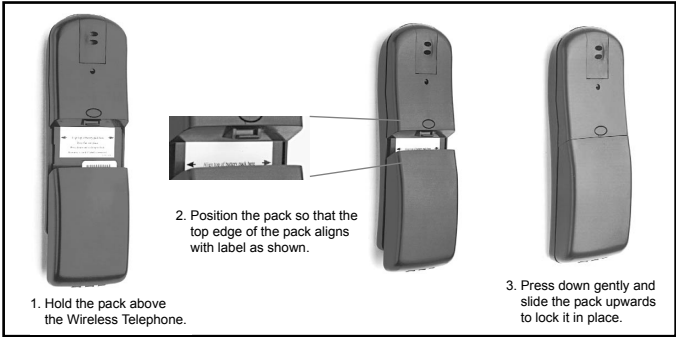

or Charger to an appropriate wall outlet via its power supply and it's ready for use. Chargers operate in a 50° to 85° F (10° to 30° C) environment. Do not expose them to freezing temperatures or direct sunlight.

The Dual Charging Stand

The SpectraLink Dual Charging Stand is a two-slot desktop charger designed to charge the Nickel Metal Hydride (NiMH) Battery Packs required to operate Wireless Telephones. Full charging is accomplished in approximately two hours.

Only NiMH Battery Packs with a YELLOW label on the handset contact side may be charged in the Dual Charging Stand.

Older Battery Packs with a GREEN label will not charge. If the indicator light is fast flashing with a Battery Pack or handset in the slot, check to make sure the Battery Pack has a YELLOW label.

talk time or 80 hours of stand-by time. Stand-by time is when the Wireless Telephone is turned on, but you are not using it.

The Wireless Telephone also supports a Nickel-Cadmium (NiCd) battery pack, which supports two hours talk time and 40 hours stand-by.

Indications of Low Battery

The Wireless Telephone will notify you when the charge on the Battery Pack becomes low. If the Wireless Telephone is in use, the BATT message will display and you will hear a soft beep through the earpiece every six seconds. You have two minutes to complete the call or change the Battery Pack

The Battery Pack can be changed while the call is still in progress. Do not press **END**. Quickly remove the discharged Battery Pack and replace with a charged Battery Pack, press **PWR**, and then press **START** to resume the call in progress.

If the Wireless Telephone is idle, you will hear a brief modulated ring signal and the Low Battery message will display. Your Wireless Telephone will not operate until you replace the Battery Pack. Depending on the charging equipment you have purchased, you will either place the Wireless Telephone in a Charging Stand to charge the Battery Pack, or you will remove the Pack from the Wireless Telephone and install it in the charger.

The Wireless Telephone Headset
SpectraLink offers optional headsets for use in noisy environments or if you need to have your hands free while talking on the Wireless Telephone.

To use the headset, simply plug it into the jack on the side of the Wireless Telephone. The headset is specially designed to work properly with The NetLink Wireless Telephone. We do not recommend using other headsets.

Answer A Call

To answer a call when your headset is plugged in, press any key except **PWR** or **END**.

Low Headset Volume

The volume level can be adjusted separately for headset use. Plug the headset in and press **FCN** until VOLUME displays. Use the keypad to enter a volume level from 1 (softest) to 8 (highest). This sets the low volume. High volume is automatically set two levels higher than low volume. Toggle between high and low volume by pressing the **VOL** key while in a call.

About Battery Packs

The Wireless Telephone will need to have its Battery Pack recharged periodically. The Nickel Metal Hydride (NiMH) rechargeable Wireless Telephone Battery Pack gives you four hours of

Turn off the Wireless Telephone and unplugging the Charger before you clean them. Never immerse either in water. Clean the exterior surfaces, including the charging contacts, with a cloth that has been slightly moistened with water. Take care not to exert undue pressure on the Charger electrical contacts while wiping.

Do not use any chemical cleaners. They can harm the plastic shell. If necessary, a small amount of mild surface or window cleaner can be applied to the cloth, but do not spray the cleaner onto the Wireless Telephone or Charger.

The Wireless Telephone may be cleaned with a clean water-dampened cloth. Be sure to wipe away any detergent residue and surface-type cleaner. DO NOT use isopropyl alcohol may be used occasionally applied by a cloth or paper towel. When using alcohol, do not rub the keypad characters vigorously. Doing so will significantly degrade legibility. There are no serviceable parts in the Wireless Telephone or Chargers. Dropping the Wireless Telephone or knocking it against hard surfaces, and tear of normal use; however, avoid carrying the Wireless Telephone in a holster or carrying case will help to protect it.

General Care of the Wireless Telephone and Chargers

Maintenance

Tips For Use

When the Wireless Telephone is on but not in use, press and briefly hold **FCN** to display menus. Check with your system administrator for specific features supported by your Wireless Telephone.

PRESS	#	RIGHT ARROW	to display next menu item.
PRESS	*	LEFT ARROW	to display previous menu item.
PRESS	0	ZERO	to select or change item.
PRESS	FCN	FCN	to return to previous menu level.
PRESS	END	END	to exit menus.

Menu	Description	User Entry
Volume level	Sets audio volume level.	Use keypad to select a level from 1 (softest) to 8 (loudest).
Ring Type	Select Telephone Ring to set the standard ring on the Wireless Telephone. Normal is factory default. Vibrator Ring works only if your Wireless Telephone has the optional vibrating ringer. Auxiliary Ring is used only by external applications.	Press 0 to select desired ring type. The ring type currently set displays with an asterisk.
High Noise Mode	Adjusts the Wireless Telephone to account for background noise.	Select an option that describes the noise in your environment.
Extension	Sets extension number associated with your Wireless Telephone.	Use keypad to enter extension number.

Switch Volume Levels

The Wireless Telephone has two volume levels, low and high. Set the low volume level by pressing **FCN** until VOLUME displays. Use keypad to select a level from 1 (softest) to 8 (loudest). High volume is automatically set two levels higher than low volume. Toggle between high and low volume by pressing the **VOL** key while in a call.

- Before you use the Wireless Telephone, the Battery Pack must be charged.
- The **PWR** key turns the Wireless Telephone on and off. The **START** and **END** keys begin and end calls. When you finish a call, press the **END** key, not the **PWR** key.
- You can only use the Wireless Telephone with your facility's cellular phone. It is not a public telephone system. If the Wireless Telephone's Battery Pack is low, you will hear a soft beep and see the BATT or LOW BATTERY message in the display.
- Improper disposal of Battery Packs can damage the environment. Dispose of batteries properly.
- You can control the Wireless Telephone's volume level and the type of ringing. See Setting User Preferences.
- The microphone is in the Wireless Telephone's lower right corner. This is a sensitive microphone that works well when the telephone is correctly positioned on your ear. There is no need to speak directly into the microphone, but do not cover it with your hand or check when talking on the Wireless Telephone.

NOTE:
It is recommended that standard acceptance procedures be followed prior to operating this equipment in proximity of life-support systems. To minimize risk of interference, pacemaker users should not carry the Wireless Telephone next to the pacemaker.
Operation of the Wireless Telephone may produce an audible noise noticed by hearing aid users. It is recommended that a SpectraLink headset be used by hearing aid users.
© 2001, SpectraLink Corporation
PN 72-0064-00 Rev. D
Boulder, Colorado USA
www.spectralink.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

It is recommended that standard acceptance procedures be followed prior to operating this equipment in proximity of life-support systems. To minimize risk of interference, pacemaker users should not carry the Wireless Telephone next to the pacemaker.

Operation of the Wireless Telephone may produce an audible noise noticed by hearing aid users. It is recommended that a SpectraLink headset be used by hearing aid users.

© 2001, SpectraLink Corporation
PN 72-0064-00 Rev. D
Boulder, Colorado USA
www.spectralink.com

Using The NetLink Wireless Telephone

Turn the Wireless Telephone On

Press the **PWR** key for about 1 second. You will hear a double chirp. Your extension will display. The NO SVC message will display briefly. When it goes out, you are ready to make and receive calls.

Answer A Call

The Wireless Telephone will ring or vibrate to alert you. Additionally, a line indicator on the display may flash, and the display may show information about the call, such as caller's name and extension.

To answer a call, press the **START** key and hold the earpiece to your ear.

If you are on a call and hear subdued ringing, a call is coming in on a second line. To answer this call, put your first call on hold and press the line key then the line number of the second call.

Place A Call

Press the **START** key, wait for dial tone, then dial the number. Dial calls with the Wireless Telephone exactly as with your desk phone. Your telephone system may require you to select a line by pressing the **LINE** key, followed by a line number.

To hang up when you've finished the call, press the **END** key.

Do not use the **PWR** key to end a call, because that will turn your Wireless Telephone off and you will not receive calls until you turn the Wireless Telephone back on.



NetLink Wireless Telephone



User Guide