

WIRELESS KEYBOARD AND MOUSE USER MANUAL

CONNECT THE KEYBOARD AND MOUSE

Plug-in two connectors on the cable of receiver to the computer, green color plug for the mouse and purple color plug for the keyboard. Turn on the computer

A. Connect the keyboard

1. Insert the enclosed 3*AA batteries into the back of the keyboard. Please note that the direction of the battery must be correct.
2. After the system finished loading, press the connect button on the receiver, then press the connect button on the rear of the keyboard.
3. Press keyboard keys and check if the receiver connecting light is on (red color light). If the red light on, the keyboard will work.

B. Connect the mouse

1. Insert the 2*AAA batteries into the rear of the mouse. Please note that the direction of the battery must be correct.
2. After the system finished loading, press the connect button on the receiver, then press the connect button on the rear of the mouse.
3. Move the mouse and check if the receiver connecting light is on (red color light). If the red light on, it means the mouse and receiver already connecting. And **you must re-start your computer to make the mouse work.**

Please note that the above actions are only requested when you change the batteries for the keyboard or mouse. You don't need to re-connect the keyboard or mouse every time when you turn on the system.

If you didn't use the keyboard or mouse for a while (several minutes), you might need to press a key on the keyboard or move the mouse to make them re-work.

INSTALL THE KEYBOARD SOFTWARE DRIVER

1. Inserts the enclosed disk into your disk driver
2. Click on "My Computer", select the floppy driver and click on "officeinst.exe "
3. Follow the instructions on the screen to complete the installation.
4. After installation, there is a keyboard icon show on the right side of the tool bar, double click the icon and you can re-define the functions.
5. To uninstall the driver, move the mouse cursor to the icon on the right side of the tool bar, click the mouse right button, select "Uninst" to uninstall the driver.

HOT KEYS FUNCTIONS

-  **BACK:** Goes back to previous item you already viewed
-  **FORWARD:** Goes to the next item already viewed
-  **WORD:** Starts Microsoft Word
-  **EXCEL:** Starts Microsoft Excel

 **WEB/HOME:** Starts the default web browser and goes to the home page. If the web Browser window is active; it opens the web home page.

 **MAIL:** Starts the default e-mail program

 **CALENDAR:** Starts Microsoft Outlook

 **FILE:** Starts Windows Explorer

 **CALCULATOR:** Starts Calculator

 **LOG OFF:** Open the log off windows dialog box

 **CUT:** Cut select item in program that supports this command

 **COPY:** Copy select item in program that support this command

 **PASTE:** Pastes a previously cut or copied item at the cursor location in programs that support this command.

< PREV. WINDOW: Switches to the previous active window

> NEXT WINDOW: Switched to the next window

 **HELP:** Starts active program's Help

OFFICE HOME: Starts the web browser and go to Office web site

 **TASK PANE:** Shows or hides the Office task pane

 **NEW:** Creates a new document in program that supports this command

 **OPEN:** Opens a document in program that support this command

 **CLOSE:** Closes the document or file in active window

 **REPLY:** Replies to e-mail in the active window

 **FORWARD:** Forwards e-mail in the active window

 **SEND:** Sends e-mail in the active window

 **SPELL:** Starts the spell-checking program in the active document, if the document's Program has this feature.

 **SAVE:** Saves the active file

 **PRINT:** Prints for the active program

 **UNDO:** Cancels previous action

 **REDO:** Cancels previous undo action

 **MUTE:** Stops all audio. Press again to resume audio.

 **VOL-:** Press and release, or press and hold to decrease the volume.

 **VOL+:** Press and release, or press and hold to increase the volume

F LOCK: Switches between the standard function key commands labeled on the front of the keys, such as **F1** (light on) and the alternate commands labeled on the top, such as **SEND** (light off)

* The  **SLEEP** function key for power management system requirements:

1. IBM compatible with ATX system
2. The BIOS of main board support Windows 98 ACPI power management keys
3. Microsoft Windows 98 operating system or higher

Scroll Wheel: Use this wheel to move around in a scrollable document like clicking the scroll arrows or using a mouse wheel.

RE-DEFINE THE HOT KEY FUNCTIONS

All hot key functions can be re-defined to your favorite program and actions.

After installation, there is an icon on the right side of the tool bar.

1. Double click on the icon, on the coming window, select "FUNCTION"
2. Select the key you want to re-define, click on "EDIT", on the coming window, you may choose:
 - A.) INNER FUNTION: select one function as default setting, then click on OK, click on APPLY to change the original key function
 - B.) OUTER FILE: select "Outer File" and then click on "FILE". On the coming window select one file you prefer and then click on OK, click on OK, click on APPLY to change the original key function

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.