

# ***EXHIBIT C***

## ***User Manual***

## FEATURES

1. High sensitivity cardioid capsule for your professional use.
2. Special noise absorption parts inside the barrels, which eliminate switch shock noise and handling noise.
3. Frequency with quartz locked control.
4. Easy-opening battery compartment for quick battery replacement. Powered by one 9V battery.
5. Low battery LED indicator.

## SPECIFICATION


- \* RF Power Output : 7.435 MHz
- \* Spurious Emissions : 40 dB below carrier minimum;  
50 dB, typical.
- \* Antenna : Built in
- \* Pre-Emphasis : 50  $\mu$ S.
- \* Microphone Element : Handheld Mic: Electret condenser Unit.  
: Tie Clip Mic: Electret Condenser Unit.
- \* Battery : Standard 9V battery.
- \* Current Consumption : About 25mA.
- \* Battery life : Over 8 hours continuous operation.
- \* Dimensions : Handheld Mic: 52(D) x 247(L)mm.  
: Tie Clip Mic: 106(L) x 71(W) x 26(H)mm  
: Handheld Mic: Approx. 224gs (W/Battery)  
: Tie Clip Mic: Approx. 175gs (W/Battery)
- \* Weight

## OPERATION


1. Open the battery holder in anticlockwise direction.
2. Insert a 9V battery into the battery holder according to polarity (+) and (-) indication marked on the battery house.
3. Fit battery housing back in clockwise direction.
4. Push the power switch to "ON", the LED indicator will flash to indicate the carrier frequency is sending out. The microphone is operating.
5. Push the power button to "OFF" when mic is not used. And remove the battery in microphone is not used for a long time, this will prevent any damage a defective "leaking" battery may cause.
6. Switch, the power "ON", the LED indicator is flashing that means power supply is normal. If the LED indicator is still on light that means the battery is in need of replacement. If no flashing, it must be no battery in there or battery is not properly inserted.

## HAND HELD MICROPHONE

1. Screen Head
2. Low Battery Led Indicator
3. Power Switch
4. Mic Housing
5. Battery Cover

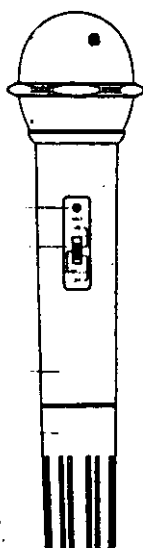

## TIE CLIP MICROPHONE

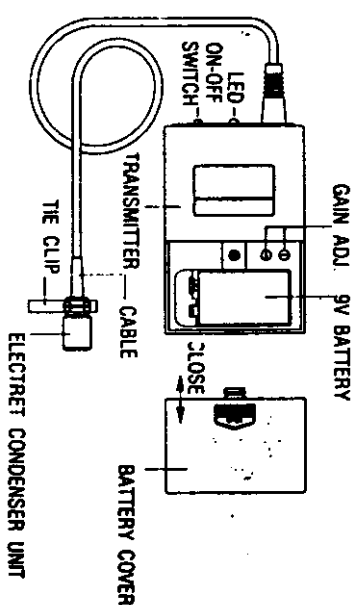

## NOTE:

THE WIRELESS HANDHELD OR LAVALIER MICROPHONE, TWO OR ABOVE WIRELESS MICROPHONE WHICH TRANSMIT AT THE SAME FREQUENCY CAN NOT BE USED AT THE SAME TIME & AREA.

## TROUBLE SHOOTING

Please take the time to read this manual, before asking after service. And checking follow points. If it also have unusual things, please contact with purchasing store. We are sincerely to serve for you.

1. Before connecting and operating the unit, check the voltage setting conforms to the voltage available in your area.
2. If the LED indicator is still on light that means power supply is in need of replacement. Please replace one new 9V battery and be sure the polarity (+) (-) of battery is connected properly.
3. Signal dropouts and noise may be suddenly encountered by interruption from outside, too long distance between microphone and receiver or battery in low power. In such a case, adjust receiver antenna or change new battery.
4. Do not drop the microphone on a hard concrete floor, nor strike the microphone head front with a fist or fingers, nor blow a breath strongly into the microphone head front.
5. Remove the battery in microphone is not used for a long time. This will prevent any damage a defective "leaking" battery may cause.

NOTICE: This device complies with Part 74 of the FCC rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received,

including interference that may cause undesired  
operation.

### **INFORMATION TO THE USER**

The changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.