

Loading the Pre-EPL File

Initializing SmarTalker Tags

Pre-EPL File Layout

The following table contains the Pre-EPL file field names, their default values, examples where appropriate, and their descriptions. The required fields are PLU Item Number, SmarTalker Type, Package Size, Measure, Unit of Measurement, SmarTalker Serial Number, and Production Month.

NCR service personnel should refer to the 7710 Worldwide Service Plan for additional information.

Field Name	Default Value	Example	Description
PLU,	<PLU item number>	“00000000000055”	PLU item number (Note 4)
LVL,	0		PLU price level
LOC,	“”		Location (Note 1)
SN,	<serial number>	“00012345”	EPL serial number (Note 4)
ID,	0		EPL ID (Note 2)
TS,	0		EPL time slot (Note 2)
INSTDATE,	000000		Installation date (Note 2)
LOWBATDATE,	000000		Battery low date
LOWBATCNT,	0		Battery low count
STAT,	1		Status
RSSI,	0		Received signal strength indication

Field Name	Default Value	Example	Description
RSSIADDR,	0		CBS address of RSSI
TYPE,	<EPL tag type>	1	EPL type (Note 4)
OLDSN,	“00000000”		Old EPL serial number
UPRC,	0		Unit price (Note 3)
SUPRC,	0		Sale unit price (Note 3)
MEAS,	<measure>	001	Measure (Note 4)
UMEAS,	<unit of measure>	01	Unit of measure (Note 4)
PKGSIZE,	<package size>	12.5	Package size (Note 4)
SYM,	00001		Symbol
PBEGDATE,			Promotion begin date
PBEGTIME,			Promotion begin time
PENDDATE,			Promotion end date
PENDTIME,			Promotion end time
DUTY1,			Promotion1 duty time
DUTY2,	0		Promotion2 duty time
DUTY3,	0		Promotion3 duty time
PRCDUTY,	0		Price duty time
FLAG1,	0		Promotion / register flag of data register 1
DATA1,	“”		Promotion / register line data of data register 1
SYM1,	00000		Symbols for data register 1
FLAG2,	0		Promotion / register flag of data register 2
DATA2,	“”		Promotion / register line data of data register 2
SYM2,	00000		Symbols for data register 2
FLAG3,	0		Promotion / register flag of data register 3

Field Name	Default Value	Example	Description
DATE3,	""		Promotion / register line data of data register 3
SYM3,	00000		Symbols for data register 3
PRODMNTH,	0000		Production month (from overlay supplier)
MISSTIME,	000000000		Time of 1st price disagreement
SUM1,	0		Detail sumcheck of price Register
SUM2,	0		Detail sumcheck of data register 1
PRCSUM,	0		Sumcheck of price register
R1SUM,	0		Sumcheck of data register 1
R2SUM,	0		Sumcheck of data register 2
R3SUM,	0		Sumcheck of data register 3
SCHEDTOD,	0000000000		Scheduled TOD
DISPUPRC,	0		Display unit price flag
LDMBIT,	0		Label data maintenance dirty bit
LACKTIME,	0	36F7B633	Last time an acknowledgment was received from a tag
LSENTTIME,	0	36F7B62D	Last time a message was sent to a tag
LRMVDTIME,	0	0	Last time a tag was disassociated with a PLU number
PRCREG,	0	250	Contents of price register
SPRCREG,	0	0	Contents of scheduled price register

Field Name	Default Value	Example	Description
MSGIDX,	0	0	Message index corresponding to promotional message displayed on tag
LACKLEN,	0	31	Length of message in 'LACKMSG' field
LSENTLEN,	0	31	Length of message in 'LSENDMSG' field
PRVPLU,	0		PLU number associated with a tag before it was removed
LACKMSG,	0	05320231363339 3003311D302E3 2353004302E323 53006302E32353 00B4200	EPL message data corresponding to last message acknowledged by tag
LSENDMSG,	0	05320231363339 3003311D302E3 2353004302E323 53006302E32353 00B4200	EPL message data corresponding to the last message sent to a tag

Note 1: Location data is required when:

- The store manages EPLs with location
- There are multiple EPLs for the same PLU item
- If location data is not required, this field may be set to ""

Note 2: This field is set when installing each EPL.

Note 3: This field data has to be calculated when loading the Pre-EPL file.

Note 4: These fields must be filled in before the file can be added.

Pre-EPL File Created by Overlay Supplier

If the customer contracts with NCR's overlay supplier, the customer must provide a scan file that contains the PLU Item Numbers and an indication as to what type of SmarTalker will be used for each item.

The customer must also provide an information file that contains the Package Size, Measure, Unit of Measurement, and any other information, such as Item Description, that the customer wants printed on the overlay.

The customer could possibly combine the scan file with the information file and provide the overlay supplier with one file containing all of the required information. The format of this file is not described here because it varies from customer to customer. The customer must work with NCR Professional Services to determine the exact format of the file(s) to be sent to the overlay supplier.

To the file(s) received from the customer, the overlay supplier adds the EPL Serial Number and the Production Month. The remainder of the fields will contain the defaults in the preceding table.

After the overlay supplier creates the Pre-EPL file, the overlays are printed and applied to the SmarTalkers. Through NCR Professional Services, the overlay supplier provides a copy of the Pre-EPL file to the customer and the SmarTalkers to the installer.

Pre-EPL File as a CSV File

The Pre-EPL file is a comma-separated file (CSV) containing at a minimum the following required information:

- PLU Item Number
- SmarTalker type
- Package Size
- Measure
- Unit of Measurement
- SmarTalker Serial Number
- Production Month (MMYY)

The format has alternating entries of field names and data as shown in the following example Pre-EPL file:

```
PLU,3890007830,PRODMTH,0396,LOC,"J1",SN,00016CEF,TYPE,1,MEAS,1,UMEAS,1,PK
Gsize,64
PLU,3890000985,PRODMTH,0396,LOC,"J1",SN,00016CB1,TYPE,1,MEAS,1,UMEAS,1,PK
Gsize,64
PLU,3890000981,PRODMTH,0396,LOC,"J1",SN,00016CEB,TYPE,1,MEAS,1,UMEAS,1,PK
Gsize,64
PLU,3890000629,PRODMTH,0396,LOC,"J1",SN,000171B9,TYPE,1,MEAS,1,UMEAS,1,PK
Gsize,64
PLU,3890001113,PRODMTH,0396,LOC,"J1",SN,00016CED,TYPE,1,MEAS,1,UMEAS,1,PK
Gsize,64
PLU,3890001095,PRODMTH,0396,LOC,"J1",SN,0001714F,TYPE,1,MEAS,1,UMEAS,1,PK
Gsize,64
```

Loading a Pre-EPL File

Loading a Pre-EPL table creates the EPL Table and initializes the SmarTalker tags.


Before You Start

- PLU integration must be complete. If you add an EPL and can not access the PLU linked via the PLU Reader, an error is generated.
- Make sure CBS communications are functional because the CBS Manager validates the existence of SmarTalkers as each new record is added to the EPL table.
- Optional EPL Application programs should not be running during the Pre-EPL file load as they can slow down the load process. Stop all EPL Applications and restart the CBS Manager, Data Scheduler, Logger, PLU Reader, and Table Manager at the DOS or UNIX prompt. Refer to Appendix D for the start scripts.


Starting the Load

Copy the Pre-EPL table to a hard disk accessible by the EPL controller. To load the Pre-EPL table from the EPL Maintenance screen, select Load EPL Table from the File menu.


Loading the table converts the CSV file to EPL format and sends it to the EPL Table file. At the same time it sends the information to the EPL tags and initializes them.

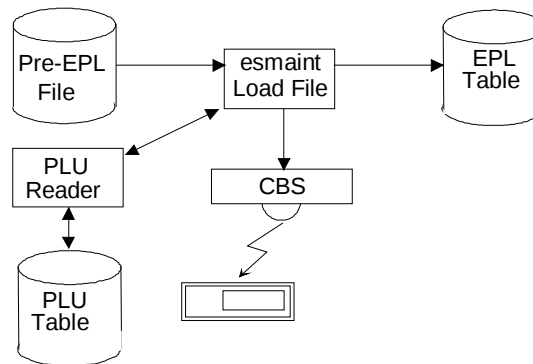


Start at this menu:

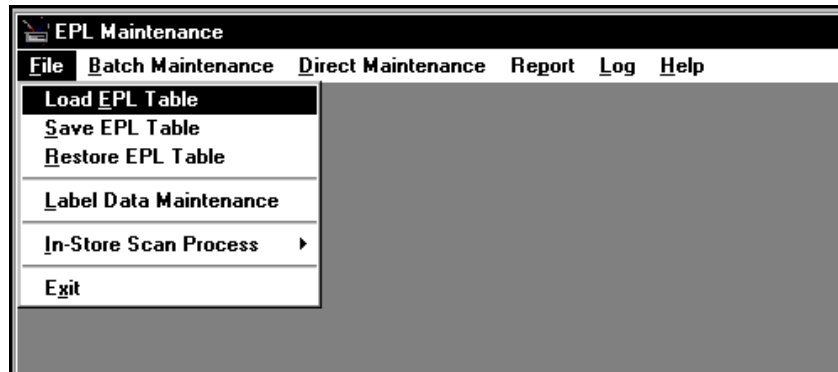

1. Select Load EPL Table from the File pulldown menu of the EPL Maintenance main menu. The Load EPL Table screen displays.

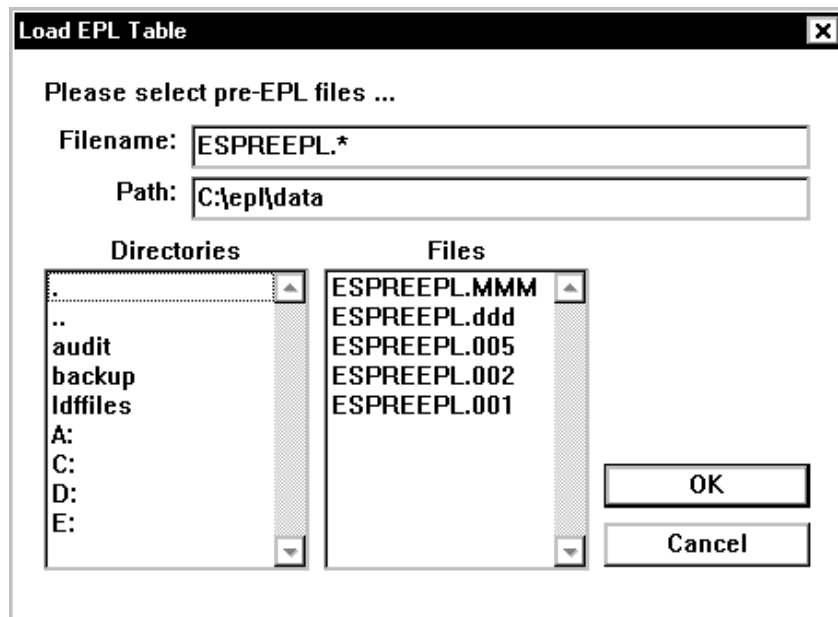

2. Use the Filename and Path boxes on this screen to find the Pre-EPL file you want to use and select the filename.
3. Select OK to load the file. The system starts loading the file and displays this dialog box.

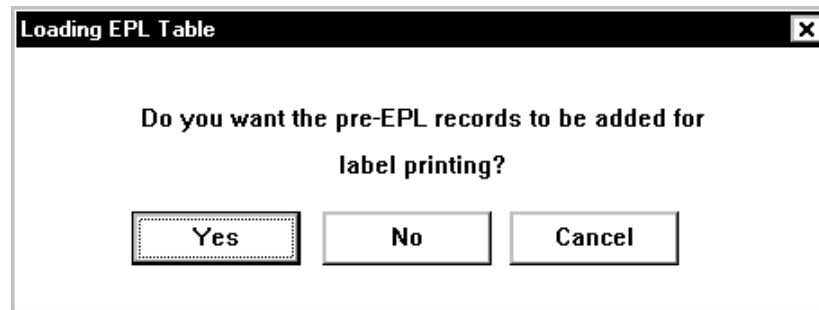


4. Select one of the following at this dialog box:

Yes - You are using the Label Data Manager (LDM) and want to add the pre-EPL records to the LDM files for label printing.

No - You are not using LDM but wish to continue loading the Pre-EPL file. This would be the case when using SmarTalkers pre-labeled by the overlay supplier.

Cancel - You want to cancel loading the pre-EPL file.

The following screen appears allowing you to observe the progress of the load process. You can press **Cancel** at any time if you want to discontinue the Load / Restore process and return to the EPL Maintenance menu bar.

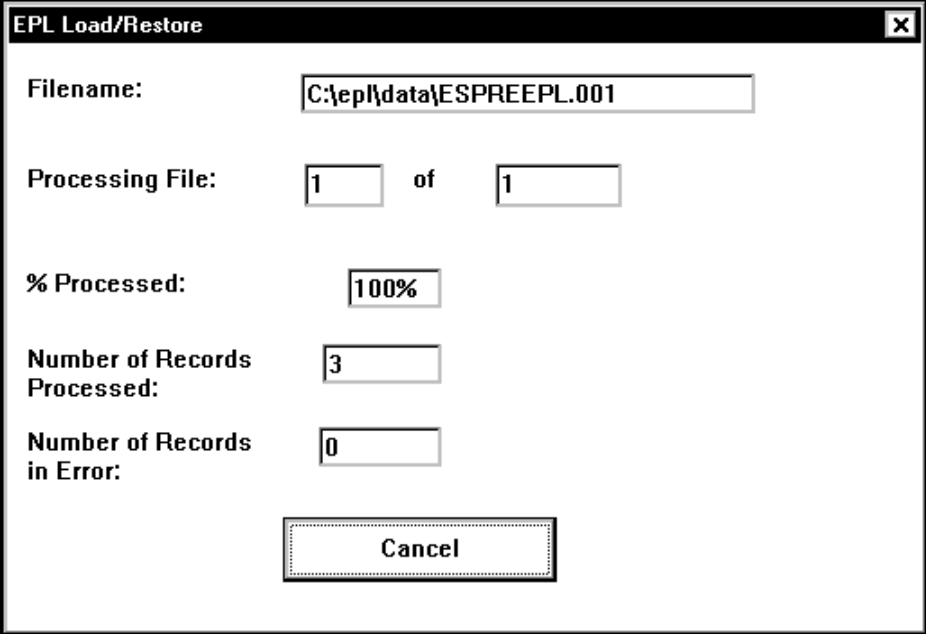A screenshot of a Windows-style dialog box titled "EPL Load/Restore". The dialog box has a standard title bar with a close button (X) in the top right corner. Inside the dialog, there are several labels and text boxes. The "Filename:" label is followed by a text box containing "C:\ep\data\ESPREEPL.001". The "Processing File:" label is followed by a text box containing "1", the word "of", and another text box containing "1". The "% Processed:" label is followed by a text box containing "100%". The "Number of Records Processed:" label is followed by a text box containing "3". The "Number of Records in Error:" label is followed by a text box containing "0". At the bottom center of the dialog is a button labeled "Cancel".

Filename:	C:\ep\data\ESPREEPL.001
Processing File:	1 of 1
% Processed:	100%
Number of Records Processed:	3
Number of Records in Error:	0
Cancel	

5. When this operation is complete, this screen disappears and you automatically return to the EPL Maintenance main menu bar.

Note: The EPL System Error Log contains a list of errors and descriptions. Refer to Chapter 12, "Testing the System," for information on accessing the Error Log. Refer to the *NCR DecisionNet System User's Guide*, (B005-0000-1087) for more information on error codes.


Checking SmarTalker Initialization

After initializing the SmarTalkers, you can verify their status by checking the EPL Data Send logs.

Viewing EPL Data Send Log


To view the EPL Data Send logs, follow this procedure:

1. Select Log on the EPL Maintenance menu. The log report selection menu is displayed.

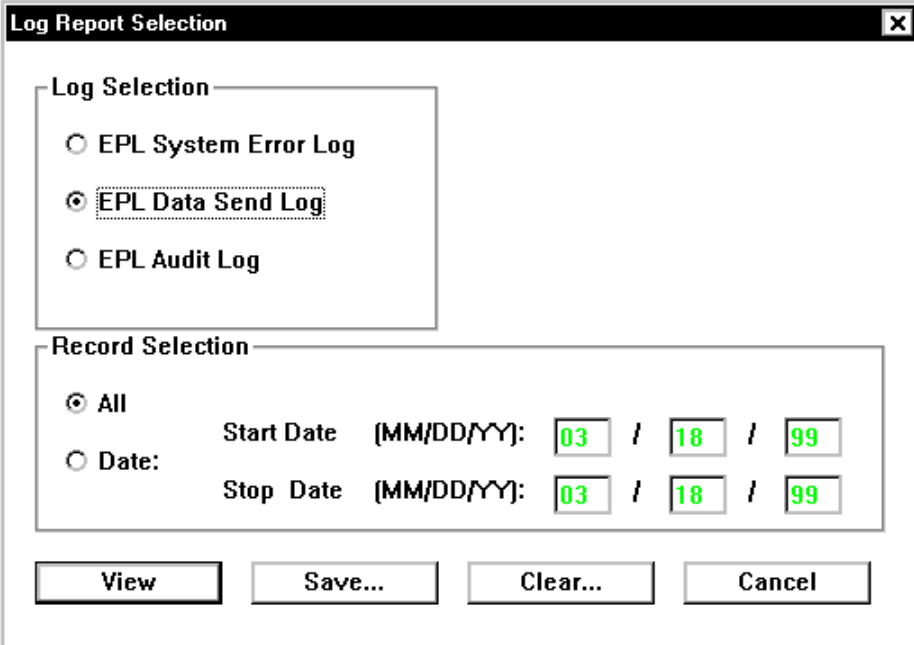

The image shows a 'Log Report Selection' dialog box with a title bar and a close button. It contains two main sections: 'Log Selection' and 'Record Selection'. In the 'Log Selection' section, there are three radio buttons: 'EPL System Error Log', 'EPL Data Send Log' (which is selected and highlighted with a dashed border), and 'EPL Audit Log'. In the 'Record Selection' section, there are two radio buttons: 'All' (selected) and 'Date:'. To the right of the 'Date:' radio button are two rows of date selection controls. The first row is for the 'Start Date' with the format '(MM/DD/YY):' followed by three input boxes containing '03', '18', and '99'. The second row is for the 'Stop Date' with the same format and input boxes. At the bottom of the dialog box, there are four buttons: 'View', 'Save...', 'Clear...', and 'Cancel'.

2. Select EPL Data Send Log and select All or Date (enter Start Date/Stop Date if required), then select View. The EPL Data Send Log is displayed.

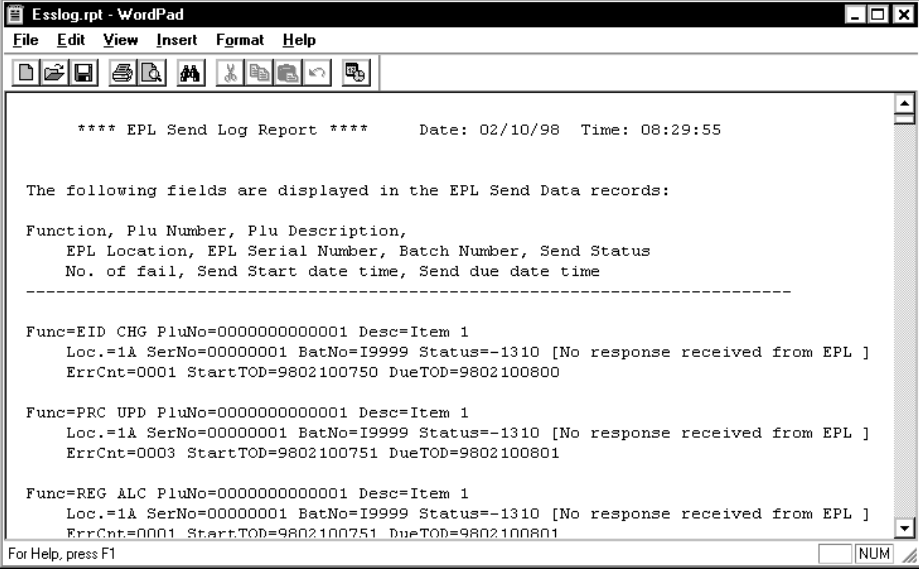

```

**** EPL Send Log Report ****      Date: 02/10/98   Time: 08:29:55

The following fields are displayed in the EPL Send Data records:

Function, Plu Number, Plu Description,
EPL Location, EPL Serial Number, Batch Number, Send Status
No. of fail, Send Start date time, Send due date time
-----

Func=EID CHG PluNo=0000000000001 Desc=Item 1
Loc.=1A SerNo=00000001 BatNo=I9999 Status=-1310 [No response received from EPL ]
ErrCnt=0001 StartTOD=9802100750 DueTOD=9802100800

Func=PRC UPD PluNo=0000000000001 Desc=Item 1
Loc.=1A SerNo=00000001 BatNo=I9999 Status=-1310 [No response received from EPL ]
ErrCnt=0003 StartTOD=9802100751 DueTOD=9802100801

Func=REG ALC PluNo=0000000000001 Desc=Item 1
Loc.=1A SerNo=00000001 BatNo=I9999 Status=-1310 [No response received from EPL ]
ErrCnt=0001 StartTOD=9802100751 DueTOD=9802100801

For Help, press F1

```

The fields appearing in the EPL Data Send Log are explained here:

Function:

The function that started this operation

PLU Number:

Item number

PLU Description:

Item description

EPL Location:

SmarTalker location

EPL Serial Number:

SmarTalker serial number

Batch Number:

EPL maintenance batch number

Send Status:

An EPL's status is indicated by a number and brief message

0: Successful

1: Waiting

2: Communicating

Any Negative Number: Resend the data using the instructions in the next section. Refer to Chapter 8, "DecisioNet System Messages," in the *NCR DecisioNet System User's Guide* (B005-0000-1087), for message descriptions.

ErrCnt:

Number of communication errors

StartTOD:

Date and time when communication starts

(9708302102 = YYMMDD and 24-hour time)

DueTOD:


Date and time when communication is due to be completed

(9708302112 = YYMMDD and 24-hour time)

Resending the EPL Data

In the EPL Data Send Log, if an EPL's Send Status is a negative number, initialize the SmarTalker by resending the EPL data.

1. Select Resend from Batch Maintenance on the EPL Maintenance menu. The following screen appears.

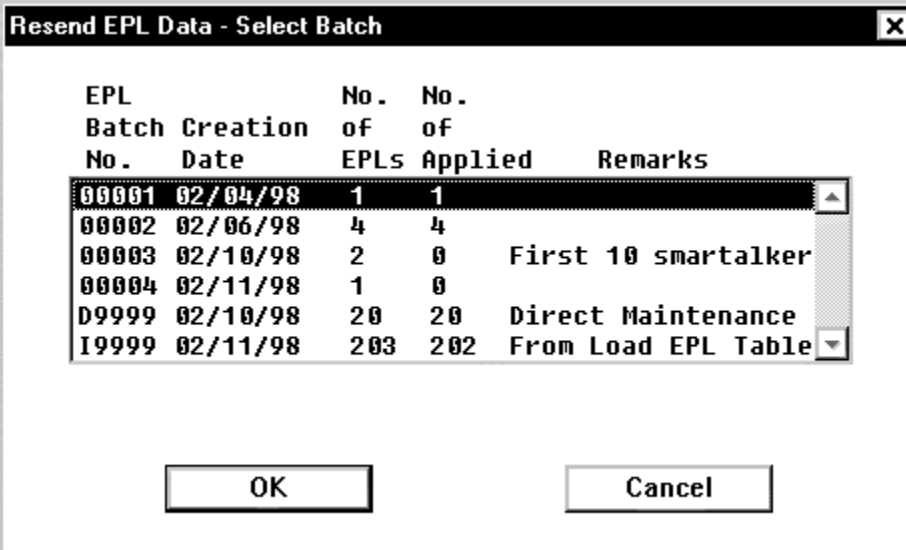

EPL Batch No.	Creation Date	No. of EPLs	No. of Applied	Remarks
00001	02/04/98	1	1	
00002	02/06/98	4	4	
00003	02/10/98	2	0	First 10 smartalker
00004	02/11/98	1	0	
D9999	02/10/98	20	20	Direct Maintenance
I9999	02/11/98	203	202	From Load EPL Table

OK Cancel

You can also check how many records in the batch were successfully applied to the EPL Scheduler.

2. Select the EPL Batch No. that includes the SmarTalker that failed to receive the data and select OK. (Obtain the batch number from the EPL Data Send Log.)
3. Check the status of SmarTalkers in the Batch. (EPL data is resent to SmarTalkers whose Send Status is a negative number.)