



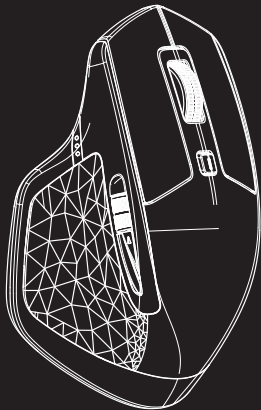


MX MASTERTM

WIRELESS MOUSE | SOURIS SANS FIL


 What's in the box

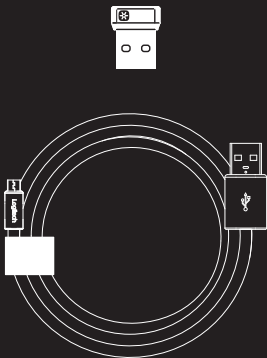

Mouse features

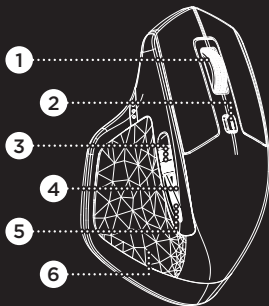


- 1. Scroll wheel
- 2. Manual switch button
- 3. Thumb wheel
- 4. Forward
- 5. Back

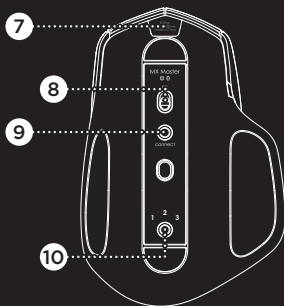

- 6. Thumb button
- 7. Micro USB connector
- 8. On/Off switch
- 9. Connect button
- 10. Easy-Switch button

For much more: www.logitech.com/MXMaster

Battery disposal

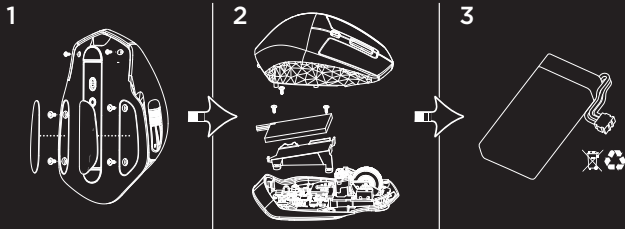



M/N: C-U0007

FCC ID: JNZCU0007

IC: 4418A-CU0007

CFT: RCPLOCU10-1356

CNC: C-8941



CMIIT ID: 2010DJ0355



DZL-C-U0007

M/N: C-U0008

FCC ID: JNZCU0008

IC: 4418A-CU0008

CFT: RCPLOCU11-0321

CNC: C-9341



CMIIT ID: 2011DJ1853



KCC-CRM-DZL-C-U0008



www.logitech.com/MXMaster

© 2014 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. Registered in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

© 2014 Logitech. Tous droits réservés. Logitech, le logo Logitech et les autres marques Logitech sont la propriété de Logitech et sont susceptibles d'être déposés. Toutes les autres marques commerciales sont la propriété de leurs détenteurs respectifs. Logitech décline toute responsabilité en cas d'erreurs dans ce manuel. Les informations énoncées dans ce document peuvent faire l'objet de modifications sans avis préalable.

620-006452.002