 
 


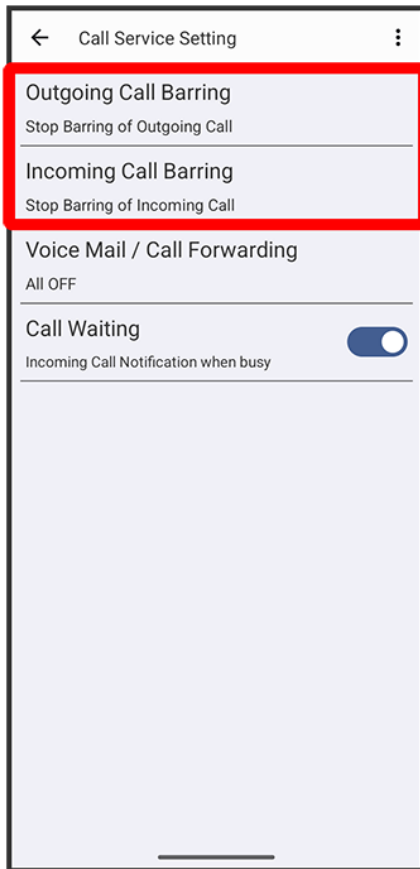

5

Tap outgoing/incoming restriction

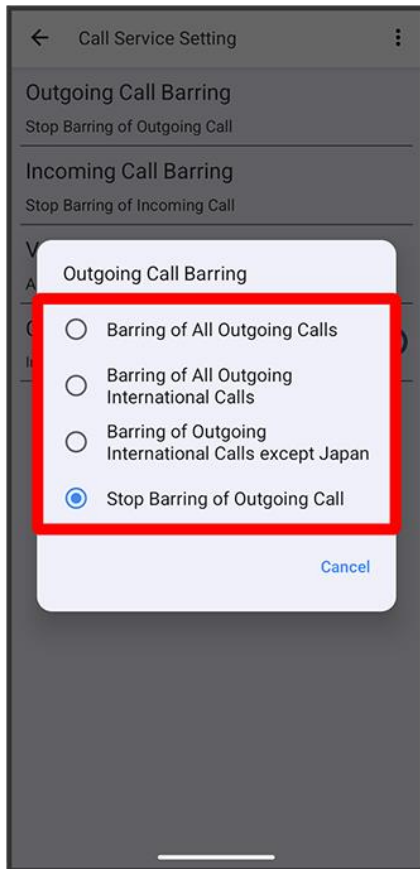

🚩 Call Barring is set.

Phone Number

↓ [Checking Your Phone Number](#)

Checking Your Phone Number

 
1

In Home Screen, ⚙️ (Settings)



2

Profile

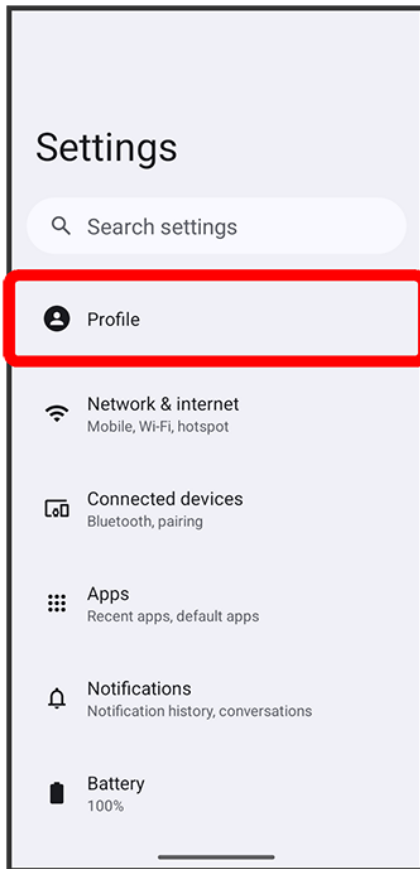

🚩 Check phone number.

Using Contacts

Save phone numbers, mail addresses, etc. to Contacts.

↓ [Adding New Contacts](#)

Contacts Cautions

Information saved in Contacts may be lost or changed if Battery is left uncharged. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. _____ is not responsible for any damages from lost or changed contacts.

Adding New Contacts

1

 
In Home Screen,  (Contacts)



🚩 Contacts appear.


2

Contacts

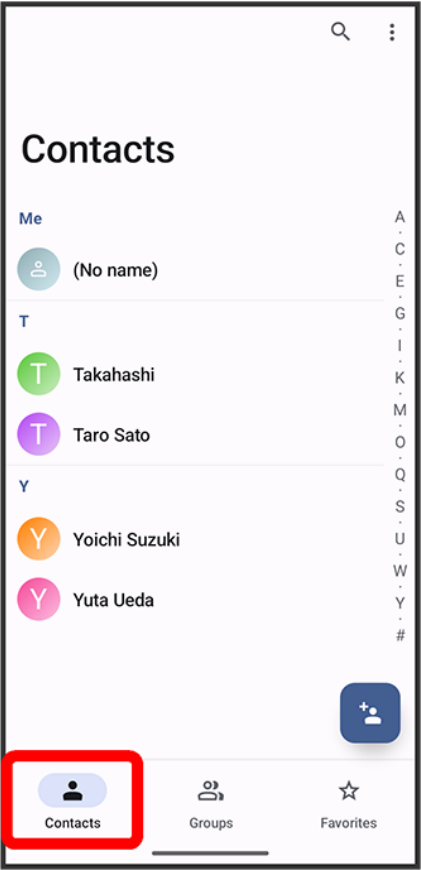

3



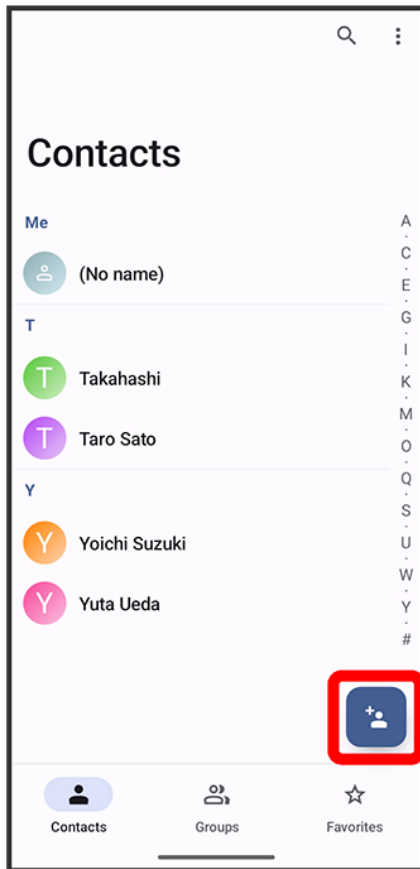 

- If confirmation appears, follow onscreen instructions.

4

Enter items

←

Add contact

Account

Phone

▼

Name

▼

Phonetic name

▼

Phone

label

Mobile

▼

Email

label

Mobile

▼

 
Cancel

Save

5

Save

47

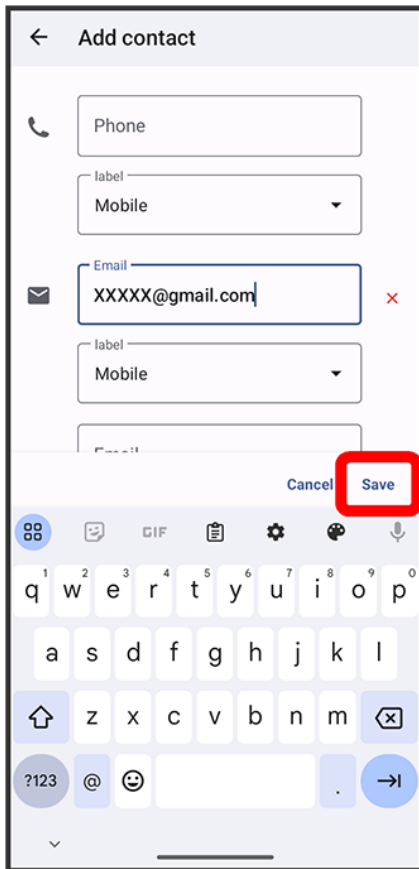

🚩 Contact is added.

+ Saving Contacts from Call Window

Save a number entered in call window directly to Contacts.

In Home Screen, 📞 (Phone) ➡️ Dialpad ➡️ Tap dialpad to enter number to save ➡️ Add to contacts ➡️ Create contact ➡️ Enter items ➡️ Save

+Message

↓ Using +Message

Using +Message

Using Gmail

Gmail is Google's webmail service. Use this service to exchange email.

↓ [Creating/Sending Mail](#)

Creating/Sending Mail

 
1

In Home Screen,  (Google)



2


 (Gmail)

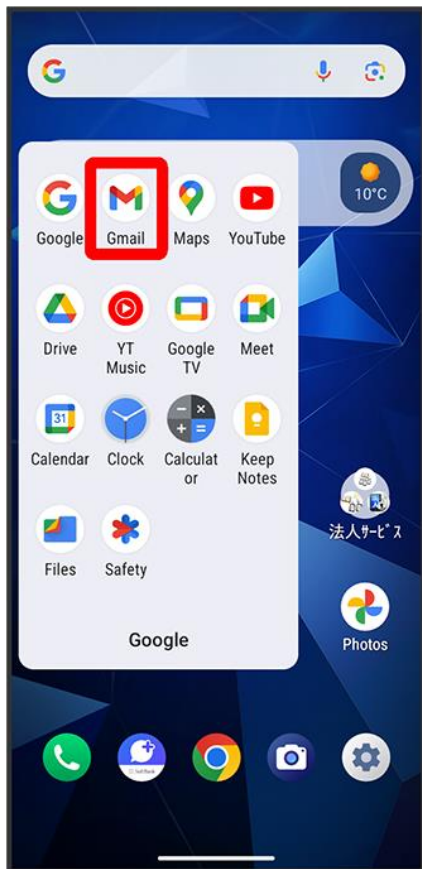

 Mail list opens.

3

 
Compose

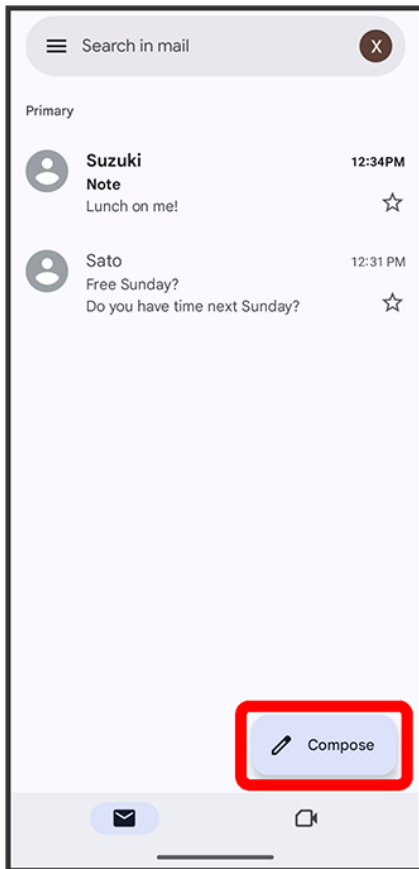

Mail composition window opens.

4

 Enter recipient/subject/mail text ➡ ➤

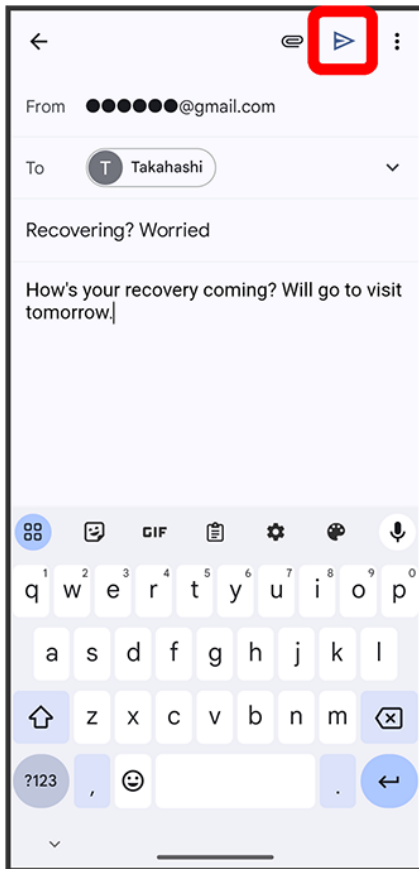

Mail is sent.

+ Operations when Composing Mail

Adding Cc/Bcc

In mail composition window, for recipient Enter recipient

Attaching Files

In mail composition window, Attach file Select where file is saved Select file to attach

Save Mail Being Composed as a Draft

In mail composition window, Save draft

- Mail with a file attached cannot be saved as a draft.

Delete Mail Being Composed

In mail composition window, Discard

- If confirmation appears, follow onscreen instructions.

Using Chrome

Use Chrome simply by entering words to search and URLs.

↓ [Using Chrome](#)

↓ [Adding Bookmarks](#)



TLS

TLS (Transport Layer Security) is a protocol for encrypting sent/received data. While in a screen connected by TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).



TLS Cautions

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of TLS. [redacted] and the Certification DigiCert Japan G.K. and Cybertrust make no guarantees whatsoever to users regarding security of TLS.

Using Chrome

1

In Home Screen,  (Chrome)



🚩 Chrome opens.

- If confirmation appears, follow onscreen instructions.
- Tapping Web links within text messages automatically opens Chrome.

 
2

Tap Entry field



3

Enter search words or URL ➡ 🔍

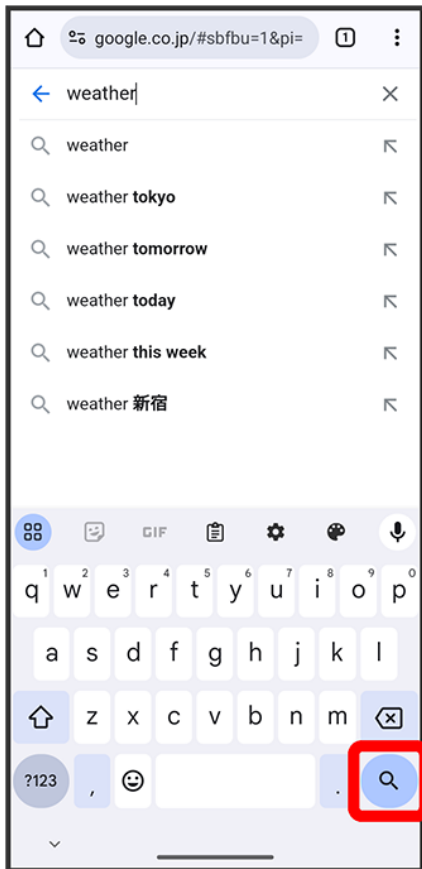

🚩 Search results appear or a Website opens.

Opening New Tabs

Open several tabs to switch between Websites easily.

In Chrome,   New tab

■ To switch tabs, Tap  and then target tab.

Adding Bookmarks

1

In Home Screen,  (Chrome)



🚩 Chrome opens.

2

 
Show Website to add





4



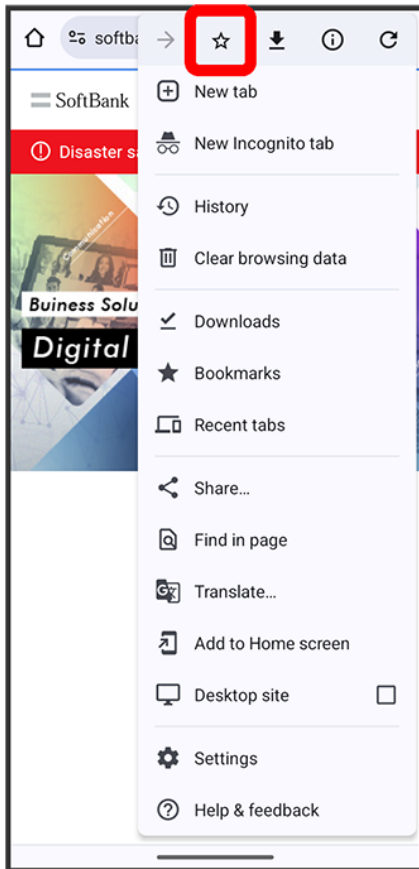

🚩 Current Website is added to Bookmarks.

+ Bookmark Operations

Editing Bookmarks

In Chrome, ⋮ ➔ Bookmarks ➔ Touch & Hold target bookmark ➔ ✎ ➔ Edit items ➔
←

Deleting Bookmarks

In Chrome, ⋮ ➔ Bookmarks ➔ Touch & Hold target bookmark ➔ 🗑️

Capturing Still Images/Videos

↓ [Capturing Still Images](#)

↓ [Capturing Videos](#)



File Format for Still Images/Videos

File Format for Still Images

File format for still images is JPEG.

File Format for Videos

File format for videos is MPEG-4.



Camera Cautions

If Lens Becomes Dirty

Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

Avoid Exposure to Direct Sunlight

Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.



Mobile Light Warning

Do not shine Mobile Light close to eyes. Do not look directly at Mobile Light when shining. Do not shine Mobile Light at other people's eyes. May affect eyesight, etc.

Capturing Still Images

1

In Home Screen,  (Camera)



Viewfinder appears.

2

Click Viewfinder left/right to select **Pro photo/Photo**



3

Aim Camera at subject → ○



🚩 Shutter clicks and still image is saved.

■ Touch & Hold  to shoot continuously.

Capturing Videos

1

In Home Screen,  (Camera)



 Viewfinder appears.

2

Click Viewfinder left/right to select **Video/Pro video**



3

Aim Camera at subject ➡ 📷



🚩 Video recording starts.

- Tap  while recording a video to capture a still image. The still image is saved at the size set with **Aspect ratio**.

4

To stop recording, 



🚩 Video recording stops and video is saved.

Viewing Still Images/Videos (Photos)

Show still images and videos downloaded or captured with Camera. Log in to your Google account beforehand.

↓ [Opening Still Images/Videos](#)

Opening Still Images/Videos

Show captured or downloaded still images and videos. Supported file formats:

Type	File Format
Still image	JPEG, GIF, PNG, BMP, WebP
Video	MP4, 3GPP, TS, WebM



In Home Screen,  (Photos)

 


Still image/video list opens.

- If confirmation appears, follow onscreen instructions.

2

Tap still image/video

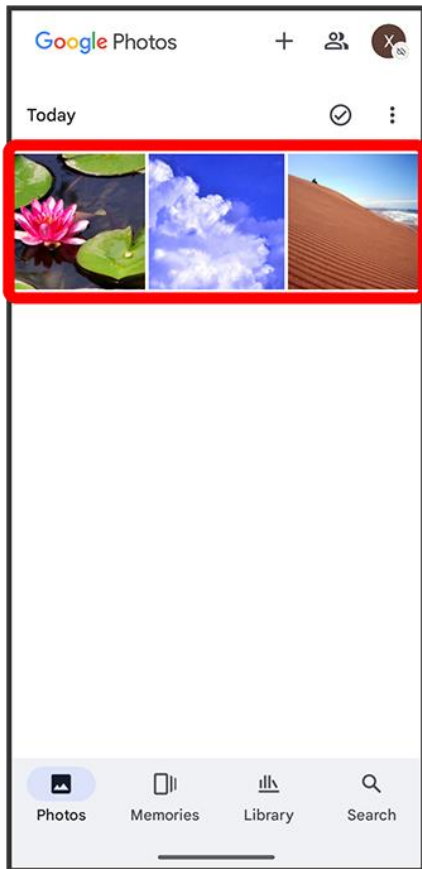

Still image/video appears.

Zooming Still Images

When viewing still image, Tap Display twice or Pinch.

Applications

↓ Setting Required Permissions for Applications

Setting Required Permissions for Applications

Set the operation of applications when activating for the first time.

The type and content of a confirmation differs with the application. Activating  (Sound Recorder) for the first time is described as an example.

- An application may not function correctly if permission to use it was not set.

 
1

Flick Home screen up   (ツール)  (Sound Recorder)



 Sound Recorder window opens.

Allow

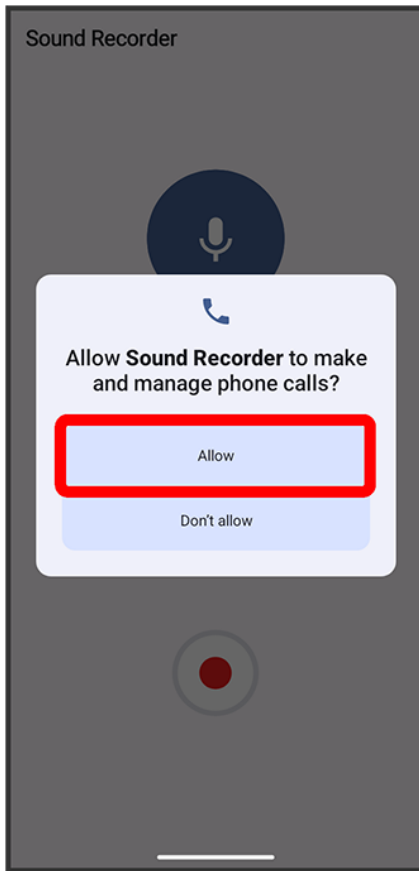

🚩 Settings are complete.

- For several functions, continue in the same way.

+ Other Ways to Set Required Permissions for Applications

Setting Functions to Use for Each Application

In Home Screen, ⚙️ (Settings) → Apps → See all XX apps → Tap application → Permissions → Tap function → Allow/Don't allow

- XX in See all XX apps indicates number of installed applications.
- Depending on function, items other than Allow/Don't allow may appear.

Setting Applications with Permitted Usage for Each Function

In Home Screen, ⚙️ (Settings) → Security & privacy → Privacy → Permission manager → Tap function → Tap application → Allow/Don't allow

- Depending on application or function, items other than Allow/Don't allow may appear.

Adding/Deleting Applications

Download a variety of applications (free/paid) from Google Play. Change the setting of downloaded applications to enable manual or automatic updates. Log in to your Google account beforehand.

↓ [Installing Free Applications](#)

↓ [Purchasing Paid Applications](#)

↓ [Updating Applications](#)

Installing Applications

Many different kinds of applications can be installed on handset from Google Play (provided by Google LLC).  is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Installing Free Applications

1

In Home Screen,  (Play Store)

 


Google Play appears.

- If confirmation appears, follow onscreen instructions.


2

Tap free application

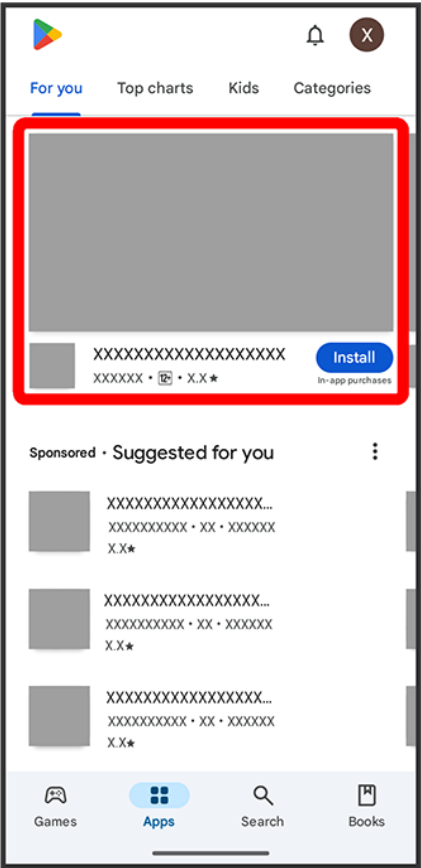

3

 Install

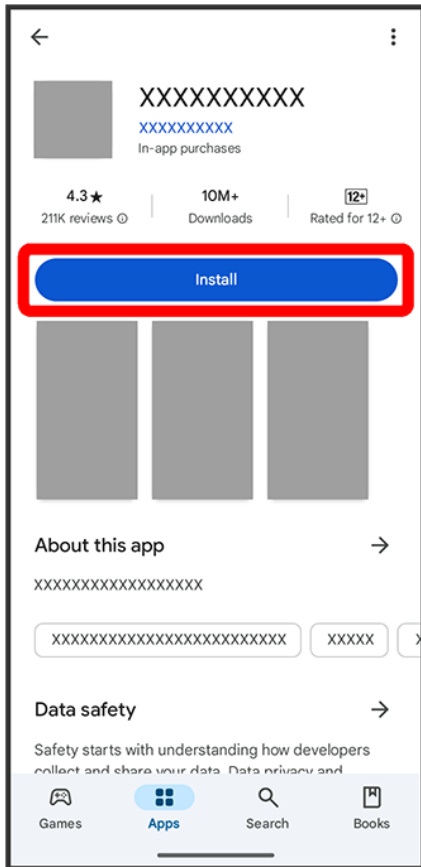

Application is downloaded and installed.

Purchasing Paid Applications

1

In Home Screen,  (Play Store)

 


Google Play appears.

- If confirmation appears, follow onscreen instructions.


2

Tap paid application

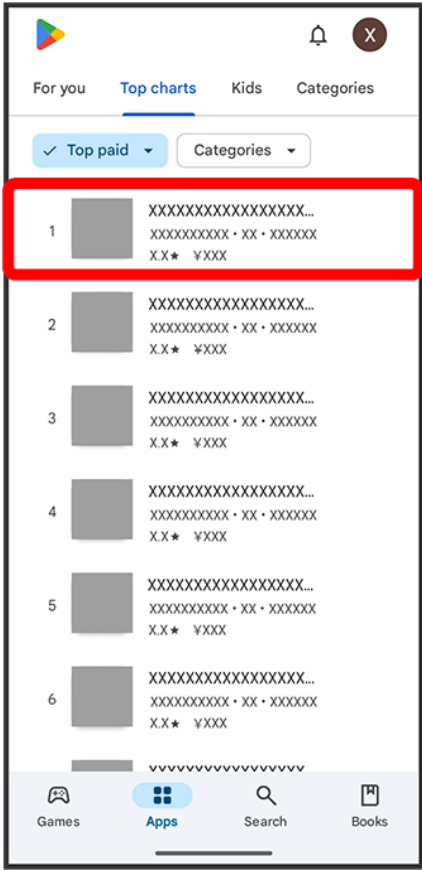

3

 Tap amount

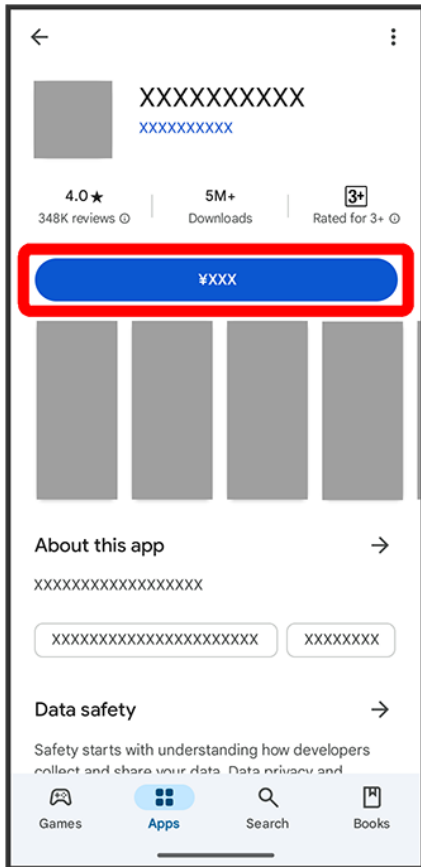

- If payment confirmation appears, follow onscreen instructions.

4

Follow onscreen instructions

 Application is downloaded and installed.

- If confirmation appears, follow onscreen instructions.



Purchased Applications

Payment

Pay only once. Redownloads of uninstalled applications are free of charge.

On Other Android Devices

Install an application on any Android device under the same Google account for free.



Requesting Refunds

Refund is possible within a limited time. By requesting a refund, the application is

deleted and the charge is cancelled. A refund request is valid only once per one application.

Tap account icon on Google Play → Manage apps & device → Manage → Tap application → Google Play refund policy → Request a refund → Follow onscreen instructions

Purchasing Applications

Purchase applications at your own risk.  is not responsible for any disadvantage resulting for user or third parties.

Updating Applications

1

In Home Screen,  (Play Store)



 Google Play appears.

- If confirmation appears, follow onscreen instructions.

2

Tap account icon → Manage apps & device → Manage → Tap application to update → Update

📺 Application is downloaded and installed.

- If confirmation appears, follow onscreen instructions.

Setting Application Updates

Setting Automatic Application Updates

Tap account icon on Google Play screen → Settings → Network preferences → Auto-update apps → Set update method

Setting Automatic Updates for Individual Applications

Tap account icon on Google Play screen → Manage apps & device → Manage → Tap application → ⋮ → Enable auto update (✓)

- Automatic updates are unavailable for some applications.

Connecting by Wi-Fi

Handset supports Wi-Fi (wireless LAN). Access the Internet via a household Wi-Fi connection environment.

↓ [Connecting Selected Access Points](#)

Connecting Selected Access Points

 
1

In Home Screen, ⚙️ (Settings)



2

Network & internet

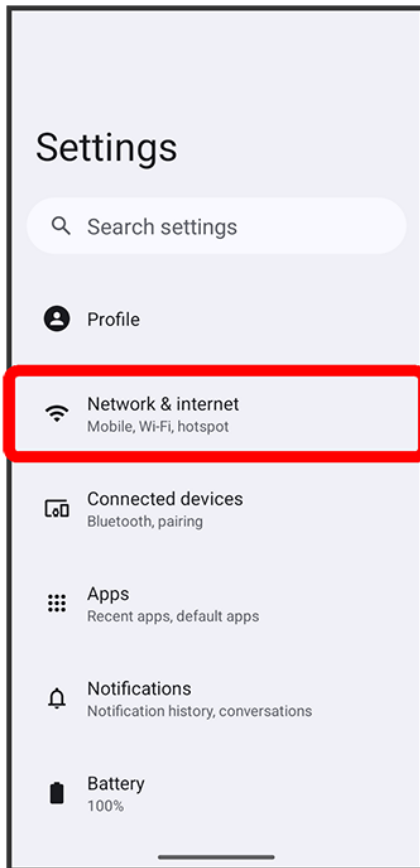

3

 
Internet



 Internet settings open.

4

Wi-Fi ()

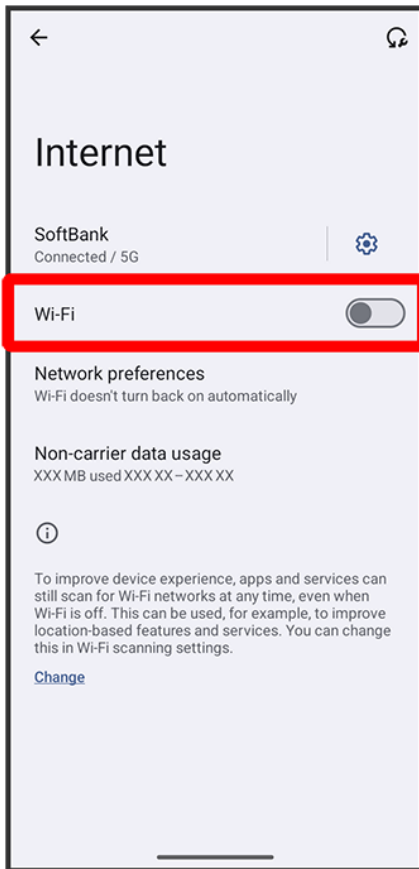


🚩 Wi-Fi is enabled.

- Tap **Wi-Fi** to toggle on ()/off ().


5

 Tap access point

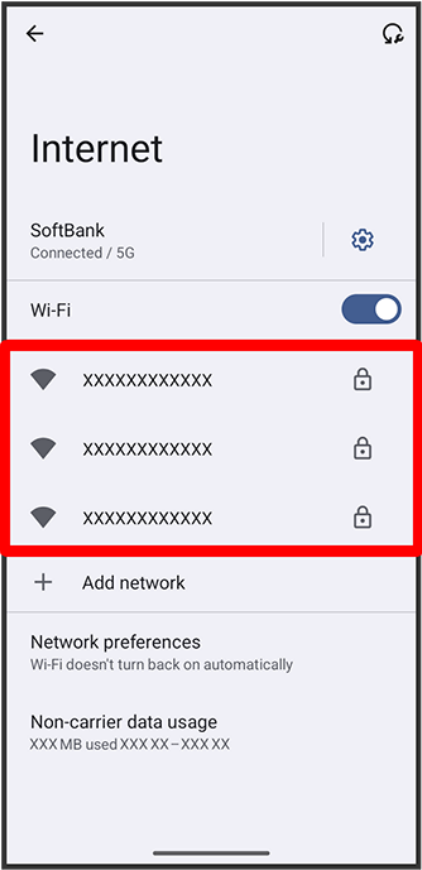

6

 Enter password ➡ Connect

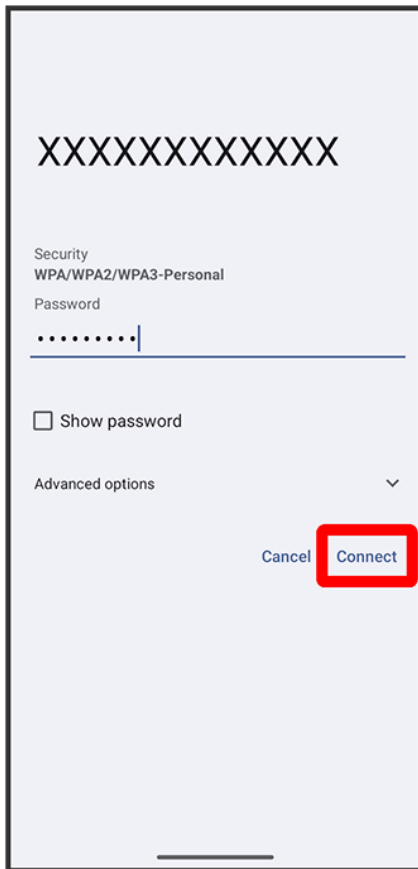

 Handset is connected.

- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.

Using Bluetooth® Function

Connect to a Bluetooth®-capable wireless phone, etc. for calls or to a hands-free device such as a headset.

Enabling Bluetooth® Function

Hints

Q Cannot use Bluetooth®

A Is handset in Airplane mode? If in Airplane mode, Bluetooth® function is disabled. Bluetooth® function can be enabled again after placing handset in Airplane mode.

Bluetooth® Function Cautions

Information may not appear correctly on both devices depending on the transferred data.

Enabling Bluetooth® Function

 
1

In Home Screen,  (Settings)




2

Connected devices

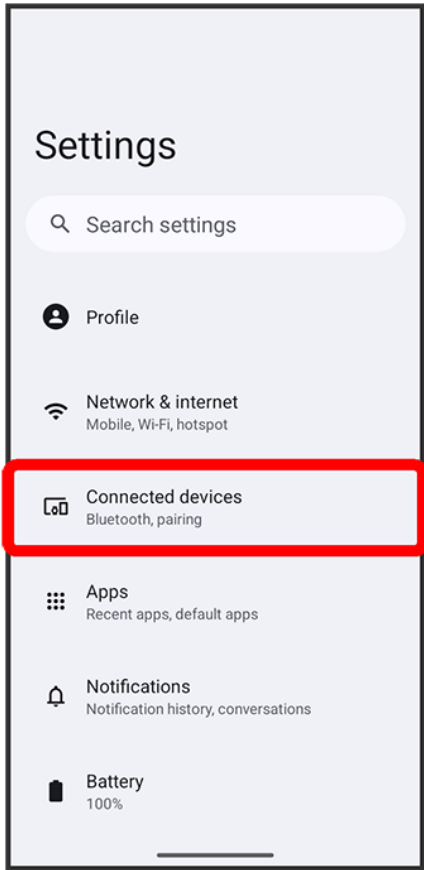


3

 Connection preferences

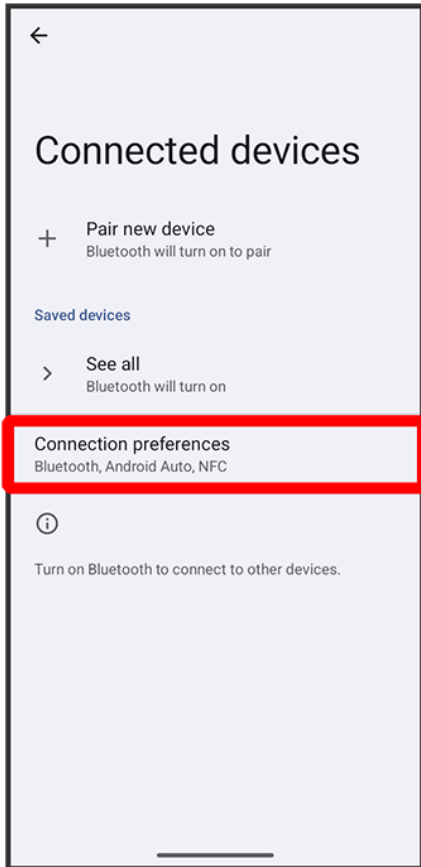

4

 
Bluetooth

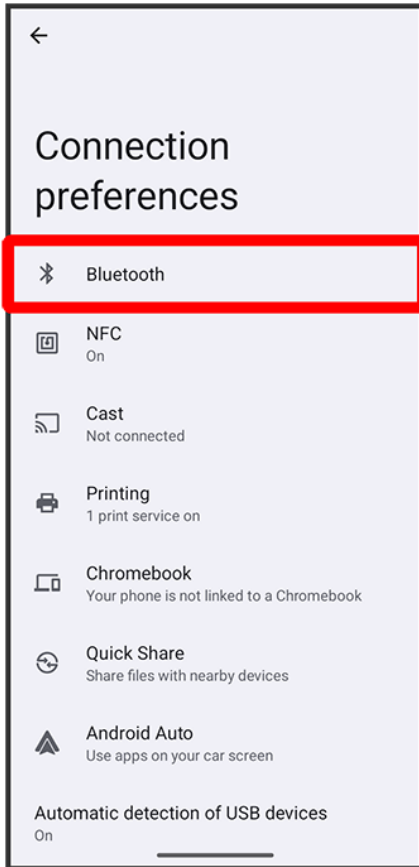

 Bluetooth® settings open.

5

 Use Bluetooth ()

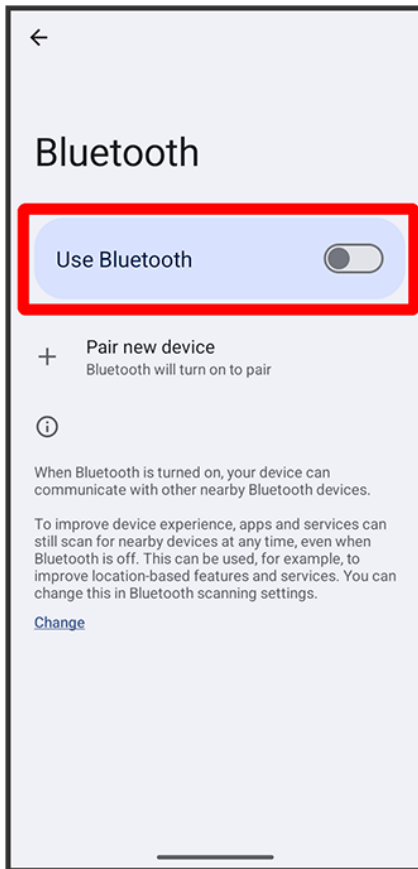

🚩 Bluetooth® function is enabled.

- To disable Bluetooth® function, Tap **Use Bluetooth** (🔴).

Handset Settings

↓ Handset Settings

Handset Settings

In Home Screen,  (Settings) to customize operation of handset functions. Handset settings include the following items.

Item	Description
Profile	Check and edit your phone number, e-mail address, etc.
Network & internet	Make network and Internet settings for Wi-Fi, mobile networks, Airplane Mode, etc.
Connected devices	Make settings for Bluetooth® connection, etc.
Apps	Make settings for installed applications.
Notifications	Make notification settings.
Battery	Check Battery usage and make settings to save battery power.
Direct key	Make settings for Direct Key.
Storage	Check space in internal storage and on SD Card/USB Storage. Also erase SD Card/USB storage data or mount/unmount SD Card/USB storage.
Sound & vibration	Make ringtone, operation tones, and other sound settings.
Display	Make settings for Display brightness, font size, etc.
Wallpaper & style	Change wallpaper or make settings for style, etc.
Switch home app	Switch the Home screen to Simple Home or Standard Home.
Accessibility	Set captions, magnification gestures, and other useful accessibility functions.
Security & privacy	Make settings for Start Screen security, SIM lock, etc., as well as regarding privacy such as app permissions or password display.
Location	Make location settings.
Safety & emergency	Make settings for emergency information/emergency call such as medical information or emergency contacts for first responders to see in emergency.
Passwords & accounts	Create/add accounts and sync accounts.
Digital Wellbeing & parental controls	Check handset usage habits at a glance and get more offline time.
Google	Make settings for Google services.

System	Check and make settings for language and keyboard, date and time, backup, reset, etc.
About phone	Check device name or own phone number, etc.

1

 
In Home Screen, ⚙️ (Settings)



🚩 Handset settings open.

2

Set items

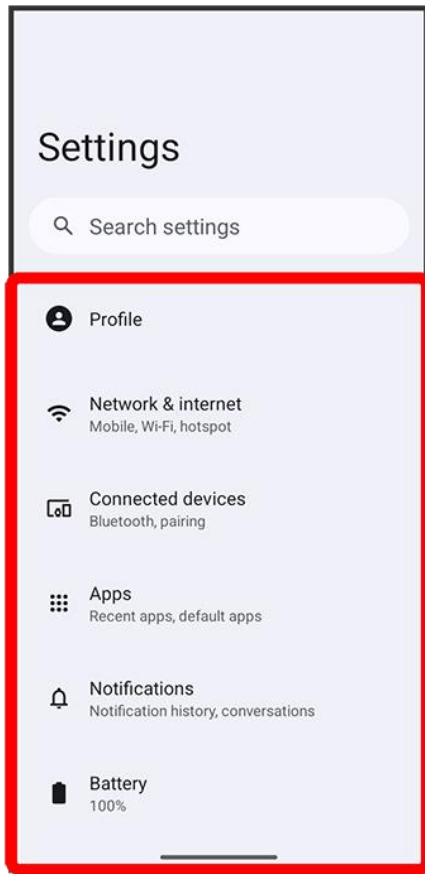

🚩 Settings are made.

Data Usage Settings

↓ Data Usage Settings

+ Data Usage Operations

Set Data Saver

In Home Screen, ⚙️ (Settings) → Network & internet → Data Saver → Use Data Saver (🔘)

- Tap Use Data Saver to toggle on (🔘)/off (🔘).

Set Functions Not Subject to Data Saver

In Home Screen, ⚙️ (Settings) → Network & internet → Data Saver → Unrestricted data → Tap functions to set (🔘)

- Tap function to toggle on (🔘)/off (🔘).

Enable Cellular Data

In Home Screen, ⚙️ (Settings) → Network & internet → SIM → Select SIM → Mobile data (🔘)

- If confirmation appears, follow onscreen instructions.
- Tap Mobile data to toggle on (🔘)/off (🔘).

 
View Data Usage with Wi-Fi

In Home Screen, ⚙️ (Settings) → Network & internet → Internet → Non-carrier data usage

Data Usage Settings

1

In Home Screen, ⚙️ (Settings) → Network & internet

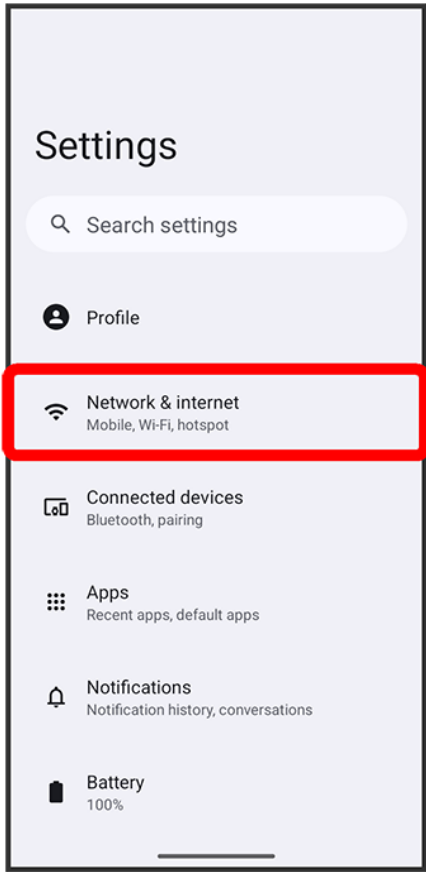


2

SIM



3

 Select SIM

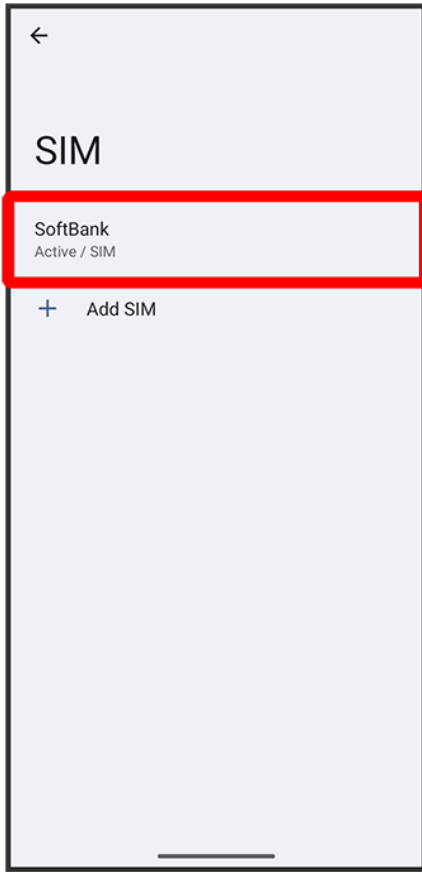

🚩 Data usage window opens.

Battery Settings

- ↓ Battery Settings
- ↓ Using Battery Care Mode

Battery Settings

Check Battery consumption settings and Battery usage. Settable items are the following.


Item	Description
XX%	Check Battery, time remaining, etc.
Battery usage	Check handset usage since last full charge and check or make settings for battery usage for each app.
Battery Saver	Set Battery saver.
Battery percentage	Set showing battery percentage in status bar.
Battery Care Mode	Enable Battery Care Mode.
Battery health	Check battery charging capacity.

Using Battery Care Mode

Avoid charging completely to keep Battery optimal and longer-lasting.


1

 In Home Screen, ⚙️ (Settings) ➡️ Battery

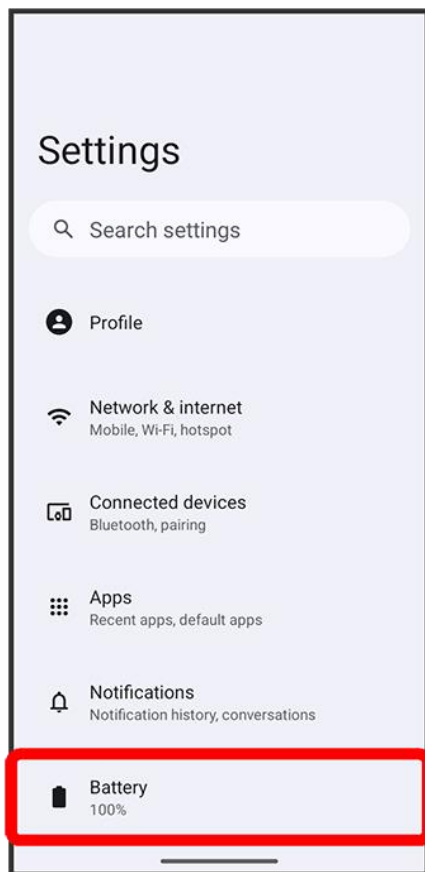


2

 Battery Care Mode

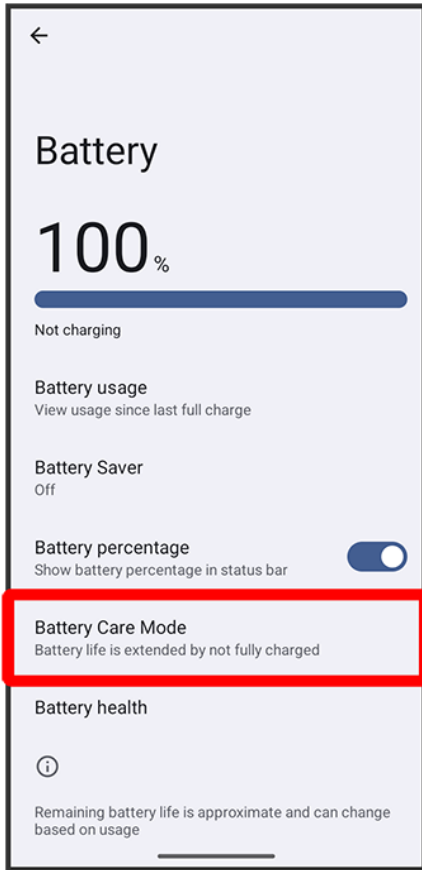

3

 Use Battery Care Mode ➔ Restart

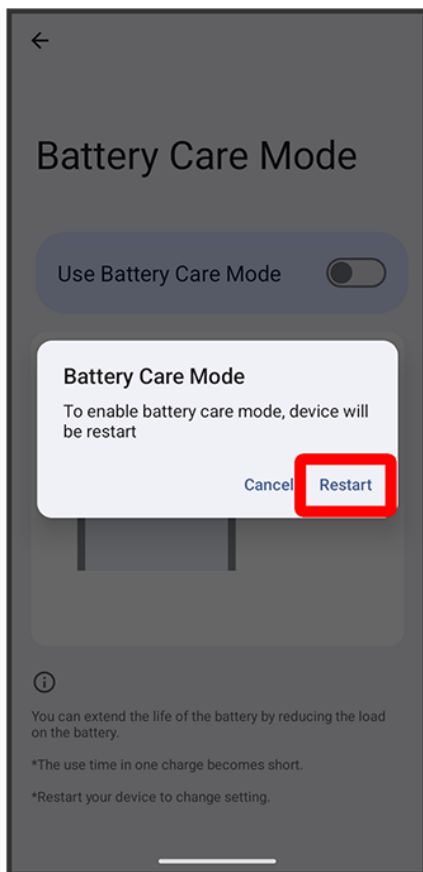

🚩 Handset restarts and Battery Care Mode is ON.

- If Battery Care Mode is ON, charging will stop at 85%. However, battery percentage is displayed as "100%."

Battery icon changes to .

Display Settings

↓ [Display Settings](#)

Display Settings

Make settings for Display brightness, Wallpaper, etc. Settable items are the following.

Item	Description
Brightness level	Set brightness of Display.
Adaptive brightness	Enable adjustment of brightness for surroundings.
Lock screen	Set notification operations, etc. on Start Screen.
Sleep time	Set a period of inactivity after which Display turns off automatically.
Keep screen on while holding	Set whether to turn on Display while holding handset.
Dark theme	Set dark theme on/off and make schedule settings.
Display size and text	Set the size of font and icons appearing in Display as well as text contrast, etc.
Night Light	Tint screen amber.
Glove touch mode	Enable Touch action when wearing gloves.
Pocket mode	Set whether to reduce unintended touch operations while handset is in a pocket or bag, etc.
Auto-rotate screen	Set whether to rotate Display with handset orientation automatically.
Screen saver	Set screen saver.
Display quick settings	Set whether to show Quick Settings Panel.

Sound & Vibration Settings

↓ [Sound & Vibration Settings](#)

Sound & Vibration Settings

Make ringtone, operation tones, vibration intensity and other sound settings. Settable items are the following.

Item	Description
Media volume	Set volume for music, videos, etc.
Call volume	Set volume for call.
Ring volume	Set volume for Phone ringtone, etc.
Notification volume	Set volume for notifications.
Alarm volume	Set volume for alarm.
Manner mode	Mute ringtones and other handset sounds to avoid disturbing others around you.
Phone ringtone	Set Phone ringtone.
Live Caption	Set whether to generate captions automatically when handset detects speech.
Media	This option allows users to make settings such as hiding the media player after it completes media playing.
Vibration pattern	Set vibration pattern.
Vibration & haptics	Set vibration intensity for incoming call, notifications, and tapping operation.
Default notification sound	Set notification sound.
Default alarm sound	Set alarm sound.
Dial pad tones	Set operation sound in call window on/off.
Screen locking sound	Set unlocking sound for Start Screen security on/off.
Charging sounds and vibration	Set charging start sound and vibration on/off.
Charged sounds and vibration	Set charging end sound and vibration on/off.
Tap & click sounds	Set Tapping sound on/off.
Do Not Disturb	Set/cancel Do not disturb. Make settings such as notification action when Do Not Disturb is set.

Security & Privacy Settings

↓ Security & Privacy Settings

↓ Enabling USIM/eSIM PIN

↓ Changing USIM/eSIM PIN

Security & Privacy Settings

Make settings for Lock Screen security, USIM Card lock, etc. Settable items are the following.

■ Displayed items depend on the setting.

Item	Description
App security	Set whether to scan handset for security issues.
Device unlock	Set Start Screen security.
Account security	Check that your Google Account is protected, and check the security of your saved password.
Device finders	Set location to be shown if handset is lost.
System & updates	Update OS and security patches.
Privacy	•Permission manager View and edit app permissions. •Privacy dashboard Show apps which used permissions within 24 hours. •Ads Control the ads you see. •Health Connect Set whether to allow apps and services to access health data. •Data sharing updates for location Show apps having a changed method for sharing user location information. •Camera access¹ Set whether to allow app or services to use Camera. •Microphone access Set whether to allow app or services to use Mic. •Show clipboard access

	Set whether to show a message when apps access copied texts or images. • Show passwords Set whether entered passwords are visible. • Location access Set whether to allow app or services to access location information. • Activity controls Control the activities and information you allow Google to save.
More security & privacy	• Notifications on lock screen Control how notifications show on Start Screen. • Show media on lock screen Set whether to show Media Player in Start Screen. • App content Set whether to allow apps to send contents to Android system. • Android System Intelligence Show suggestions based on interaction with other users or used apps/contents. • Autofill service from google Fill in forms with information saved in Google Account like passwords by one tap. • Usage & diagnostics Set whether to send usage and diagnostics information to Google. • Extended Unlock Enable handset to check if it is being carried and to check for trusted place or device and unlock Start Screen. • Android Safe Browsing Set whether notification is shown when a possibly harmful website is detected. • Device admin apps Set whether to enable device administration functionality. • SIM lock Make settings for SIM lock. • Encryption & credentials

Make settings for encrypt handset data and set credentials storage.

- Trust agents

Set whether to show trusted agents.

- App pinning

Set to keep only screen of specified application in view.

- Confirm SIM deletion

Set to verify it is you before erasing a downloaded SIM.

Setting Handset Not to Lock Start Screen

In Home Screen,  (Settings)  Security & privacy  Device unlock  Screen lock  None

 
- If method for unlocking screen is setting other than **None** or **Swipe** before changing setting, first Tap **Screen lock** and unlock screen.
- If confirmation appears, follow onscreen instructions.

Enabling USIM/eSIM PIN

When PIN is enabled, a window for entering PIN appears to allow handset use each time handset is powered on with USIM Card installed/eSIM activated.


1

In Home Screen,  (Settings)  Security & privacy

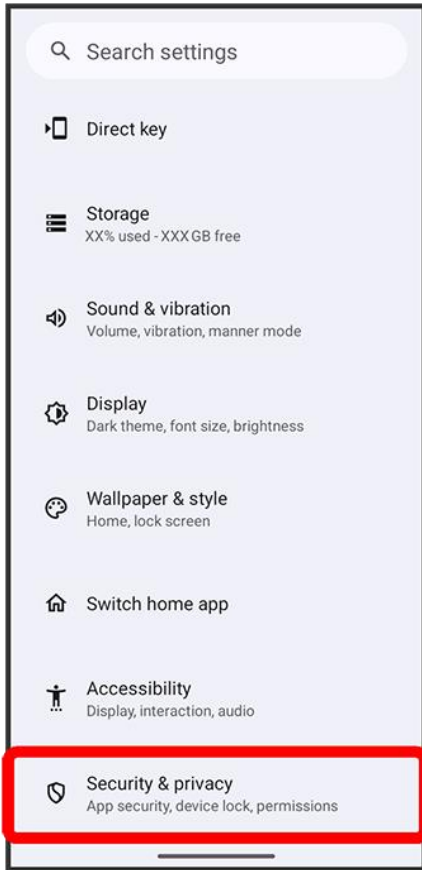

2

 
More security & privacy → SIM lock

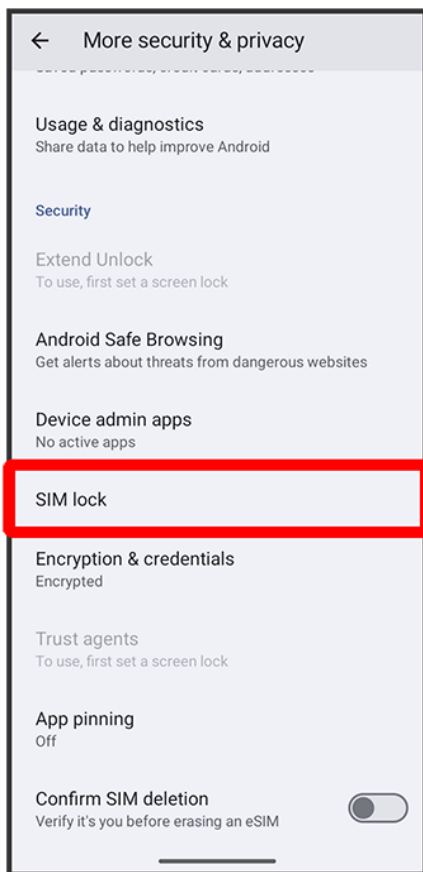

- When USIM card and eSIM are used at the same time, select SIM to set.

3

 Lock SIM () → Enter PIN →  OK

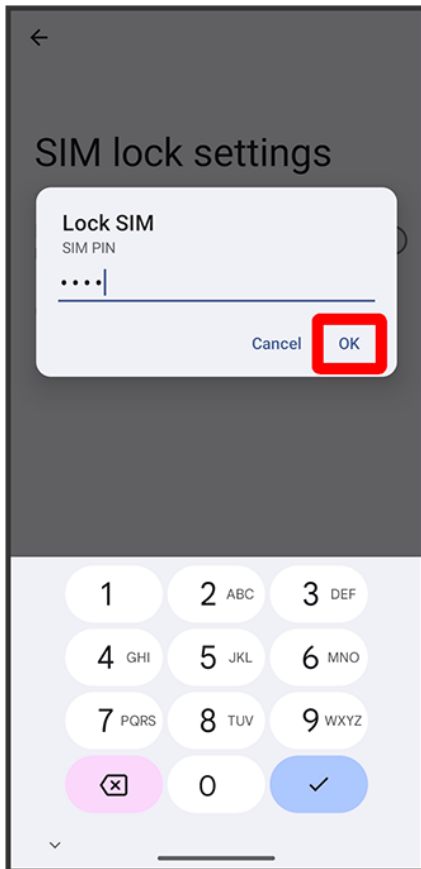

 PIN is enabled.

PIN Cautions

 
Entering incorrect PIN 3 consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; For details about PUK, contact [Customer Service](#). Entering incorrect PUK ten consecutive times locks USIM Card/eSIM, disabling handset. For recovery, USIM Card/eSIM must be reissued at a (fees apply).

Changing USIM/eSIM PIN

First enable USIM/eSIM PIN to change PIN.


1

In Home Screen,  (Settings)  **Security & privacy**

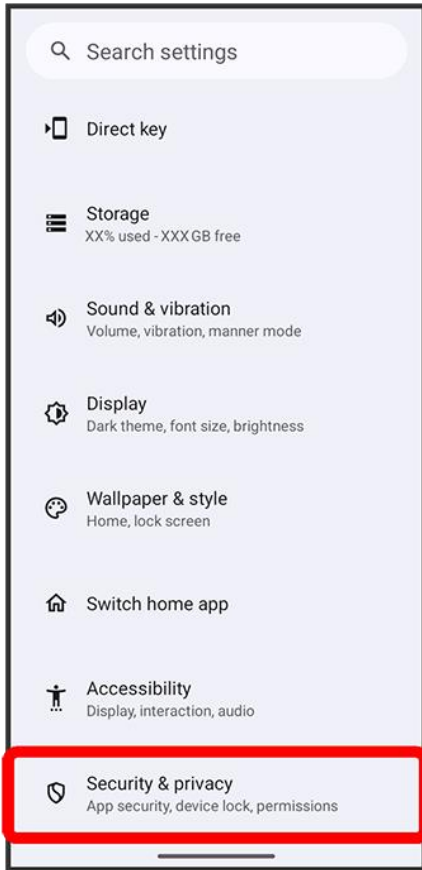

2

 
More security & privacy → SIM lock

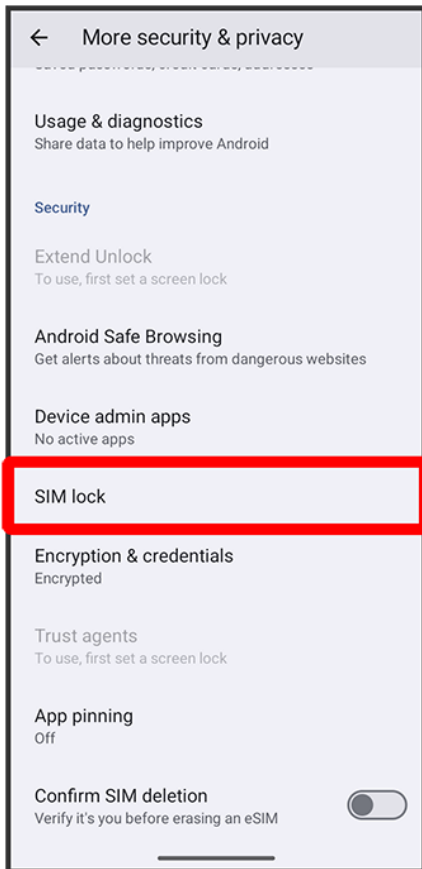

- When USIM card and eSIM are used at the same time, select SIM to set.

3

 Change SIM PIN → Enter current PIN → OK → Enter new PIN → OK → Re-enter new PIN → OK

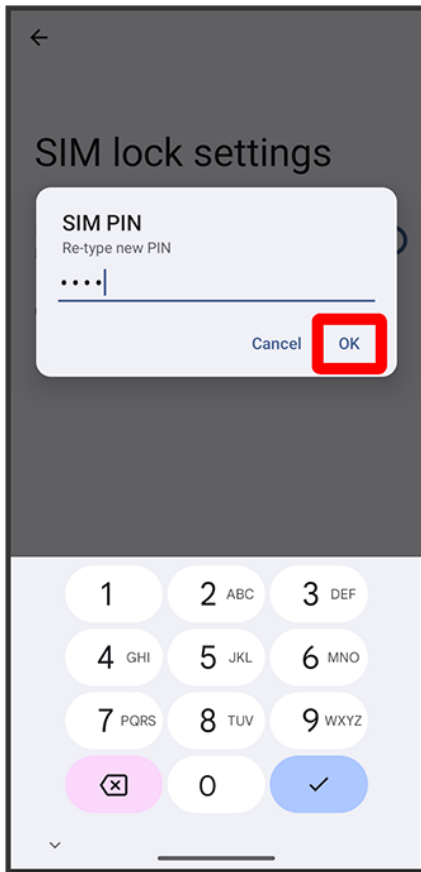

🚩 PIN is changed.

System Settings

↓ System Settings

System Settings

Check and make settings for language and input, date and time, backup, and reset, etc. Settable items are the following.

Item	Description
Languages	Make settings for display language.
Keyboard	Make settings for text entry.
Gestures¹	Set whether to enable Camera activation when Power Key/Fingerprint Sensor is Pressed twice, and set Navigation Bar, One-handed mode, etc.
Date & time	Make settings for date and time.
Auto power on/off	Set time and day to power off handset automatically.
Auto power on	Set whether to start handset automatically when charged during power off.
Backup	Backup application data, call history, etc. to Google server.
System update	Make settings for system update. For details, see " Updating Software ."
Reset options	Reset network settings, application settings, erase eSIMs, and initialize data.

+ Languages & Input Operations

Set the Display Language

In Home Screen, ⚙️ (Settings) ➡️ Languages ➡️ System Languages ➡️ Tap language ➡️ OK

Set Input Method

In Home Screen, ⚙️ (Settings) ➡️ Keyboard ➡️ On-screen keyboard ➡️ Tap input method ➡️ Tap setting items ➡️ Follow onscreen instructions

Other Settings

- ↓ Profile
- ↓ Network & Internet Settings
- ↓ Connected Devices Settings
- ↓ Apps Settings
- ↓ Notifications Settings
- ↓ Direct Key Settings
- ↓ Storage Settings
- ↓ Wallpaper & Style Settings
- ↓ Switch Home App Settings
- ↓ Accessibility Settings
- ↓ Location Settings
- ↓ Safety & Emergency Settings
- ↓ Passwords & Accounts Settings
- ↓ Digital Wellbeing & Parental Controls Settings
- ↓ Google Settings
- ↓ About Phone

Profile

Check and edit your phone number, e-mail address, etc.

Profile Operations

Editing Profile

In Home Screen,  (Settings)  Profile    Set each item  Save

Sharing Profile

In Home Screen,  (Settings)  Profile    Share  Select app  Follow onscreen instructions

Deleting Saved Profile Information

Network & Internet Settings

Make network and Internet settings for Wi-Fi, mobile networks, data usage, etc. Settable items are the following.

Item	Description
Internet	Enable mobile network or Wi-Fi connection. For details, see " Connecting by Wi-Fi ."
SIM	Set a network type, etc. For details, see " Global Roaming ."
Airplane mode	Disable all settings that emit signals. Handset stays powered on.
Dual SIM settings	Select SIM to use, and check SIM information.
Tethering	Make tethering settings.
Data Saver	Turn off background data generated by some apps.
VPN	Add a VPN.
Private DNS	Make private DNS settings.
Adaptive connectivity	Set whether to manage network connection automatically.

Connected Devices Settings

Make settings for Bluetooth® connection and other settings. Settable items are the following.

Item	Description
Pair new device	Search for and pair nearby Bluetooth® devices.
Saved devices	Check and make settings for Bluetooth® devices paired before.
Connection preferences	Make settings for Bluetooth® connection, Cast etc.

Apps Settings

Make settings for installed applications. Settable items are the following.

Item	Description
------	-------------

See all XX apps	Check and make settings for installed applications.
Default apps	Make settings for default applications.
Screen time	View time spent in apps.
Unused apps	Delete unused apps to increase storage space or delete app permissions.
App battery usage	Set battery usage per app.
Special app access	Make settings for access of Special applications.

Notifications Settings

Make notification settings. Settable items are the following.

■ Displayed items depend on the setting.

Item	Description
App settings	Make notification settings for each applications
Notification history	View Notification history.
Conversations	Check notifications of conversation with high priority.
Bubbles	Set whether to show notifications of conversation with a floating icon.
Device & app notifications	Manage apps which can read notifications.
Notifications on lock screen	Control how notifications show on Start Screen.
Sensitive notifications	Set whether to show sensitive notifications in Lock Screen.
Do Not Disturb	Set/cancel Do Not Disturb. Make settings such as notification action when Do Not Disturb is set.
Flash notifications	Set whether Mobile Light or Display flashes when notification received or alarm sounds.
Wireless emergency alerts	Make settings for Emergency alerts.
Hide silent notifications in status bar	Set whether to show silent notifications in Status Bar.
Allow notification snoozing	Set whether to allow notification snoozing.
Notification dot on app icon	Set whether to show notification dot on app icon.
LED indicator	Set whether Notification/Charging LED notifies user of missed calls, new mail, battery charge, etc.
Enhanced notifications	Set whether to show suggested operations or replies.

Direct Key Settings

Make settings for functions to activate by pressing Direct Key on sides of handset. Settable items are the following.

Item	Description
Single press	Set function to activate by pressing once.
Double press	Set function to activate by pressing twice.
Press and hold	Set function to activate by long press.
Answer and end call	Set whether to answer/end a call by Long-Pressing Direct Key.
Wake up device	Set whether to activate app even while Screen is off.

Storage Settings

Check space in internal storage and on SD Card/USB Storage. Also erase SD Card/USB storage data or mount/unmount SD Card/USB storage. Settable items are the following.

Item	Description
This device	View information on internal storage usage.
SD card	Make settings and check total space/free space for SD Card.
USB storage name	Make settings for USB storage and check storage space.

Wallpaper & Style Settings

Make settings for wallpaper or color of Home Screen or Lock Screen. Settable items are the following.

Item	Description
Clock color & size	Set color and size of clock.
System colors	Change the color pattern of the screen.
Change wallpaper	Change wallpaper.
Shortcuts	Set whether to show shortcuts in Start Screen.
Show notifications on the lock screen	Set whether to show notifications in Start Screen.
More lock screen options	Set information to appear in Start Screen.

Themed icons	Set whether to show corresponding app icons in plain color.
---------------------	---

Switch Home App Settings

Switch Home Screen app. Settable items are the following.

Item	Description
Simple Home	Simple Home Screen arranging necessary information and frequently used functions to find them easily
Standard Home	Standard Home Screen

Accessibility Settings

Set captions, magnification gestures, and other useful accessibility functions. Settable items are the following.

Item	Description
セキュリティOne	Make セキュリティOne (Security One) settings.
TalkBack	Set handset to read out screen information.
Select to Speak	Set whether to speak tapped item.
Display size and text	Set the size of font and icons appearing in Display or text contrast.
Color and motion	Set color correction, color inversion, Dark theme, remove animation, etc.
Extra dim	Set whether to reduce brightness of Display more.
Magnification	Set whether to enlarge view by Triple-Tapping or using accessibility key.
Accessibility Menu	Set whether to use accessibility menu.
Switch Access	Set handset to be controllable by one or several switches.
Timing controls	Set response time for long pressing Screen or set time to display temporary messages, etc.
System controls	Set Navigation mode, One-handed mode, Auto-rotate screen, etc.
Vibration & haptics	Set vibration intensity for incoming call, notifications, and tapping operation.

Live Caption	Set whether to generate captions automatically when handset detects speech.
Caption preferences	Make settings for captions.
Audio description	Set whether to read descriptions of movie or TV program compatible with Audio description.
Flash notifications	Set whether Mobile Light or Display flashes when notification received or alarm sounds.
Audio adjustment	Set whether to use monaural audio or balance left-right sound.
Accessibility shortcuts	Make settings for accessibility shortcuts
Text-to-speech output	Set the engine for text readout, as well as change the readout speed and play a sample.

Location Settings

Make location settings. Settable items are the following.

Item	Description
Use location	Turn on or off Location Information.
Recent access	View apps that accessed your handset's location information.
App location permissions	View and change permissions ("Allow all the time," "Allow only while using the app," "Ask every time," "Don't allow") for app to access your handset's location.
Location services	Make settings for location history, location accuracy, location sharing, emergency location service, etc.

Safety & Emergency Settings

Make settings for medical information in emergency or emergency call. Settable items are the following.

Item	Description
Open Personal Safety	Show emergency contacts, medical information, etc.
Medical information	Register medical information.
Emergency contacts	Set emergency contacts.

Emergency SOS	Set whether to use emergency SOS and make settings for operations when activating emergency SOS, making a call to emergency service, sharing information with emergency contacts, etc.
Crisis alerts	Set whether to activate Crisis alerts.
Emergency Location Service	Set whether to send current location information in emergency.
Earthquake alerts	Set whether to activate Earthquake alerts.
Unknown tracker alerts	Set whether to detect unknown trackers.
Wireless emergency alerts	Make settings for Wireless emergency alerts.

Passwords & Accounts Settings

Create/add accounts and sync accounts. Settable items are the following.

Item	Description
Passwords	Make settings for password manager.
Autofill service	Make settings for Autofill service.
Add account	Create or add accounts.
Automatically sync app data	Set permissions for syncing data automatically.

Digital Wellbeing & Parental Controls Settings

Check handset usage habits at a glance and get more offline time. Settable items are the following.

■ Displayed items depend on the handset status.

Item	Description
XXhr, XXmin	Check total handset usage time for the day.
Dashboard	Check history of total handset usage time. Limit usable time for each application.
Bedtime mode	Change Display to monochrome, halt notifications, etc. at preset time.
Focus mode	Pause app which prevents you from concentrating.
Manage notifications	Make notification settings for applications.
Do Not Disturb	Set/cancel advanced notification management. Make settings such as notification action when advanced notification management is set.

Heads Up	Set whether to display notification which urges you to stop using handset while walking.
Show icon in the app list	Enable Digital Wellbeing icon to be shown in app list.
Parental controls	Supervise handset remotely with family link app for parents and restrict usage time.

Google Settings

Make settings for Google services together at the same time. Settable items are the following.

Item	Description
Ads	Make settings for your advertising ID.
Autofill	Set whether to enter information such as password or SMS confirmation code saved in your Google account automatically.
Backup	Make settings for backup.
Devices & sharing	Make settings for Chromecast or Chromebook™, and nearby devices, and share files using Quick Share.
Find My Device	Set whether to show handset location if it is lost.
Kids and Family	Make settings for parental controls.
Mobile data & messaging	Make settings for phone number, etc. for setting up a Google Account again.
Personalize using shared data	Set whether to use shared data.
Set up & restore	Make settings for a nearby device/work profile and restore contacts.
Settings for Google apps	Make settings for Google Fit, which records walking and running activity and manages your weight, etc., and Google Play Instant.
Personal Safety	Set whether to detect unknown trackers.

About Phone

Check device name or own phone number, etc. Settable items are the following.

Item	Description
Device name	View/change the device name.
Phone number (sim slot 1/2)	View your device's phone number.

Legal information	View legal information.
Technical regulations conformity certification	View technical regulations conformity certification.
SIM status (sim slot 1/2)	View information stored in the SIM.
Model	View device's model name and serial number.
EID	Show EID.
IMEI (sim slot 1/2)	View device's IMEI information.
Android version	View the versions of Android OS.
IP address	View the device's IP address.
Wi-Fi MAC address	View the device's Wi-Fi MAC address.
Device Wi-Fi MAC address	View the device's Device Wi-Fi MAC address.
Bluetooth address	View the device's Bluetooth® address.
Up time	View screen time.
Build number	View the device's build number.

Global Roaming

Handset is Global Roaming Service eligible. Use the same handset number outside Japan.

Handset connects to an appropriate cellular provider automatically by default. A specific carrier can also be selected manually.

Change communications method and roaming settings as needed.

 
↓ [Setting a Cellular Provider](#)

↓ [Changing Data Roaming Setting](#)

Setting a Cellular Provider


1

In Home Screen,  (Settings)  **Network & internet**

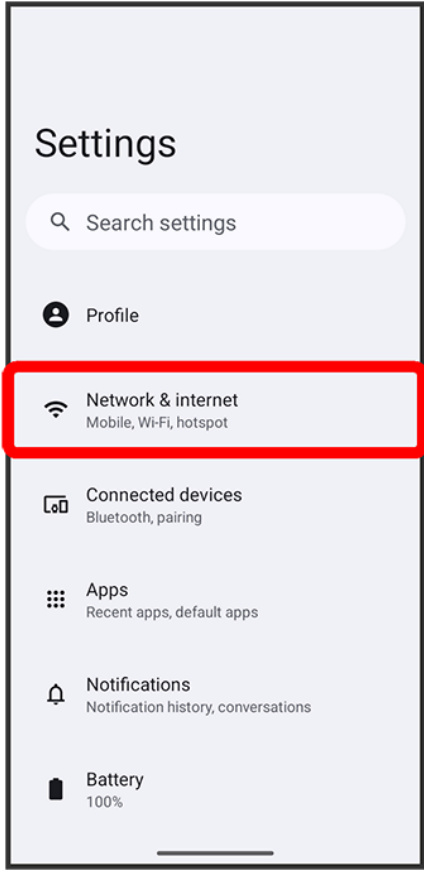


2

 SIM

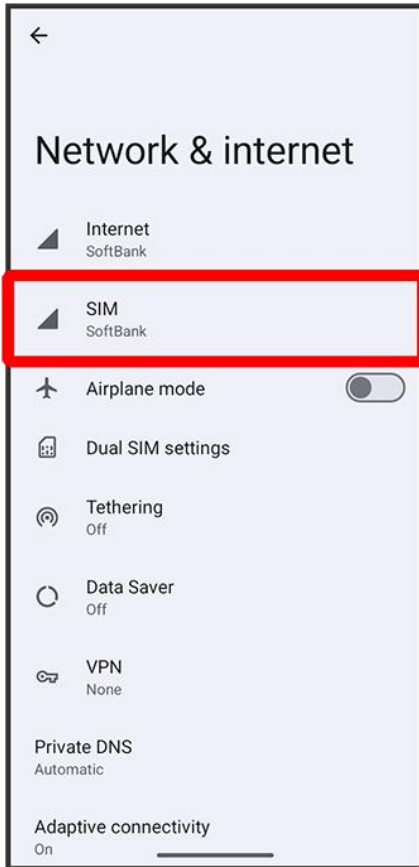


3

 Select SIM

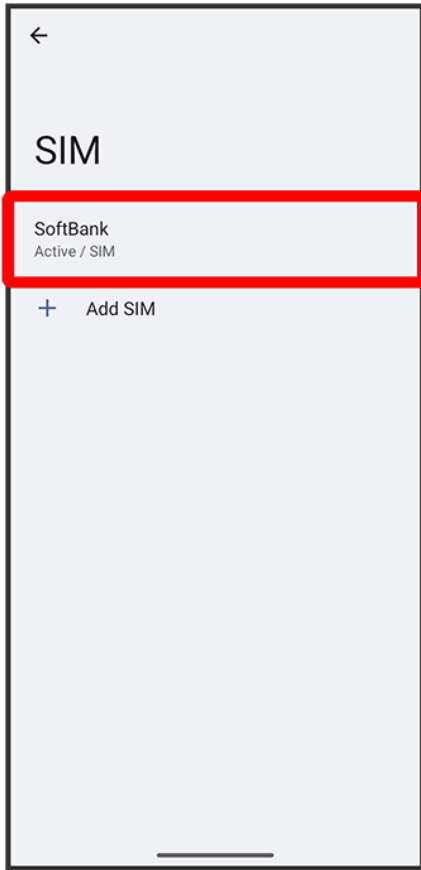

4

 Automatically select network ()

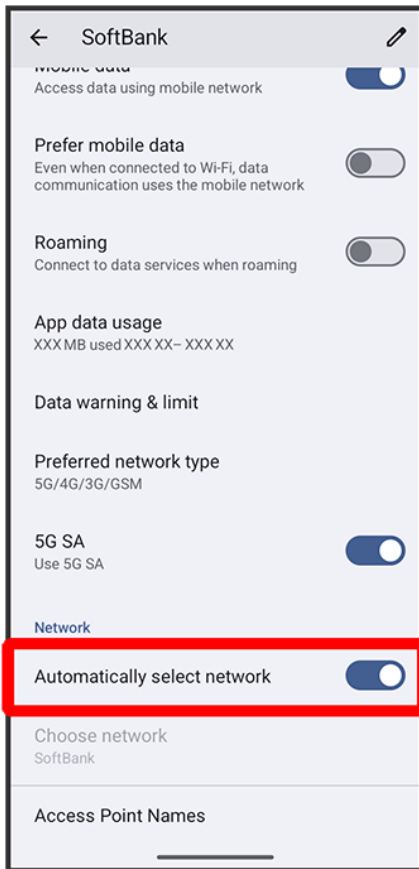

 Handset searches for available network.

- If **Automatically select network** is off () , Tap **Choose network**.

5

Tap provider

 
 Cellular provider is set.

- To set an appropriate cellular provider automatically, Tap **Automatically select network** () .
- If using handset in Japan, set **Automatically select network** on () . To select a provider manually, select **SoftBank**. Connection is only possible by selecting SoftBank.

Changing Data Roaming Setting


1

In Home Screen,  (Settings)  **Network & internet**

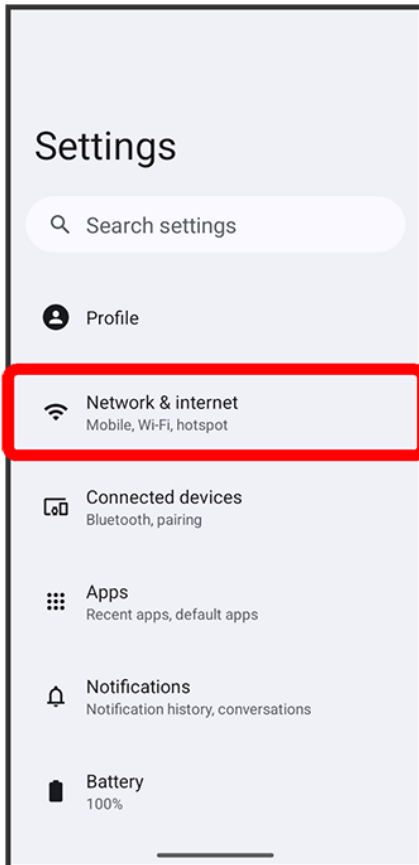


2

 SIM

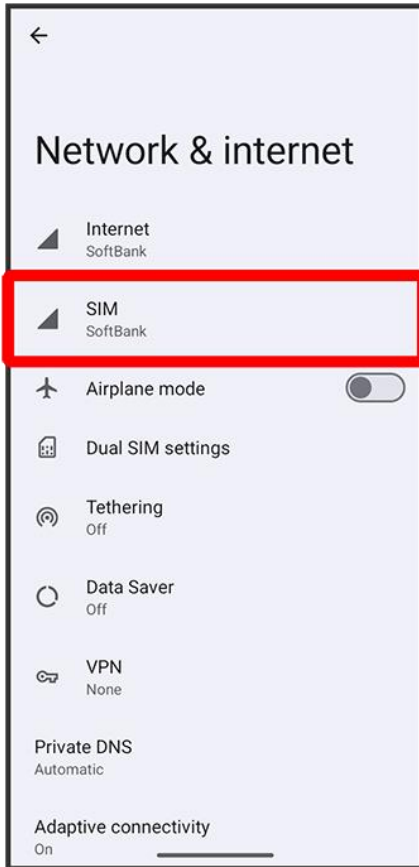


3

 Select SIM

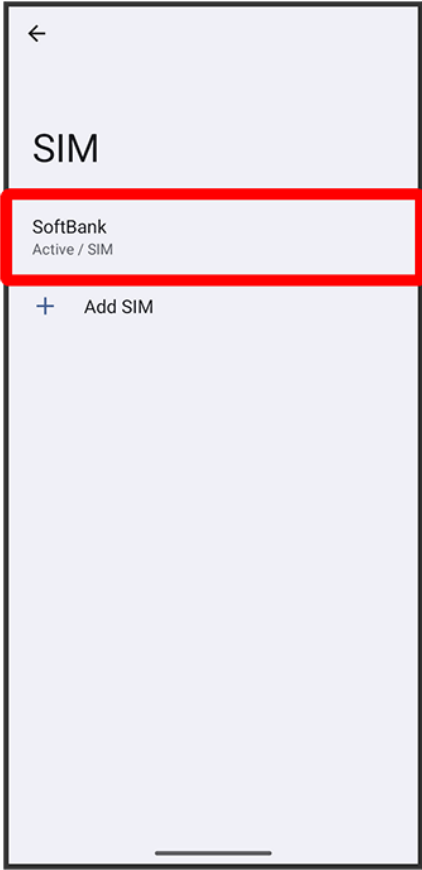

4

 Roaming ()

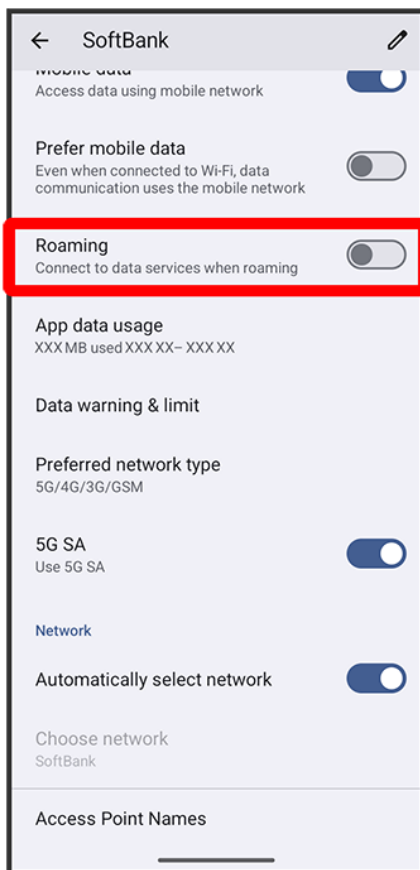

 Data roaming is enabled.

- Tap **Roaming** to toggle on () / off ().
- If confirmation appears, follow onscreen instructions.

Making Calls while Abroad

See [Website](#) to learn about roaming areas/services, etc.

↓ [International Calls to Japan and Other Countries from Abroad](#)

↓ [Calls to Landline Phones/Cell Phones in Country of Stay](#)

International Calls to Japan and Other Countries from Abroad

1

 
In Home Screen,  (Phone)



 Phone opens.

2


Dialpad

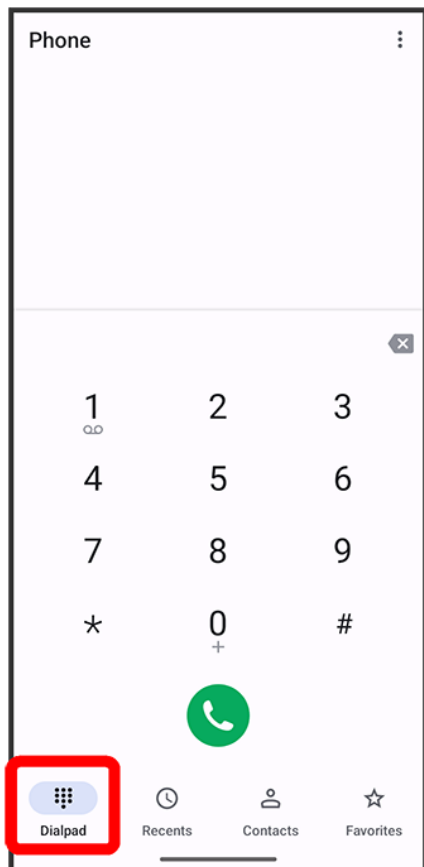

 Call window opens.

3

 
Touch & Hold 

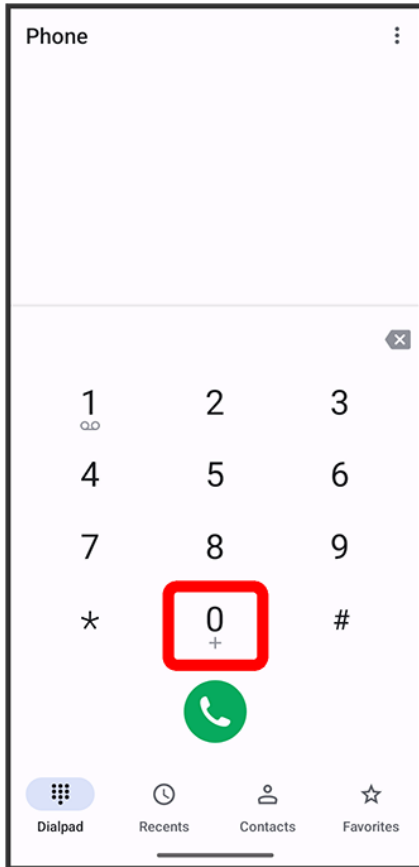

🇧🇪 "+" is entered.

4

 
Enter country code then other party number (omit first 0)

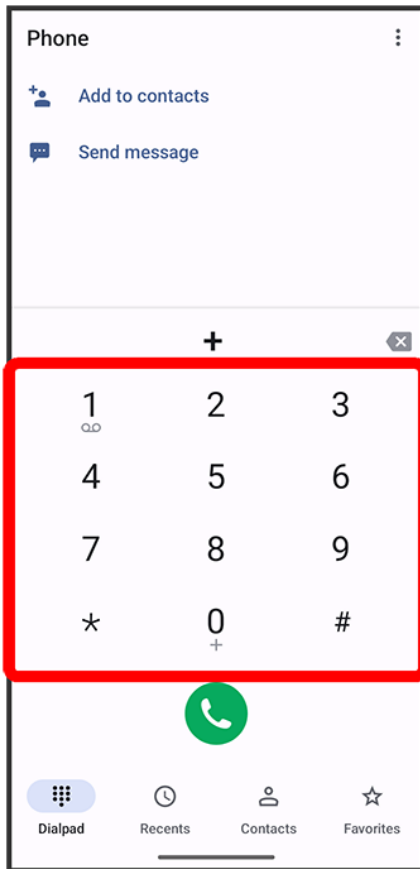

- Do not omit first 0 from phone numbers when dialing Italy (39).

 5



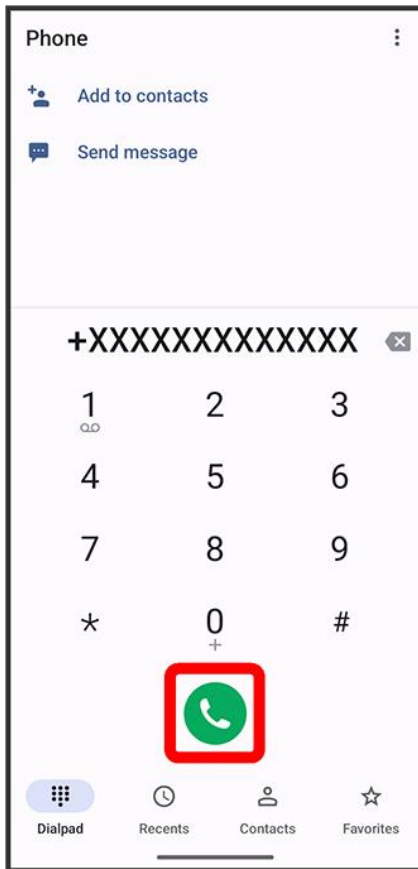

 Handset dials number. Call begins when other party answers.

Calls to Landline Phones/Cell Phones in Country of Stay

Place calls the same way you would within Japan.

- Do not enter country code or omit first 0 from phone numbers.

1

 
In Home Screen,  (Phone)



Phone opens.

2


Dialpad

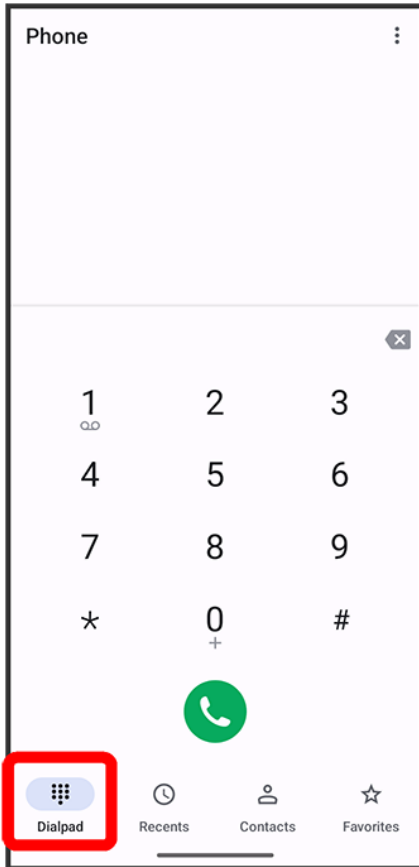

🚩 Call window opens.


3

 Tap dialpad to enter the other party's number

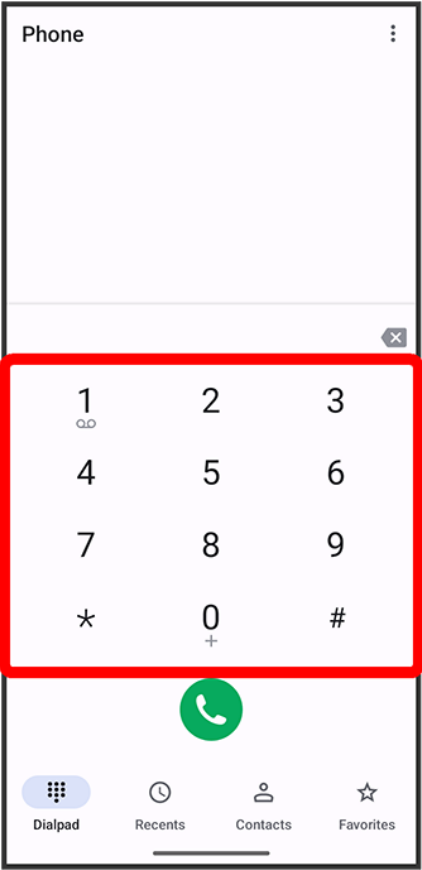

4



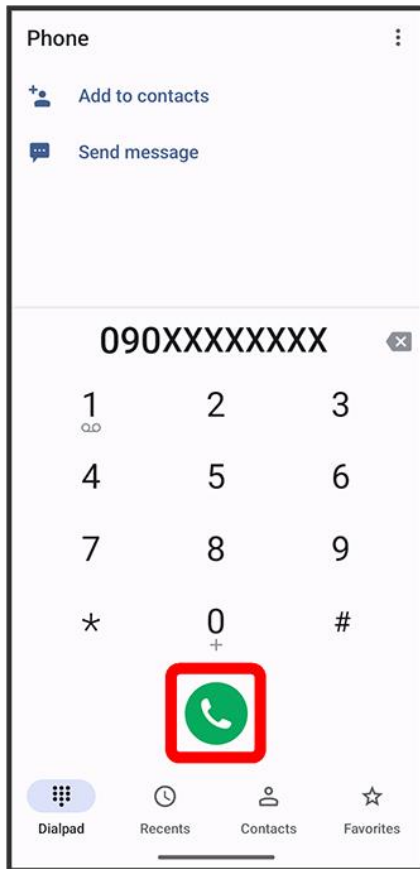 

 Handset dials number. Call begins when other party answers.

Warranty & After-Sales Service

↓ [Warranty](#)

↓ [After-Sales Service](#)

Warranty

- The warranty period is 1 year from the date of newly purchase.
- Free repairs will be done based on terms of repair service. Terms of repair service is referred to SoftBank website.
- Warranty covers only handset and AC Charger [KYCFP1]. Accessories such as cables are not covered by terms of repair service.

Cautions

Damages

Handset resistance is verified under test conditions, and operation is not guaranteed to operate properly in actual use under all conditions. Non-breakage and non-malfunction is not guaranteed.

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of product.

Accidents/Repair

Files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. SoftBank Corp. is not liable for damages resulting from loss or alteration of files (contacts/images/sound etc.) or settings due to accident or repair.

Disassembly/Modification

Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

After-Sales Service

To request repairs, contact [Customer Service](#) or a nearby SoftBank Shop. Have details of symptoms ready.

- During the warranty period, repairs are made under the terms of repair service.
- After the warranty period, if handset can be repaired, repairs will be made at cost. The functional parts necessary to repair the handset will be available for 4 years generally after the manufacture is discontinued. Repair may not be possible because of a shortage of repair parts even during the warranty period.



Further inquiries

For more information on after-sales service, contact a nearby or [Customer Service](#).

Specifications

↓ Handset

↓ Materials

Handset

Item	Description
Weight	•EB1241 Approx. T.B.D.
Continuous Talk Time¹	•EB1241 Approx. T.B.D. minutes (4G LTE)
Continuous Standby Time²	•EB1241 Approx. T.B.D. minutes (5G) ³ Approx. T.B.D. minutes (4G LTE) Approx. T.B.D. minutes (AXGP)
Charging Time (handset power off)	AC Charger (KYCFP1): Approx. T.B.D. nutes
Dimensions (W x H x D)	Approx. T.B.D. mm (excluding projections)

- 1 Average for a fully charged Battery and normal signal reception at a single location.
- 2 Average for a fully charged Battery and normal signal reception at a single location without being in call or operation. Value when data transmission is disabled. Time varies with conditions of usage (charge, temperature, etc.) and function settings.
- 3 Standby time for 5G is an approximate time in the 5G standalone environment.

Materials

■ Handset

Parts	Material/Finishing
Outer Case (Display Side)	PC + GF resin/Texturing
Outer Panel (Back), Power Key (without Fingerprint Sensor), Volume Up/Down Key, Direct Key	PC resin/Texturing
Power Key (with Fingerprint Sensor)	Epoxy resin/Coating
Card Slot Cap	PC resin + LSR/Texturing
Display	Strengthened glass/Antifouling coating
Speaker Hole Mesh	Nylon resin/Water-repelling treatment
Camera Plate, Mobile Light	PMMA resin
USIM Card/SD Card Tray	POM resin

■ AC Charger (KYCFP1) (Supplied)

Parts	Material/Finishing
Main Unit (Outer Case)	PC resin
Cord	PVC
Power Plug	Zinc/Nickel plating
Charging Terminal	Stainless/Nickel plating

Customer Service

If you encounter any difficulties or are unsure of anything, contact customer service.



[Customer Support](#)



[Smartphone Technical Support Center](#)

Customer Support

- From a handset, dial toll free at 157
- From a landline, dial toll free at
- Business hours : Call: 10:00am - 7:00pm/Chat: 9:00am - 8:00pm

Smartphone Technical Support Center

- From a SoftBank handset, dial toll free at 151
- From a landline, dial toll free at
- Business hours : Mon. - Fri. 9:00am - 7:00pm/Sat., Sun., and Holiday 9:00am - 5:00pm/9:00am - 8:00pm (for general information)

Safety Precautions

For proper handset use, carefully read Safety Precautions beforehand. Keep this guide for future reference.

Observe these safety precautions to prevent injury or damage to property.

- ↓ [Safety Precautions](#)
- ↓ [Handset, USIM Card, AC Charger](#)
- ↓ [Handset](#)
- ↓ [AC Charger](#)
- ↓ [USIM Card](#)
- ↓ [Handset Use & Electronic Medical Equipment](#)

Safety Precautions

Risks of injury or damage from improper use are categorized by levels.

Mark	Descriptions
 DANGER	Great risk of death or serious injury ¹ from improper use
 WARNING	Risk of death or serious injury ¹ from improper use
 CAUTION	Risk of injury ² or damage to property ³ from improper use

- 1 Serious injury includes: Loss of eyesight, physical injury, high temperature burns, low temperature burns, electric shock, fractures, poisoning and other conditions having side effects or requiring hospitalization or long-term treatment.
- 2 Injury includes: Physical injury, high-temperature burns, low-temperature burns, electric shock, and other conditions not requiring hospitalization or long-term treatment.
- 3 Damage to property includes: Incidental damage to structures and household property and/or to pets and livestock.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions
------	--------------

 Prohibited	Action prohibited
 Do Not Disassemble	Disassembly prohibited
 Avoid Liquids Or Moisture	Exposure to liquids prohibited
 Do Not Use Wet Hands	Handling with wet hands prohibited
 Compulsory	Compulsory actions
 Disconnect Power Source	Unplug power cord from outlet

Handset, USIM Card, AC Charger



DANGER


Prohibited

Do not use, store, or leave handset or related hardware in places subject to high temperatures or where heat collects (near an open flame or heating equipment, under a kotatsu or blanket, in direct sunlight, or inside a car on a hot day).
May cause fire, burns, injury, electric shock, etc.


Prohibited

Do not place handset or related hardware in or near a microwave oven, induction cooktop, etc. or pressure cooker.
May cause fire, burns, injury, electric shock, etc.


Prohibited

Keep power plug, Charging Terminal, and External Device Port free of water or other liquids (drinking water, sweat, sea water, pet urine, etc.). Do not charge handset while it is wet or near water (in the bathroom, near a humidifier, etc.).
May cause fire, burns, injury, electric shock, etc.
For details on water resistance, see "[Water/Dust/Shock Resistance](#)".


Prohibited

Do not apply excessive force to or break handset. Particularly when carrying handset in your clothes pocket, do not bump it or place it between objects.

Internal Battery breakage may cause fire, burns, injury, etc.

* Examples of where to be careful

- Sitting or squatting with handset in your pants or skirt pocket
- Handset becoming caught in a sliding door or vehicle door when in a jacket pocket
- Stepping on handset when it is on something soft such as a sofa, bed, or futon or on the floor
- Getting handset caught between the gap of a seat of train or bus



Do Not
Disassemble

Do not disassemble or modify.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not try to remove Internal Battery from handset.

May cause fire, burns, injury, etc.



Prohibited

Handset Back Cover cannot be removed. Do not try to remove. Even if handset bulges due to bulging of Internal Battery, etc., do not try to remove Back Cover or press it with excessive force.

May cause fire, burns, injury, etc.



Prohibited

Do not drop, stomp, throw, or otherwise subject to strong force, impact, or vibration.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Keep conductive materials (anything metal, pencil lead, etc.) away from power plug, Charging Terminal, External Device Port, and Earphone/Microphone Jack. Do not let dust, sand, etc. enter them.

May cause fire, burns, injury, electric shock, etc.



Compulsory

Use only SoftBank-designated optional accessories.

Using unspecified accessories or those with unclear manufacturer, distributor, or specifications may

cause fire, burns, injury, electric shock, etc.

WARNING



When caring for equipment, ensure that no disinfectant or water enters gaps, Charging Terminal, External Device Port, Earphone/Microphone Jack, Mic or Earpiece/Speaker.
Handset breakage may cause injuries or electric shock, etc.



If charging does not complete even after specified charging time, stop charging.
Overcharging or other conditions may cause fire, burns, injury, etc.



Always turn off handset as well as stop charging before entering gas stations or other places where flammable gases or fine particulates generate.
Using handset in presence of flammable gases may cause explosion, fire, etc.



Follow the instructions of a gas station or other such location before using handset there.
Do not charge handset at a gas station, etc.
Take care not to drop handset at a gas station, etc.; in particular, do not use handset while filling.
Ignition of flammable gas may cause explosion, fire, etc.



If you notice an unusual odor, unusual sound, smoke, overheating, discoloration, deformation, etc. while using, charging or storing handset, do the following with safety and care.

- Unplug from outlet.
- Turn handset power off.

Not doing the above may cause fire, burns, injury, electric shock, etc.

CAUTION



Do not use damaged.

May cause fire, burns, injury, etc.



Prohibited

Do not place on an uneven or unstable surface. Be particularly careful while vibrator is activated.

May fall, leading to injury, etc.



Prohibited

Do not store in a humid or dusty location or any place that reaches a high temperature.

May cause fire, burns, electric shock, etc.

For details on water and dust resistance, see "[Water/Dust/Shock Resistance](#)."



Prohibited

Before a child uses handset or related hardware, a parent/guardian should provide instruction and ensure proper usage.

Failing to do so may cause accidental ingestion, injury, electric shock, etc.



Prohibited

Do not place handset and related accessories within an infant's reach, and store them where pets cannot touch them.

In particular, take care with where small parts such as USIM Card/SD Card Tray, etc. are stored.

They may swallow parts, or may cause injury, electric shock, etc.



Compulsory

Note that equipment may become warm if handset is used for a continued period or while charging. Be careful not to have unintended, continued contact with equipment such as by falling asleep with equipment in pocket, etc.

Handset or AC Charger may become warm when using applications, calling, exchanging data, watching videos, etc. for a continued period or when charging. Continued contact with hot parts may cause redness, itchiness, rash, low-temperature burns, etc. depending on the individual.

Handset



DANGER



Prohibited

Do not throw in fire or heat.

May cause fire, burns, injury, etc.



Prohibited

Do not pierce with a sharp object (nail, etc.), hit with a hard object (hammer, etc.), step on, or otherwise subject equipment to excessive force.

May cause fire, burns, injury, etc.



Compulsory

If internal matter should get in your eyes, mouth, etc., immediately rinse with clean water, and then promptly seek medical attention.

Internal matter may cause loss of eyesight, affect health, etc.



WARNING



Prohibited

Do not shine Mobile Light near or photograph with Mobile Light close to someone's eyes. Especially, do not photograph infants up close.

May affect eyesight, etc. May also temporarily affect eyesight or startle, leading to injury or other accident.



Prohibited

Do not look at a repeatedly flickering screen for a long period.

May cause convulsions, loss of consciousness, etc.



Prohibited

Do not let water or other liquids (drinking water, sweat, sea water, pet urine, etc.) or a foreign object such as anything metal (cutter blades, staples, etc.), flammable material, etc. enter USIM Card/SD Card Tray Slot.

Do not mistake USIM Card and SD Card Slots.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not expose Camera Lens to direct sunlight for extended period.

Concentration of light by lens may cause fire, burns, injury, etc.



Compulsory

Before boarding an aircraft, power off handset or place handset in Airplane mode.

Restrictions are in place for use aboard aircraft; follow airline instructions.

If any functions that power on handset automatically are activated, deactivate them.

Radio waves may affect operation of onboard electronic equipment.

Prohibited use aboard an aircraft may be punishable by law.



Compulsory

Follow instructions of each medical institution for use in a hospital.

Power off handset where use is prohibited.

If any functions that power on handset automatically are activated, deactivate them.

Radio waves may affect operation of electronic equipment and electric medical devices.



Compulsory

Always keep handset away from ears when making a Speakerphone call, the ringtone is sounding loudly, or when waiting for a call.

If an earphone-microphone, etc. is attached for gaming or video/music playback, adjust to a moderate volume.

When making a Speakerphone call, handset emits sound loudly.

Even in standby, the ringtone or alarm may ring suddenly.

Listening to loud sound continuously for a long time may cause hearing impairment or other difficulty.

Too loud volume may cause inability to hear surrounding sound may also cause an accident.



Compulsory

Individuals with a weak heart should take care with handset vibration and ringtone settings for new calls/mail.

Handset suddenly vibrating and ringing for a new call may startle you, and affect your heart.



Compulsory

Individuals with an electric medical device should consult with the device manufacturer or

distributor regarding any effects from electronic signals before using handset.

Radio waves may affect operation of electric medical devices, etc.



Compulsory

Keep handset power off near high precision electronic devices or devices using weak signals.

Radio waves may cause malfunctioning or otherwise affect electronic devices.

Devices that may be affected:

Hearing aids, implanted cardiac pacemakers and implanted defibrillators, other electric medical equipment, other automatically controlled equipment, etc. Individuals using an implanted cardiac pacemaker, implanted defibrillator, or other electric medical equipment should consult with the device manufacturer or distributor regarding any effects from electronic signals.



Compulsory

If Display or Camera Lens becomes damaged, be careful with shattered parts and exposed handset interior.

Touching broken portions or exposed components may cause burns, injury, electric shock, etc.



Compulsory

If Internal Battery leaks or emits odor, immediately discontinue use and keep away from flames.

Leaking fluid can catch fire and ignite, rupture, etc.



Compulsory

Do not allow pets, etc. to bite handset.

May cause Internal Battery to ignite, burst, overheat, or leak, causing fire, burns, injury, etc.



CAUTION



Prohibited

Do not swing handset around by holding the strap, etc.

May cause an accident such as injury.



Prohibited

When using Motion Sensor, check the safety around you, hold handset firmly, and do not shake it unnecessarily.

May cause an accident such as injury.



Prohibited

If Display breaks and internal matter leaks, avoid getting it on your skin (face, hands, etc.), clothes, etc.

May cause harm to your vision, skin, etc.

If internal matter should get in your eyes, mouth, etc., or on your skin or clothes, immediately rinse with clean water.

After rinsing your eyes, mouth, etc., promptly seek medical attention.



Prohibited

Do not dispose of with ordinary waste.

May cause fire, burns, injury, etc. May also degrade the environment. Bring old handsets to a SoftBank Shop or other location accepting handsets, or dispose of in accordance with local collection regulations.



Prohibited

If internal matter from Internal Battery leaks, avoid getting it on your skin (face, hands, etc.), clothes, etc.

May cause harm to your vision, skin, etc.

If internal matter should get in your eyes, mouth, etc., or on your skin or clothes, immediately rinse with clean water.

After rinsing your eyes, mouth, etc., promptly seek medical attention.



Compulsory

Before using handset in a vehicle, consult with the vehicle manufacturer or distributor regarding any effects from electronic signals.

Some makes of car may have onboard electronic devices that can be affected. Immediately discontinue use if such devices are onboard.



Compulsory

If any skin abnormality occurs with use of handset, immediately discontinue use and seek medical attention.

May cause itchiness, rash, etc. depending on the individual.

For details on materials used in handset, see "[Materials](#)."



Compulsory

Handset Earpiece/Speaker uses magnetic parts; check that nothing metal (cutter blades, staples, etc.) is adhering.

Attached objects may cause injury, etc.



Compulsory

When viewing Display, view in a sufficiently bright place with Display at an adequate distance.

Viewing in a dark place or too closely may affect vision, etc.

AC Charger



DANGER



Prohibited

If thunder is audible, do not touch AC Charger.

May cause electric shock.



Prohibited

When plugging in/unplugging AC Charger, do not allow anything metal (metal strap, etc.) to come in contact.

May cause fire, burns, electric shock, etc.



Do Not Use
Wet Hands

Do not touch AC Charger cord, Charging Terminal, or power plug with wet hands.

May cause fire, burns, electric shock, etc.



WARNING



Prohibited

Do not use AC Charger if cable is damaged.

May cause fire, burns, electric shock, etc.



Prohibited

Do not short-circuit Charging Terminals while plugged in. Do not touch Charging Terminals with hands, fingers, etc.

May cause fire, burns, electric shock, etc.



Prohibited

Do not place heavy objects on, pull, or otherwise subject AC Charger cable.

May cause fire, burns, electric shock, etc.



Prohibited

Do not use a voltage converter (such as a travel converter for overseas travel) with AC Charger.

May cause ignition, overheating, electric shock, etc.



Prohibited

Do not apply unnecessary force to where handset and AC Charger are connected.

May cause fire, burns, injury, electric shock, etc.



Compulsory

Use with specified power supply and voltage.

Using the incorrect power supply and voltage may cause fire, burns, electric shock, etc.

AC Charger: 100V AC (Household AC power outlet only)



Compulsory

Wipe away dust on power plug.

Using with dust on plug may cause fire, burns, electric shock, etc.



Compulsory

When plugging in AC Charger, plug in firmly.

Failing to do so may cause fire, burns, electric shock, etc.



Compulsory

Hold AC Charger by body to unplug and do not pull forcefully by cord.

Pulling by cord can damage cord, causing fire, burns, electric shock, etc.



Compulsory

Insert or remove connector of AC Charger straight into/from Port without applying force such as pulling the cord.

Failing to do so may cause fire, burns, injury, electric shock, etc.



Compulsory

Stop using handset immediately if power plug or Charging Terminal is deformed or bent. Also, do not try to restore deformed parts and use them.

Broken power plug or short-circuited Charging Terminal may cause fire, burns, injury, electric shock, etc.



Disconnect
Power Source

If not using AC Charger, unplug power plug from outlet.

Leaving plugged in may cause fire, burns, electric shock, etc.



Disconnect
Power Source

If water or other liquid (beverage, sweat, seawater, pet urine, etc.) gets on AC Charger, immediately unplug from outlet.

Water or other liquid getting on AC Charger may cause short-circuiting, resulting in fire, burns, electric shock, etc.



Disconnect
Power Source

Before caring for equipment, unplug from outlet.

Failing to do so may cause fire, burns, electric shock, etc.



CAUTION



Prohibited

Do not be touching AC Charger for a long period while plugged in.

May cause burns, etc.

USIM Card



CAUTION



Compulsory

When handling USIM Card, be careful not to scratch fingers, etc. on notch.

The notch may be sharp and may cause injury.

Handset Use & Electronic Medical Equipment



WARNING



Compulsory

If you are using, or are likely to be around other persons using an implanted pacemaker, implanted defibrillator, or other electronic medical device, carry or use handset at least 15 cm away from where the device is.

Radio waves may adversely affect operation of electronic medical devices.

In a situation where you may not be able to maintain a distance of at least 15 cm from other persons, such as when your movement is restricted, disable radio wave emission by activating Airplane mode, powering off handset, etc.



Compulsory

When using electronic medical equipment (other than implanted cardiac pacemaker/defibrillator) outside of medical institutions, consult device manufacturer about the influence of radio waves.

Radio waves may interfere with the operation of electric medical equipment.



Compulsory

Follow instructions of each medical institution for use of handset in a hospital.

Radio waves may affect operation of electric medical devices.

General Notes

Observe the following for optimal performance. Please use handset after reading carefully.

↓ General Use

↓ Precautions

↓ Touchscreen

↓ Camera

↓ Volume

↓ Rising Handset Temperature

↓ Urgent News (Application)

↓ Bluetooth®

↓ Wi-Fi (Wireless LAN)

General Use

- Do not use in places with much dust or vibration.
- Use of handset near a landline phone, TV, or radio may affect the image and sound quality of the equipment.
- Never modify handset. Use of modified handset is a violation of the Radio Law and Telecommunications Business Law.

Handset has received certification of compliance with technical standards as a specific wireless device based on the Radio Law as well as compliance with technical standards as a device based on the Telecommunications Business Law, indicated by the "technical conformity mark

📶." To check certification: In Home Screen, ⚙️ (Settings) ➡️ About phone ➡️ Technical regulations conformity certification

Removing screws and modifying handset interior voids technical conformity certification. Using handset with its technical conformity certification voided infringes on the Radio Law and Telecommunications Business Law, and handset should never be used in this condition.

- AC Charger is for domestic use only. Do not use abroad.

Precautions

- Excess weight on handset may damage Display or internal parts, resulting in malfunction. Do not sit with handset in pocket or place at bottom of bag with other heavy objects. Even without exterior damage, it will not be covered under warranty.
- Do not use the following items in extreme temperatures or high humidity (use in temperatures between 5°C - 35°C and humidity within 35% - 85%).
 - AC Charger
- Do not use the following items in extreme temperatures or high humidity. Use in temperatures between 5°C - 35°C and humidity within 35% - 90% (limited use in temperatures between 36°C -40°C).
 - EB1241 handset
- Internal Battery has a usable life. Internal Battery is near the end of its usable life if performance does not recover even after charging or if it bulges. Replace in these instances. For replacement, visit a SoftBank Shop or contact [Customer Service](#). Life depends on conditions of usage.
- Do not dispose of handset together with ordinary trash. Cooperate with collection of old handsets to assist environmental conservation and effective use of resources. Used Internal Batteries are collected at venues such as SoftBank Shops.



Li-ion00

- If not using AC Charger, unplug from outlet.

Touchscreen

- Operate Touchscreen with fingers for touch operation. Do not operate with a pen, pencil, or other pointed object. In addition to not operating correctly, it may scratch or damage Display.
- Touch screen may not operate or may misoperate in the following instances.
 - Stickers or commercially-available sheets are adhered to Display
 - Display is soiled
 - Operation with fingernails
 - Operation with foreign matter on Display

Camera

- Do not leave Camera Lens under direct sunlight. May burn or fade colors of elements.

- Note that viewing photo viewfinder continuously for a long period while capturing photos and repeatedly using video capture for a long period will cause a portion of handset to become warm, and may cause low-temperature burns if in prolonged contact.

Volume

- Listening at loud volume for an extended period may affect hearing.

Rising Handset Temperature

- You may also not be able to recharge depending on the connection environment. Some functions, such as charging, may then stop as a safety precaution. Note: Continuing to use handset while warm will cause handset to power off.

Urgent News (Application)

- Urgent news reception is enabled by default.
- If **Always alert at full volume** is disabled, alert does not sound during Silent Mode. To disable, follow steps below.
In Home Screen,  (Settings)  **Notifications**  **Wireless emergency alerts**  **Always alert at full volume** ()
- Vibration is enabled by default. To disable, follow steps below.
In Home Screen,  (Settings)  **Notifications**  **Wireless emergency alerts**  **Vibration** ()
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- When urgent news reception is enabled, handset standby time becomes shorter.
- SoftBank Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing, or reception/reception failure.

Bluetooth®

- Frequencies
Handset Bluetooth® function uses 2400 MHz - 2483.5 MHz frequencies in the 2.4 GHz band.
2.4FH1/XX4: Uses 2.4 GHz band, FH-SS and other modulation, with a maximum interference range of 40 m.
: Utilizes 2400 MHz - 2483.5 MHz band without mobile device bandwidth differentiation.



■ Bluetooth® Cautions

- Handset Bluetooth® function is certified as conforming to Japanese domestic and FCC standards. Use is restricted in some countries/regions. Confirm local laws before use abroad.
- The 2.4 GHz band used by handset Bluetooth® function is shared by other devices. Handset Bluetooth® function tries to minimize effects of other devices using the same bandwidth, but connection speed and distance may be reduced or function may be disconnected.
- Connection speed and distance vary depending on distance between connected devices, obstacles, and Bluetooth® devices.

■ Before Using Bluetooth®

 
Bluetooth® operating frequency band is used by industrial, scientific, consumer and medical equipment including microwave ovens, other similar radio stations, premises radio stations for identifying mobile units used in manufacturing lines (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations (hereafter, "other radio stations").

1. Before handset use, be sure "other radio stations" are not in use nearby.
 2. If handset radio waves interfere with "other radio stations," promptly move or power off.
 3. For further information, visit a SoftBank Shop or contact [Customer Service](#).
- All handset operations when connected with a Bluetooth®-compatible device are not verified and therefore not guaranteed.
 - Handset supports the Bluetooth®-standard security function for secure radio communication. However, be careful when using Bluetooth®, as security may be insufficient depending on conditions of usage or settings.
 - SoftBank Corp. accepts no liability for data/information leaks during communication using Bluetooth®.

Wi-Fi (Wireless LAN)

■ Wi-Fi Cautions

- Handset WLAN function is certified as compliant with Japanese domestic and FCC standards. Use of WLAN is restricted in some countries/regions. Check the laws and regulations of the country/region before using handset abroad.
- The 2.4 GHz band used by handset Wi-Fi function is shared by other devices. Handset Wi-Fi function tries to minimize effects of other devices using the same bandwidth, but connection speed and distance may be reduced or function may be disconnected.
- Connection speed and distance vary depending on distance between connected devices, obstacles, and Wi-Fi devices.

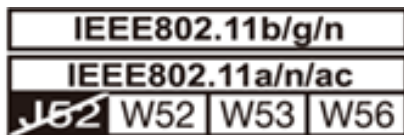

■ Cautions on Using 2.4 GHz Band

Wi-Fi operating frequency band is used by industrial, scientific, consumer and medical equipment including microwave ovens, other similar radio stations, premises radio stations for identifying mobile units used in manufacturing lines (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations (hereafter, "other radio stations").


1. Before handset use, be sure "other radio stations" are not in use nearby.
2. If handset radio waves interfere with "other radio stations," promptly move or power off.
3. For further information, visit a SoftBank Shop or contact [Customer Service](#).

■ Frequencies

Handset Wi-Fi function uses 2400 MHz - 2483.5 MHz frequencies in the 2.4 GHz band.

Uses 2.4 GHz band, DS-SS/OFDM modulation, with a maximum interference range of 40 m.

    : Utilizes 2400 MHz - 2483.5 MHz band with mobile device bandwidth differentiation.



■ Cautions on Using 5 GHz Band

Use of 5.2 GHz or 5.3 GHz band (W52/W53) for outdoor communication is prohibited by the Radio Law (excluding communication with the base stations or land mobile relay stations of high-output data communications systems operating in the 5.2 GHz band). Handset uses the following channels.

- W52 (5.2 GHz band/36, 40, 44, 48 ch)
- W53 (5.3 GHz band/52, 56, 60, 64 ch)
- W56 (5.6 GHz band/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144 ch)
- All handset operations when connected with a Wi-Fi-compatible device are not verified and therefore not guaranteed.
- Handset supports the Wi-Fi-standard security function for secure radio communication. However, be careful when using Wi-Fi, as security may be insufficient depending on conditions of usage or settings.
- SoftBank Corp. accepts no liability for data/information leaks during communication using Wi-Fi.

Specific Absorption Rate (SAR) for This Product

【EB1241】 here refers to this mobile phone .

↓ [Specific Absorption Rate \(SAR\) Information of This Product \(for Japan\)](#)

↓ [FCC RF Exposure Information](#)

↓ [FCC Notice](#)

↓ [FCC Compliance Information](#)

Specific Absorption Rate (SAR) Information of This Product (for Japan)

This mobile phone [EB1241] complies with the Japanese technical regulations and international guidelines regarding exposure to radio waves.

This mobile phone was designed in observance of the Japanese technical regulations regarding exposure to radio waves (*1) and the limits of exposure recommended in the international guidelines, which are equivalent to each other. The international guidelines were set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions.

The technical regulations and the international guidelines set out the limits of exposure to radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of human tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use near the head is (*2), and that when worn on the body is (*2). There may be slight differences of the SAR values in individual product, but they all satisfy the limit.

The actual value of SAR of this mobile phone while operating can be well below the indicated above. This is due to automatic changes in the power level of the device to ensure it only uses the minimum power required to access the network.

This mobile phone can be used at positions other than against your head. By using accessories such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between it and the body, this mobile phone is certified the compliance with the Japanese technical regulations.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website:

<https://www.tele.soumu.go.jp/e/sys/ele/index.htm>

Association of Radio Industries and Businesses Website:

<https://www.arib-emf.org/01denpa/denpa02-02.html> (in Japanese only)

*1 The technical regulations are provided in Article 14-2 of the Radio Equipment Regulations, a Ministerial Ordinance of the Radio Act.

*2 Including other radio systems that can be simultaneously used with 5G/LTE.

FCC RF Exposure Information

This mobile phone [EB1241] is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy required by the Federal Communications Commission (FCC). The limit is based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations as required by the FCC. The highest SAR value for this handset when tested for use near the head is _____ and that when worn on the body as shown below is _____

Body-worn Operation: This mobile phone was tested for typical body-worn operations with the separation distance of 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain the above separation distance between the user's body and the mobile phone. The use of belt clips, holsters and similar accessories should not

contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with the FCC RF exposure requirements and should be avoided.

The FCC has granted an equipment authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure requirements. Filed SAR information of this mobile phone can be found by searching FCC ID JOYEB1241 in the FCC ID Search webpage: <https://www.fcc.gov/oet/ea/fccid>.

Additional information on SAR can be found on the FCC website at <https://www.fcc.gov/general/radio-frequency-safety-0>.

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FCC Compliance Information

The product is certified by Federal Communications Commission (FCC). The FCC ID of this product is JOYEB1241.

Or you can check as follows.

How to check:

In Home Screen,  (Settings)  About phone  Technical regulations conformity certification

Water/Dust/Shock Resistance Cautions

- ↓ Water/Dust/Shock Resistance
- ↓ Usage Cautions
- ↓ When Using a Foam Type Hand Soap/Body Soap
- ↓ When Using Alcohol, etc.
- ↓ If Exposed to Water
- ↓ When Charging

Water/Dust/Shock Resistance

Handset has IPX5^{*1} and IPX8^{*2} water resistance and IP6X^{*3} dust resistance when Card Slot Cap is closed firmly. Handset also has shock resistance compliant with MIL standards^{*4} (Kyocera testing methods).

*1 IPX5: handset retains phone functioning after being subjected to a jet flow (12.5 L/min) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately 3 m from the handset) for 3 minutes or more.

*2 IPX8: phone unit experiences no seepage and retains phone functioning after it is slowly submerged to depth of 1.5 m in standing tap water at room temperature, left there for approximately 30 minutes and then taken out.

*3 IP6X: indicates that handset is able to prevent intrusion of dust after being placed in a test device with 75 µm or smaller particles for 8 hours.

*4 Compliance with MIL standards

Compliance with original drop test in addition to 20 durability test items of MIL-STD-810H as defined by the U.S. Department of Defense.

- Shock resistance assumes usual everyday use. The product might break if subjected to excessive shock such as being thrown or dropped forcibly. Even if handset continues to function normally, dropping it may cause scratches, etc.

Handset resistance is verified under test conditions, and operation is not guaranteed to operate properly in actual use under all conditions. Non-breakage and non-malfunction is not guaranteed.

Usage Cautions

- Close Card Slot Cap firmly. A completely closed cover guarantees waterproof/dustproof

performance.

- Never open or close Card Slot Cap with wet hands or while handset is wet.
- Do not immerse or splash handset in/with any liquid (alcohol, sea water, pool water, hot spring water, water with soap, detergent or bath salt, softdrink, alcoholic beverage, seasoning, etc.) other than tap water. Do not use where exposed to pet urine.
If splashed, immediately rinse with tap water.
- Do not place directly on a sandy beach, etc. Sand, etc. entering Mic, Earpiece/Speaker, External Device Port, or Earphone/Microphone Jack may affect volume, or entering handset may cause overheating or malfunction.
- Do not use under water.
- Do not use for a long period or store in a high-humidity location such as a bath room or kitchen.
- Moisture may remain even after draining water. While it does not hinder use, do not place wet handset near items you do not want to become wet. Be careful when placing in clothes or a bag which may become wet.
- If water remains in External Device Port, do not use it.
- If water collects in Mic or Earpiece/Speaker and temporarily affects sound, drain water.
- Handset is not designed to resist water pressure. Do not subject directly to high water pressure or immerse for a long period in water.
- Do not wash in a washing machine, sonic washer, etc.
- Do not immerse in a bathtub. Handset is not designed to be heat resistant.
- Condensation from rapid changes in temperature may cause malfunction.
Before bringing handset into a bath room or other warm place from a cold place, let it adjust to room temperature.
- Handset does not float on water.

Card Slot Cap

- Completely close Card Slot Cap. Anything tiny (a single hair, etc.) caught in sealing surfaces may allow ingress of water.
- Avoid opening and closing Card Slot Cap while wearing gloves. Anything tiny (a single hair, etc.) caught in sealing surfaces may allow ingress of water. When closing Cover, wipe away any moisture or dirt with a dry, clean cloth, even if it only appears very small.
- A deteriorating or damaged Card Slot Cap will not allow handset to be water resistant.

Installing Card Slot Cap

- For details on installing Card Slot Cap, see "[Inserting USIM Card](#)."

If Liquid Other than Water Is on Handset

- Wiping may be done using a soft cloth dampened with isopropyl alcohol, ethanol, or sodium hypochlorite.
- Handset can be washed with low-pressure water flow (6 L/min or less tap water at room

temperature (between 5° C and 35° C)), holding it approximately 10 cm below the faucet or shower head.

- If soiled, hold handset making sure Card Slot Cap cannot open, and hand-wash without using a brush.

After Becoming Wet with Water

- After handset has become wet with water, drain water and wipe away moisture with a dry, clean cloth. In cold regions, any moisture on handset may freeze. Using handset with frozen moisture may cause malfunction.
Do not leave wet.

Rubber Gasket

- Rubber gasket on back of Card Slot Cap is important to handset water and dust resistance. Do not remove or scratch it. Do not allow dirt to get on gasket. If rubber gasket becomes scratched or deformed, contact your nearest SoftBank Shop or [Customer Service](#) for parts replacement. Note that repairs may be for a fee depending on the condition of handset.
- Be careful not to pinch rubber gasket when attaching Card Slot Cap. Forcing it on with rubber gasket pinched will scratch gasket and may affect water resistance. Anything tiny (a single hair, etc.) caught in sealing surfaces may allow ingress of water.
- Any liquid other than water on gasket may affect gasket durability.
- Do not insert anything pointed in Card Slot Cap gap. May damage or deform handset, and may scratch gasket and allow ingress of water.

Heat Resistance

- Do not immerse or splash with hot water. Do not expose to hot air as in a sauna or from a dryer. Handset is not designed to be heat resistant.

Dust Resistance

- If any dust is on handset, immediately rinse or otherwise remove completely before using handset.

Shock

- While handset is shock resistant, shock resistance assumes usual everyday use. Handset may break if subjected to excessive shock such as being thrown or dropped forcibly.

Parts Replacement

To maintain water and dust resistance, it is recommended to replace parts every 2 years regardless of their condition. Handset can be submitted for parts replacement at a fee. Contact your nearest SoftBank Shop or [Customer Service](#) for parts replacement.

 
When Using a Foam Type Hand Soap/Body Soap

1

Remove the cables from handset completely and turn it off


2

Wash your hands and wipe off water on them, apply a foam type hand soap/body soap on your palms and lather well, and then hold handset and rub front/back surface with the same strength

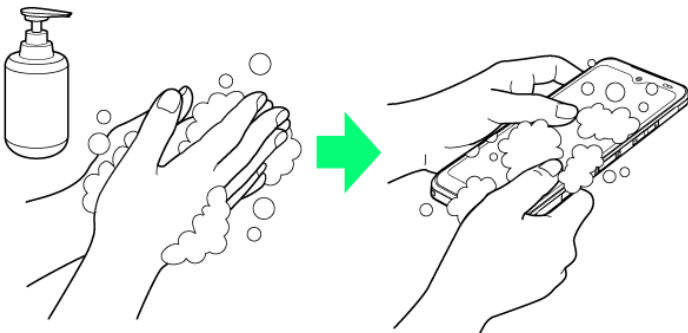

3

 Rinse front/back surface and each key until foams of hand soap/body soap are removed completely

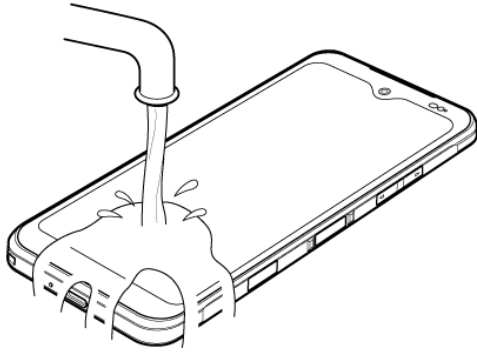

- With Card Slot Cap still attached, rinse the following locations with fairly low-pressure water (6 L/min or less).
- Wash the holes of Mic, Earpiece/Speaker, External Device Port, or Earphone/Microphone Jack, etc. for approximately 30 seconds with running water.
- As remaining foams may cause malfunction, rinse handset well until foams are removed completely.

4

Drain the holes of Mic, Earpiece/Speaker, External Device Port, or Earphone/Microphone Jack, etc. sufficiently

- For details on draining, see "[If Exposed to Water.](#)"

5

Dry handset sufficiently and check if any waterdrops remain on it

🧼 Cleaning is completed.

- Never charge while handset is wet.
- For details on drying, see "[If Exposed to Water.](#)"



Cautions If Using Foam Hand Soap/Foam Body Soap

Observe the following if using foam hand soap/foam body soap.

- Be sure to remove any store-bought accessories (straps, etc.) Check precautions

given for store-bought accessories.

* Store-bought protective sheets can peel.

- Be sure to use foam-type hand soap or body soap by a domestic brand.
- Do not mix different types of foam hand soap/foam body soap.
- Do not use: alkaline hand soap/body soap or business hand soap/body soap, soap, detergent, bath salts, shampoo, rinse, facial cleanser, makeup remover, toothpaste, etc. If on handset, immediately rinse with water.
- Handset is not designed to resist water pressure. Do not subject directly to high water pressure or immerse for a long period in water.
- If soap residue from foam hand soap/foam body soap is noticeable, wipe with a cotton swab dampened with citrate diluted to about 1.5% (1.5 g citric acid with 100 ml water). Next, rinse again so no citrate is remaining.

When Using Alcohol, etc.

1

Remove the cables from handset completely and turn it off

2

Apply small amount of isopropyl alcohol (99.7 % or less), ethanol (99.5 % or less), or sodium hypochlorite (1.0 % or less) to a lint-free soft cloth and wipe handset with it

🚩 Cleaning is completed.

- Always carefully read instructions for using any of isopropyl alcohol (99.7% or less), ethanol (99.5% or less), or sodium hypochlorite (1.0% or less) sold as a disinfectant. Improper use can pose risks to health and as a flammable substance.

Cautions If Using Alcohol

Observe the following if using alcohol.

- Be sure to remove any store-bought accessories (straps, etc.) Check precautions given for store-bought accessories.
- * Store-bought protective sheets can peel.

- Before caring for handset, check that Card Slot Cap is closed firmly.

If Exposed to Water

Using handset with any moisture on it may allow moisture to collect in Mic, Earpiece/Speaker, External Device Port, or Earphone/Microphone Jack, and may cause sound to be inaudible or may wet clothing, bag, etc. Follow steps below to drain water.

 
1

Wipe handset with a lint-free clean, dry cloth



2

Shake handset as shown until there is no more wetting

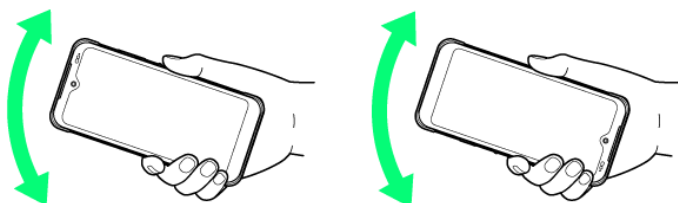


- Earpiece/Speaker side: at least 20 times each
- Mic: at least 20 times each
- Check first that it is safe around you to shake handset.

- Hold handset firmly so as not to drop it when draining water.

3

 Press a lint-free clean, dry cloth into gaps (Mic, External Device Port, Earphone/Microphone Jack, Earpiece/Speaker, etc.) to remove any water

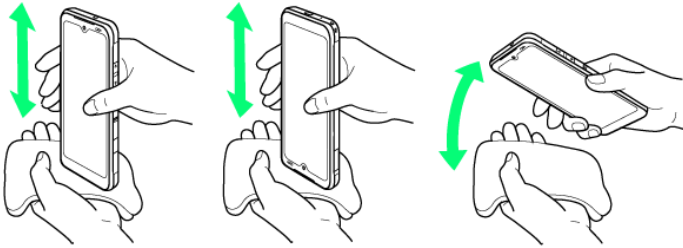

4

After removing as much water as possible, leave handset at room temperature for at least 1 hour

 Water is drained.

- Some water may still remain in handset. Do not leave handset beside/in items that you do not want to get wet (clothing, bag, etc.).
- When powering on handset, check that no moisture is remaining particularly in External Device Port. Powering on with moisture on handset may damage External Device Port.

When Charging

Accessories and optional parts are not waterproof/dustproof.

Check the following when and after charging.

- Never charge handset while it is wet. May cause fire, burns, injury, electric shock, etc.
- Check that handset is not wet. Before charging wet handset, first drain well, then wipe away moisture with a dry, clean cloth, and let dry at room temperature for at least an hour before charging.
- Do not touch a specified AC Charger with wet hands. May cause electric shock.
- Use a specified AC Charger where not exposed to water, and do not use them near water sources (bath room, shower, sink, basin, etc.). May cause fire, burns, electric shock, malfunction,

etc. Even when not charging, do not bring in a bath room, etc. May cause fire, burns, electric shock, malfunction, etc.

- Be sure to completely wipe away any liquid in External Device Port that is not water. Check that no moisture or dirt remains before use. For details, see "[Usage Cautions](#)."

Intellectual Property Rights

↓ Copyrights/Portrait Rights

↓ Trademarks

↓ Open-Source Software

Copyrights/Portrait Rights

- Copying, changing, editing, etc. of images, video, or audio captured with handset may not be done without the copyright/portrait right holder's permission except for personal use. Refrain from using or changing another's portrait or name without permission. Doing so may infringe on their right of portrait or other right.
- Also when publishing captured images of others to Internet websites, etc., take adequate care with copyrights or portrait rights. Note that capturing photos or videos or audio at demonstrations, performances, or exhibitions may be restricted even if only for personal use.
- Handset cannot be used to transfer copyrighted images and sound except as within the scope stipulated by copyright law.

You may not perform or be involved in changing, translating/adapting, reverse engineering, reverse compiling, or reverse assembling of the software or any part thereof installed in handset. Handset may not be taken out of Japan except for where permitted by law.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Trademarks

Company names and product names in this guide are the trademarks or registered trademarks of each company.

The TM and ® marks are sometimes abbreviated in this guide.

- Microsoft®, Excel®, and PowerPoint® are registered trademarks of US Microsoft Corporation in

the United States and other countries.

- Oracle and Java are registered trademarks of Oracle Corporation and its subsidiaries and affiliates in the United States and other countries. Company names, product names, etc. appearing in the text may be trademarks or registered trademarks of each company.
- QR code is a registered trademark of Denso Wave Inc.
- The microSD logo, microSDHC logo, and microSDXC logo are trademarks of SD-3C, LLC.



- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and these trademarks are under license to Kyocera Corporation.



- This product has passed certification testing as established by Wi-Fi Alliance® to guarantee the interconnectivity of wireless LAN devices based on wireless LAN standard IEEE 802.11, and has been designated as Wi-Fi CERTIFIED™. Interconnection with products having the Wi-Fi logo is guaranteed. It is compliant with IEEE 802.11a, IEEE 802.11b, IEEE 802.11g, IEEE 802.11n, and IEEE 802.11ac.

Wi-Fi® and the Wi-Fi CERTIFIED logo are registered trademarks of Wi-Fi Alliance®.

Wi-Fi CERTIFIED™ is a trademark of Wi-Fi Alliance®.



- USB Type-C™ is a trademark of USB Implementers Forum.
- This product includes software developed by the OpenSSLProject for use in the OpenSSL Toolkit. (<https://www.openssl.org/>)
- This product includes cryptographic software written by EricYoung(eay@cryptsoft.com)
- Google, Android, Google Play, and other marks are trademarks of Google LLC.
-  is a trademark or registered trademark of NFC Forum, Inc. in the United States and other countries.
- FeliCa is a contactless IC card technology developed by Sony Corporation.

FeliCa is a registered trademark or trademark of Sony Group Corporation or its affiliates.

- This product is covered by one or more claims of the HEVC patents listed at the URL below.
patentlist.accessadvance.com



- "EB1241" and "glove touch" are registered trademarks of Kyocera Corporation.
- The names and logos are trademarks or registered trademarks of in Japan and other countries.
- Other company names, product names, and service names in this guide are the trademarks or registered trademarks of each company.
- The user is granted a license to use the software installed in handset and described in this guide. Note the following when using the software.
 - (a) You must not copy, distribute, modify, analyze, reverse-engineer, or derive the source code of the software in its entirety or in part.
 - (b) You must not export the software in its entirety or in part in violation of law or regulation.
 - (c) No warranty is implied for the software's merchantability, fitness for any particular purpose, non-infringement of third-party intellectual property rights, etc.However, use of software included in the software is based on GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL) or other open-source software licenses and use of software under license to Kyocera Corporation is subject to the terms and conditions of each software license with priority. For information on open-source software, see "Open-Source Software" as given expressly below.

Open-Source Software

This product contains open source software complying with licensing conditions of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL), and other open-source software.

For specific conditions of GPL, LGPL, and other licensing, refer to "About phone" on this product. For details, see the Kyocera Corporation website.

This product contains software with copyrights belonging to Kyocera Corporation as well as software under license to Kyocera Corporation. Copyrights to software contained in this product and designed/developed by Kyocera Corporation in compliance with the standards and licenses of open-source software are those of Kyocera Corporation and third parties, and the customer may not distribute, copy, modify, publicly transmit, etc. the software without the consent of Kyocera

Corporation, except for any scope of use as permissible by copyright law or any scope of use as permitted separately by Kyocera Corporation.