


User's Manual (instruction sheet)

Operation of Cordless Table Top Master Control

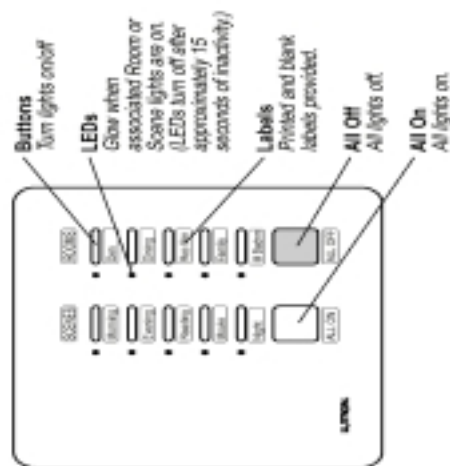

NOTE:

- Cordless Master Controls will not operate the RadioRA System until they have been programmed.
- For detailed instructions on programming a Cordless Master Control, refer to the RadioRA Setup Guide that is included with a system Repeater.
- "Wake Up" the Cordless Master Control before starting any of the programming steps in the RadioRA Setup Guide.
- "Wake Up" the Cordless Master Control before adding or removing any RadioRA System Components.
- The timeout period for an inactive (without any button presses) Cordless Master Control in programming mode is 5 minutes. If programming is exited, the Cordless Master Control will then revert to its normal timeout period.
- The Cordless Master Control will not have scene LED restoration upon "wake-up" unless the system has at least one System Repeater. (RA-REP) produced after 3/15/99.
- The instruction label on the front of the Cordless Master Control is removable.

Battery Installation and Replacement

✓ Check off Steps as completed.

Step 1

Remove battery cover.



Press tab in the direction of the arrow and lift to open battery cover.

Step 2

Replace batteries using two, 1.5V AAA alkaline batteries as shown. Install negative terminal (flat end) of battery first.



Align batteries as shown.

Step 3

Replace battery cover.



Replace cover and press to close.

Wall Mount Bracket Installation (Optional)

The Cordless Master Control can be wall mounted using the supplied wall bracket.

✓ Check off Steps as completed.

Step 1

Attach wall bracket to wall using the supplied screws and wall anchors.



Step 2

Align Cordless Master Control and snap onto wall bracket.

