

BenQ.com

© 2012 BenQ Corporation.
All rights reserved. Rights of modification reserved.


IRM01.001 P/N: 4J.J8E03.001





PD03 Interactive Pen Quick Start Guide

Quick Start Guide Guide de démarrage rapide Kurzanleitung Guide rapida Guía de inicio rápido Guia de iniciação rápida Snabbstartsguide Краткое руководство Snelgids Skrócona instrukcja obsługi Hızlı başlangıç kılavuzu Průvodce rychlým používáním คู่มือเริ่มต้นใช้งานอย่างย่อ 快速使用指南 快速使用指南 クイックスタートガイド 빠른 시작 안내서

دليل البدء السريع

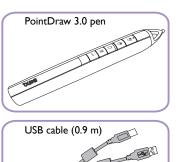

 

 














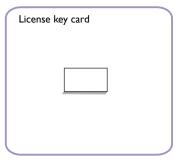


Table of contents


English	4
Français	16
Deutsch	28
taliano	40
Español	52
Portuguê	64
Svenska	76
Русский	88
Nederlands	101
Polski	113
Гürkçe	125
Čeština	137
ทย	149
緊體中文	161
- 简体中文	
日本語	
한국어	
ピ キ ()	

PointDraw 3.0 pen features

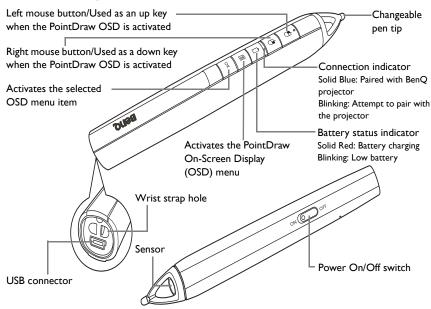

Battery charging

The charging time varies by using different equipment. See the table below for details.

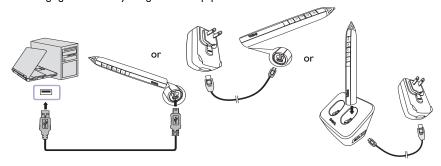



Equipment	Charging time (hour)	Duration of pen use (hour)
Computer	2~2.5	
Power adaptor	1.5~2	20
Cradle (single pen)	1.5~2	20
Cradle (dual pen)	2.5~3	

 $[\]triangle$ Do not disassemble the PointDraw pen yourself. Refer all servicing to qualified service personnel.


[△] The lithium battery is only rechargeable, and not user replaceable. Not user serviceable.

Operation

 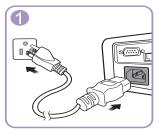


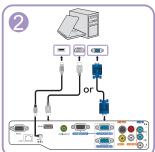



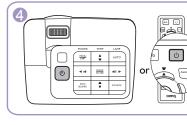






Select an appropriate input signal from among Computer I/Computer 2/HDMI.

SYSTEM SETUP: Basic Presentation Timer Language **Projector Installation** Front Table Menu Settings **⋈** Operation Settings **Remote Receiver** Front+Top **Panel Key Lock** Off **Background Color** BenO Splash Screen BenQ **PointDraw** Single Pen Analog RGB MENU Exit

To use one or two pens, go to the "System Setup: Basic > PointDraw" projector OSD menu and select "Dual Pen" or "Single Pen".

□ Single Pen

For optimized interactive speed, it is recommended to select a single pen in PointDraw settings.

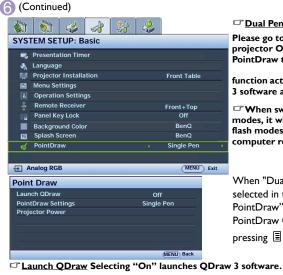

Dual Pen

Please go to "System Setup: Basic" on the projector OSD menu and change the PointDraw to "Dual Pen" for dual pen

 
function activation. Select 3 software and enter dual pen mode.

☐ When switching between PointDraw modes, it will take about 30 seconds to reflash modes, the delay time depends on computer response time.

When "Dual Pen" or "Single Pen" is selected in the "System Setup: Basic > PointDraw" projector OSD menu, PointDraw OSD menu can be activated by pressing on the PointDraw pen.

- PointDraw Settings Switches between "Single Pen" mode or "Dual Pen" mode. Settings in QDraw 3 software will be changed simultaneously.
- Projector Power Turns off the projector.


How to hold the PointDraw 3.0 pen




ITIf the PointDraw pen is far away from the screen, be sure to press the left mouse button to click and drag.

Avoid shadows!

The PointDraw pen won't work if its tip is in a shadow or if it is pointing at a shadow:

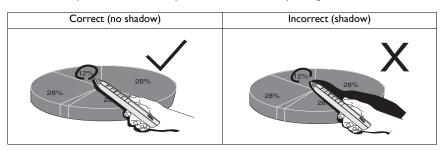

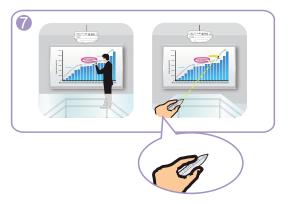

The pen can be used either touching on the screen or away from the screen.

Troubleshooting

	Check the battery status - if the battery is blinking red, please connect the pen to the charging cradle, or to the power adaptor via a USB cable to charge.
When the pen does not work or works intermittently	Avoid direct strong CCFL light onto the projected image in a short distance. Adjust the angle of incident light smaller to reduce the frequency interference.
intermittently	If the room is brightly lit, reduce the room ambient light.
	Do not use the computer mouse at the same time while using PointDraw pen. Point the pen away from the projected screen when the computer mouse is being used.
When the pen is	Please ensure that the pen is not pointing at a shadow and make sure the pen tip is not under a shadow.
working not as responsive	It is recommended to use PointDraw Single pen mode when only one pen is being used at the same time for optimized interactive writing speed. Change the setting from the projector OSD menu System Setup: Basic > PointDraw or via the PointDraw pen menu key.

When the mouse cursor is in the wrong place of the projected image or is restricted to part of the image	Please make sure the projector is displaying computer source input. To change the source, press the SOURCE button on the projector or remote control.
Others	SmartEco lamp mode and 3D mode are not active while PointDraw setting is On. This will ensure the best PointDraw interactive performance possible.

Specifications

I. Pen (PD03)

Operation frequency	2.4 GHz ISM Band
Rechargeable battery Model name Normal voltage Normal capacity	l pcs UR14500P 3.7V 800 mAh
Storage temperature	-10°C -60°C
Operation temperature	0°C -40°C
Operation humidity	20%-85% (ambient temperature < 40°C)
Power consumption	DC 3.7V, 35 mA (operation)
Dimensions	Length*Diameter=186*26 (mm)
Weight	72g

2. Power adaptor

AC input	100~240V AC, 50~60 Hz, 0.3 A max.
DC input	5V DC, 2 A

3. Charging cradle

Power on/off	5V USB power on/off switch

4. RF dongle

Parameter	Performance	Remarks
Working voltage	5V	Over low voltage will possibly cause communication error.
Working temperature	-20°C-80°C	
Working humidity	10%-90%	Without condensation
Dimension LxWxH	42.5x31.5x6	Unit: mm; dimension tolerance meets GB/T1804-m

LED Indicator

I.I Interactive pen LED

Function	LED Amber (Red)	LED Blue
Searching for projector signal (pairing)*	Off	0.5 sec on/0.5 sec off
In use (connected)	Off	Solid on

Low battery (20% power)	Flash 3 times (0.5 sec LED on, 0.5 sec LED off for 3 times) between 5-second interval (LED off).	Solid on
Low battery (10% power)	Flash 3 times (0.5 sec LED on, 0.5 sec LED off for 3 times) between 5-second interval (LED off)	Off
Charging (power off and standby)	Solid on	Off
Fully charged	Off	Based on pen operating status at that time
Standby**	Off	Off
Wake up and searching	Off	0.5 sec on/0.5 sec off

Note:

*By pressing any key or nib to start pairing between the pen and projector. The pairing must be done within 5 sec; the pen will go into standby mode when it's unable to be paired in 10 sec.

** When pairing is interrupted during usage (for example, when the pen is not pointed toward the projected image), the pen will go to standby mode in 120 sec.

1.2 Cradle LED

Function	LED Blue
Power on	Solid on
Power off	Off

I.3 RF dongle LED

LED Behavior	Status
Blinks blue every 1.5 seconds	Wireless channel search OR Dongle is synchronizing with interactive device(s)
Blinks blue every 3 seconds	Wireless channel selected to use for synchronization with interactive device(s)
Blinks blue every 6 seconds	Dongle successfully synchronized with interactive device(s)
Blinks blue every 10 seconds	Wireless channel selected to use for synchronization with interactive device(s) is noisy