



## BATTERY SAFETY DATA SHEET

(Form: EEC directive 91/155)

### (2) SAFETY ADVICE

|       |     |                                                                                                             |
|-------|-----|-------------------------------------------------------------------------------------------------------------|
| S...: | S2  | Keep out of reach from children.                                                                            |
|       | S8  | Keep container dry.                                                                                         |
|       | S26 | In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.               |
|       | S43 | In case of fire, use D type extinguishers. Never use water.                                                 |
|       | S45 | In case of accident or if you feel unwell, seek medical advice immediately (show the label where possible). |

### (3) FIRST AID MEASURES

In case of contact of cell contents with eyes, flush immediately with water for 15 min. With skin, wash with plenty of water and take off contaminated clothes. If inhalation, remove from exposure, give oxygen, seek medical advice.

### (4) FIRE-FIGHTING MEASURES

#### Extinguishing media

|                 |                                                                     |
|-----------------|---------------------------------------------------------------------|
| Suitable:       | Type D fire extinguishers                                           |
| Not to be used: | Water - CO <sub>2</sub> - Halon, dry chemical or foam extinguishers |

#### Special exposure hazards

Generation of chlorine, sulfur dioxide, disulfur dichloride during thermal decomposition.

#### Special protective equipment

Use protective working boots, rubber apron and safety glasses with side shields.




## REVISION HISTORY

| REVISION                                      | CHAPTER | VERSION |
|-----------------------------------------------|---------|---------|
| Selftest will not function in bracket anymore | 3,3     | D       |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |
|                                               |         |         |


[illegible]

3


FIG.1

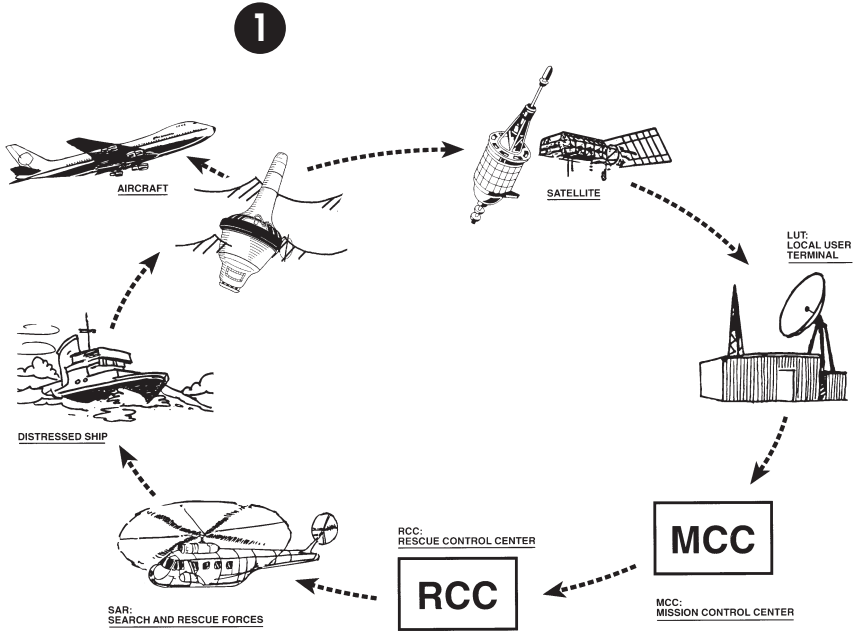


**2**

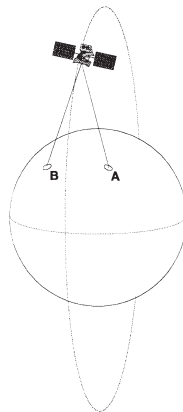


**FIG. 2**  
**MANUAL OPERATION [3.1]**

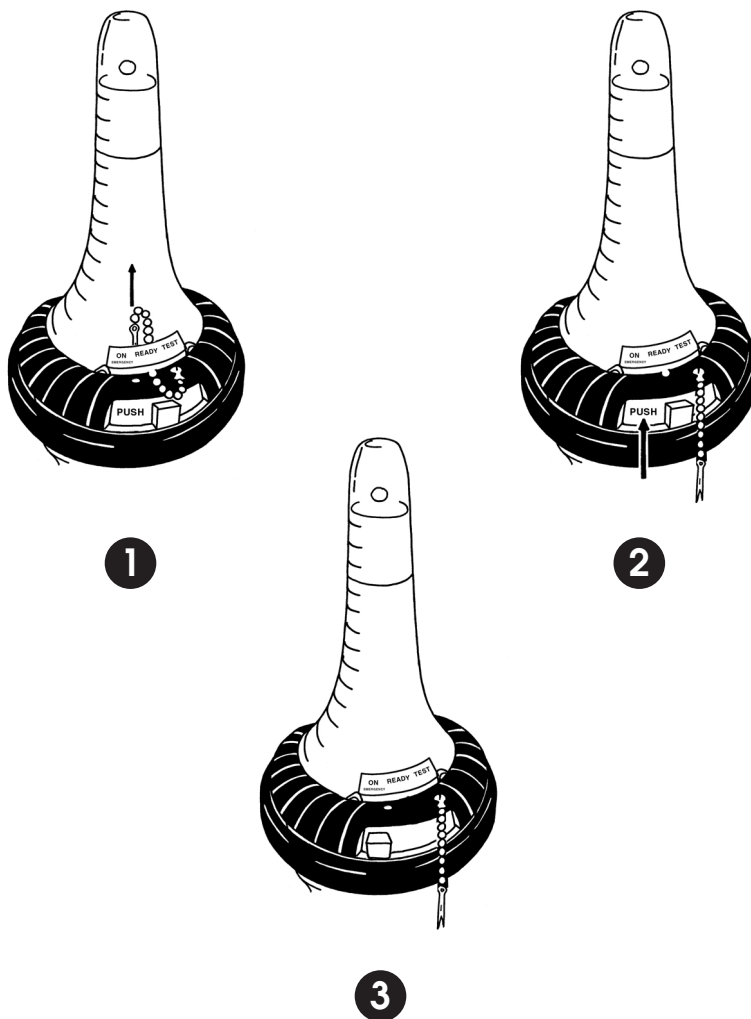


**FIG. 3**  
**AUTOMATIC OPERATION [3.2]**

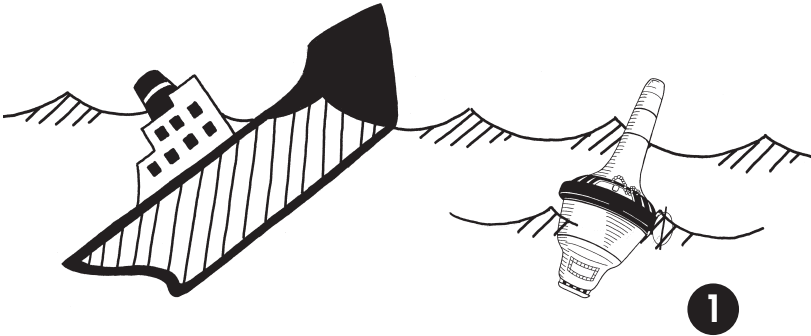


**FIG. 4**  
**SELFTEST [3.3]**





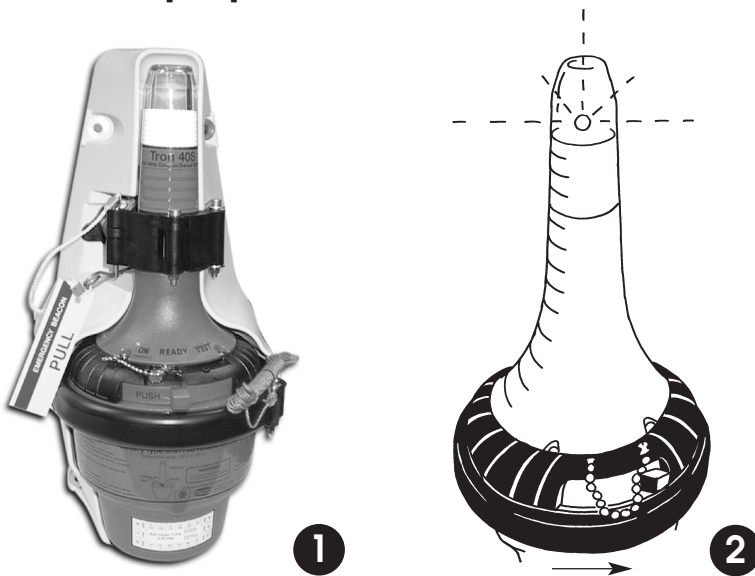



**FIG. 5 [4.1]**  
**MOUNTING OF HYDROSTATIC RELEASE MECHANISM**

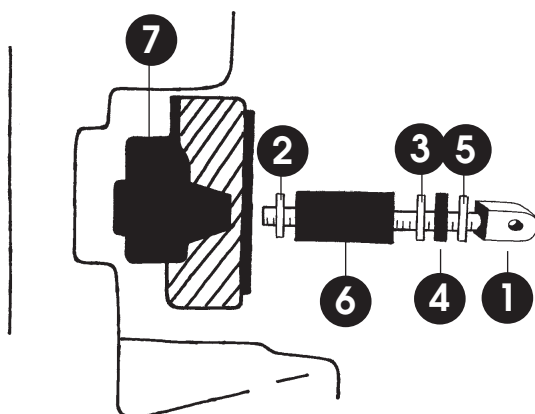


**FIG. 6**  
**REPLACING THE BATTERY UNIT [4.2]**

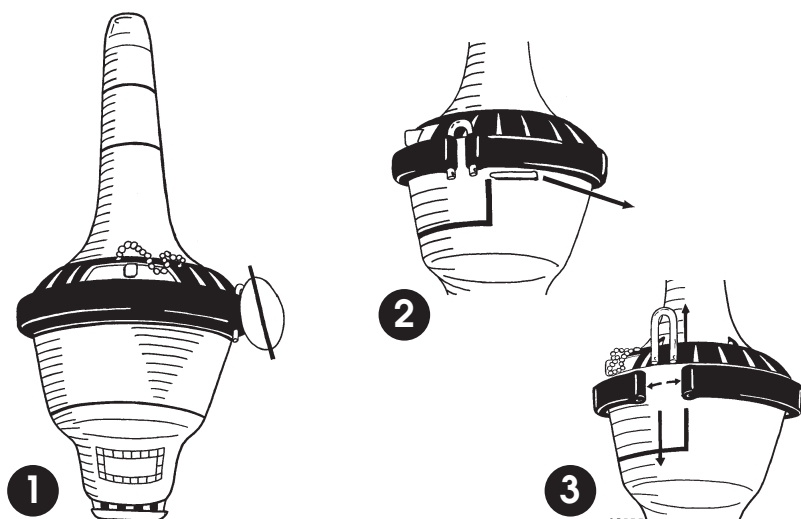

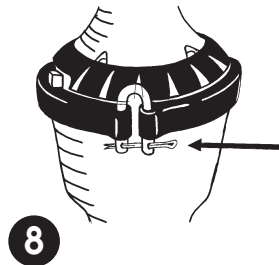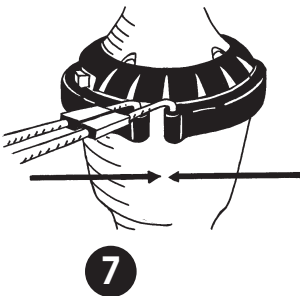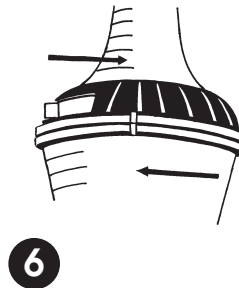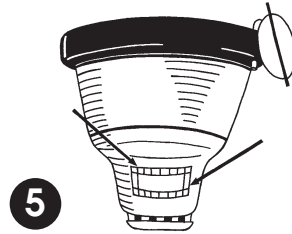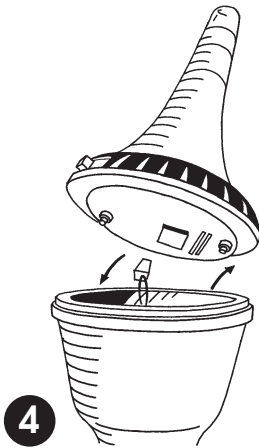

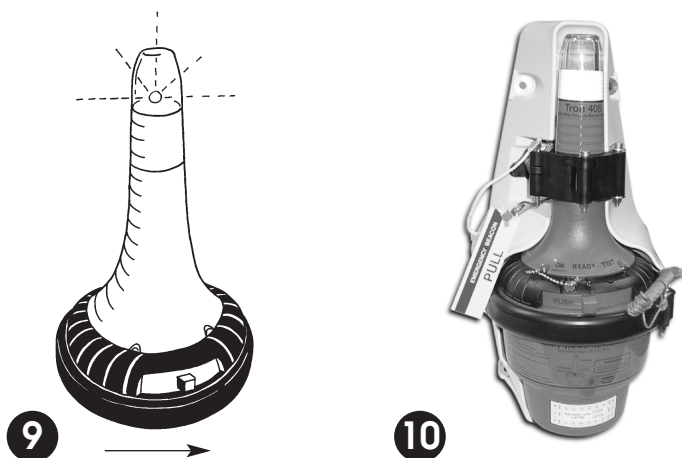

**FIG. 7**  
**MOUNTING OF BRACKETS (FB4, FBH4, MB4)**

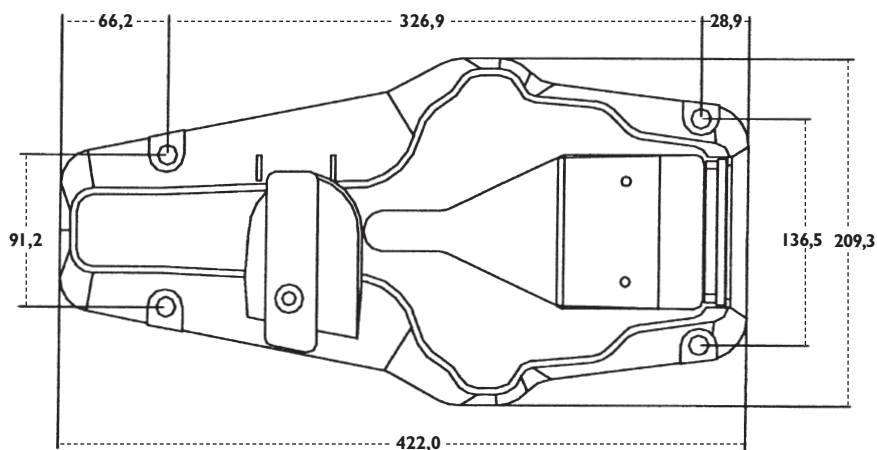

## TECHNICAL SPECIFICATIONS

### GENERAL

| Item:                  | Description:                                                  |
|------------------------|---------------------------------------------------------------|
| Battery:               | Lithium, 4 years service life.                                |
| Housing:               | Polycarbonate w/ 10% glassfibre                               |
| Dimensions:            | Height: 379 mm<br>Max diameter: 180 mm<br>Weight: app. 2.0 kg |
| Materials:             | Polycarbonate.                                                |
| Compass safe distance: | 1.5 m                                                         |
| Temperature range:     | -20°C to + 55°C                                               |
| Operating life:        | Minimum 48 hours at -20°C                                     |

### SARSAT/COSPAS TRANSMITTER

| Item:          | Description:                         |
|----------------|--------------------------------------|
| Frequency:     | 406.025 MHz $\pm$ 2 ppm              |
| Output power:  | 5W $\pm$ 2 dB                        |
| Protocols:     | Maritime, Serialised, Radio Callsign |
| Modulation:    | Phase modulation 1.1 $\pm$ 0.1 rad   |
| Data encoding: | Bi Phase L                           |
| Stability:     |                                      |
| Short term     | $\leq 10^{-9}$                       |
| Medium term    | $\leq 10^{-9}$                       |
| Residual noise | $\leq 3 \times 10^{-9}$              |
| Bitrate:       | 400 b/s                              |
| Antenna:       | Built in, omnidirectional.           |



## HOMING TRANSMITTER

|               |                                                           |
|---------------|-----------------------------------------------------------|
| Frequency:    | 121.500 MHz                                               |
| Output power: | Up to 100 mW,<br>depending on model.                      |
| Modulation:   | A9, AM sweep tone.<br>Range 700 Hz.<br>Sweep rate 2.5 Hz. |
| Stability:    | 10 ppm over temperature range.                            |
| Antenna:      | Built in, omnidirectional.                                |

## BRACKETS

|                    |                                                                                          |
|--------------------|------------------------------------------------------------------------------------------|
| Materials:         | Luran S                                                                                  |
| Dimensions:        | length: 422 mm<br>Width: 209 mm<br>Depth w/Beacon intalled: 200 mm<br>Weight: app 1.6 kg |
| Release mechanism: | Hydrostatic release<br>unit Hammar H20                                                   |



## GLOSSARY

### C O S P A S

COsmicheskaya Sistyema Poiska Avariynich Sudov  
(Space System for the Search of Vessels in Distress)

### S A R S A T

Search and Rescue Satellite-Aided Tracking System

|              |                                            |
|--------------|--------------------------------------------|
| <b>EPIRB</b> | Emergency Position Indicating Radio Beacon |
| <b>LUT</b>   | Local User Terminal (Ground Station)       |
| <b>MCC</b>   | Mission Control Center                     |
| <b>RCC</b>   | Rescue Coordination Center                 |
| <b>km</b>    | kilometer                                  |
| <b>MHz</b>   | Mega-Hertz ( $10^6$ Hertz)                 |



# 1 INTRODUCTION

## 1.1 GENERAL

The Tron 40S is an emergency equipment consisting of:

- Tron 40S COSPAS/SARSAT EPIRB
- One of the following brackets:
  - FB4 - Automatic float free bracket.
  - MB4 - Manual bracket.
  - FBH4 - Automatic float free bracket v/ Heating.

The JOTRON Tron 40S EPIRB is developed to meet the regulations and rules for use on vessels and life rafts in the maritime service. Tron 40S meets the following specifications for 406 MHz EPIRBs for use in search and rescue operations at sea:

- ETS 300 066
- MPT 1259
- C/S T.001
- IMO A695 (17){1}
- IMO A810 (19)

The Tron 40S is buoyant, and is designed to automatically release and activate in case of an emergency where the EPIRB and its bracket is submerged into the sea. The Tron 40S can also be operated as a manual EPIRB.

Three mounting brackets are available to mount it either as an automatic or manual only EPIRB. The purpose of the Tron 40S is to give a primary alarm to the search and rescue authorities. The EPIRB gives an immediate alarm when activated, transmitting the ID of the ship in distress. Care must be taken not to activate the EPIRB unless in an emergency situation, in such cases the user will be held responsible.

For periodic testing a test function is implemented. During the test cycle the EPIRB does a selftest on the transmitters and on the battery status. No emergency signal is transmitted during the selftest. The battery of the EPIRB will last for at least 48 hours from activation of the EPIRB.



## 1.2 SYSTEM DESCRIPTION

The COSPAS/SARSAT system was introduced in 1982 as a world-wide search and rescue system with the help of satellites covering the earth's surface. Since the introduction of the system more than 5500 persons have been rescued by the COSPAS/SARSAT system (June 1995).

Currently the system consists of 6 different satellites in a polar orbit constellation, these satellites cover the entire earth's surface and receive the emergency signal from the 406 MHz transmitter within the Tron 40S, more polar orbiting satellites will be available in the future, giving a faster location and rescue time. In addition several geostationary satellites are equipped with a 406 MHz transponder, these satellites are not able to locate the Tron 40S but will give an early warning to the rescue forces, minimising the time from an emergency occurs till the rescue forces are at the site.

Each emergency EPIRB in the system is programmed with its own unique code, therefore it is vital that the ship's data that is given to the dealer you obtained your Tron 40S, is correct. It is also important that your EPIRB is registered in the database for each country. This database is normally located in the same country that the ship is registered.

## 1.3 SIGNAL DETECTION [FIG.1]

When the Tron 40S is activated (manually or automatically) it transmits on the frequencies 121.5 MHz and 406.025 MHz. An analogue signal is emitted on 121.5 MHz and a digital signal is transmitted on 406.025 MHz. After the Tron 40S is activated, the next passing satellite will detect the transmitted signal and relay it to an antenna at a ground station, called a LUT.

For the 121.5 MHz signal the satellite must be within line of sight of both the Tron 40S and a ground station. The ground station or LUT has a 2500 km satellite reception radius centred at the LUT. In areas without LUT coverage (mostly less populated areas in the southern hemisphere),



signals from the 121.5 MHz transmitter will not be detected by the satellites, only by passing aircraft's. This is not the case with the 406 MHz transmitter, because the satellites have a memory unit which stores the signals for relay to the next available LUT giving it a truly global coverage.

Once the signal is received by the LUT, it is processed for location and sent to a Mission Control Centre (MCC). The MCC sorts the alert data according to geographic search and rescue regions and distributes the information to the appropriate Rescue Co-ordination Centre (RCC), or if outside the national search and rescue area, to the appropriate MCC that covers the area that the distress signal was detected. The RCC in turn takes the necessary action to initiate search and rescue activities.

## **1.4 DISTRESS LOCATION DETERMINATION**

The location of the distress signal is determined by taking measurements of the doppler shift of the EPIRB frequency when the satellite first approach and then pass the EPIRB.

The actual frequency is heard at the time of closest approach (TCA). Knowing the position of the satellite and using the received doppler signal information, it is possible to determine the location of the Tron 40S from the satellite at the TCA. At the LUT, actually two positions are calculated. One is the actual position (A) and the other is the mirror image (B) position [FIG. 1.2]. A second satellite pass confirms the correct location (A). With the 406 system the real solution can be determined on the first pass with a reliability of nearly 90% and down to an accuracy of less than 5 km (3.1 miles).

## **1.5 EPIRB REGISTRATION**

Normally the MCC will contact the vessel or the contact person registered in a shipping register and/or an EPIRB register (Ships owner, family member etc.) before alerting the RCC. This is to determine if the alarm from the EPIRB for some reason is a false alarm, and an expensive rescue



operation can be avoided. Because of this it is important that the ships data is correct in the shipping register or in the EPIRB database.

Tron 40S purchased in some countries will have a registration form attached to it, it is important that this registration form is completed by the owner and returned to the place the EPIRB was purchased or to the address specified on the registration form. Other countries use the already available shipping register to obtain the necessary information for a vessel in distress, in these countries the ship is already registered and no registration form is necessary, however it is vital that the coding of the Tron 40S is kept up to date with data on the ship (nationality, call sign, etc.), to minimise the time from an alarm to the start of the search and rescue operation. Reprogramming the Tron 40S can be done at authorised JOTRON agents in more than 40 different places throughout the world.

## 2 EPIRB Tron 40S

### 2.1 FEATURES

- *Watertight:*  
Tron 40S is watertight to a depth of minimum 10 meter.
- *Buoyant:*  
Tron 40S is buoyant.
- *Rugged design:*  
The Tron 40S will withstand a drop from 40 meters into the water. It is resistant to seawater, oil and sunlight.
- *Handling:*  
The Tron 40S is made for easy operation, with a brief operating instruction printed on the unit. It comes standard with a 20 meter rope that can be attached to the liferaft.
- *Indicators:*  
The Tron 40S are equipped with a LED and a built in strobe



light to show operation of the EPIRB. The strobe light and LED will normally flash with a frequency of 20 per minute to show that the EPIRB is activated.

- *Battery unit.*

The battery unit consists of the complete lower half of the Tron 40S and is to be replaced every 4. year. The marking on the battery unit show the expiry date.

A new battery comes complete and are easily replaced by opening the equator ring between the top and bottom of the EPIRB.

- *Hydrostatic unit.*

The hydrostatic unit fitted on the float free bracket (FB4) must be replaced every 2. year. Marking on the hydrostatic unit show the expiry date. The hydrostatic comes complete with a new bolt and accessories.

## 2.2 STORAGE

The EPIRB is normally stored in its bracket. The bracket contains means to prevent accidental activation of the EPIRB. The bracket should be mounted in a place that is easily available for periodic testing, and a place which is easily accessible in case an emergency situation occur.

## 3 OPERATING INSTRUCTIONS

The Tron 40S is designed to be operated either manually or automatically. The EPIRB is always armed, that is the EPIRB will automatically start to transmit when the EPIRB is out of the bracket and deployed into water. In the lower part of the EPIRB there is an automatic safety switch. This switch prevents the seawater contacts from operating the EPIRB automatically (caused by ice, sea-spray etc.) as long as the EPIRB is placed in its bracket.



### 3.1 MANUAL OPERATION [FIG.2]

- Break the seal and pull the locking pin holding the main switch.
- Push slider to move switch to EMERGENCY position.
- The switch is spring loaded and will automatically go to the EMERGENCY position.
- The LED indicator, located at the top of the EPIRB, will start flashing indicating that the EPIRB is operating. In addition the strobe light will start to operate.
- If possible keep the EPIRB in an open area, away from any metal objects (ship construction etc.) that may limit the satellite coverage.
- Transmission can be stopped by turning the switch to READY position.

### 3.2 AUTOM. OPERATION (FB4 AND FBH4) [FIG.3]

The Tron 40S will automatically release from the bracket, float to the surface and start to transmit, when the EPIRB in its bracket is deployed into water at a depth of app. 2-4 meters (6 – 13 feet).

Alternatively the EPIRB can be manually released from the bracket and put into the water. Transmission will continue until the EPIRB is lifted out of the water, and dried off. The transmission can also be stopped by placing the EPIRB in the bracket.

### 3.3 TESTING THE TRON 40S [FIG.4]

To perform the self test, the EPIRB has to be removed from the bracket.

- Press the spring-loaded main switch of the EPIRB to the TEST position. Keep hands and other objects away from the upper part of the EPIRB (away from the antenna).
- A successful test will consist of a series of blinks on the LED test-indicator, followed by a continuous light and a strobe flash after app. 15 seconds.



- If the EPIRB fail to end up with a continuous light, this indicates a fault in the EPIRB.
- Release the switch and put the EPIRB back into the bracket.

What the self test actually does is first to wait approx. 15 seconds to allow the reference oscillator inside the EPIRB to warm up. Then a short burst is transmitted by the 121.5 MHz transmitter, while the output level of the transmitter is checked. Finally, a test signal is transmitted by the 406 transmitter. During this test signal the battery voltage, output power and frequency is checked.

While testing the 406 MHz transmitter a test message is transmitted, this test message is coded with a special synchronisation code and will not be detected by the COSPAS/SARSAT satellites. The purpose of this test message is to control the actual coding of the EPIRB. This can be done with the JOTRON test unit TronDEC or another EPIRB checker.

## 4 MAINTENANCE

### **Every 3. month:**

Perform internal selftest (see chapter 3.3)

Check the bracket for any damages, the EPIRB should be easily removed and replaced in the bracket. Make sure that the bracket is not painted or otherwise covered with chemicals, oil, etc. Check the expiry date of the hydrostatic release mechanism and the battery unit.

### **Every 2. year:**

Perform extended test with the help of a TronDEC decoder. This test can be performed by one of the authorised JOTRON agents with TronSTAT facilities. The test ensures that the EPIRB is within its specifications and complies with the COSPAS / SARSAT system. Hydrostatic



release mechanism on the float free brackets must be changed (see chapter 4.1).

### **Every 4. year:**

In addition to the 2. year maintenance, the battery unit must be replaced (see chapter 4.2).

## **4.1 REPLACING THE RELEASE MECHANISM [FIG.5]**

- Remove the EPIRB from its bracket (chapter ).
- Unscrew the plastic bolt and remove the hydrostatic release mechanism.
- Check expiration date on the new hydrostatic release mechanism. The date should be approximately 2 years from the date of purchase.
- Mount the new hydrostatic release mechanism. The unit is fixed to the bracket with a washer, rubber seal, washer, spacer O-ring and a plastic bolt.
- Secure the plastic bolt by hand force only!

## **4.2 REPLACING THE BATTERY UNIT [FIG.6]**

Replacing the battery unit should be done by skilled technicians only – preferable by a JOTRON agent. Your closest JOTRON agent with TronSTAT facilities has been specially trained to perform the necessary operation and is also able to do an extended test of the EPIRB, ensuring that the EPIRB operates within the specifications.

- Remove the EPIRB from its bracket (chapter 3.1 ).
- Remove the equator ring by pressing it out from the housing.
- Separate the two halves of the EPIRB housing.
- Unplug the 6 pin connector that comes from the lower EPIRB housing.
- Control that the new battery unit is marked with X-97780 and has a new expiration date approximately 4 years from purchase.
- Fit a new gasket on top of the battery unit and reconnect the 6



pin connector; be sure that the connector is fitted properly. A noticeable «click» should be heard when the connector is in place.

- Orientate the two halves of the EPIRB the following way: An orientation tab is fitted on both halves of the EPIRB, These tabs must be placed carefully on top of each other.
- Make sure that the gasket is properly in place, and replace the equator ring using a special tool to tighten it together.
- Replace the U-shaped bolt and a new split pin to secure the bolt in the equator ring.
- Follow the procedure in chapter 3.3 and test the EPIRB.
- Replace EPIRB in its bracket.

## 5 BRACKETS

3 different brackets are currently available for the Tron 40S. MB4 is the manual bracket and FB4 and FBH4 is the automatic bracket. The manual bracket comes without the hydrostatic release mechanism and is used to store the beacon inside the wheelhouse or other protected places. The automatic bracket is mounted in a free space outside where the beacon can be released automatically.


### 5.1 FLOAT FREE BRACKET FB4 AND FBH4

When the Tron 40S is mounted in the float-free bracket, FB4 and FBH4, it will operate as an automatic float free unit. Since the release of the EPIRB will be automatic it is important to mount the bracket in a place where there are no obstacles that can endanger the automatic release of the EPIRB. The location where the bracket is mounted should be as high as possible on the vessel, and well protected from environmental conditions such as direct sea-spray, chemicals, oil, exhaust and vibrations. The location must also be easily accessible for testing and maintenance.

## 5.2 FLOAT FREE BRACKET FBH4

The float free bracket FBH4 must be connected to the fixed installation (230V AC, 10A) through the thermostat connection box according to the connection diagram below.

### CONNECTION DIAGRAM

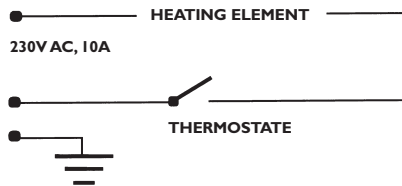

## 5.3 MANUAL BRACKET MB4

When the Tron 40S is mounted in the MB4 bracket, it will operate as a manual unit. This bracket is similar to the FB4 bracket but does not have the hydrostatic release mechanism. This bracket is typically used to store the EPIRB inside the wheel house or other protected areas of the ship. The bracket should be mounted in an easily accessible place where it can be reached in a hurry in case of an emergency.

## 5.4 MOUNTING THE FB4/FBH4/MB4 BRACKETS [FIG.7]

The bracket is mounted with 4x8mm bolts according to the drawing in Fig.7.

The bracket could be mounted in either an upright or horizontal position, whichever is the best regarding maintenance and operation.



## Notes



## Notes



## MARINE SERVICE AGENTS with programmingstations 2000

### ANTILLES

(Netherlands)  
Radio Holland  
Curacao (head office)  
Tel +599 9 4612577  
Fax +599 9 4612723

### AUSTRALIA

ES Rubin Marine  
Sydney  
Tel +61 2 9439 2333  
Fax +61 2 9439 2278

### BELGIUM

SAIT Marine Intl  
Deurne, Antwerp  
Tel +32 3 320 1711  
Fax +32 3 366 2470

### BRAZIL

Metalock do  
Brasil Ltda  
Santos  
Tel +55 13 222 4686  
Fax +55 13 222 4088

Belga Marine  
Rio de Janeiro  
Tel +55 21 253 7171  
Fax +55 21 233 5806

### CANADA

Radio Holland Ltd.  
Vancouver, B.C.  
Tel +1 604 293 2900  
Fax +1 604 293 2930

Scantech inc.  
Québec  
Tel +418 653 1772  
Fax +418 652 1258

### CHILE

Electronica Holanda  
Ltda.  
Talcahuano  
Tel +56 541925  
Fax +56 41541944

Serprotec  
Valparaíso  
Tel +56 32 232 780  
Fax +56 32 212 215

### CHINA

Radio Holland B.V.  
Shanghai  
Tel +86 2165 463034  
Fax +86 2165 462104

### CROATIA

Belam  
Rijeka  
Tel +385 51 212 192  
Fax +385 51 672 179

### CUBA

Binaval  
Habana  
Tel +53 7 61 6282  
Fax +53 7 33 8380

### DENMARK

UNI-SAFE electr. A/S  
Copenhagen  
Tel +45 32 581 615  
Fax +45 32 581 330

MT-Elpro Skibselektro  
Esbjerg  
Tel +45 7512 3455  
Fax +45 7513 8408

Pentagon Elektrik  
Hjortshøj  
Tel +45 8622 3053  
Fax +45 8622 9229

Radar Marine Service  
Nørresundby  
Tel +45 96 32 1400  
Fax +45 96 32 1404

### ECUADOR

Industrial  
Anabra C Ltda  
Guayaquil  
Tel +593 4 309 766  
Fax +593 4 313 694

### EIRE / IRELAND

Navcom  
Cork  
Tel +353 213 54334  
Fax +353 213 54431

### EGYPT

Suez Electronics  
Free Zone, Alexandria  
Tel +203 4806 899  
Fax +203 4804 196

### ESTONIA

A/S RSTA  
Tallin  
Tel +372 6 312 082  
Fax +372 2 431 222

### FINLAND

AT Marine Oy  
Espoo  
Tel +358 9 5494 2620  
Fax +358 9 5494 2700

### FRANCE

Electronic Equipment  
Montivilliers  
Tel +33 232 792960  
Fax +33 235 208275

### GERMANY

Nera GmbH  
Hamburg  
Tel +49 40 682066  
Fax +49 40 682069

Telcom Electr. GmbH  
Hamburg  
Tel +49 40 6568960  
Fax +49 40 65689777

### GIBRALTER

Sandvik Marine E. Ltd  
Tel +350 79003  
Fax +350 46419

### GREECE

ELINE  
Piraeus  
Tel +30 1 4178150  
Fax +30 1 4175790

### SAIT Greece

Piraeus  
Tel +30 1 411 0260  
Fax +30 1 417 7784

### GREECE

Hellenic Radio Services  
Piraeus  
Tel +30 3014181218  
Fax +30 3014282883

### GREENLAND

OS Elektronikk  
Nuuk  
Tel +299 23536  
Fax +299 22779

### HONG KONG

Radio Holland B.V.  
Kwai Chung, H.K.  
Tel +852 2423 9007  
Fax +852 2480 5898

### ICELAND

Radiomidum Ltd  
Reykjavik  
Tel +354 511 1010  
Fax +354 511 1020

### INDIA

Elektronik LAB  
Mumbai  
Tel +91 2241 35115  
Fax +91 2241 37444

### ITALY

Telemar  
Rome (head office)  
Tel +39 06 322 1800  
Fax +39 06 324 0148

Genova  
Tel +39 010 592641  
Fax +39 0105704026

**MARINE SERVICE AGENTS with programmingstations 2000**

Venezia  
Tel +39 0415227351  
Fax +39 0415210689

Trieste  
Tel +39 040418844

Livorno  
Tel +39 0586892429  
call recording

**ITALY**  
Telemar  
Palermo  
Tel +39 091546413  
call recording

Augusta  
Tel +39 0931977532  
call recording

Cagliari  
Tel +39 070391789  
call recording

Napoli  
Tel +39 0815525901  
Fax +39 0815514601

Telecom Italia  
Rome (head office)  
Tel +39 06 36881  
Fax +39 06 6540 0100

Genova  
Tel +39 0105971  
Fax +39 0105974527

Venice  
Tel +39 0415336111  
Fax +39 0415336151

Trieste  
Tel +39 04077881  
Fax +39 0407788552

Naples  
Tel +39 0817221111  
Fax +39 0817223429

Augusta (Sicily)  
Tel +39 09317001111  
Fax +39 0931511857

**JAPAN**  
KGK Kaigai Gijyutsu  
Yokohama 231  
Tel +81 45 664 7318  
Fax +81 45 664 7320

Shinwa Industrial Co  
Kobe  
Tel +81 78 222 2231  
Fax +81 78 222 2210

**KOREA**  
Hanshin Electronics  
Pusan  
Tel +82 51 412 5551  
Fax +82 51 412 6660

Sky Radio  
Pusan  
Tel +82 51 4179500  
Fax +82 51 4151400

Jaun Corporation  
Pusan  
Tel +82 51 6342999  
Fax +82 51 6477515

**LATVIA**  
Hanza Electronica Sia  
Riga  
Tel 371 7 320211  
Fax 371 7 322464

REIDS  
Riga  
Tel +371 7286585  
Fax +371 7821202

**MALTA**  
Medcomms Ltd  
Gzira  
Tel +356 335521  
Fax +356 310820

**MEXICO**  
Nautica S.A. de C.V.  
Mexico City  
Tel +52 5 651 9740  
Fax +52 5 651 2825

**NETHERLANDS**  
Radio Holland B.V.  
Rotterdam  
Tel +31 10 4283344  
Fax +31 10 4281498

Litton Marine Syst B.V.  
Vlaardingen  
Tel +31 10 4451650  
Fax +31 10 4346102

**NETHERLANDS**  
Sailtron  
Ja Utrech  
Tel +31 3029644741  
Fax +31 302937642

**NEW ZEALAND**  
Crystal Electronics Ltd  
Auckland  
Tel +64 9 593726  
Fax +64 9 5252687

**NORWAY**  
AS Radioservice  
Båtsfjord  
Tel +47 78 98 57 00  
Fax +47 78 98 57 20

Arne Bjørnvold AS  
Sandnessjøen  
Tel 75 04 02 018  
Fax 75 04 06 40

Arne Wahl-Olsen AS  
Rørvik  
Tel +47 74 39 00 71  
Fax +47 74 39 13 71

Ballstad Radioservice  
Ballstad  
Tel +47 76 05 44 00  
Fax +47 76 08 85 61

Brommeland elekt. A/S  
Haugesund  
Tel +47 52 70 32 52  
Fax +47 52 71 39 23

DS Elektro Komp. A/S  
Harstad  
Tel +47 77 066 288  
Fax +47 77 066 456

Emil Langva A/S  
Ålesund  
Tel +47 70 10 14 40  
Fax +47 70 12 95 96

Harstad Elektronikk AS  
Harstad  
Tel +47 77 04 02 00  
Fax +47 77 04 02 01

**NORWAY**  
Johnsen & Co.  
Stokmarknes  
Tel +47 76 15 12 11  
Fax +47 76 15 20 70

J.M. Hansen AS  
Tromsø  
Tel +47 77 66 55 00  
Fax +47 77 66 55 46

Kvinnherad Elektro  
Kvinnherad  
Tel +47 53 48 28 00  
Fax +47 53 48 28 20

Landor Larsen Elektr.  
Stavanger  
Tel +47 5189 4444  
Fax +47 5189 5464

Måløy  
Radioforretning AS  
Måløy  
Tel 57 85 12 88  
Fax 57 85 12 27

Neratek as  
Oslo  
Tel +47 22 63 13 00  
Fax +47 22 63 17 31



## MARINE SERVICE AGENTS with programmingstations 2000

**Oddstøl**  
Elektronikk A/S  
Kristiansund  
Tel +47 71 56 69 30  
Fax +47 71 56 69 34

**O. Sandvik AS**  
Maritim El.  
Tjøme  
Tel +47 33 39 24 73  
Fax +47 33 39 26 44

**Sigurd Solberg AS**  
Florø  
Tel +47 57 75 13 00  
Fax +47 57 75 13 10

**Skanti Radio A/S**  
Oslo  
Tel +47 22 25 06 60  
Fax +47 22 25 06 90

**NORWAY**  
**Sletten Electronics AS**  
Ålesund  
Tel +47 70 10 13 90  
Fax +47 70 10 13 99

**Sveggen Elektromek**  
Kristiansund  
Tel +47 71 51 13 55  
Fax +47 71 56 67 20

**Svein Hatvik A/S**  
Bergen  
Tel +47 55 212 200  
Fax +47 55 212 201

**VICO A/S**  
Haugesund  
Tel +47 52 70 86 00  
Fax +47 52 70 86 01

**Westronic AS**  
Bergen  
Tel +47 55 34 49 90  
Fax +47 55 34 48 90

**PANAMA**  
Electronico Balboa  
Panama 5  
Tel +507 2360722  
Fax +507 2361820

**PHARAO ISLANDS**  
P/F  
Gummibåtataenastan  
Torshavn  
Tel +298 314 913  
Fax +298 310 656

**PHILIPPINES**  
Delnet  
International Corp.  
Manila  
Tel +632 523 0385  
Fax +632 523 0991

**POLAND**  
Enamor  
Gdynia  
Tel +48 58 661 6363  
Fax +48 58 621 8486

**EPA Ltd.**  
Szczecin  
Tel +48 91 4874885  
Fax +48 91 4875014

**PORTUGAL**  
SEMA Electronics S.A  
Lisboa - head office  
Tel +35 11 397 6087  
Fax +35 11 3903 397

**Alveiro**  
Tel +35 13 4366945  
Fax +35 13 4366945

**Matosinhos**  
Tel +35 12 9380033  
Fax +35 12 9380150

**Nautiradar LDA**  
Lisboa  
Tel +35 11 3931880  
Fax +35 11 3931889

**ROMANIA**  
Bams Maritime S.R.L.  
Constanta  
Tel +40 41 601 822  
Fax +40 41 613 517

**RUSSIA**  
Norw. Partners Marine  
Vladivostok  
Tel +7 4232 460506  
Fax +7 4232 460506

**Vladivostok**  
Tel +7 4232 460506  
Fax +7 4232 460506

**Kaliningrad**  
Tel +7 0112 211962  
Fax +7 0112 211962

**RosMar Co. Ltd.**  
St. Petersburg  
Tel +7 812 3274047  
Fax +7 812 1459637

**SAUDI ARABIA**  
Key Communications  
Tel +966 3 833 0635  
Fax +966 3 833 0728

**SINGAPORE**  
Radio Holland B.V.  
Singapore  
Tel +65 862 2218  
Fax +65 862 2430

**Jason Electronics**  
Singapore  
Tel +65 872 0211  
Fax +65 872 1800

**Saab Marine**  
Electronics  
Singapore  
Tel +65 863 2222  
Fax +65 863 2383

**Telenav Electronics**  
Singapore  
Tel +65 872 0863  
Fax +65 872 1334

**SLOVENIA**  
See Croatia

**SOUTH AFRICA**  
Radio Holland  
Cape Town  
Tel +27 21511 0864  
Fax +27 21511 7577

**DURBAN**  
Tel +27 312055309  
Fax +27 312055541

**SPAIN**  
CRAME Radio Holland  
Madrid (head office)  
Tel +34 91 329 1862  
Fax +34 91 329 3045

**Bilbao**  
Tel +34 94 4388565  
Fax +34 94 4388702

**Gijon**  
Tel +34 985 369045  
Fax +34 985 369045

**Algesiras**  
Tel +34 956 661894  
Fax +34 956 661894

**SPAIN**  
CRAME Radio Holland  
Valencia  
Tel +34 96 3671596  
Fax +34 96 3671596

**Barcelona**  
Tel +34 93 3192002  
Fax +34 93 2684610

**Las Palmas**  
Tel +34 928 221000  
Fax +34 928 268240

**SWEDEN**  
C A Clase AB  
Göteborg  
Tel +46 31 647 200  
Fax +46 31 534 637

**MARINE SERVICE AGENTS with programmingstations 2000****AME AB**

Bilodal  
Tel +46 31 913102  
Fax +46 31 913104

**Västskustens**

Elmarin AB  
Västra Frölunda  
Tel +46 31 7697500  
Fax +46 31 7697501

**Storm & Co AB**

Göteborg  
Tel +46 31 513510  
Fax +46 31 519378

**Stockholms**

Fartygselektriska AB  
Stockholm  
Tel +46 8 6117692  
Fax +46 8 6117692

**Vingtor Marine AB**

Askim  
Tel +46 31 680450  
Fax +46 31 683660

**TAIWAN**

Reson Electronics  
Kaoshiung  
Tel +886 7 815 0036  
Fax +886 7 815 1438

**THAILAND**

Natee Corporation Co.  
Sumutprakarn  
Tel +662 903 5544  
Fax +662 703 5525

**TURKEY**

Elektro-Deniz  
Istanbul  
Tel +90 216 392 7729  
Fax +90 216 392 7733

**Ozsay Deniz**

Istanbul  
Tel +90 2163467616  
Fax +90 2163469532

**UKRAINE**

Telcom Service Odessa  
Odessa  
Tel +380 487333806  
Fax +380 487333806

**Transas Ukraine**

Nikolaev  
Tel 380 512 372494  
Fax 380 512 371790

**UNITED ARAB  
EMIRATES**

Radio Holland Group  
Sharjah  
Tel +971 6 723007  
Fax +971 6 726083

**UNITED KINGDOM**

JOTRON UK Ltd  
Cramlington,  
Newcastle  
Tel +44 1670 712000  
Fax +44 1670 590265

**UNITED KINGDOM**

Broadgate Ltd  
Bristol  
Tel +44 1454 618585  
Fax +44 1454 617310

**Marine Electronic S.**

Southampton  
Tel +44 1703 663316  
Fax +441 703 663241

**AND Electronics Ltd**

Aberdeen, Scotland  
Tel +44 1224 824 455  
Fax +44 1224 824 464

**Tilbury, London**

Tel +44 1375 841 488  
Fax +44 1375 841 511

**Alexion Eltr.**

Marine Ltd  
Lieth, Edinburgh  
Tel +44 131 554 2591  
Fax +44 131 555 0373

**Charity & Taylor Ltd**

Lowestoft, Suffolk  
Tel +44 1502 581 529  
Fax +44 1502 588 463

**Marconi Intern. Marine**

Falmouth  
Tel +44 1326 312 855  
Fax +44 1326 211 337

**Aberdeen, Scotland**

Tel +44 1224 585 334  
Fax +44 1224 575 975

**Liverpool**

Tel +44 1516 476 222  
Fax +44 1516 473 374

**UNITED KINGDOM**

Silvertown, London  
Tel +44 1715 114 391  
Fax +44 1715 114 483

**Lowestoft, Suffolk**

Tel +44 1502 572 365  
Fax +44 1502 508 955

**Newcastle**

Tel +44 1912327381  
Fax +44 1912331943

**Felxtown**

Tel +44 1394613138  
Fax +44 1394675247

**TSA communications**

Liverpool  
Tel +44 151 647 8100  
Fax +44 151 647 8120

**Ships Electronics**

Services Ltd  
Greenhithe, Kent  
Tel +44 1634 295 500  
Fax +44 1634 295 536

**USA**

Radio Holland USA BV  
Houston (head office)  
Tel +1 713 943 3325  
Fax +1 713 943 3802

**Hollywood, FL**

Tel +1 954 920 8400  
Fax +1 954 920 8455

**Kenilworth**

Tel +1 908 2989100  
Fax +1 908 2989118

**USA**

Virginia Beach  
Tel +1 757 4312926  
Fax +1 757 4313676

**Mobile AL**

Tel +1 334 4323139  
Fax +1 334 4338223

**New Orleans**

Tel +1 504 7334024  
Fax +1 504 7334027

**Corpus Christi**

Tel +1 512 8835283  
Fax +1 512 8835285

**Long Beach**

Tel +1 562 5950039  
Fax +1 562 9880236

**Portlan**

Tel +1 360 7370519  
Fax +1 360 7370543

**Seattle**

Tel +1 206 7681601  
Fax +1 206 7681603

**High Seas Trading Co**

Miami  
Tel +1 305 358 7455  
Fax +1 305 350 6887