

## Memory Mode

### Memory Recall

1. While operating in the VFO mode, press the [**\*MR**] key to enter the Memory mode.
2. Press the [**▲**] or [**▼**] key to select the desired memory channel.
3. To return to the VFO mode, press the [**#VFO**] key.



When the transceiver is already set to the Memory mode, an easy way to recall a memory channel is to enter the memory channel number using the numeric keypad.

For example: in the Memory Mode to recall memory channel #002, press the [**2**] key.



•To recall Memory Channel #200, enter “200”. To recall Programmable Memory channels “**L1/U1**” through “**L10/U10**” enter “**201/202**” through “**210/220**”.

### Changing the memory label (tag) name

1. Press the [**\*MR**] key to recall the memory channel that you wish to label or rename.
2. Press and hold the **F** key to enter the Set Mode.
3. Press the [**▲**] or [**▼**] key to select Set Mode item “**20 NAME TAG**”.
4. Press the **F** key to enter (or edit) the channel name tag.  
“**NAME-TAG**” message will appear.
5. Press the Alphabet / Numeric keys to enter the characters or symbols for the memory channel “Tag” (label).
  - To move the cursor to the next character, press the [**▲**] key.
  - To correct a mistake, press the [**▼**] key repeatedly until the cursor returns to the character position.



For more details on character/symbol input, see page 38.

6. Press the **PTT** switch to save the new setting and return to the memory channel.

## Memory Mode

### HOME Channel Memory Recall

A “HOME” channel memory is provided for each operating band, to allow quick recall of a favorite operating frequency on each band. The default home channels are below:

| Default Home Channels |             |
|-----------------------|-------------|
| Band                  | Frequency   |
| 144 MHz Band          | 144.000 MHz |
| FM Radio Band         | 95.000 MHz  |

1. Press the **F** key, then press the [**P1**] key.

The default home channel, as listed above, is displayed.



2. Press the **F** key, then press the [**P1**] key to exit to normal operation.  
Repeat this process to recall the HOME channel on any operating band.

### Changing the Home Channel Frequency

 
The home channel frequencies may be changed from the default settings.

1. While operating in the VFO mode, select the desired frequency.
2. Press and hold the [**\*MR**] key.

A blank memory channel will be displayed.

3. Press the [**P1**] key.

- “HOME-IN” will be displayed, and then exit to normal operation.
- The home channel frequency is changed and overwriting is complete.



### Memory Offset Tuning

Once a particular memory channel is recalled, it is easy to tune off that channel, as though you were in the “VFO” mode.

1. Recall the memory channel.
2. Press the [**#VFO**] key to activate the “Memory Channel Tuning” feature.  
The Memory Channel number on the LCD display will be replaced by “tun”.



## Memory Mode



When an alpha-numeric Tag is shown in place of the memory channel operating frequency display, the display will automatically revert to display the operating frequency along with the “tun” indication. It is not necessary to enter the Menu and change from the alpha-numeric Tag display to the operating frequency display.

3. Press the [**▲**] or [**▼**] key to tune to the desired frequency.
4. To return to the original memory frequency, just press the [**#VFO**] key. The display will revert to a display of the alpha-numeric Tag (if any) that may have originally appeared on the LCD.



To store the new frequency while using Memory Offset Tuning, press and hold the [**\*MR**] key (per the normal memory storage procedure). The next-available clear memory location will be displayed. Then press and hold the [**\*MR**] key again to save the new frequency the available memory channel.

## Deleting Memories

All except the Memory Channel “001” and the Home Channels may be easily deleted.



Once deleted, the channel data cannot be recovered, so make a note of the information (Memory Channel settings, etc), before deleting the memories.

1. Press and hold the **F** key to enter the Set Mode.
2. Press the [**▲**] or [**▼**] key to select Set Mode item “18 MEM DEL”.
3. Press the **F** key to enable adjustment of this Item.
4. Press the [**▲**] or [**▼**] key to select the memory channel to be “deleted”.
5. Press the **F** key to delete the selected memory channel.
6. Press the **PTT** switch to return to normal operation.

```
18 MEM DELETE
→ 24: LONDON
   25: 145 . 215
   26: 618590W
```

## Memory Mode

### Weather Broadcast Channels

In the USA, the VHF Weather Broadcast Station Memory Channel Bank has been pre-programmed at the factory for immediate access to NOAA weather information stations.

1. Press and hold the [1] key to recall the Weather Broadcast Memory Bank.



2. Press the [▲] or [▼] key to select the desired Weather Broadcast channel.

3. To scan for additional or stronger Weather stations, just press the **PTT** switch (or press and hold the [▲] or [▼] key).

When the scanner pauses on a station, press the **PTT** switch once to halt the scan, or press it again to re-start the scan.

| CH | Frequency   | CH | Frequency   |
|----|-------------|----|-------------|
| 01 | 162.550 MHz | 06 | 162.500 MHz |
| 02 | 162.400 MHz | 07 | 162.525 MHz |
| 03 | 162.475 MHz | 08 | 161.650 MHz |
| 04 | 162.425 MHz | 09 | 161.775 MHz |
| 05 | 162.450 MHz | 10 | 163.275 MHz |

4. To return to normal operation, press the [\*MR] key, or press and hold the [1] key again.

### Severe Weather Alert

In the event of extreme weather disturbances, such as severe thunderstorms and hurricanes, the NOAA (National Oceanic and Atmospheric Administration) sends a weather alert accompanied by a 1050 Hz tone and subsequent weather report on one of the NOAA weather channels.

## Scanning

The **FT-25R/E** makes available scanning of the stored memory channels, or scanning of the entire operating band, or scanning of a programmable sub band portion. Scanning will halt when signals are encountered, and communication may be initiated on that frequency.

Operation is basically the same in each of the above scanning modes. Before beginning, take a moment to select the way the scanning will resume after it halts on a signal.

### Setting the Scan-Resume Technique

Three options for the Scan-Resume mode are available:

| Display                          | Description                                                                                                                                                                                                                                                                                       |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>BUSY</b><br>(default setting) | In <b>BUSY</b> mode, the scanner will halt on a signal it encounters. Scanning will resume one second after the other station signal ceases transmitting. In the case of constant-carrier signals like Weather Station broadcasts, the scanner will likely remain on this frequency indefinitely. |
| <b>HOLD</b>                      | In <b>HOLD</b> mode, the scanner will halt on a signal it encounters. Scanning will only resume when it is manually re-initiated.                                                                                                                                                                 |
| <b>TIME</b>                      | In <b>TIME</b> mode, the scanner will halt on a signal it encounters, scanning will resume after five seconds even if a signal is still on the frequency. To cancel scanning, press the the <b>PTT</b> switch, [ <b>▲</b> ] or [ <b>▼</b> ] key.                                                  |

1. Press and hold the **F** key to enter the Set mode.
2. Press the [**▲**] or [**▼**] key to select Set Mode Item "**25 RESUME**".
3. Press the **F** key to enable adjustment of this Set Mode Items.
4. Press the [**▲**] or [**▼**] key to select the desired scan-resume mode.
5. Press the **PTT** switch to save the setting and exit to normal operation.

**25 RESUME**  
→**BUSY**

## Scanning

### VFO Scanning

The **FT-25R/E** provides two VFO scanning functions: "Manual VFO Scanning" and "Programmed Mode (VFO) Scanning."

#### Manual VFO Scan

1. If necessary, press the [**\*MR**] key to change to the VFO mode.
2. Press and hold the [**▲**] or [**▼**] key to initiate upward or downward scanning, respectively.
3. When scanning encounters a signal strong enough to open the squelch, the scanner will halt temporarily; the decimal point of the frequency display will blink to indicate this "Resuming" condition.
4. The scanning will resume according to the Scan-Resume mode selected in the Set Mode Item "**25:RESUME**".
5. To cancel scanning, press the **PTT** switch, [**▲**] or [**▼**] key.

#### Programmed Mode (VFO) Scan

1. Press and hold the [**#VFO**] key.
2. Press the [**▲**] or [**▼**] key to select the bandwidth for Programmed Mode (VFO) scanner.

**PROG VFO SCAN**  
**→BAND**

Available selections are  $\pm 1$  MHz,  $\pm 2$  MHz,  $\pm 5$  MHz, ALL, PMS-X, and BAND.

| Display                          | Description                                                                                                            |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------|
| <b>BAND</b><br>(default setting) | The scanner will sweep frequencies on the current operating band.                                                      |
| <b><math>\pm 1</math>MHz</b>     | The scanner will sweep $\pm 1$ MHz from the operating frequency.                                                       |
| <b><math>\pm 2</math>MHz</b>     | The scanner will sweep $\pm 2$ MHz from the operating frequency.                                                       |
| <b><math>\pm 5</math>MHz</b>     | The scanner will sweep $\pm 5$ MHz from the operating frequency.                                                       |
| <b>ALL</b>                       | The scanner will sweep all frequencies.                                                                                |
| <b>PMS-X</b>                     | The scanner will sweep frequencies designated by the currently selected PMS (Programmable Memory Scan) frequency pair. |



**PMS-X** will appear in the [**#VFO**] selections after setting a PMS frequency pair.

## Scanning

3. Press the [**#VFO**] key to save the new setting and return to normal operation.
4. Press the **F** key, then press the [**#VFO**] key to start scanning.
5. When scanning encounters a signal strong enough to open the squelch, the scanning will halt temporarily; the decimal point of the frequency display will blink during this "Pause" condition.
6. The scanner will then resume according to the Scan-Resume mode selected in the "RESUME" setting.
7. To cancel scanning, press the **PTT** switch, [**▲**] or [**▼**] key.

## Input Character/Symbol List

On a character inputting display such as the memory mode “tag” display, the characters and symbols may be input as below:

| Key          | Key Assignment | Key           | Key Assignment                      |
|--------------|----------------|---------------|-------------------------------------|
| <b>1</b>     | 1              | <b>7 PQRS</b> | 7 P Q R S p q r s                   |
| <b>2 ABC</b> | 2 A B C a b c  | <b>8 TUV</b>  | 8 T U V t u v                       |
| <b>3 DEF</b> | 3 D E F d e f  | <b>9 WXYZ</b> | 9 W X Y Z w x y z                   |
| <b>4 GHI</b> | 4 G H I g h i  | <b>0 SET</b>  | 0 (blank character)                 |
| <b>5 JKL</b> | 5 J K L j k l  | <b>* MR</b>   | * + - , . / : ; @ (blank character) |
| <b>6 MNO</b> | 6 M N O m n o  |               |                                     |

## Set (Menu) Mode

The **FT-25R/E** Set Mode, already partially described in the previous chapters, may be activated to select or change various transceiver functions. Many of the useful parameter configurations have not been fully detailed in this manual. Refer to the chart below for a list of the Set Mode Items and their various parameters.

1. Press and hold the **F** key to enter the Set Mode.
2. Press the [**▲**] or [**▼**] key to select the Set Mode Item to be adjusted.
3. Press the **F** key momentarily to enable adjustment of the Set Mode Item.
4. Press the [**▲**] or [**▼**] key to adjust or select the parameter to be changed on the Set Mode Item selected in above step.
5. After completing your selection and adjustment, press the **PTT** switch momentarily to save the new setting and exit to normal operation.



Press and hold the **F** key to move from the lower menu contents to the upper menu contents in the Set Mode.

| Item<br>(lower menu item)     | Function                                                                                | Values                                             | Default Value           |
|-------------------------------|-----------------------------------------------------------------------------------------|----------------------------------------------------|-------------------------|
| <b>1 APO</b>                  | Setting of the Automatic Power-Off feature.                                             | OFF / 0.5H to 12.0H (Step 0.5H)                    | OFF                     |
| <b>2 ARTS</b>                 | Selects the Beep option and the Polling Interval during ARTS™ operation.                | BEEP= INRANG / ALWAYS / OFF<br>INTV= 25SEC / 15SEC | BEEP=OFF<br>INTV= 25SEC |
| <b>3 BATTSAVE</b>             | Selects the Receive-mode Battery Saver interval ("sleep" ratio)                         | 200mS / 300mS / 500mS / 1SEC / 2SEC / OFF          | 200mS                   |
| <b>4 B-CH.L/O</b>             | Enables/Disables the Busy Channel Lock-Out feature.                                     | OFF / ON                                           | OFF                     |
| <b>5 BEEP</b>                 | Beep function Enable/Disable on pressing the keypad, or stopping the receiver scanning. | KEY+SC / KEY / OFF                                 | KEY+SC                  |
| <b>6 BELL</b>                 | Select the number of CTCSS/DCS/PAGER/ARTS™ Bell ringer repetitions.                     | OFF / 1Time / 3Times / 5Times / 8Times / CONTINUE  | OFF                     |
| <b>7 COMPANDE (COMPANDER)</b> | Enables/Disables the Voice Compander feature                                            | OFF / ON                                           | OFF                     |

## Set (Menu) Mode

| Item<br>(lower menu item)       | Function                                                                                         | Values                                                                                     | Default Value                 |
|---------------------------------|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|-------------------------------|
| <b>8 CTCSS (CTCSS TONE)</b>     | Setting the CTCSS Frequency TX and RX                                                            | 50 CTCSS tones / OFF                                                                       | TX=100.0Hz<br>RX=100.0Hz      |
| <b>9 CW ID</b>                  | CW Identifier during ARTS™ operation.                                                            | TX= OFF / ON<br>ID= ----- (6 characters)                                                   | TX= OFF<br>ID= blank          |
| <b>10 DC VOLT</b>               | displays Battery DC Voltage.                                                                     | -                                                                                          | -                             |
| <b>11 DCS CODE</b>              | Setting the DCS CODE TX and RX                                                                   | 104 DCS CODEs / OFF                                                                        | TX=023<br>RX=023              |
| <b>12 DTMF SET</b>              | Selects the MANUAL or AUTO DTMF tones. Setting the DTMF autodialer sending delay time and Speed. | MODE= MANUAL / AUTO<br>DELAY= 50mS / 250mS / 450mS / 750mS / 1000mS<br>SPEED= 50mS / 100mS | M=MANUAL<br>D=450mS<br>S=50mS |
| <b>13 DTMF WRT</b>              | Programming to DTMF autodialer.                                                                  | -                                                                                          | -                             |
| <b>14 EDG.BEEP</b>              | Enables/Disables the Band-edge beeper while selecting the frequency via the [▲] or [▼] key.      | BEEP OFF / BEEP ON                                                                         | BEEP OFF                      |
| <b>15 KEY LOCK</b>              | Keyboard Lock function                                                                           | KEY / PTT / P+K                                                                            | KEY                           |
| <b>16 LAMP</b>                  | Selects the LCD/ Keypad Lamp mode.                                                               | 5secKey / 10secKey / 30secKey / CONT / OFF                                                 | 5secKey                       |
| <b>17 LED</b>                   | Selects the enable or disable TX/BUSY LED function.                                              | TX= ON / OFF<br>BUSY= ON/ OFF                                                              | TX=ON<br>BUSY=ON              |
| <b>18 MEM DEL (MEM DELETE)</b>  | Deletes Memory Channel                                                                           | -                                                                                          | -                             |
| <b>19 MON/T-CL (MON/T-CALL)</b> | Selects the <b>MONI</b> or <b>T.CALL</b> switch function.                                        | MONITOR / T-CALL1750 / T-CALL2100 / T-CALL1000 / T-CALL1450                                | MONITOR (*) or T-CALL1750 (*) |
| <b>20 NAME TAG</b>              | Renames Alpha-Numeric "Tags" for the Memory channels.                                            | -                                                                                          | -                             |

## Set (Menu) Mode

| Item<br>(lower menu item)  | Function                                                                                                 | Values                                                                                 | Default Value                               |
|----------------------------|----------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|---------------------------------------------|
| <b>21 PAGER</b>            | Setting the TX CTCSS of 2 tone and the RX CTCSS of 2 tone.<br>Enables/disables the Answer Back function. | TX: ** **<br>RX: ** **<br>ACK : ON / OFF                                               | TX=05 47<br>RX=05 47<br>ACK=OFF             |
| <b>22 PASSWORD</b>         | Enables/disables the Password feature                                                                    | OFF / ON /                                                                             | OFF                                         |
| <b>23 PRI.RVT</b>          | Enables/disables the Priority Revert feature.                                                            | RVT.OFF / RVT. ON                                                                      | RVT.OFF                                     |
| <b>24 REPEATER</b>         | ARS / MODE / SHIFT function setting                                                                      | ARS= ON / OFF<br>MODE=SIMPLEX / +RTP / -RTP<br>SHIFT= 0.05 MHz - 99.95 MHz (per 50KHz) | ARS=ON<br>MODE=SIMPLEX<br>SHIFT=**. **M (*) |
| <b>25 RESUME</b>           | Selects the Scan Resume mode.                                                                            | BUSY / HOLD / TIME                                                                     | BUSY                                        |
| <b>26 RF SQL</b>           | Adjusts the RF Squelch threshold level.                                                                  | S-1 / S-2 / S-3 / S-4 / S-5 / -6 / S-8 / S-FULL / OFF                                  | OFF                                         |
| <b>27 SCN.LAMP</b>         | Enables/Disables the Scan lamp while paused.                                                             | ON / OFF                                                                               | ON                                          |
| <b>28 SKIP (SKIP SCAN)</b> | Selects the Memory Scan "Skip" channel-selection mode.                                                   | -                                                                                      | -                                           |
| <b>29 SQL TYPE</b>         | Selects the Tone Encoder and/or Decoder mode.                                                            | OFF / R-TONE / T-TONE / TSQ / REV TN / DCS / PAGER                                     | OFF                                         |
| <b>30 STEP</b>             | Setting of the frequency steps.                                                                          | 5 / 6.25 / 10 / 12.5 / 15 / 20 / 25 / 50 / 100 kHz, or AUTO                            | AUTO                                        |
| <b>31 TOT</b>              | Setting of the TOT time.                                                                                 | 1 min - 30 min (per 1 min) or OFF                                                      | 3min                                        |
| <b>32 TX PWR</b>           | Selects TX Power                                                                                         | HI(5W) / MID(2.5W) / LOW(0.5W)                                                         | HI(5W)                                      |

## Set (Menu) Mode

| Item<br>(lower menu item) | Function                                                            | Values             | Default Value |
|---------------------------|---------------------------------------------------------------------|--------------------|---------------|
| <b>33 TX SAVE</b>         | Enables/Disables the Transmitter Battery Saver.                     | SAVE OFF / SAVE ON | SAVE OFF      |
| <b>34 VFO.SPL</b>         | Enables or disables "VFO Split" operation.                          | VSP.OFF / VSP.ON   | VSP.OFF       |
| <b>35 VOX</b>             | Enable / Disable VOX function.                                      | VOX OFF / VOX ON   | VOX OFF       |
| <b>36 WFM.RCV</b>         | Broadband FM Radio(WFM) function<br>Enables/Disables                | WFM.ON / WFM.OFF   | WFM.ON        |
| <b>37 WIDE/NAR</b>        | Select Wide ( $\pm 5$ kHz) or Narrow ( $\pm 2.5$ kHz) TX Deviation. | WIDE / NARROW      | WIDE          |
| <b>38 WX ALERT</b>        | Enables/Disables the Weather Alert Scan feature.                    | ALT.OFF / ALT. ON  | ALT.OFF       |
| <b>39 SCRAMBLE(*)</b>     | Inversion scrambling (Encryption)                                   | SCRB.OFF/SCRB.ON   | SCRB.OFF      |

(\*) : This function may be displayed, depending on the transceiver version.

## Troubleshooting

If you suspect a malfunction, check the following items before requesting a repair.

### The transceiver does not turn on.

- Is the battery depleted?
- Charge the battery pack after purchase, and when the transceiver has not been used for a long time.
- Is the battery pack properly attached?  
Refer to “Installing the Battery Pack” and securely mount the battery pack.

### There is no sound.

- Is the squelch level (or S meter squelch) set too high?  
Press the **MONI/T.CALL** key and verify that you can hear white noise.  
Adjust the squelch level (or S meter squelch) when receiving a weak signal.
- Is the volume low?  
Rotate the **PWR/VOL** knob clockwise to increase the volume.
- Is the tone squelch or DCS on?  
When the tone squelch or DCS is on, the sound is not output until the transceiver receives a signal containing the same tone frequency or DCS code set.  
For more details on the DCS code, refer to the Advance Manual.

### There is no transmission of radio waves.

- Are you pressing the **PTT** switch properly?
- Is the PTT lock on?
- Is the Busy TX Block (BCLO function) on?  
When the Busy TX Block (BCLO function) is on, transmission is inhibited when receiving a signal, even if the **PTT** switch is pressed. Wait until the signal being received stops and then press the **PTT** switch.
- Is the transmission frequency on a ham radio band?  
Transmission cannot be performed on the FM Radio Broadcast Band/Information Radio Band.
- Is the voltage of the battery pack correct?  
Check the remaining charge on the battery pack.  
In addition, using an inadequate power supply where voltage drops during transmission will prevent the **FT-25R/E** from operating at full capability.

### The keys or DIAL do not respond.

- Is the Keypad Lock or PTT Lock on?

## Troubleshooting

### **The battery pack cannot be charged or battery power depletes immediately after charging.**

- Is the battery pack being charged with a charger specified by Yaesu? Charge the battery pack using the accessory battery charger (SAD-20B/C/U/G) or the rapid charge cradle (SBH-22).
- Is the battery pack in use exhausted?

If the “Charging Error” appears on the desktop charger lamp when charging, there is a chance the battery pack is over discharged. If the error is repeatedly displayed after charging the battery pack several times, the battery pack may have reached its service life or be defective. Battery packs are consumables. Please replace an exhausted battery pack with a new one immediately. Battery packs can be charged and reused up to approximately 300 times.

Some specific combinations of signals may cause internal beats (“birdies”) from

high frequencies, caused by the internal oscillator. This is not a malfunction. (See the calculation formula below: “n” is for the arbitrary integer). Also, depending on the combination of simultaneously received signals, there may be fluctuations in receive sensitivity.

- Receive Frequency = 13 MHz × n multiplicative
- Receive Frequency = 19.2 MHz × n multiplicative

## Specifications

### General

|                                                |                                                       |
|------------------------------------------------|-------------------------------------------------------|
| <b>Frequency Ranges:</b>                       | RX 136 - 174 MHz                                      |
|                                                | TX 144 - 146 (148) MHz                                |
|                                                | FM Broadcast 65-108 MHz                               |
| <b>Channel Steps:</b>                          | 5 / 6.25 / 10 / 12.5 / 15 / 20 / 25 / 50 / 100 kHz    |
| <b>Frequency Stability:</b>                    | ±5 ppm (−10 °C to +60 °C, +14 F to +140F )            |
| <b>Repeater Shift:</b>                         | ±600 kHz (144 MHz), ±1.6 / 5.0 / 7.6 MHz              |
| <b>Emission Type:</b>                          | F2D, F3E                                              |
| <b>Antenna Impedance:</b>                      | 50 Ohms                                               |
| <b>Supply Voltage:</b>                         | Nominal: 7.4V DC, Negative Ground                     |
| <b>Current Consumption:</b><br>(Approx. @7.2V) | 215 mA (Receive) 200 mW Output                        |
|                                                | 110 mA (Standby, Saver Off)                           |
|                                                | 30 mA (Standby, Saver On)                             |
|                                                | 4 mA (Auto Power Off)                                 |
|                                                | 1.5 A (5 W Tx , 144 MHz) 7.4 V DC                     |
| <b>Operating Temperature:</b>                  | − 4 °F to +14 °F (− 20 °C to + 60 °C)                 |
| <b>Case Size:</b>                              | 2.1" (W) x 4.1" (H) x 1.2" (D) (52.5 x 104.5 x 31 mm) |
|                                                | (W/O knob and antenna)                                |
| <b>Weight:</b>                                 | 9.17 Oz (260 g) with SBR-25LI and antenna             |

### Transmitter

|                              |                                                                        |
|------------------------------|------------------------------------------------------------------------|
| <b>RF Power Output:</b>      | 5.0 W (High) / 2.5 W (Middle) / 0.5 W (Low)<br>(@ 7.4 V with SBR-25LI) |
| <b>Modulation Type:</b>      | Variable Reactance F2D, F3E                                            |
| <b>Maximum Deviation:</b>    | ±5.0 kHz (F2D, F3E)                                                    |
| <b>Spurious Emission:</b>    | At least 60 dB down (@ High and Middle power)                          |
|                              | At least 40 dB down (@ Low power)                                      |
| <b>Microphone Impedance:</b> | 2 kOhms                                                                |

## Specifications

### Receiver

|                      |                                                                                                                                            |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Circuit Type:</b> | Direct-Conversion                                                                                                                          |
| <b>Sensitivity :</b> | 0.2 $\mu$ V for 12 dB SINAD (140 - 150 MHz, NFM)<br>0.2 $\mu$ V for 12 dB SINAD (420 - 470 MHz, NFM)                                       |
| <b>Selectivity:</b>  | 12 kHz / 35 kHz (-6 dB / -60 dB)                                                                                                           |
| <b>AF Output:</b>    | 0.8 W @ 16 ohms for 10% THD (@ 7.4 V)<br>(Internal SP Max Power 1 W)<br>0.8 W @ 16ohms for 10%THD (@ 7.4 V)<br>(EXT SP Jack Max Power 1 W) |

*Specifications are subject to change without notice, and are guaranteed with-in the 144 MHz amateur band only. Frequency ranges will vary according to transceiver version; check with your dealer.*

## “AUTO” Mode Preset Operating Parameter

### USA Version

| Frequency Range (MHz)    | Mode | step     |
|--------------------------|------|----------|
| 136.000-144.000          | FM   | 12.5 kHz |
| 144.000-148.000          | FM   | 5k Hz    |
| 148.000-156.000          | FM   | 12.5 kHz |
| 156.000-157.450          | FM   | 25 kHz   |
| 157.450-160.600          | FM   | 12.5 kHz |
| 160.600-160.975          | FM   | 25 kHz   |
| 160.975-161.500          | FM   | 12.5 kHz |
| 161.500-162.900          | FM   | 25 kHz   |
| 162.900-174.000          | FM   | 12.5 kHz |
| 65.000-108.000 (RX only) | WFM  | 100kHz   |

### Asian/European Version

| Frequency Range (MHz)    | Mode | step     |
|--------------------------|------|----------|
| 136.000-160.600          | FM   | 12.5 kHz |
| 160.600-162.025          | FM   | 25 kHz   |
| 162.025-174.000          | FM   | 12.5 kHz |
| 65.000-108.000 (RX only) | WFM  | 100 kHz  |

1. Changes or modifications to this device that are not expressly approved by YAESU MUSEN could void the user's authorization to operate this device.
2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference including received, interference that may cause undesired operation.
3. The scanning receiver in this equipment is incapable of tuning, or readily being altered, by the User to operate within the frequency bands allocated to the Domestic public Cellular Telecommunications Service in Part 22.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **DECLARATION BY MANUFACTURER**

The Scanner receiver is not a digital scanner and is incapable of being converted or modified to a digital scanner receiver by any user.

**WARNING:** MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.

## Note





Copyright 2016  
YAESU MUSEN CO., LTD.  
All rights reserved.

No portion of this manual  
may be reproduced  
without the permission of  
YAESU MUSEN CO., LTD.

**YAESU MUSEN CO., LTD.**  
Tennozu Parkside Building  
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

**YAESU USA**  
6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

**YAESU UK**  
Unit 12, Sun Valley Business Park, Winnall Close  
Winchester, Hampshire, SO23 0LB, U.K.



1612H-XX  
Printed in Japan

