





1. Delete R22.
2. Delete R32.

