


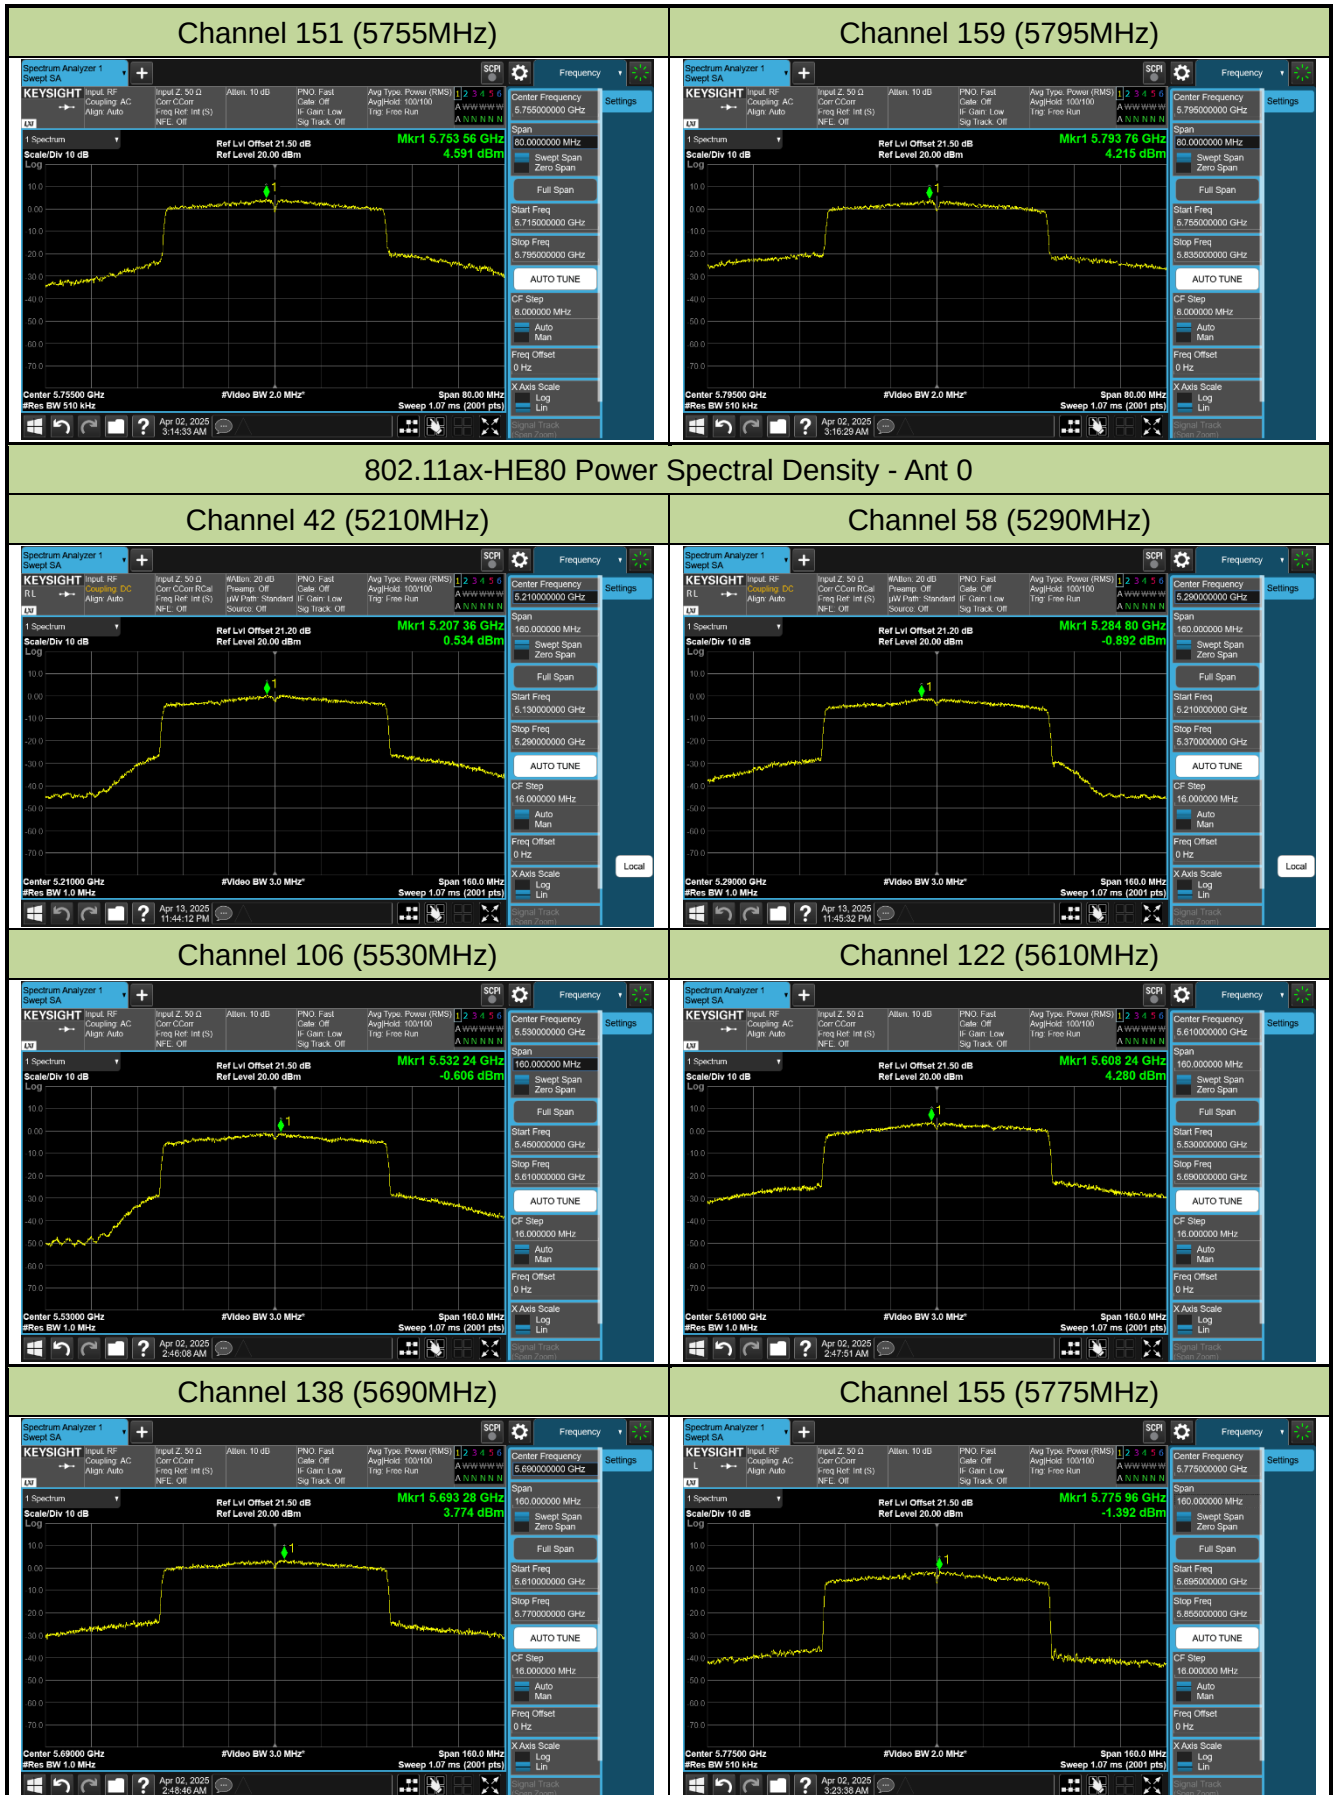

802.11ax-HE160 Power Spectral Density - Ant 0

Channel 50 (5250MHz)




Channel 114 (5570MHz)




802.11a Power Spectral Density - Ant 1


Channel 36 (5180MHz)

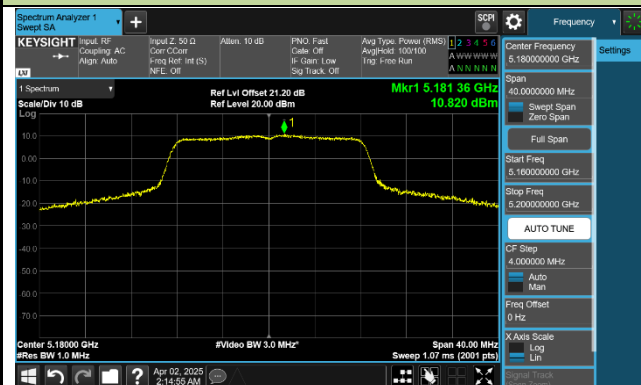


Channel 40 (5200MHz)

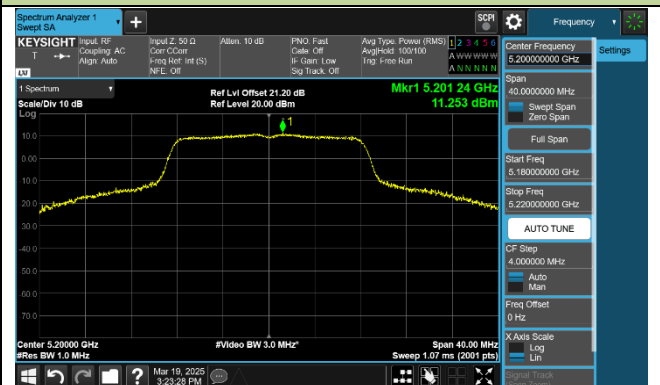

Channel 48 (5240MHz)

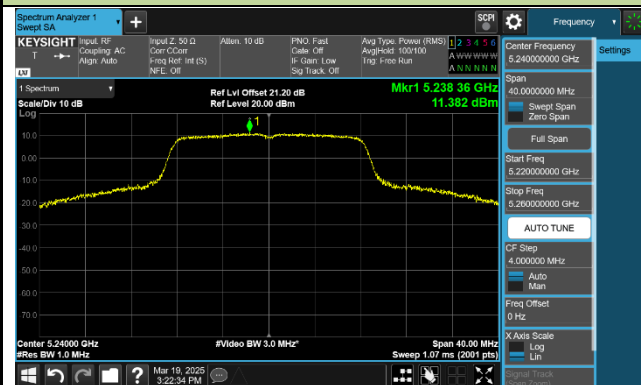


Channel 52 (5260MHz)

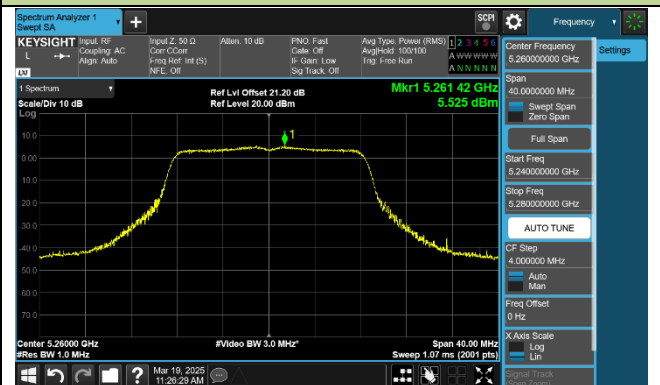

Channel 60 (5300MHz)




Channel 64 (5320MHz)

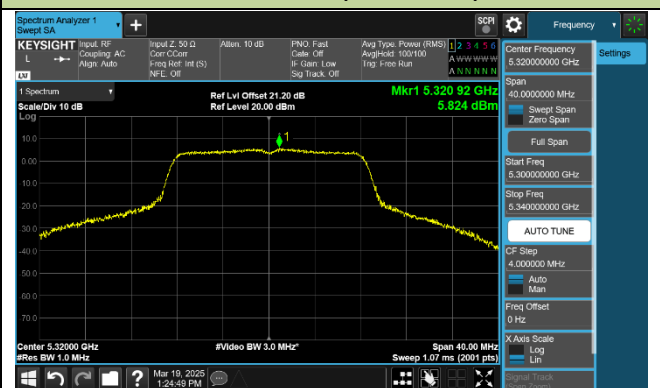


Channel 100 (5500MHz)




Channel 116 (5580MHz)

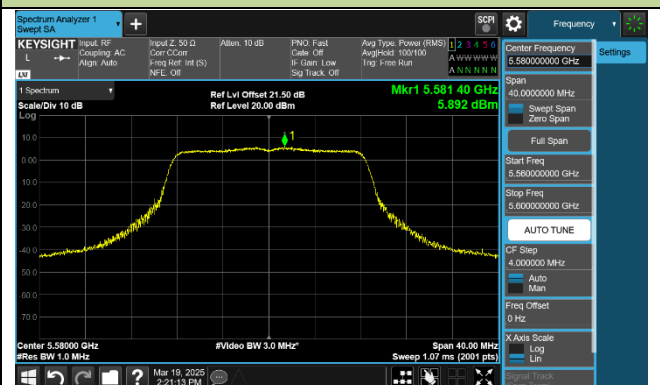

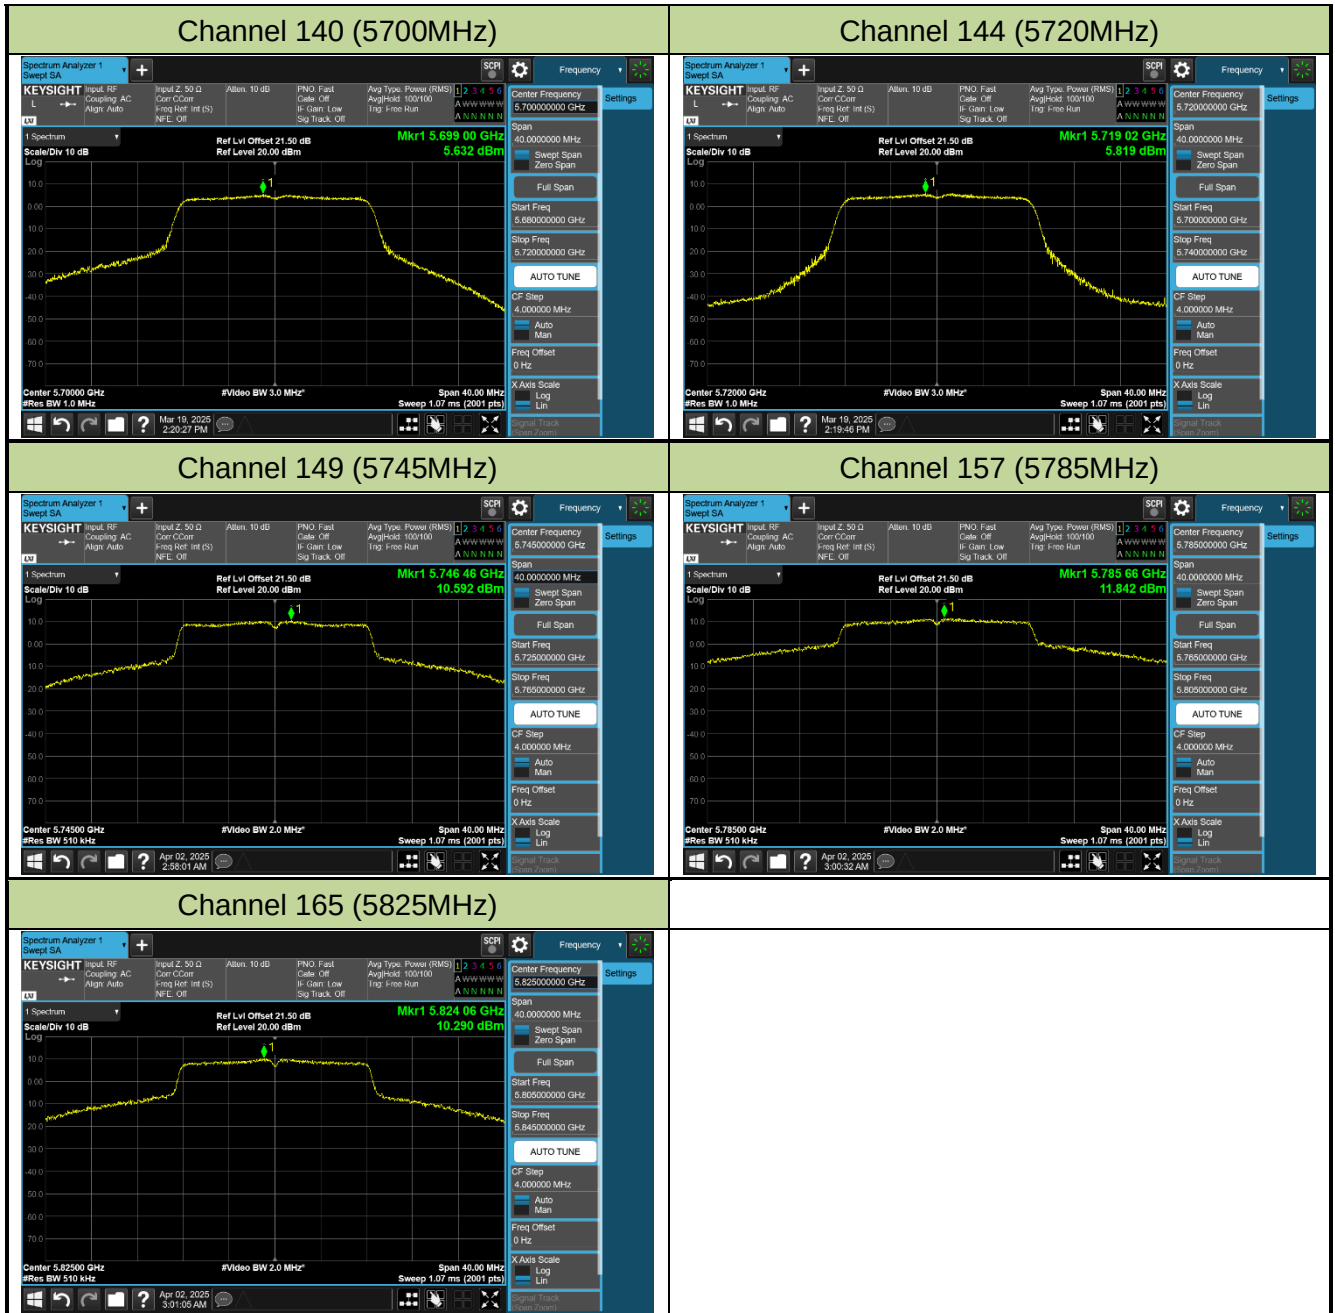


802.11ac-VHT20 Power Spectral Density - Ant 1


Channel 36 (5180MHz)

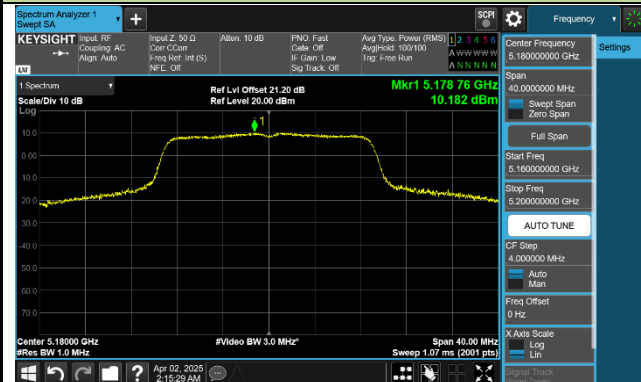


Channel 40 (5200MHz)

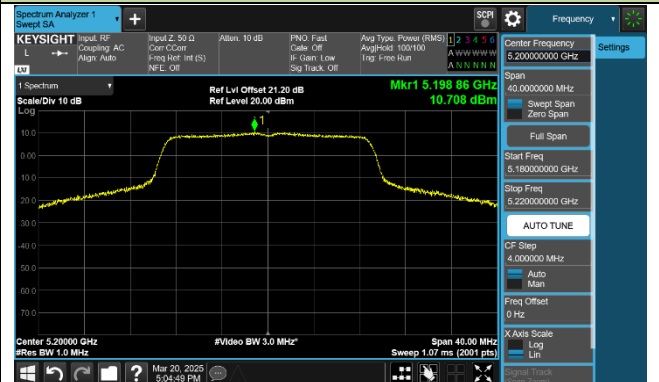


Channel 48 (5240MHz)

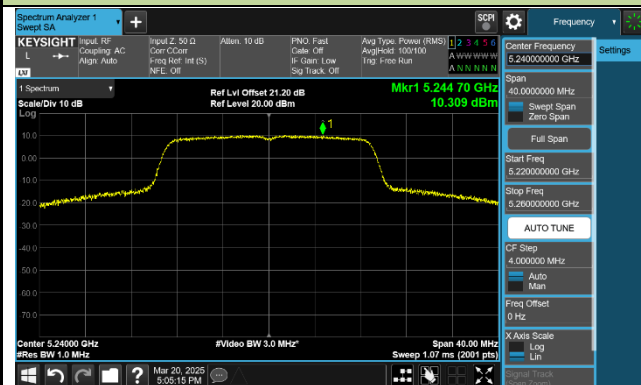


Channel 52 (5260MHz)

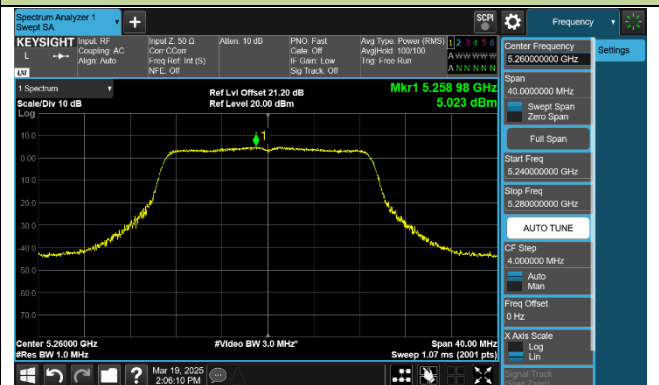

Channel 60 (5300MHz)

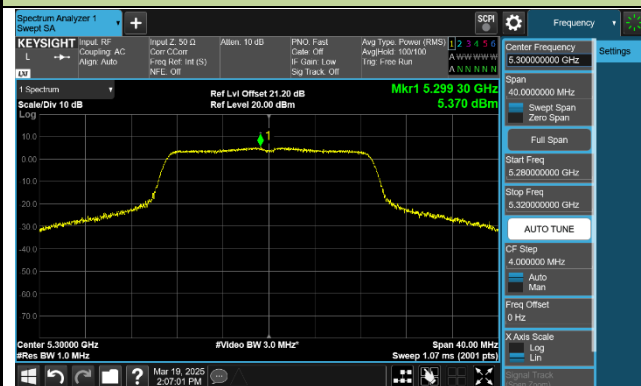


Channel 64 (5320MHz)

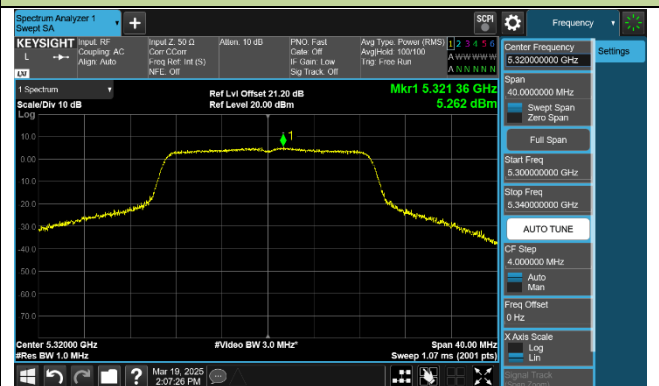


Channel 100 (5500MHz)




Channel 116 (5580MHz)

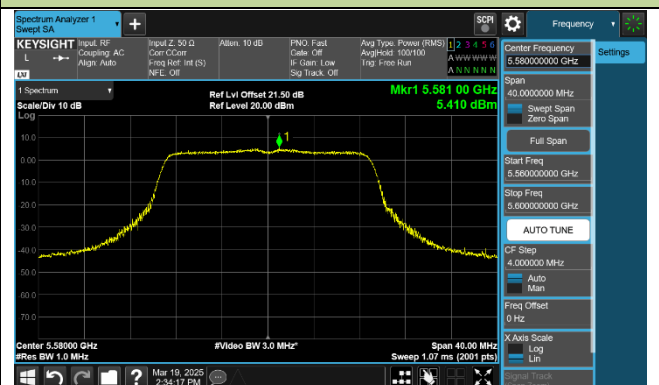

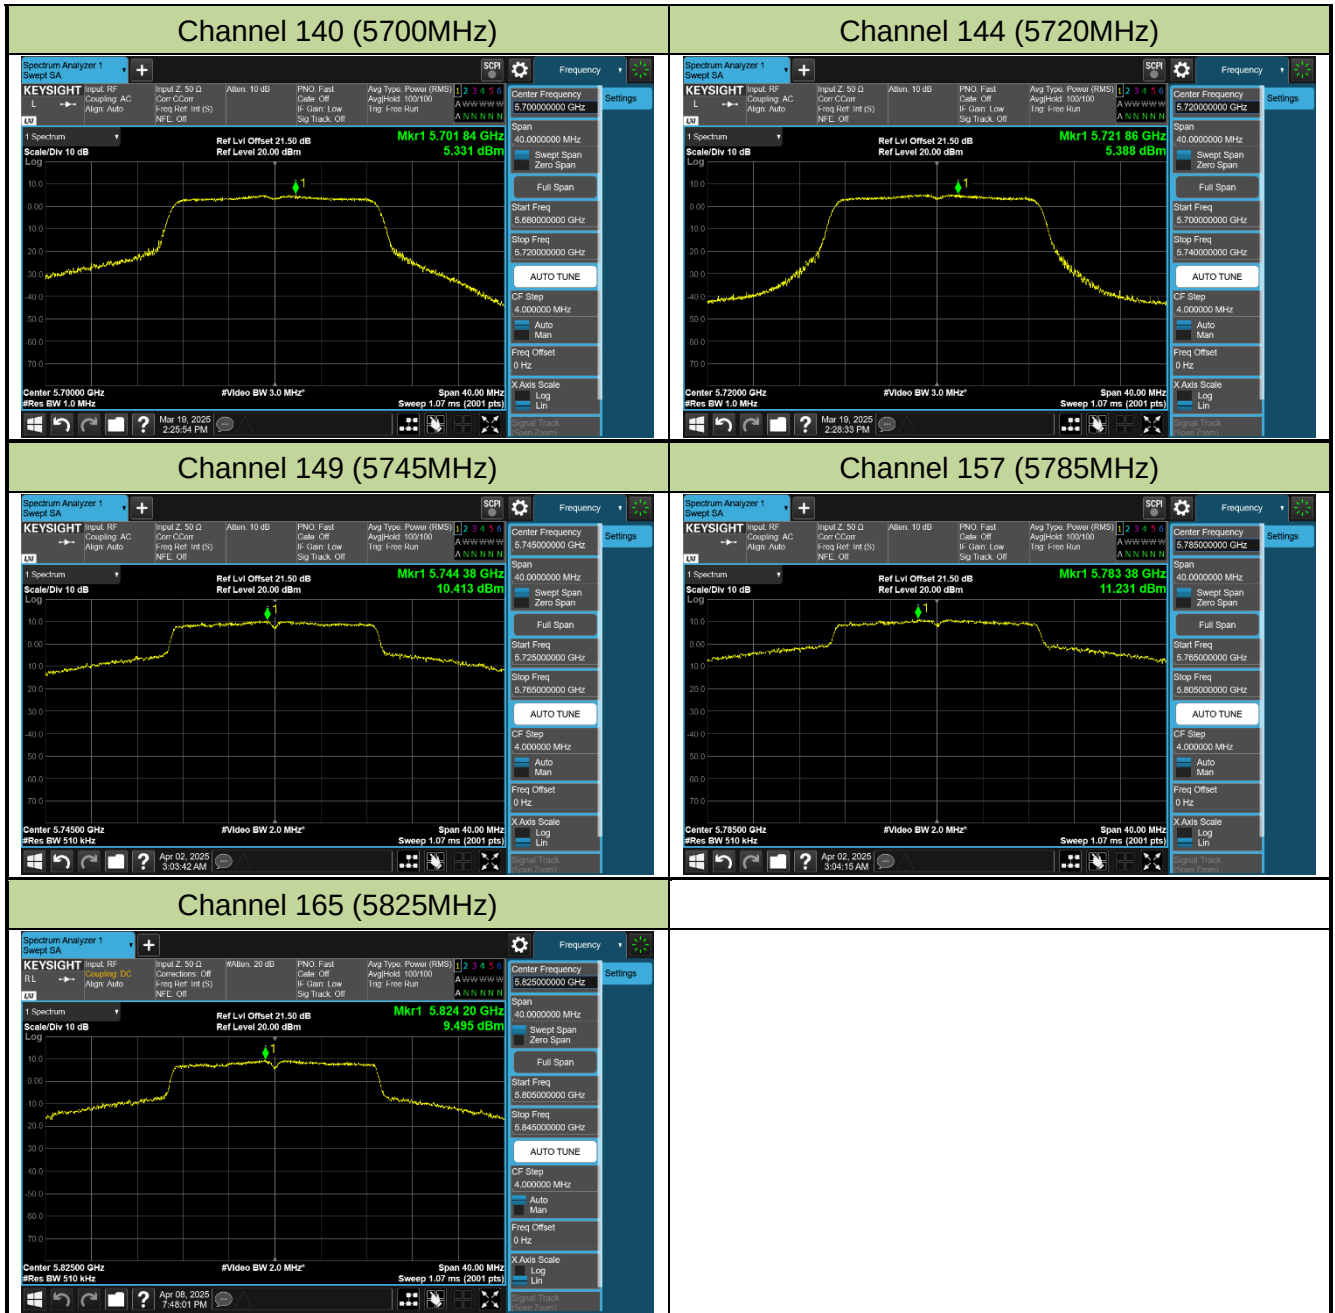

802.11ac-VHT40 Power Spectral Density - Ant 1


Channel 38 (5190MHz)

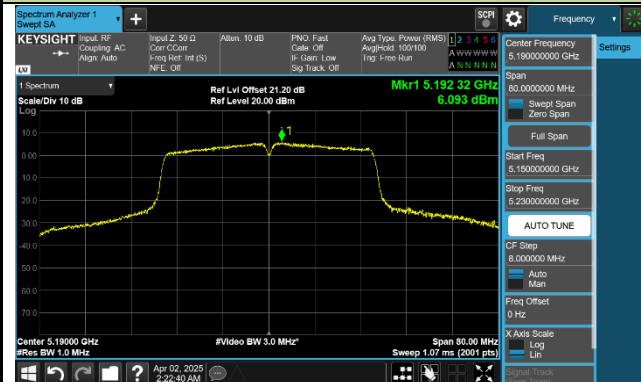


Channel 46 (5230MHz)




Channel 54 (5270MHz)

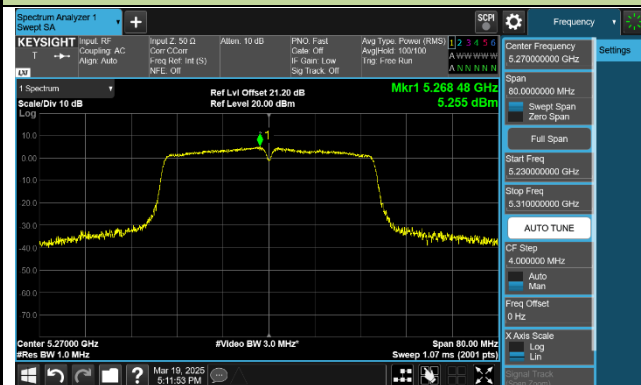


Channel 62 (5310MHz)

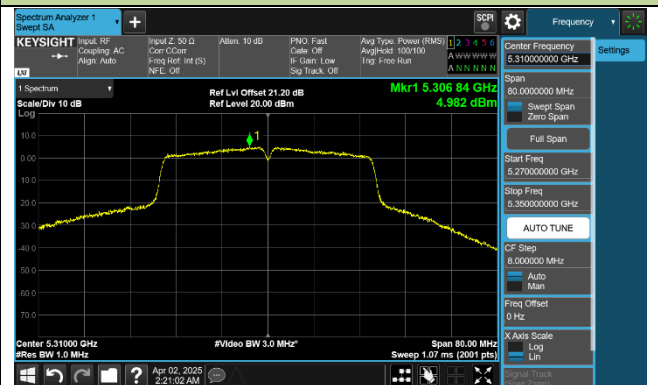

Channel 102 (5510MHz)

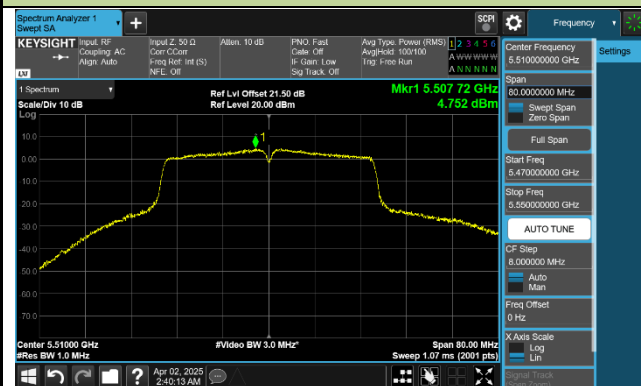


Channel 110 (5550MHz)

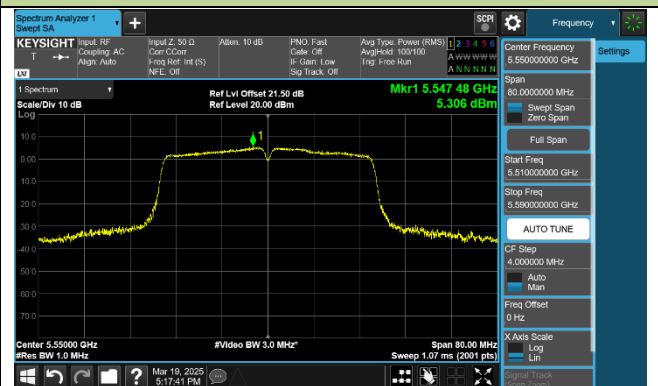


Channel 134 (5670MHz)




Channel 142 (5710MHz)

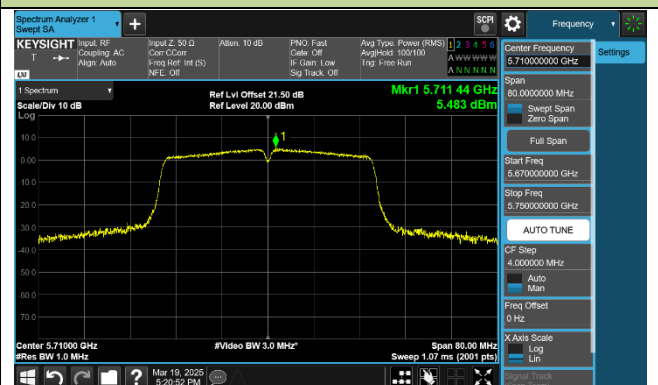

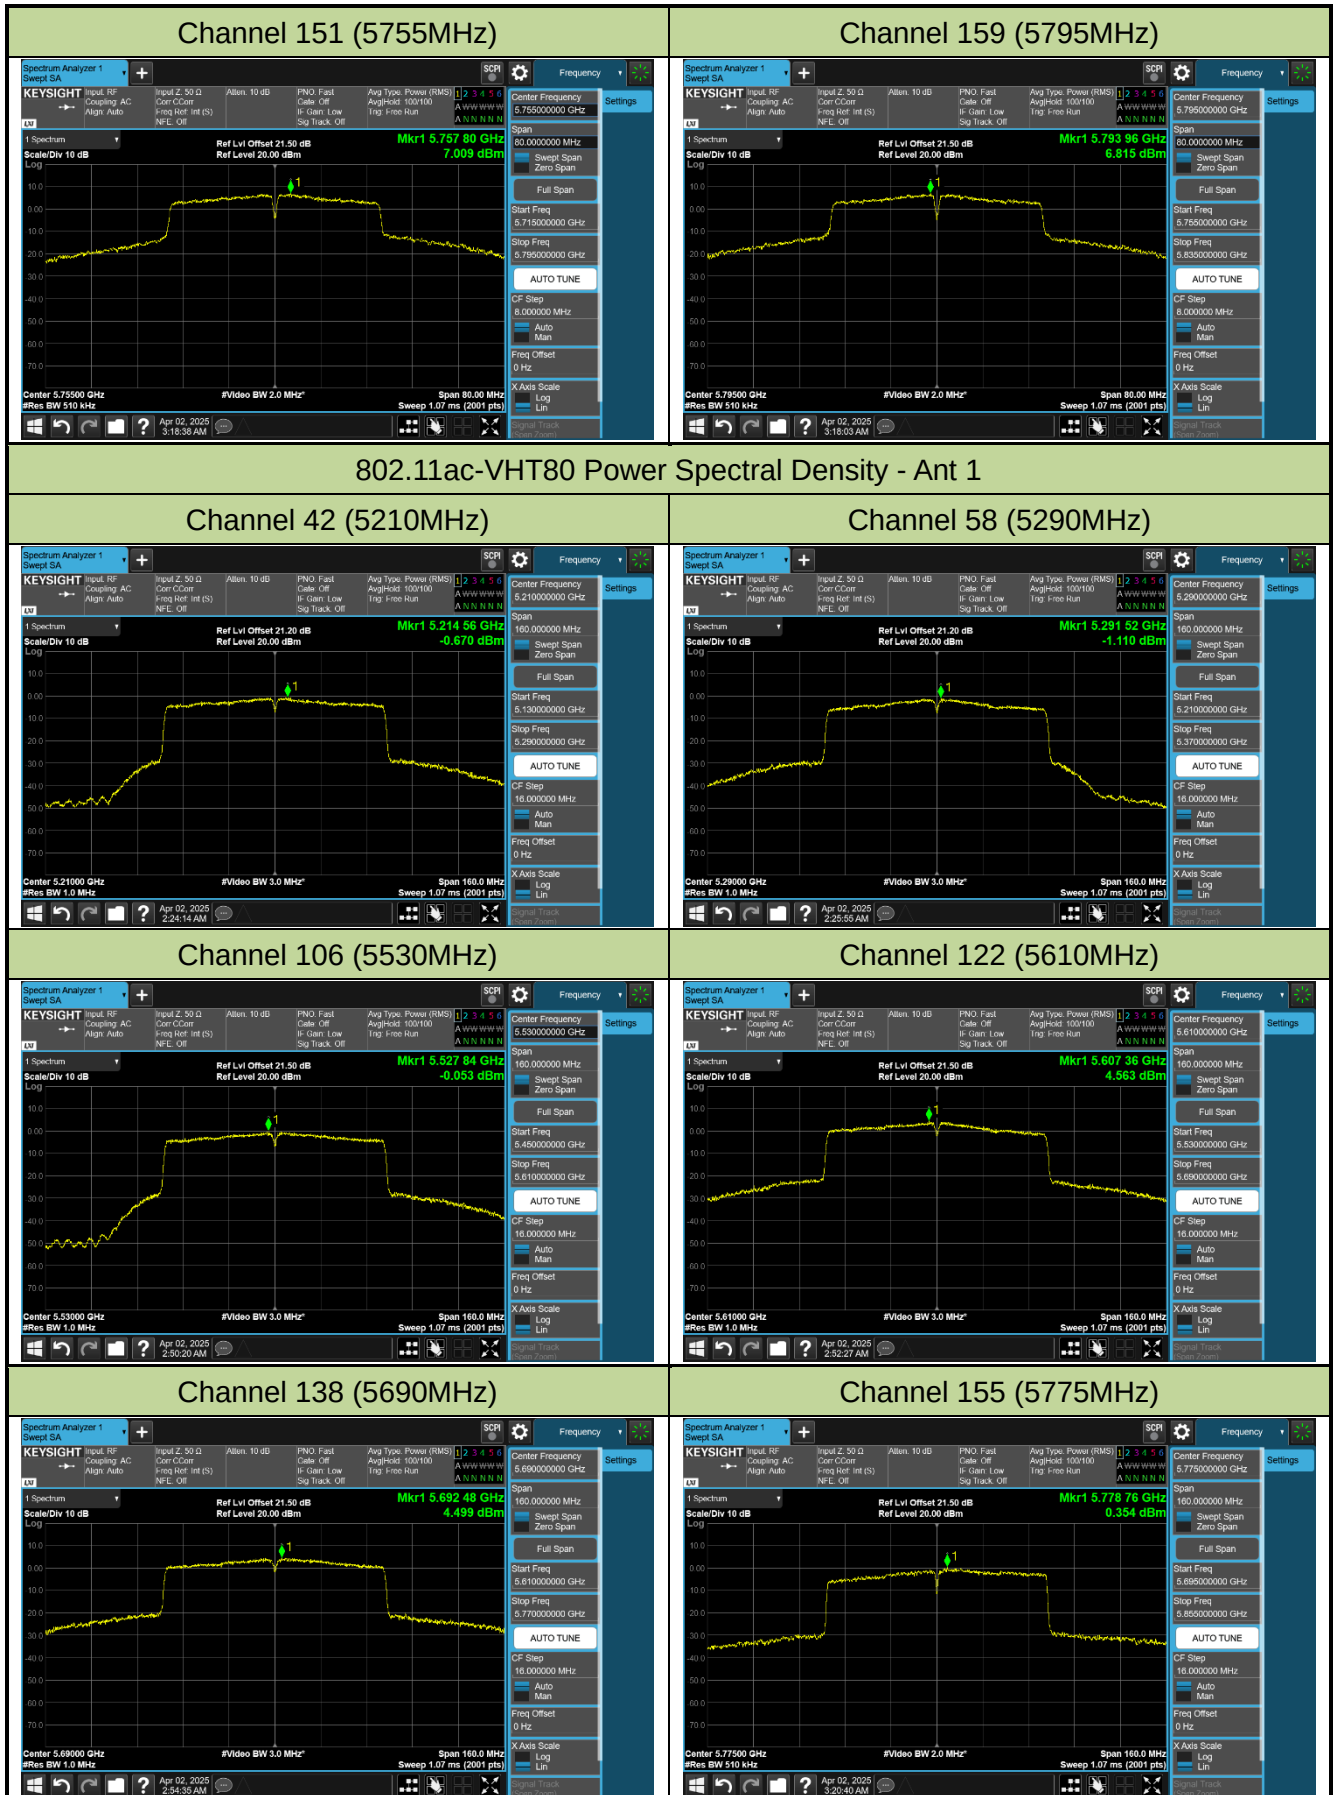

802.11ac-VHT160 Power Spectral Density - Ant 1

Channel 50 (5250MHz)

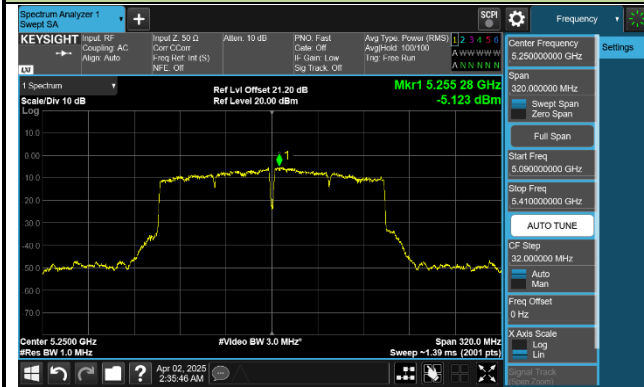


Channel 114 (5570MHz)



802.11ax-HE20 Power Spectral Density - Ant 1


Channel 36 (5180MHz)

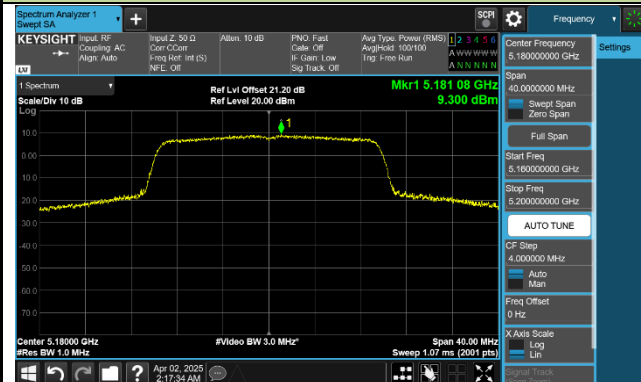


Channel 40 (5200MHz)




Channel 48 (5240MHz)

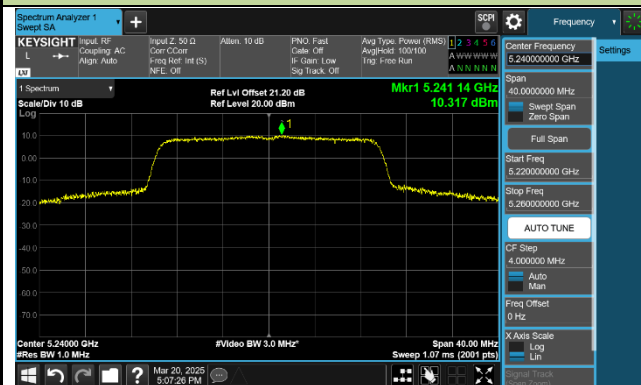


Channel 52 (5260MHz)

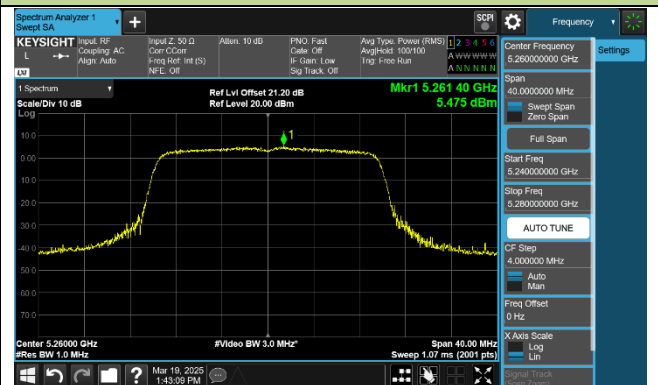

Channel 60 (5300MHz)

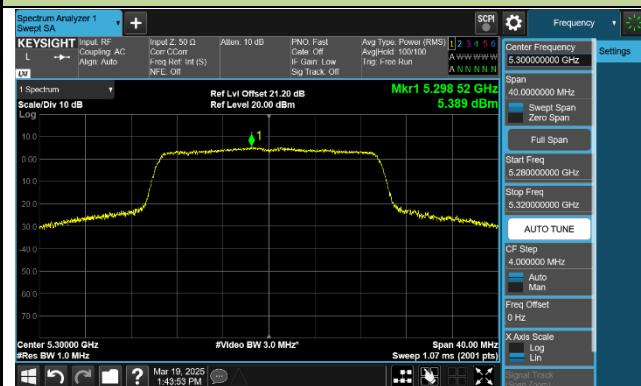

Channel 64 (5320MHz)

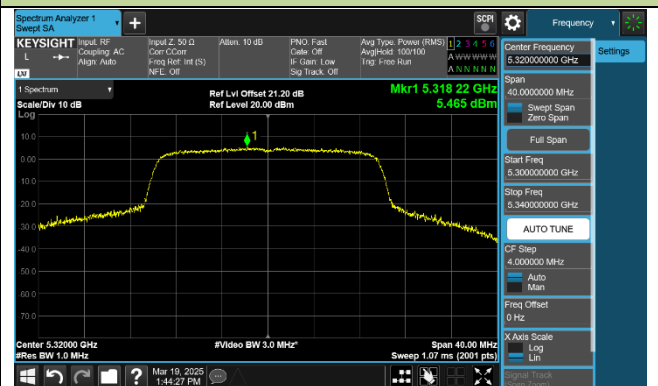


Channel 100 (5500MHz)




Channel 116 (5580MHz)



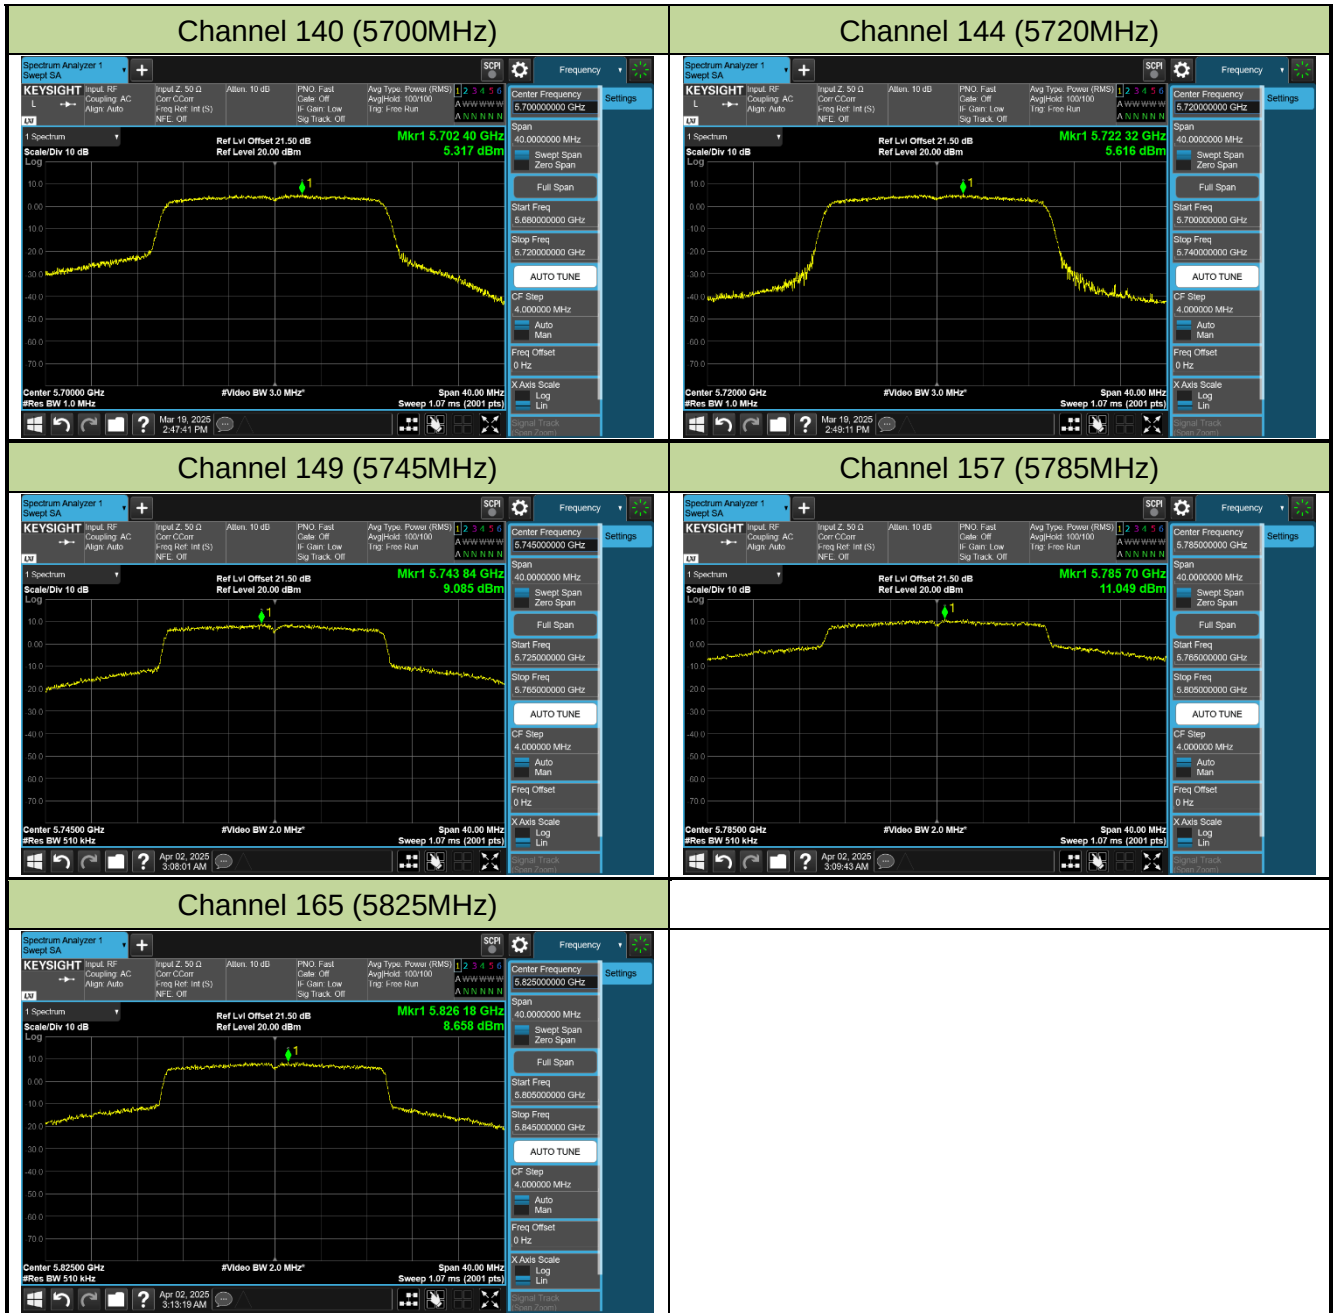


802.11ax-HE40 Power Spectral Density - Ant 1


Channel 38 (5190MHz)

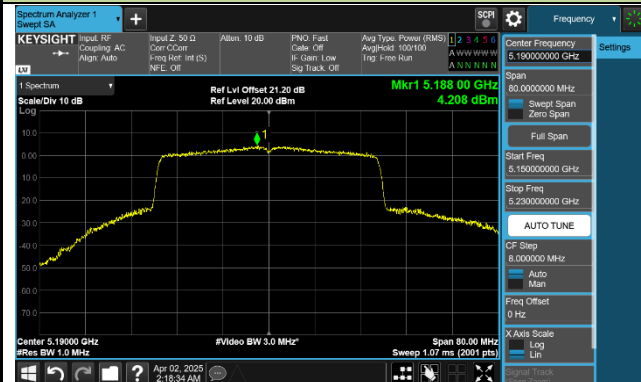


Channel 46 (5230MHz)

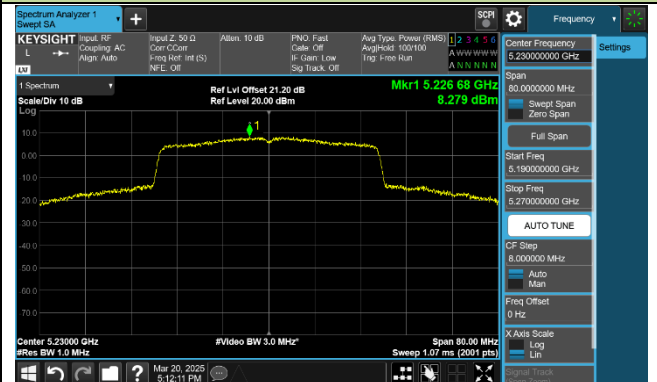


Channel 54 (5270MHz)

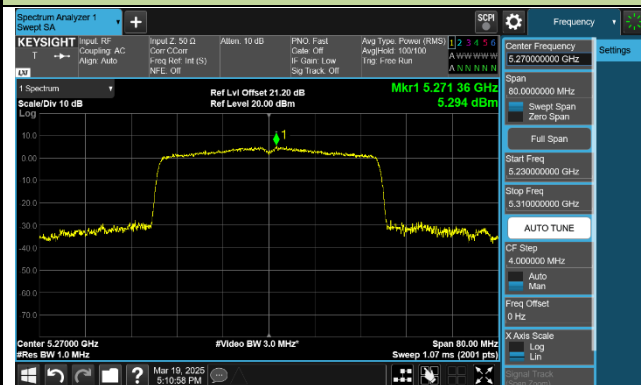


Channel 62 (5310MHz)

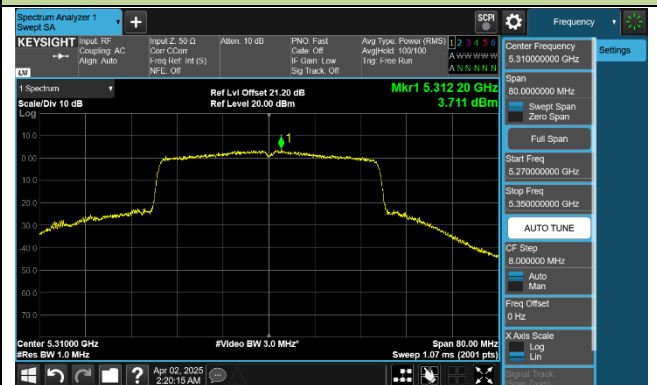

Channel 102 (5510MHz)

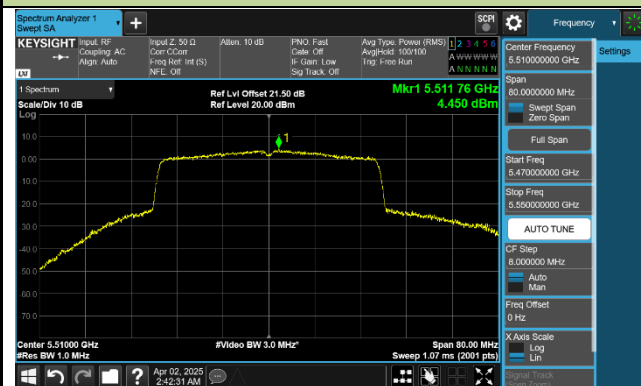

Channel 110 (5550MHz)

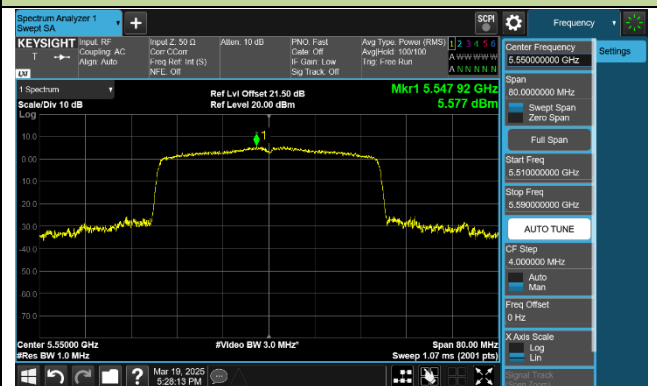


Channel 134 (5670MHz)




Channel 142 (5710MHz)



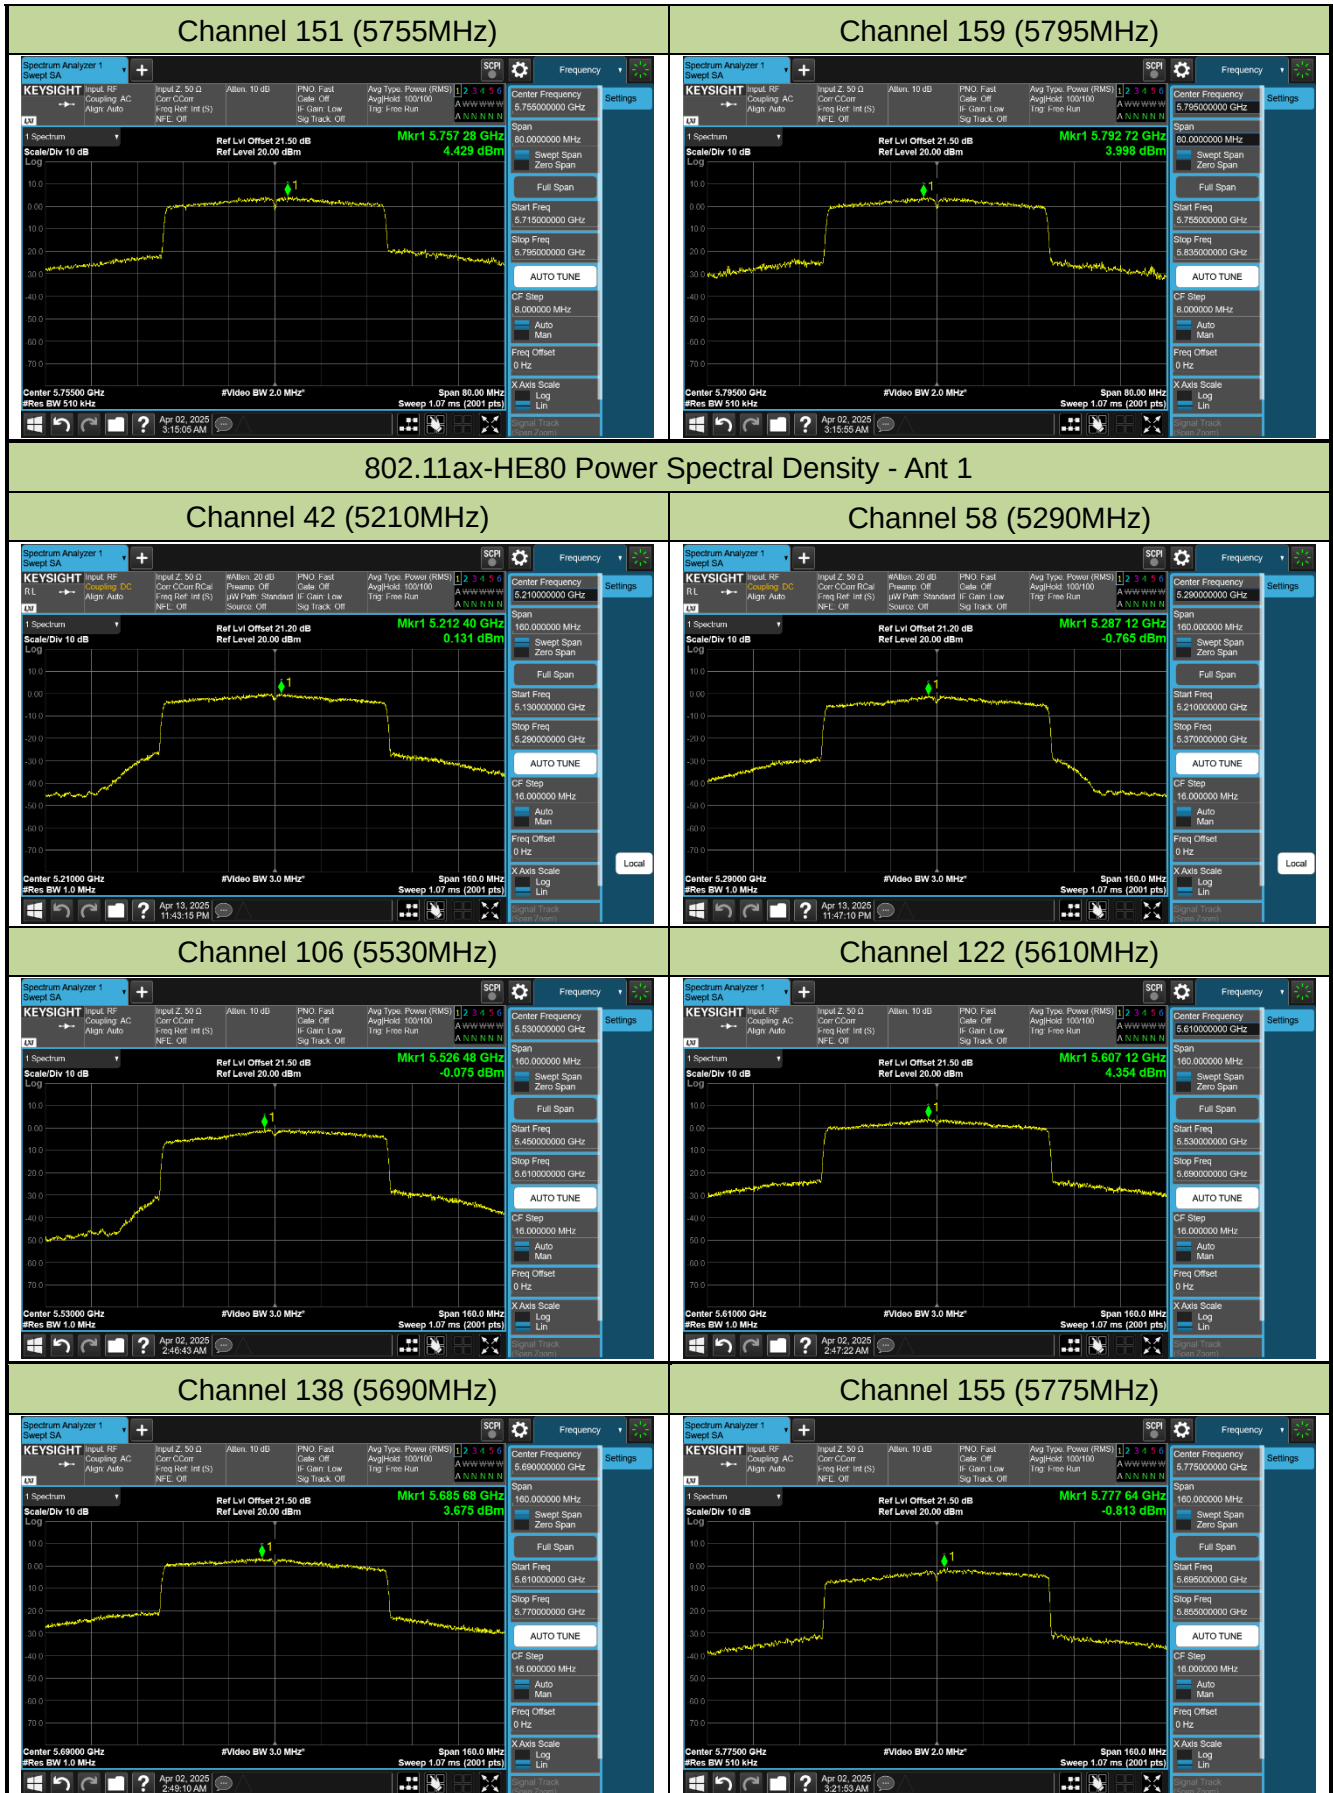

802.11ax-HE160 Power Spectral Density - Ant 1

Channel 50 (5250MHz)

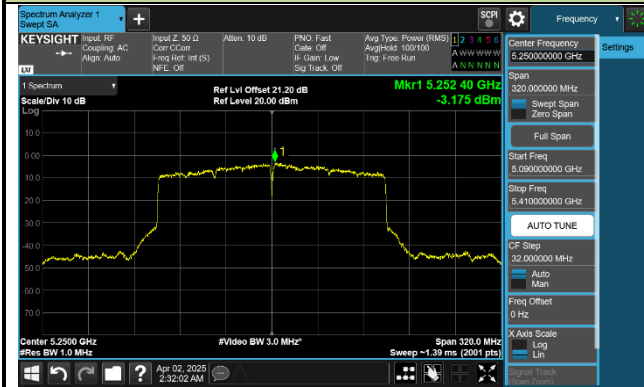

Channel 114 (5570MHz)



7.7. Frequency Stability Measurement

7.7.1. Test Limit

Manufacturers of U-NII devices are responsible for ensuring frequency stability such that an emission is maintained within the band of operation under all conditions of normal operation as specified in the user's manual.

7.7.2. Test Limit

Frequency Stability Under Temperature Variations:

The equipment under test was connected to an external AC or DC power supply and input rated voltage. RF output was connected to a frequency counter or spectrum analyzer via feed through attenuators. The EUT was placed inside the temperature chamber. Set the spectrum analyzer RBW low enough to obtain the desired frequency resolution and measure EUT 20°C operating frequency as reference frequency. Turn EUT off and set the chamber temperature to highest. After the temperature stabilized for approximately 30 minutes recorded the frequency. Repeat step measure with 10°C decreased per stage until the lowest temperature reached.

Frequency Stability Under Voltage Variations:

Set chamber temperature to 20°C. Use a variable AC power supply / DC power source to power the EUT and set the voltage to rated voltage. Set the spectrum analyzer RBW low enough to obtain the desired frequency resolution and recorded the frequency.

Reduce the input voltage to specify extreme voltage variation ($\pm 15\%$) and endpoint, record the maximum frequency change.