



User Manual

HSPA+ 3G Router

DWR-712

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2014 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

Table of Contents

Product Overview	1	DHCP Server Settings	23
Package Contents	1	IPv6 Settings	24
System Requirements	1	Message Service	25
Introduction	2	SMS Inbox	25
Hardware Overview	3	Create Message	26
Rear Panel	3	SMSC Setting	26
Front Panel	4	Voice	27
LEDs	5	Call Forwarding	27
Installation	6	Call Waiting	27
Connect to Your Network	6	USSD	28
Wireless Installation Considerations	7	Advanced	29
Configuration	8	Virtual Server	29
Web-based Configuration Utility	8	Application Rules	31
Setup	9	QoS Engine	32
Internet	9	MAC Address Filter	33
Internet Connection Setup Wizard	9	URL Filter	34
Manual Internet Connection Setup	11	Outbound Filter	35
Wireless Settings	13	Inbound Filter	36
Wireless Connection Setup Wizard	13	SNMP	37
Manual Wireless Connection Setup	15	Routing	38
Wireless Settings	16	Advanced Wireless	39
Wireless Security Mode	17	Advanced Network	41
Wi-Fi Protected Setup	20	Network Scan	42
Network Settings	22	DMZ	43
Router Settings	22	Tools	44
		Admin	44

Time	45	Configuring Wireless Security	71
Syslog	46	Using Windows® XP	73
E-mail Settings	47	Configure WEP	74
System	48	Configure WPA-PSK.....	76
Firmware	49	Troubleshooting	78
Dynamic DNS	50	Wireless Basics	80
System Check.....	51	What is Wireless?.....	81
Schedules	52	Tips.....	83
Connection Reset	53	Wireless Modes.....	84
Vivo Chip.....	54	Networking Basics	85
PIN Control	55	Check your IP address.....	85
Status	56	Statically Assign an IP address	86
Device Info	56	Technical Specifications	87
Log	57		
Statistics	58		
Wireless	59		
IPv6 Status.....	60		
Diagnostic	61		
Support	62		
Connecting to a Wireless Network	63		
Using Windows® 8	63		
WPA/WPA2	63		
Using Windows® 7	65		
Configuring Wireless Security	67		
Using Windows Vista™	70		

Product Overview

Package Contents

- D-Link DWR-712 HSPA+ 3G Router
- Power adapter
- Manual and Warranty on CD
- Antenna
- RJ45 cable
- RJ11 cable

Note: Using a power supply with a different voltage rating than the one included with the DWR-712 will cause damage and void the warranty for this product.

System Requirements

- A compatible (U)SIM card with service.*
- Computers with Windows®, Macintosh®, or Linux-based operating system with an installed Ethernet adapter
- Internet Explorer 6 or Netscape Navigator™ Version 6.0 and above (for configuration)

* Subject to services and service terms available from your carrier.

Introduction


The D-Link HSPA+ 3G Router allows users to access worldwide mobile broadband networks. Once connected, users can transfer data, stream media, and send SMS messages. Simply insert your UMTS/HSUPA SIM card, and share your 3G Internet connection through a secure 802.11n wireless network or using any of the four 10/100 Ethernet ports.

Keep your wireless network safe with WPA/WPA2 wireless encryption. The DWR-712 utilizes dual-active firewalls (SPI and NAT) to prevent potential attacks across the Internet, and includes MAC address filtering to control access to your network.

The HSPA+ 3G Router can be installed quickly and easily almost anywhere. This router is great for situations where an impromptu wireless network must be set up, or wherever conventional network access is unavailable. The DWR-712 can even be installed in buses, trains, or boats, allowing passengers to check e-mail or chat online while commuting.

Hardware Overview

Front Panel

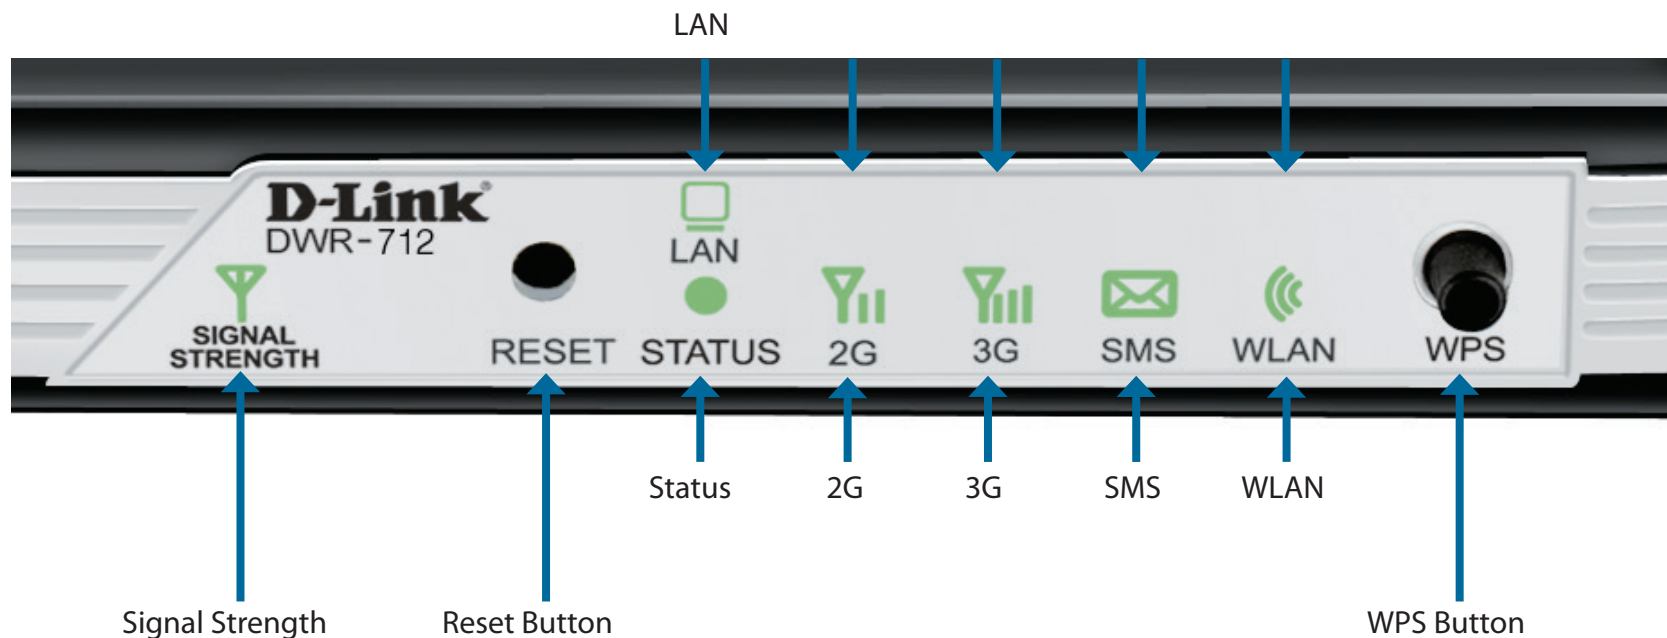

Button Name	Function
Reset	Press this button with an unfolded paperclip to reset the device.
WPS	Press this button to initiate a new WPS connection.

Hardware Overview

LEDs

LED Name	Function
Status	Blinking Green: Device is working
LAN	Solid Green: Ethernet connection has been established Blinking Green: Data is being transferred
Signal Strength	Blinking Red: No SIM card / signal or unverified PIN code Solid Red: Signal strength is at level one (weak) Solid Amber: Signal strength is at level two or three (medium) Solid Green: Signal strength is at level four or five (strong)
WPS	Slow Blinking Green: WPS is functioning normally Fast Blinking Green: WPS is functioning in PBC mode
2G	Solid Green: EDGE or GPRS connection has been established Blinking Green: Data is being transferred via 2G/2.5G
3G	Solid Green: UMTS/HSDPA/HSUPA connection is established Blinking: Data is being transferred via 3G/3.75G
SMS	Solid Green: SMS storage is full Blinking Green: There is an unread SMS message
WLAN	Solid Green: WLAN is active and available Blinking Green: Data is being transferred over the WLAN

Installation

This section will guide you through the installation process. Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, or in an attic or garage.

Connect to Your Network

1. Ensure that your DWR-712 HSPA+ 3G Router is disconnected and powered off.
2. Insert a standard (U)SIM card into the SIM card slot on the back of the router as indicated by the SIM card logo next to the slot. The gold contacts should face downwards.

Caution: Always unplug/power down the router before installing or removing the SIM card. Never insert or remove the SIM card while the router is in use.

3. Insert the Ethernet cable into the LAN port on the back panel of the DWR-712 HSPA+ 3G Router and an available Ethernet port on the network adapter in the computer you will use to configure the router.

Note: The DWR-712 HSPA+ 3G Router LAN port is Auto-MDI/MDIX, so both patch and crossover Ethernet cables can be used.

4. Connect the power adapter to the socket on the back panel of your DWR-712 HSPA+ 3G Router. Plug the other end of the power adapter into a wall outlet or power strip and turn the device on.
 - a. The Status LED will light up to indicate that power has been supplied to the router.
 - b. The LEDs on the front panel will flash on and off as the DWR-712 HSPA+ 3G Router performs initialization and Internet connection processes.
 - c. After a few moments, if a connection has been established, the following LEDs will turn solid green: Power, Status, WLAN, and LAN LEDs that are connected computers or other devices.

Wireless Installation Considerations

The DWR-712 can be accessed using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind that the quantity, thickness, and location of walls, ceilings, or other objects that the wireless signals must pass through may limit the range of the wireless signal. Ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or office. The key to maximizing the wireless range is to follow these basic guidelines:


1. Minimize the number of walls and ceilings between the D-Link router and other network devices. Each wall or ceiling can reduce your adapter's range from 3 to 90 feet (1 to 30 meters).
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Try to position access points, wireless routers, and computers so that the signal passes through open doorways and drywall. Materials such as glass, metal, brick, insulation, concrete, and water can affect wireless performance. Large objects such as fish tanks, mirrors, file cabinets, metal doors, and aluminum studs may also have a negative effect on range.
4. If you are using 2.4 GHz cordless phones, make sure that the 2.4 GHz phone base is as far away from your wireless device as possible. The base transmits a signal even if the phone is not in use. In some cases, cordless phones, X-10 wireless devices, and electronic equipment such as ceiling fans, fluorescent lights, and home security systems may dramatically degrade wireless connectivity.

Configuration

This section will show you how to configure your new D-Link mobile router using the web-based configuration utility.


Web-based Configuration Utility

To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the router (**192.168.0.1** by default).

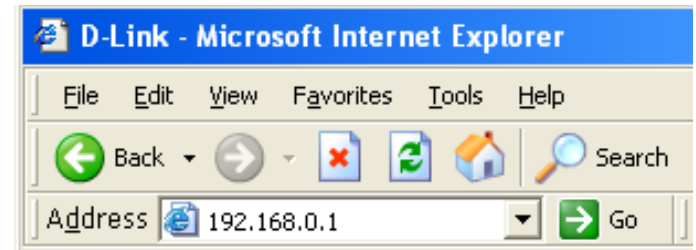


To log in to the configuration utility, enter **admin** as the username, and then enter the password. By default, the password is blank.

If you get a **Page Cannot be Displayed** error, please refer to the **Troubleshooting** section for assistance.

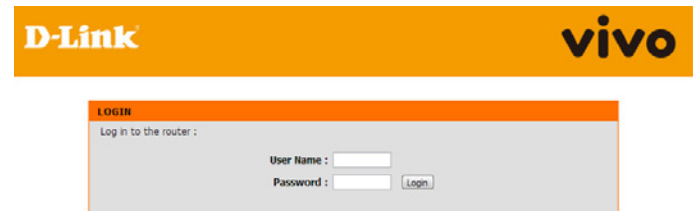

The configuration utility will open to the **STATUS > DEVICE INFO** page. You can view different configuration pages by clicking on the categories at the top of the screen (SETUP/ADVANCED/TOOLS/STATUS/SUPPORT), and then selecting a configuration page from the bar on the left side.

The following pages will describe each section in detail, starting with the **SETUP** pages.

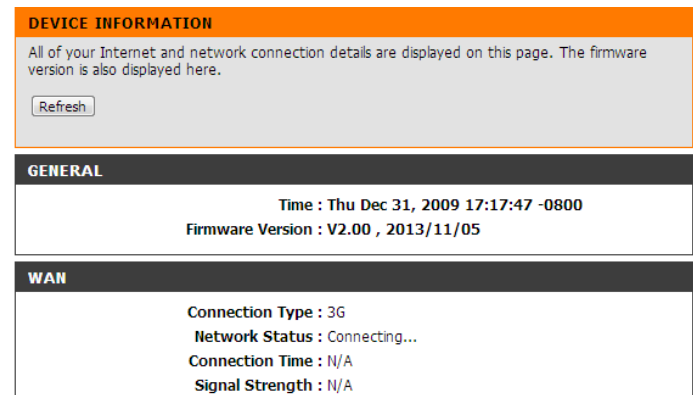

Setup

The SETUP pages allow you to configure your Internet and wireless settings, as well as manage your SMS inbox. To view the Setup configuration pages, click on **SETUP** at the top of the screen.

SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
-------	----------	-------	--------	---------

Internet

The Internet page allows you to configure how your router connects to the Internet. There are two ways to set up your Internet connection.

You can click on the **Internet Connection Setup Wizard** button to start a wizard that will guide you through setting up your Internet settings.

If you want to manually configure your settings, click **Manual Internet Connection Setup** and skip to “Manual Internet Connection Setup” on page 11.

INTERNET CONNECTION

There are two ways to set up your Internet connection: you can use the Web-based Internet Connection Setup Wizard, or you can manually configure the connection.

INTERNET CONNECTION SETUP WIZARD

If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your Router to the Internet, click on the button below.

[Internet Connection Setup Wizard](#)

Note : Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

MANUAL INTERNET CONNECTION OPTIONS

If you would like to configure the Internet settings of your Router manually, then click on the button below.

[Manual Internet Connection Setup](#)

Internet Connection Setup Wizard

This wizard will guide you through a step-by-step process to configure your D-Link router to connect to the Internet.

Click **Next** to continue.

Note: While using the wizard, you can click **Prev** to go back to the previous page or you can click **Cancel** to close the wizard.

WELCOME TO THE SETUP WIZARD

It appears that you have already successfully connected your new router to the Internet.

- Step 1: Set your Password
- Step 2: Select your Time Zone
- Step 3: Configure your Internet Connection
- Step 4: Save Settings and Connect

[Prev](#) [Next](#) [Cancel](#) [Connect](#)

Create a new password and then click **Next** to continue.

Select your time zone from the drop-down box and then click **Next** to continue.

See “Manual Internet Connection Setup” on page 11 for information about how to configure the 3G Internet connection. After entering the requested information, click **Next** to continue.

This completes the Internet Connection Setup Wizard. Click **Connect** to save your changes and reboot the router.

STEP 1: SET YOUR PASSWORD

To secure your new networking device, please set and verify a password below:

Password :

Verify Password :

STEP 2: SELECT YOUR TIME ZONE

Select the appropriate time zone for your location. This information is required to configure the time-based options for the router.

Time Zone :

SET 3G CONNECTION

Account/Profile Name :

User Name : (optional)

Password : (optional)

Verify password : (optional)

Dialed Number :

Authentication :

APN : (optional)

Pin Code :

SETUP COMPLETE!

The Internet Connection Setup Wizard has completed. Click the Connect button to save your settings and reboot the router.

Manual Internet Connection Setup

To set up your Internet connection manually, click **Manual Internet Connection Setup**.

This page allows you to configure your 3G Internet connection. Not all fields here may be necessary, and should only be used if required by your service provider. After modifying any settings, click **Save Settings** to save your changes.

My Internet Connection is: This is set to the current connection type provided by your Internet Service Provider (ISP).

Host Name: If the Internet Host you are using for the Auto-Backup feature requires you to enter a host name, enter it here. In most cases, you may leave this blank.

Prefer Service Type: Choose whether the DWR-712 should only use 3G networks, 2G networks, or use Auto Mode to automatically select a network.

Account/Profile Name: Fill in a name to identify the following 3G configuration.

Username: (Optional) Fill in only if requested by ISP.

Password: (Optional) Fill in only if requested by ISP.

Verify Password: If you entered a password above, re-enter it here.

Dialed Number: Enter the number to be dialed.

Authentication: Select PAP, CHAP, or Auto detection. The default authentication method is Auto.

APN: (Optional) Enter the APN information.

Pin Code: Enter the PIN associated with your SIM card.

Reconnect Mode: Select **Auto** or **Manual** to decide whether the router should reconnect to your 3G network automatically or manually.

Maximum Idle Time: Set the maximum time in seconds your connection can be idle before disconnecting. Set it to 0 or choose **Auto** in Reconnect Mode to disable this feature.

Primary DNS Server: (Optional) Fill in if provided by your ISP. If not, keep the default value.

Secondary DNS Server: (Optional) Fill in if provided by your ISP. If not, keep the default value.

Keep Alive: Select **Disable**, **Use Ping**, or **DNS Check** depending on the settings required by your ISP. If you select Use Ping, set the ping interval and the IP address to ping. DNS Check enables periodic DNS checks to make sure your connection is alive, and if the check fails, it will restart your 3G connection to resume connectivity.

Roaming: Enabling this option will allow you to connect when roaming. Note: Roaming connections may incur additional fees from your service provider.

NAT Disable: Enabling this option will disable the NAT function of the DWR-712, allowing it to act as a link for your devices to your Internet connection, but without routing functions.

SPN: Enter your Service Provider Network (SPN) if required by your ISP.

3G INTERNET CONNECTION TYPE

Enter the information provided by your Internet Service Provider (ISP).

Prefer Service Type :

IP Type :

Account/Profile Name :

Username : (optional)

Password : (optional)

Verify Password : (optional)

Dialed Number :

Authentication :

APN : (optional)

Pin Code :

Reconnect Mode : ☒ Auto ☐ Manual

Maximum Idle Time : seconds

Primary DNS Server :

Secondary DNS Server :

Keep Alive : ☐ Disable ☐ Use Ping ☒ DNS check

Roaming : ☐ Enable

NAT disable : ☐ Enable

SPN :

Wireless Settings


This section will help you to manually configure the wireless settings of your router. Please note that changes made on this section may also need to be duplicated on your Wireless Client.

The Wireless Settings page allows you to configure how your router connects to the Internet. There are several ways to set up your wireless connection.

You can click on the **Wireless Connection Setup Wizard** button to start a wizard that will guide you through setting up your wireless settings.

If you want to manually configure your settings, click the **Manual Wireless Connection Setup** button and skip to "Manual Wireless Connection Setup" on page 15.

You can also set up a wireless connection to a device automatically, or configure your router automatically from a by clicking the **Wi-Fi Protected Setup** button. This is described in "Wi-Fi Protected Setup" on page 20.

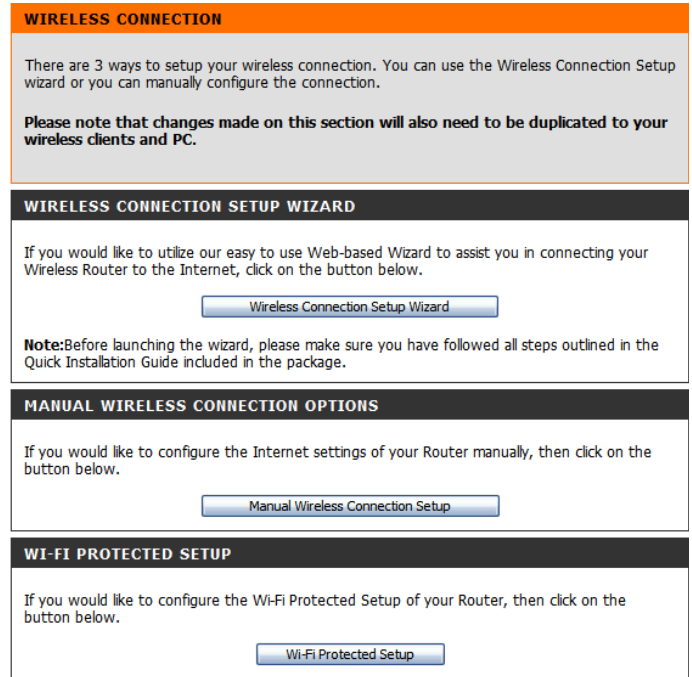

Wireless Connection Setup Wizard

This wizard will guide you through a step-by-step process to configure your D-Link router's wireless .

Click **Next** to continue.

Note: While using the wizard, you can click **Prev** to go back to the previous page or you can click **Cancel** to close the wizard.



Enter a name for your wireless network, then click **Next** to continue.

Select a level of wireless security to use, then click **Next** to continue.

If you chose **BEST** or **BETTER**, select whether to use TKIP or AES encryption, then enter a password to use for your wireless network. It is recommended that you use AES if your wireless computers and devices support it, as it is more secure. Click **Next** to continue.

If you chose **GOOD**, select whether to use a HEX or ASCII password, then enter a password to use for your wireless network. If you choose HEX, you will need to enter a 10 or 26 digit password using only hex characters (0-9, A-F). If you choose ASCII, the password can be up to 5 or 13 alphanumeric characters. Click **Next** to continue.

This completes the Wireless Connection Setup Wizard. Click **Save** to save your changes and reboot the router.

STEP 1: NAME YOUR WIRELESS NETWORK

Your wireless network needs a name so it can be easily recognized by wireless clients. For security purposes, it is highly recommended to change the pre-configured network name of [default].

Wireless Network Name (SSID) : myNetwork

Prev Next Cancel Save

STEP 2: SECURE YOUR WIRELESS NETWORK

In order to protect your network from hackers and unauthorized users, it is highly recommended you choose one of the following wireless network security settings.

There are three levels of wireless security - Good Security, Better Security, or Best Security. The level you choose depends on the security features your wireless adapters support.

BEST : ☒ Select this option if your wireless adapters SUPPORT WPA2

BETTER : ☐ Select this option if your wireless adapters SUPPORT WPA

GOOD : ☐ Select this option if your wireless adapters DO NOT SUPPORT WPA

NONE : ☐ Select this option if you do not want to activate any security features

For information on which security features your wireless adapters support, please refer to the adapters' documentation.

Note: All wireless adapters currently support WPA.

Prev Next Cancel Save

STEP 3: SET YOUR WIRELESS SECURITY PASSWORD

Once you have selected your security level - you will need to set a wireless security password. With this password, a unique security key will be generated.

Wireless Security Password : AES myPassword

Note: You will need to enter the unique security key generated into your wireless clients enable proper wireless communication - not the password you provided to create the security key.

Prev Next Cancel Save

STEP 3: SET YOUR WIRELESS SECURITY PASSWORD

Once you have selected your security level - you will need to set a wireless security password. With this password, a unique security key will be generated.

Wireless Security Password : HEX 1234567890

Note: You will need to enter the unique security key generated into your wireless clients enable proper wireless communication - not the password you provided to create the security key.

Prev Next Cancel Save

SETUP COMPLETE!

Below is a detailed summary of your wireless security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

Wireless Network Name (SSID) : myNetwork

Prev Next Cancel Save

Manual Wireless Connection Setup

To set up your wireless connection manually, click **Manual Wireless Connection Setup**. Refer to the next page.

WIRELESS CONNECTION

There are 3 ways to setup your wireless connection. You can use the Wireless Connection Setup wizard or you can manually configure the connection.

Please note that changes made on this section will also need to be duplicated to your wireless clients and PC.

WIRELESS CONNECTION SETUP WIZARD

If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your Wireless Router to the Internet, click on the button below.

Wireless Connection Setup Wizard

Note: Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

MANUAL WIRELESS CONNECTION OPTIONS

If you would like to configure the Internet settings of your Router manually, then click on the button below.

Manual Wireless Connection Setup

WI-FI PROTECTED SETUP

If you would like to configure the Wi-Fi Protected Setup of your Router, then click on the button below.

Wi-Fi Protected Setup

Wireless Settings

This page lets you set up your wireless network and choose a wireless security mode. After modifying any settings, click **Save Settings** to save your changes.

Enable Wireless: Select this checkbox to enable wireless access. When you set this option, the following parameters take effect.

Wireless Network Name: Also known as the SSID (Service Set Identifier), this is the name of your Wireless Local Area Network (WLAN). Enter a name using up to 32 alphanumeric characters. The SSID is case-sensitive.

802.11 Mode: **B/G mixed:** Enable this mode if your network contains a mix of 802.11b and 802.11g devices.

N only: Enable this mode if your network only has 802.11n devices.

B/G/N mixed: Enable this mode if you have a mix of 802.11n, 802.11g, and 802.11b clients.

Auto Channel Scan: Enabling this feature will allow the router to scan for the best channel to use automatically.

Wireless Channel: A wireless network uses specific channels in the wireless spectrum to handle communication between clients. Some channels in your area may experience interference from other electronic devices. Choose the clearest channel to help optimize the performance and coverage of your wireless network, or enable Auto Channel Scan for the router to automatically select the best channel.

Visibility Status: This setting determines whether the SSID will be **Visible** or **Invisible** to wireless clients looking for wireless networks. Setting this to **Invisible** can increase the security of your network by hiding it, but clients will need to manually enter the SSID of your network to connect.

WIRELESS NETWORK

Use this section to configure the wireless settings for this device. Please note that changes made on this section may also need to be duplicated on your wireless client.

To protect your privacy you can configure wireless security features. This device supports three wireless security modes including: WEP, WPA and WPA2.

Save Settings
Don't Save Settings

WIRELESS NETWORK SETTINGS

Enable Wireless : ☒

Wireless Network Name : (Also called the SSID)

802.11 Mode :

Auto Channel Scan : ☐

Wireless Channel :

Visibility Status : ☒ Visible ☐ Invisible

WIRELESS SECURITY MODE

Security Mode :

Save Settings
Don't Save Settings

Wireless Security Mode

You can choose from several different wireless security modes. After selecting a mode, the settings for that mode will appear. After modifying any settings, click **Save Settings** to save your changes.

Security Mode: You can choose from 4 different security modes.

- **None:** No security will be used. This setting is not recommended.
- **WEP:** WEP encryption will be used. This setting is only recommended if your wireless devices cannot support WPA or WPA2.
- **WPA-Personal:** WPA-PSK encryption will be used. This setting is recommended for most users.
- **WPA-Enterprise:** WPA-EAP encryption will be used. This setting is only recommended if you have a RADIUS authentication server. Otherwise, **WPA-Personal** should be used.

WIRELESS NETWORK
Use this section to configure the wireless settings for this device. Please note that changes made on this section may also need to be duplicated on your wireless client.
To protect your privacy you can configure wireless security features. This device supports three wireless security modes including: WEP, WPA and WPA2.

WIRELESS NETWORK SETTINGS

Enable Wireless :	☒
Wireless Network Name :	mehta's test network (Also called the SSID)
802.11 Mode :	B/G/N mixed
Auto Channel Scan :	☐
Wireless Channel :	2.462 GHz - CH 11
Visibility Status :	☒ Visible ☐ Invisible

WIRELESS SECURITY MODE

Security Mode :	None
-----------------	------

If you choose **WEP**, the following options will appear:

Authentication: Select whether to use Open or Shared authentication.

WEP Encryption: Select whether to use **64-bit** or **128-bit** encryption.

Default WEP Key: Select which WEP key (1-4) to use as the default key. This will also change the WEP Key text box to that WEP key for your to configure(1-4).

WEP Key: Set the WEP key/password for your wireless network. Based on whether you are using 64 or 128-bit encryption, and whether you are using a HEX or ASCII key, you will need to enter different numbers of characters for your key, as indicated below the WEP Key text box. ASCII keys may use letters and numbers only, and HEX keys may use numbers 0-9 and letters A-F only.

WIRELESS SECURITY MODE

Security Mode : WEP

WEP

WEP is the wireless encryption standard. To use it you must enter the same key(s) into the router and the wireless stations. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. For the most secure use of WEP set the authentication type to "Shared Key" when WEP is enabled.

You may also enter any text string into a WEP key box, in which case it will be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.

Authentication : Open

WEP Encryption : 64Bit

Default WEP Key : WEP Key 1

WEP Key : ASCII wopw
(5 ASCII or 10 HEX)

Save Settings Don't Save Settings

If you choose **WPA-Personal**, the following options will appear:

WPA Mode: Select whether to use **WPA2 only** or **WPA only**. **WPA2 only** is the most secure, provided that all of your clients can support it.

Cipher Type: Select whether to use the **TKIP** or **AES** cipher. The **AES** cipher is the most secure, provided that all of your clients can support it.

Network Key: Enter the key/password you want to use for your wireless network. The key must be 8 to 63 characters long, and may only contain letters and numbers.

WIRELESS SECURITY MODE

Security Mode : WPA-Personal

WPA

Use **WPA** or **WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use **WPA Only**. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use **WPA2 Only** security mode (or in other words AES cipher).

WPA Mode : WPA only

Cipher Type : AES

PRE-SHARED KEY

Enter an 8- to 63-character alphanumeric pass-phrase. For good security it should be of ample length and should not be a commonly known phrase.

Network Key : 7c9aeccad9c6b0c05343ed88747544b747ffd
(8~63 ASCII or 64 HEX)

Save Settings Don't Save Settings

If you choose **WPA-Enterprise**, the following options will appear:

WPA Mode: Select whether to use **WPA2 only** or **WPA only**. **WPA2 only** is the most secure, provided that all of your clients can support it.

Cipher Type: Select whether to use the **TKIP** or **AES** cipher. The **AES** cipher is the most secure, provided that all of your clients can support it.

RADIUS Server IP Address: Enter the IP address of your RADIUS server.

RADIUS Server Port: Enter the port used for your RADIUS server.

RADIUS Server Shared Secret: Enter the Shared Secret/password for your RADIUS server.

WIRELESS SECURITY MODE	
Security Mode :	WPA-Enterprise ▼
WPA	
Use WPA or WPA2 mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use WPA2 Only mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use WPA Only. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode. To achieve better wireless performance use WPA2 Only security mode (or in other words AES cipher).	
WPA Mode :	WPA only ▼
Cipher Type :	AES ▼
EAP (802.1X)	
When WPA enterprise is enabled, the router uses EAP (802.1x) to authenticate clients via a remote RADIUS server.	
RADIUS Server IP Address :	0.0.0.0
RADIUS server Port :	1812
RADIUS server Shared Secret :	

Wi-Fi Protected Setup

To open the Wi-Fi Protected Setup page, click **Wi-Fi Protected Setup**.

The Wi-Fi Protected Setup page allows you to create a wireless connection between your router and a device automatically by simply pushing a button or entering a PIN code.

You can also use Windows 7 to do initial configuration of your router by using the **Connect to a network** wizard in Windows, and entering the WPS PIN/AP PIN of the router when prompted. After modifying any settings, click **Save Settings** to save your changes.

WIRELESS CONNECTION

There are 3 ways to setup your wireless connection. You can use the Wireless Connection Setup wizard or you can manually configure the connection.

Please note that changes made on this section will also need to be duplicated to your wireless clients and PC.

WIRELESS CONNECTION SETUP WIZARD

If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your Wireless Router to the Internet, click on the button below.

Wireless Connection Setup Wizard

Note: Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

MANUAL WIRELESS CONNECTION OPTIONS

If you would like to configure the Internet settings of your Router manually, then click on the button below.

Manual Wireless Connection Setup

WI-FI PROTECTED SETUP

If you would like to configure the Wi-Fi Protected Setup of your Router, then click on the button below.

Wi-Fi Protected Setup

WI-FI PROTECTED SETUP

Wi-Fi Protected Setup is used to easily add devices to a network using a PIN or button press. Devices must support Wi-Fi Protected Setup in order to be configured by this method.

Save Settings Don't Save Settings

WI-FI PROTECTED SETUP

WPS : ☒ Enable ☐ Disable

AP PIN : 48115179

Generate New PIN

Config Mode : Registrar

Config Status : CONFIGURED

Release

Disable WPS-PIN Method : ☐

Config Method : Push Button

WPS status : NOUSED

Trigger

Save Settings Don't Save Settings

WPS: Select whether you would like to enable or disable WPS features.

AP PIN (also known as WPS PIN): If you use Windows 7's **Connect to a network** wizard to do initial configuration of the router, you will need to enter the WPS PIN/AP PIN into the wizard when prompted. The factory default WPS PIN/AP PIN is printed on a label located on the bottom of the router. You can click the **Generate New PIN** button to change it to a randomly generated PIN.

Config Mode: Select whether the WPS config mode should be set to **Registrar** or **Enrollee**. In most cases, this should be set to **Registrar** so that you can use WPS to connect new wireless clients.

Config Status: If this is set to **CONFIGURED**, the router will be marked as "already configured" to computers that try to use WPS configuration, such as Windows 7's **Connect to a network** wizard. You can click the **Release** button to change the status to **UNCONFIGURED** to allow for WPS configuration of the router.

If this is set to **UNCONFIGURED**, you can click the **Set** button to change the status to **CONFIGURED** to block WPS configuration of the router.

Config Method: This lets you choose whether to use the **Push Button** connection method (PBC) or **PIN** method to connect to a wireless client when the **Trigger** button is clicked. If you choose the **PIN** method, you will need to enter a 8-digit PIN number that the wireless client need to use to connect to your router.

WPS Status: This will show the current WPS connection process status. Click the **Trigger** button to initiate a WPS connection.

WI-FI PROTECTED SETUP

Wi-Fi Protected Setup is used to easily add devices to a network using a PIN or button press. Devices must support Wi-Fi Protected Setup in order to be configured by this method.

Save Settings Don't Save Settings

WI-FI PROTECTED SETUP

WPS : ☒ Enable ☐ Disable

AP PIN : 48115179 [Generate New PIN](#)

Config Mode : Registrar

Config Status : CONFIGURED [Release](#)

Disable WPS-PIN Method : ☐

Config Method : Push Button

WPS status : HOUSED [Trigger](#)

Save Settings Don't Save Settings

Network Settings

This section will help you to change the internal network settings of your router and to configure the DHCP Server settings. After modifying any settings, click **Save Settings** to save your changes.

Router Settings

Router IP Address: Enter the IP address you want to use for the router. The default IP address is **192.168.0.1**. If you change the IP address, you will need to enter the new IP address in your browser to get into the configuration utility.

Default Subnet Mask: Enter the **Subnet Mask** of the router. The default subnet mask is **255.255.255.0**.

Local Domain Name: Enter the local domain name for your network.

NETWORK SETTING

Use this section to configure the internal network settings of your router and also to configure the built-in DHCP server to assign IP address to the computers on your network. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address here, you may need to adjust your PC's network settings to access the network again.

Please note that this section is optional and you do not need to change any of the settings here to get your network up and running.

Save Settings

Don't Save Settings

ROUTER SETTINGS

Use this section to configure the internal network settings of your router. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address here, you may need to adjust your PC's network settings to access the network again.

Router IP Address :

192.168.0.1

Default Subnet Mask :

255.255.255.0

Local Domain Name :

DHCP SERVER SETTINGS

Use this section to configure the built-in DHCP server to assign IP address to the computers on your network.

Enable DHCP Server :

☒

DHCP IP Address Range :

50

to

199

(addresses within the LAN subnet)

DHCP Lease Time :

86400

(Seconds)

Primary DNS IP Address :

Secondary DNS IP Address :

Primary WINS IP Address :

Secondary WINS IP Address :

Save Settings

Don't Save Settings

DHCP Server Settings

The DWR-712 has a built-in DHCP (Dynamic Host Control Protocol) server. The DHCP server assigns IP addresses to devices on the network that request them. By default, the DHCP Server is enabled on the device. The DHCP address pool contains a range of IP addresses, which is automatically assigned to the clients on the network. After modifying any settings, click **Save Settings** to save your changes.

Enable DHCP Server: Select this box to enable the DHCP server on your router.

DHCP IP Address Range: Enter the range of IPs for the DHCP server to use to assign IP addresses to devices on your network.

DHCP Lease Time: Enter lease time for IP address assignments.

Primary DNS IP Address: Enter the primary DNS IP Address that will be assigned to DHCP clients.

Secondary DNS IP Address: Enter the secondary DNS IP Address that will be assigned to DHCP clients.

Primary WINS IP Address: Enter the primary WINS IP Address that will be assigned to DHCP clients.

Secondary WINS IP Address: Enter the secondary WINS IP Address that will be assigned to DHCP clients.

The screenshot shows the 'DHCP SERVER SETTINGS' configuration page. At the top, it says 'Use this section to configure the built-in DHCP server to assign IP address to the computers on your network.' Below this, there are several settings: 'Enable DHCP Server' is checked with a green box; 'DHCP IP Address Range' is set to '50' to '199' with a note '(addresses within the LAN subnet)'; 'DHCP Lease Time' is set to '86400' with a note '(Seconds)'; 'Primary DNS IP Address', 'Secondary DNS IP Address', 'Primary WINS IP Address', and 'Secondary WINS IP Address' are all empty input fields. At the bottom, there are two buttons: 'Save Settings' and 'Don't Save Settings'.

DHCP SERVER SETTINGS	
Use this section to configure the built-in DHCP server to assign IP address to the computers on your network.	
Enable DHCP Server :	☒
DHCP IP Address Range :	50 to 199 (addresses within the LAN subnet)
DHCP Lease Time :	86400 (Seconds)
Primary DNS IP Address :	
Secondary DNS IP Address :	
Primary WINS IP Address :	
Secondary WINS IP Address :	
Save Settings Don't Save Settings	

IPv6 Settings

The settings in this section will help you to configure IPv6 if your Internet Service Provider (ISP) supports it. After modifying any settings, click **Save Settings** to save your changes.

6 to 4 Settings: Click **Enable** to use the 6 to 4 IPv6 connection type.

IPv6 Connection: This displays the current IPv6 connection type (6 to 4).

Primary DNS Address: Enter the primary DNS server address.

Secondary DNS Address: Enter the secondary DNS server address.

LAN IPv6 Address: Displays the router's LAN IPv6 address.

LAN IPv6 Link-Local Address: Displays the router's LAN link-local address.

Autoconfiguration: Click **Enable** to use the autoconfiguration feature.

Autoconfiguration Type: Select Stateful (DHCPv6), SLAAC + RDNSS or SLAAC + Stateless DHCPv6.

Router Advertisement Lifetime: Enter the IPv6 address lifetime (in seconds).

IPv6

Use this section to configure your Internet Connection type. There are several connection types to choose. If you are unsure of your connection method, please contact your Internet Service Provider.

Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

Save Settings
Don't Save Settings
Reboot Now

IPv6 CONNECTION TYPE

6 to 4 Settings : ☐ Enable ☒ Disable

IPv6 Connection : 6 to 4

6 TO 4 SETTINGS

6 to 4 Address :

Primary DNS Address :

Secondary DNS Address :

LAN IPv6 ADDRESS SETTINGS

LAN IPv6 Address :

LAN IPv6 Link-Local Address :

AUTOCONFIGURATION

Autoconfiguration : ☒ Enable ☐ Disable

Autoconfiguration Type :

Router Advertisement Lifetime : seconds

Save Settings
Don't Save Settings


Message Service

If your ISP provides **SMS** service, you can check and send messages from this page.

SMS Inbox: Click this button to view SMS messages that you have received.

Create Message: Click this button to create a new message to send.

SMSC Setting: Click this button to set up a SMSC number to receive SMS messages from your ISP.

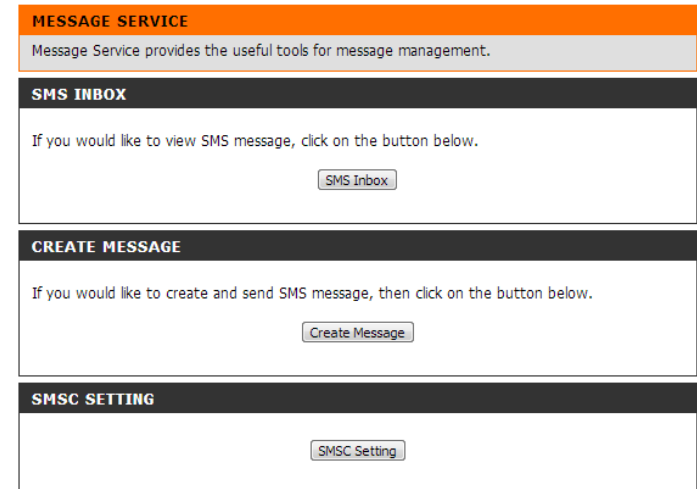

SMS Inbox


This page shows all messages that are stored on the SIM card. Select a message to display its contents in the SMS window. After you read it, you can delete it, or reply to the sender. Click the **Refresh** button to update the list.

Delete: Deletes the selected SMS message.

Reply: Opens a Create Message window to reply to the selected SMS message.

Forward: Opens a Create Message windows to forward the selected SMS message to another recipient.

Refresh: Click this button to check for new messages.

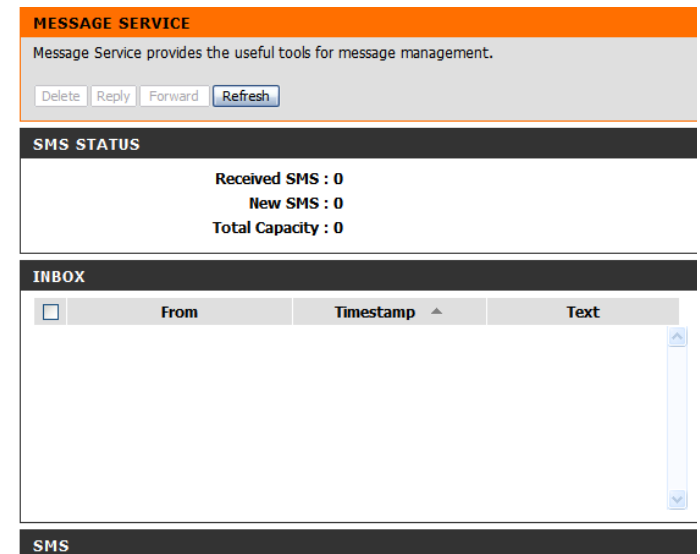

Create Message


This page allows you to send an SMS to your contacts. Just fill in the phone number of the recipient, and type the content of message. Then click the "Send Message" button to send out this message. If you would like to add more than one recipient, you must put a semicolon (;) between each of the phone numbers.

Receiver: Type the phone number of the recipient.

Text Message: Type the message that you would like to send.

Send Message: Click this button to send the message.


Cancel: Click this button to clear the message.

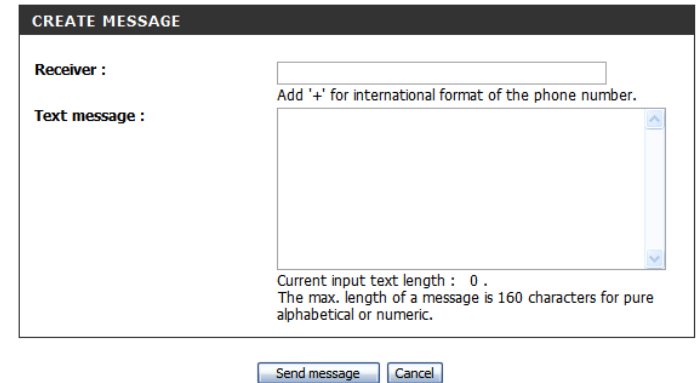

SMSC Setting

This feature will allow you to set up a SMSC number to receive SMS messages from your ISP.

SMSC Setting: Enter the number provided by your ISP and click **Save Settings**. This will enable the SMSC feature and allow you to receive SMS messages.

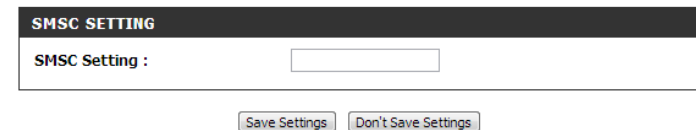

Voice

This page allows you to specify what happens when the call forwarding or call waiting feature of the router is enabled. Select **Go Call Forwarding** to configure how to forward incoming calls. Select **Go Call Waiting** to configure what happens if an incoming call comes in.

VOICE
You could set Voice in this page.

CALL FORWARDING
Auto-forwarding incoming calls to a designated number in different conditions.
[Go Call Forwarding](#)

CALL WAITING
Suspend current call, and be able to talk to a new incoming call.
[Go Call Waiting](#)

Call Forwarding

This feature will allow you to auto-forward incoming calls to a designated number under different conditions: All calls / No Answer / Unreachable/ Busy.

- All Calls:** Enter the number to forward any incoming calls to.
- No Answer:** Enter the number to forward any incoming calls to if the default “all calls” number does not answer.
- Unreachable:** Enter the number to forward any incoming calls to if the default “all calls” number is unreachable.
- Busy:** Enter the number to forward any incoming calls to if the default “all calls” number is busy.

Item	Number	Enable	Status
All calls		Unregister ▼	
No Answer		Unregister ▼	
Unreachable		Unregister ▼	
Busy		Unregister ▼	

[Save Settings](#) [Don't Save Settings](#)

Call Waiting

This feature will allow you to suspend the current call, and then be able to answer a new incoming call.

- Call Waiting:** Check to enable the call waiting feature.

CALL WAITING

Call Waiting : ☐ Enable

[Save Settings](#) [Don't Save Settings](#)

USSD

Unstructured Supplementary Service Data (USSD) allows ISP-specific applications to be activated with an SMS message.

USSD: Enter an application activation code and click **Send**. This will allow you to activate applications by sending an SMS message to your ISP.

USSD

USSD is a protocol used by GSM cellular telephones to communicate with the service provider's computers.

USSD

USSD :

Send

Advanced

The **ADVANCED** pages allow you to configure the more advanced settings of the router, such as Virtual Server(Port Forwarding), MAC and URL filtering, and advanced wireless and network settings. To view the Advanced configuration pages, click on **ADVANCED** at the top of the screen.

SETUP

ADVANCED

TOOLS

STATUS

SUPPORT

Virtual Server

The device can be configured as a virtual server so that users can access services such as Web or FTP via the public (WAN) IP address of the router. You can also allow the settings to run on a specified schedule. The Virtual Server function is also known as Port Forwarding. After modifying any settings, click **Save Settings** to save your changes.

Well-known Services: This contains a list of pre-defined services. You can select a service, select a rule ID, then click the **Copy to** button to copy the default settings for that service to the specified rule ID.

ID: Specifies which rule to copy the selected **Well known service** settings to when you click the **Copy to** button.

Use schedule rule: Select a schedule to use and copy to the specified rule ID when you click the **Copy to** button. You may select **Always On** or use a specific schedule that you have defined. To create and edit schedules, please refer to “Schedules” on page 52.

VIRTUAL SERVER

The Virtual Server option allows you to define a single public port on your router for redirection to an internal LAN IP Address and Private LAN port if required. This feature is useful for hosting online services such as FTP or Web Servers.

Save Settings

Don't Save Settings

Well known services

-- select one --

Copy to

ID

--

Use schedule rule

--ALWAYS ON---

VIRTUAL SERVERS LIST

ID	Service Ports	Server IP : Port	Enable	Schedule Rule#
1		:	☐	Add New Rule...
2		:	☐	Add New Rule...
3		:	☐	Add New Rule...
4		:	☐	Add New Rule...
5		:	☐	Add New Rule...
6		:	☐	Add New Rule...
7		:	☐	Add New Rule...
8		:	☐	Add New Rule...
9		:	☐	Add New Rule...
10		:	☐	Add New Rule...
11		:	☐	Add New Rule...
12		:	☐	Add New Rule...
13		:	☐	Add New Rule...

VIRTUAL SERVERS LIST

ID: This identifies the rule.

Server IP: Port: Enter the last digits of the IP address of the computer on your local network that you want to allow the incoming service. In the next box, enter the port number that you would like to open.

Enable: Tick the checkbox to enable the specified rule.

Schedule Rule #: Specify the schedule rule number. To create schedules, please refer to "Schedules" on page 52.

VIRTUAL SERVER

The Virtual Server option allows you to define a single public port on your router for redirection to an internal LAN IP Address and Private LAN port if required. This feature is useful for hosting online services such as FTP or Web Servers.

Well known services: -- select one -- ID: --

Use schedule rule: ---ALWAYS ON---

VIRTUAL SERVERS LIST

ID	Service Ports	Server IP : Port	Enable	Schedule Rule#
1		:	☐	Add New Rule...
2		:	☐	Add New Rule...
3		:	☐	Add New Rule...
4		:	☐	Add New Rule...
5		:	☐	Add New Rule...
6		:	☐	Add New Rule...
7		:	☐	Add New Rule...
8		:	☐	Add New Rule...
9		:	☐	Add New Rule...
10		:	☐	Add New Rule...
11		:	☐	Add New Rule...
12		:	☐	Add New Rule...
13		:	☐	Add New Rule...
14		:	☐	Add New Rule...
15		:	☐	Add New Rule...
16		:	☐	Add New Rule...
17		:	☐	Add New Rule...
18		:	☐	Add New Rule...
19		:	☐	Add New Rule...

Application Rules

Some applications require multiple connections, such as Internet gaming, video conferencing, and Internet telephony among others. These applications may have difficulty working through NAT (Network Address Translation). **Application Rules** allow some of these applications work with the DWR-712 by opening ports after detecting traffic being sent through a trigger port. After modifying any settings, click **Save Settings** to save your changes.

Popular Applications: Select from a list of popular applications. You can select a service, select a rule ID, then click the **Copy to** button to copy the default settings for that service to the specified rule ID.

ID: Specifies which rule to copy the selected **Popular application** settings to when you click the **Copy to** button.

APPLICATION RULES

ID: This identifies the rule.

Trigger: Enter the port to listen to in order to trigger the rule.

Incoming Ports: Specify the incoming port(s) to open when traffic comes over the **Trigger** port.

Enable: Tick the checkbox to enable the specified rule.

APPLICATION RULES

This option is used to open single or multiple ports on your router when the router senses data sent to the Internet on a 'trigger' port or port range. Special Applications rules apply to all computers on your internal network.

Save Settings

Don't Save Settings

Popular applications -- select one --

Copy to

 ID -- --

ID	Trigger	Incoming Ports	Enable
1			☐
2			☐
3			☐
4			☐
5			☐
6			☐
7			☐
8			☐
9			☐
10			☐
11			☐
12			☐

Save Settings

Don't Save Settings

QoS Engine

The **QoS Engine** improves your online gaming or streaming media experience by ensuring that your game or media traffic is prioritized over other network traffic, such as FTP or Web. For best performance, use the Automatic Classification option to automatically set the priority for your applications. After modifying any settings, click **Save Settings** to save your changes.

QOS ENGINE SETUP

Enable QoS Packet Filter: Select this box to enable the QoS feature.

Upstream Bandwidth: Specify the maximum upstream bandwidth here (e.g. 400 kbps).

Use Schedule Rule: Select a schedule to use and copy to the specified rule ID when you click the **Copy to** button. You may select **Always On** or use a specific schedule that you have defined. To create and edit schedules, please refer to "Schedules" on page 52.

QOS RULES

ID: This identifies the rule.

Local IP : Ports: Specify the local IP address(es) and port(s) for the rule to affect.

Remote IP : Ports: Specify the remote IP address(es) and port(s) for the rule to affect.

QoS Priority: Select what priority level to use for traffic affected by the rule: **Low, Normal, or High.**

Enable: Tick the checkbox to enable the specified rule.

Use Rule #: Specify the schedule rule number. To create schedules, please refer to "Schedules" on page 52.

QOS ENGINE

Use this section to configure QoS Engine. The QoS Engine improves your online gaming experience by ensuring that your game traffic is prioritized over other network traffic, such as FTP or Web. For best performance, use the Automatic Classification option to automatically set the priority for your applications.

QOS ENGINE SETUP

Enable QoS Packet Filter : ☐

Upstream bandwidth : kbps

Use schedule rule ---ALWAYS ON--- ID -- --

QOS RULES

ID	Local IP : Ports	Remote IP : Ports	QoS Priority	Enable	Use Rule#
1	:	:	High v	☐	Add New Rule...
2	:	:	High v	☐	Add New Rule...
3	:	:	High v	☐	Add New Rule...
4	:	:	High v	☐	Add New Rule...
5	:	:	High v	☐	Add New Rule...
6	:	:	High v	☐	Add New Rule...
7	:	:	High v	☐	Add New Rule...
8	:	:	High v	☐	Add New Rule...

MAC Address Filter

The **MAC (Media Access Controller) Address Filter** option is used to control network access based on the MAC address of the network adapter. A MAC address is a unique ID assigned by the manufacturer of the network adapter. This feature can be configured to ALLOW or DENY network/Internet access. After modifying any settings, click **Save Settings** to save your changes.

MAC FILTERING SETTINGS

- MAC Address Control:** Tick this box to enable MAC Filtering.
- Connection Control:** Wireless and wired clients with **C** selected can connect to this device and **allow/deny** connections from unspecified MAC addresses.
- Association Control:** Wireless clients with **A** selected can associate to the wireless LAN and **allow/deny** connections from unspecified MAC addresses.

MAC FILTERING RULES

- ID:** This identifies the rule.
- MAC Address:** Specify the MAC address of the computer to be filtered.
- IP Address:** Specify the last section of the IP address.
- Wake On LAN:** Click **Trigger** to configure Wake On LAN.
- C:** If this box is ticked, the rule will follow the connection control setting specified in MAC filtering settings specified above.
 - A:** If this box is ticked, the rule will follow the association control setting specified in MAC filtering settings specified above.

MAC ADDRESS FILTER

The MAC (Media Access Controller) Address filter option is used to control network access based on the MAC Address of the network adapter. A MAC address is a unique ID assigned by the manufacturer of the network adapter. This feature can be configured to ALLOW or DENY network/Internet access.

MAC FILTERING SETTINGS

MAC Address Control : ☐ Enable

☐ **Connection control :** Wireless and wired clients with **C** checked can connect to this device; and unspecified MAC addresses to connect.

☐ **Association control :** Wireless clients with **A** checked can associate to the wireless LAN; and unspecified MAC addresses to associate.

DHCP clients **ID**

MAC FILTERING RULES

ID	MAC Address	IP Address	C	A
1			☐	☐
2			☐	☐
3			☐	☐
4			☐	☐
5			☐	☐

URL Filter

URL Filter allows you to set up a list of websites that will be blocked from users on your network. After modifying any settings, click **Save Settings** to save your changes.

URL Filtering: Select this box to enable URL Filtering.

URL FILTERING RULES

ID: This identifies the rule.

URL: Enter URL that you would like to block. All URLs that begin with this URL will be blocked.

Enable: Tick the checkbox to enable the specified rule.

URL FILTER
URL Blocking will block LAN computers to connect to pre-defined Websites.

Save SettingsDon't Save Settings

URL FILTERING SETTING
URL Filtering : ☐ Enable

URL FILTERING RULES

ID	URL	Enable
1		☐
2		☐
3		☐
4		☐
5		☐

Save SettingsDon't Save Settings

Outbound Filter

Outbound Filter enables you to control what packets are allowed to be sent out to the Internet. The outbound filter applies to all outbound packets. After modifying any settings, click **Save Settings** to save your changes.

OUTBOUND FILTER SETTING

Outbound Filter: Select this box to **Enable** outbound filtering.

Use Schedule Rule: Select a schedule to use and copy to the specified rule ID when you click the **Copy to** button. You may select **Always On** or use a specific schedule that you have defined. To create and edit schedules, please refer to "Schedules" on page 52.

OUTBOUND FILTER RULES LIST

Here, you can select whether to Allow or Deny all outgoing traffic except for traffic that matches the listed rules.

ID: This identifies the rule.

Source IP : Ports: Specify the local IP address and then specify the port after the colon.

Destination IP : Ports: Specify the remote IP address and then the port after the colon.

Enable: Tick the checkbox to enable the specified rule.

Schedule Rule #: Specify the schedule rule number.

Previous Page: Go back to the previous filter page.

Next Page: Advance to the next filter page.

OUTBOUND FILTER

Packet Filter enables you to control what packets are allowed to pass the router. Outbound filter applies on all outbound packets.

Save Settings

Don't Save Settings

OUTBOUND FILTER SETTING

Outbound Filter :

☐ Enable

Use schedule rule

---ALWAYS ON---

Copy to

ID

--

OUTBOUND FILTER RULES LIST

☒ Allow all to pass except those match the following rules.

☐ Deny all to pass except those match the following rules.

ID	Source IP:Ports	Destination IP:Ports	Enable	Schedule Rule#
1			☐	Add New Rule...
2			☐	Add New Rule...
3			☐	Add New Rule...
4			☐	Add New Rule...
5			☐	Add New Rule...
6			☐	Add New Rule...
7			☐	Add New Rule...
8			☐	Add New Rule...

Previous page

Next page

Save Settings

Don't Save Settings

Inbound Filter

Inbound Filter enables you to control what packets are allowed to come in to your network from the Internet. The inbound filter only applies to packets that are destined for Virtual Servers or DMZ hosts. After modifying any settings, click **Save Settings** to save your changes.

INBOUND FILTER SETTING

Inbound Filter: Select this box to **Enable** the filter.

Use Schedule Rule: Select a schedule to use and copy to the specified rule ID when you click the **Copy to** button. You may select **Always On** or use a specific schedule that you have defined. To create and edit schedules, please refer to “Schedules” on page 52.

INBOUND FILTER RULES LIST

Here, you can select whether to Allow or Deny all incoming traffic except for traffic that matches the listed rules.

ID: This identifies the rule.

Source IP : Ports: Specify the local IP address and then specify the port after the colon.

Destination IP : Ports: Specify the remote IP address and then the port after the colon.

Enable: Tick the checkbox to enable the specified rule.

Schedule Rule #: Specify the schedule rule number.

Previous Page: Go back to the previous filter page.

Next Page: Advance to the next filter page.

INBOUND FILTER

Packet Filter enables you to control what packets are allowed to pass the router. Inbound filter applies on packets that destined to Virtual Servers or DMZ host only.

Save Settings
Don't Save Settings

INBOUND FILTER SETTING

Inbound Filter : ☐ Enable

Use schedule rule ---ALWAYS ON--- ID -- --

INBOUND FILTER RULES LIST

☒ Allow all to pass except those match the following rules.
☐ Deny all to pass except those match the following rules.

ID	Source IP:Ports	Destination IP:Ports	Enable	Schedule Rule#
1			☐	Add New Rule...
2			☐	Add New Rule...
3			☐	Add New Rule...
4			☐	Add New Rule...
5			☐	Add New Rule...
6			☐	Add New Rule...
7			☐	Add New Rule...
8			☐	Add New Rule...

SNMP

SNMP (Simple Network Management Protocol) is a widely used network monitoring and control protocol that reports activity on each network device to the administrator of the network. SNMP can be used to monitor traffic and statistics of the DWR-712. The DWR-712 supports SNMP v1 and v2c. After modifying any settings, click **Save Settings** to save your changes.

SNMP

SNMP Local: Select whether to **Enable** or **Disable** local SNMP administration.

SNMP Remote: Select whether to **Enable** or **Disable** remote SNMP administration.

Get Community: Enter the password **public** in this field to allow read-only access to network administration using SNMP. You can view the network, but no configuration is possible with this setting.

Set Community: Enter the password **private** in this field to enable read/write access to the network using SNMP.

IP 1, IP 2, IP 3, IP 4: Enter up to 4 IP addresses to use as trap targets for your network.

SNMP Version: Select the SNMP version of your system.

WAN Access IP Address If you want to limit remote access SNMP access, enter the IP address of the remote computer you will use to access this device. All other IP addresses will be denied remote SNMP access.

SNMP

Use Simple Network Management Protocol(SNMP) for management purposes.

SNMP

SNMP Local : ☐ Enabled ☒ Disabled

SNMP Remote : ☐ Enabled ☒ Disabled

Get Community :

Set Community :

IP 1 :

IP 2 :

IP 3 :

IP 4 :

SNMP Version : ☒ V1 ☐ V2c

WAN Access IP Address :

Routing

The **Routing** page allows you to specify custom routes that determine how data is moved around your network. After modifying any settings, click **Save Settings** to save your changes.

RIP SETTING

RIP: Select this box to enable routing, then select which routing protocol to use:

- **RIPv1:** Protocol in which the IP address is routed through the internet.
- **RIPv2:** Enhanced version of RIPv1 with added features such as Authentication, Routing Domain, Next Hop Forwarding, and Subnet-mask Exchange.

ROUTING RULES

ID: This identifies the rule.

Destination: Enter in the IP of the specified network that you want to access using the static route.

Subnet Mask: Enter in the subnet mask to be used for the specified network.

Gateway: Enter in the gateway IP address for the specified network.

Hop: Enter in the amount of hops it will take to reach the specified network.

Note: In a transmission path, each link is terminated at a network device such as a router or gateway. The number of hops equals the number of routers or gateways that data must pass through before reaching the destination.

Enable: Select this box to enable the rule.

ROUTING

This Routing page allows you to specify custom routes that determine how data is moved around your network.

Save Settings
Don't Save Settings

RIP SETTING

RIP :
☐ Enable
☐ RIPv1
☐ RIPv2

ROUTING RULES

ID	Destination	Subnet Mask	Gateway	Hop	Enable
1					☐
2					☐
3					☐
4					☐
5					☐
6					☐
7					☐
8					☐

Save Settings
Don't Save Settings

Advanced Wireless

Advanced Wireless contains settings which can negatively affect the performance of your router if configured improperly. Do not change these settings unless you are already familiar with them or have been instructed to make the change by one of our support personnel. After modifying any settings, click **Save Settings** to save your changes.

Beacon Interval: Specify a value for the beacon interval. Beacons are packets sent by an access point to synchronize a wireless network. 100 is the default setting and is recommended.

Transmit Power: Set the transmit power of the antennas.

RTS Threshold: This value should remain at its default setting of 2347. If inconsistent data flow is a problem, only a minor modification should be made.

Fragmentation: The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.

DTIM Interval: Set the interval for DTIM. A Delivery Traffic Indication Message (DTIM) is a countdown informing clients of the next window for listening to broadcast and multicast messages. The default interval is 3.

WMM Capable: WMM (Wi-Fi Multimedia) is a QoS (Quality of Service) system for your wireless network. Enable this option to improve the quality of video and voice applications for your wireless clients.

TX Rates: Select the basic transfer rates based on the speed of wireless adapters on your wireless network. It is strongly recommended to keep this setting to **Auto**.

ADVANCED WIRELESS

If you are not familiar with these Advanced Wireless settings, please read the help section before attempting to modify these settings.

ADVANCED WIRELESS SETTINGS

Beacon Interval :	100	(msec, range:1~1000, default: 100)
Transmit Power :	100%	
RTS Threshold :	2347	(1~2347,default: 2347)
Fragmentation :	2346	(256~2346,default: 2346)
DTIM Interval :	1	(range: 1~255, default: 3)
WMM Capable	☒ Enable ☐ Disable	
TX Rates :	Best	
Short GI :	☒	
HT 20/40 Coexistence :	☒ Enable ☐ Disable	

Short GI: Check this box to reduce the guard interval to 400 ns. This can increase the throughput rate provided that the delay spread of the connection is also low. However, it can also increase error rate in some installations, due to increased sensitivity to radio-frequency reflections. Select the option that works best for your installation.

HT 20/40 Coexistence: Enable this option to reduce interference from other wireless networks in your area. If the channel width is operating at 40 MHz and there is another wireless network's channel overlapping and causing interference, the router will automatically change to 20 MHz.

ADVANCED WIRELESS SETTINGS

Beacon Interval :	100	(msec, range:1~1000, default: 100)
Transmit Power :	100%	
RTS Threshold :	2347	(1~2347,default: 2347)
Fragmentation :	2346	(256~2346,default: 2346)
DTIM Interval :	1	(range: 1~255, default: 3)
WMM Capable	☒ Enable ☐ Disable	
TX Rates :	Best	
Short GI :	☒	
HT 20/40 Coexistence :	☒ Enable ☐ Disable	

Save Settings
Don't Save Settings

Advanced Network

Advanced Network contains settings which can change the way the router handles certain types of traffic. We recommend that you do not change any of these settings unless you are already familiar with them or have been instructed to make the change by one of our support personnel. After modifying any settings, click **Save Settings** to save your changes.

Enable UPnP: Tick this checkbox to use the Universal Plug and Play (UPnP™) feature. UPnP provides compatibility with various networking equipment, software, and peripherals.

Enable WAN Ping Respond: Select the box to allow the WAN port to be “pinged.” Blocking WAN pings may provide some extra security from hackers.

ADVANCED NETWORK

If you are not familiar with these Advanced Network settings, please read the help section before attempting to modify these settings.

Save Settings Don't Save Settings

UPNP

Universal Plug and Play (UPnP) supports peer-to-peer Plug and Play functionality for network devices.

Enable UPnP : ☒

WAN PING

If you enable this feature, the WAN port of your router will respond to ping requests from the Internet that are sent to the WAN IP Address.

Enable WAN Ping Respond : ☒

Save Settings Don't Save Settings

Network Scan

This page lets you set whether to allow the DWR-712 to automatically select a 3G/4G network based on the inserted SIM card, and allows you to manually scan for networks and select one to connect to.

3G/4G Network Selection Method: Leave this setting on **Auto Detection** to allow the DWR-712 to automatically select a cellular network to connect to. If you need to select a network manually, select **Manual**, click **Scan**, then select an available network to connect to.

Note: You will only be able to scan for networks if the DWR-712 is not currently connected to a 3G/4G network.

The screenshot shows the 'NETWORK SCAN' configuration page. At the top, there's an orange header 'NETWORK SCAN'. Below it, a grey box contains 'Network Scan.' and three buttons: 'Save Settings', 'Don't Save Settings', and 'Reboot Now'. The next section is 'NETWORK PROVIDER SELECTION' with a dark grey header. It contains the text 'This page will scan near network providers. Please wait for a while for each scan.' Below this, the '2G/3G Network Selection Method' is set to 'Auto-Detection' (indicated by a selected radio button). There are two buttons: 'Status' and 'List of Network Providers'. At the bottom of this section are 'scan' and 'Register' buttons. A final grey box at the very bottom contains 'Save Settings' and 'Don't Save Settings' buttons.

DMZ

Sometimes you may want a computer exposed to the outside world for certain types of applications. If you choose to expose a computer, you can enable Demilitarized Zone (DMZ). This option will expose the chosen computer completely to the outside world.

Enable SPI: Enabling Stateful Packet Inspection (SPI) helps to prevent cyber attacks by validating that the traffic passing through the session conforms to the protocol.

Enable DMZ: If an application has trouble working from behind the router, you can expose one computer to the Internet and run the application on that computer.

Note: Placing a computer in the DMZ may expose that computer to a variety of security risks. Use of this option is only recommended as a last resort.

DMZ IP Address: Specify the IP address of the computer on the LAN that you want to have unrestricted Internet communication. If this computer obtains its IP address automatically using DHCP, be sure to make a static reservation on the **Setup > Network Settings** page so that the IP address of the DMZ machine does not change.

Click **Save Settings** to save your changes, or click **Don't Save Settings** to discard your changes.

DMZ

DMZ

Save Settings Don't Save Settings Reboot Now

FIREWALL SETTINGS

Enable SPI : ☒

DMZ HOST

The DMZ (Demilitarized Zone) option lets you set a single computer on your network outside of the router. If you have a computer that cannot run Internet applications successfully from behind the router, then you can place the computer into the DMZ for unrestricted Internet access.

Note: Putting a computer in the DMZ may expose that computer to a variety of security risks. Use of this option is only recommended as a last resort.

Enable DMZ : ☒

 
DMZ IP Address : <<

Computer Name

Save Settings Don't Save Settings

Tools

The **TOOLS** pages allow you to adjust various system setting for your router, such as the system time, firmware, and custom schedules. To view the Tools pages, click on **TOOLS** at the top of the screen.



Admin

The **Admin** page allows you to change the Administrator password and enable Remote Management. The admin has read/write access while users only have read-only access. Only the admin has the ability to change both admin and user account passwords. After modifying any settings, click **Save Settings** to save your changes.

ADMINISTRATOR

Admin Password: Enter and confirm the password that the admin account will use to access the router's management interface.

REMOTE MANAGEMENT

Remote Management: Tick this check box to enable remote management. Remote management allows the DWR-712 to be configured over the Internet through a web browser. A username and password will still be required to access the Web-Management interface.

IP Allowed to Access: Enter the Internet IP address of the PC that has access to the router. If you enter an asterisk (*) in this field, then anyone will be able to access the router. Adding an asterisk (*) into this field could present a security risk and is not recommended.

Port: This is the port number used to access the router. 8080 is the port usually used for the Web-Management interface.

ADMINISTRATOR SETTINGS

To help secure your network, we recommend that you should choose a new password.

ADMINISTRATOR (THE DEFAULT LOGIN NAME IS ("admin"))

New Password :

Confirm Password :

REMOTE MANAGEMENT

Enable Remote Management : ☐ Enabled

IP Allowed to Access :

Port :

Time

This section will help you set the time zone that you are in and an NTP (Network Time Protocol) server to use. Daylight Saving can also be configured to adjust the time when needed. After modifying any settings, click **Save Settings** to save your changes.

Time Zone: Select the appropriate **Time Zone** from the drop-down box.

Enable Daylight Saving: Check the box to allow for daylight saving adjustments. Use the drop-down menu to specify a start date and end date for daylight saving time adjustments.

Automatically synchronize with Internet time server: Check the box to allow the router to use an NTP server to update the router's internal clock.

NTP Server Used: Enter an NTP server to use for time synchronization, or use the drop-down menu to select one. Click the **Update Now** button to synchronize the time with the NTP server.

Sync. Result: This box will display information about the time synchronization attempt.

TIME AND DATE

The Time and Date Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in and set the NTP (Network Time Protocol) Server. Daylight Saving can also be configured to adjust the time when needed

Save Settings
Don't Save Settings
Reboot Now

TIME AND DATE CONFIGURATION

Time : Fri Jan 08, 2010 00:52:24
Time Zone : (GMT -03:00) Brasilia
Enable Daylight Saving :

AUTOMATIC TIME AND DATE CONFIGURATION

☒ Automatically synchronize with Internet time server
NTP Server Used :

a.ntp.br
a.ntp.br
Update Now

SYNC. RESULT

Save Settings
Don't Save Settings

Syslog

The DWR-712 keeps a running log of events and activities occurring on the router. You may send these logs to a syslog server on your network. After modifying any settings, click **Save Settings** to save your changes.

Enable Logging to Syslog Server: Tick this checkbox to send the router logs to a syslog server.

Syslog Server IP Address: Enter the IP address of the syslog server that the router will send the logs to.

SYSLOG

The SysLog options allow you to send log information to a SysLog Server.

Save Settings

Don't Save Settings

SYSLOG SETTINGS

Enable Logging To Syslog Server :

☐

Syslog Server IP Address :

Save Settings

Don't Save Settings

E-mail Settings

E-mail Settings allow you to send the system log files, router alert messages, and firmware update notifications to an e-mail address. After modifying any settings, click **Save Settings** to save your changes.

Enable E-mail Notification: When this option is enabled, router activity logs will be e-mailed to the specified e-mail address.

SMTP Sever IP and Port: Enter the SMTP server IP address the router will use to send e-mails. Enter the complete IP address followed by a colon(:) and the port number. (e.g. 123.123.123.1:25).

SMTP Username: Enter the username for the SMTP account.

SMTP Password: Enter the password for the SMTP account.

Send E-mail Alert to: Enter the e-mail address where you would like the router to send e-mails to.

E-mail Subject: Enter a subject for the e-mail.

E-mail Log Now: Click this button to send the current logs to the specified e-mail address.

EMAIL SETTINGS

Send system log to a dedicated host or email to specific receipts

Save Settings Don't Save Settings

EMAIL SETTINGS

Enable Email Notification : ☐

SMTP Server IP and Port : :

SMTP Username :

SMTP Password :

Send E-mail alert to :

E-mail Subject :

Email Log Now

Save Settings Don't Save Settings

System


Here, you can save the current system settings to a local hard drive. After modifying any settings, click **Save Settings** to save your changes.

- Save Settings To Local Hard Drive

Use this option to save your current router configuration settings to a file. Click **Save** to open a file dialog, and then select a location and file name for the settings.
- Load Settings From Local Hard Drive:

Use this option to load previously saved router configuration settings. Click **Browse...** and select the saved file and then click the **Upload Settings** button to upload the settings to the router.
- Restore To Factory Default Settings:

This option will restore all settings back to their defaults. Any settings that have not been backed up will be lost, including any rules that you have created.

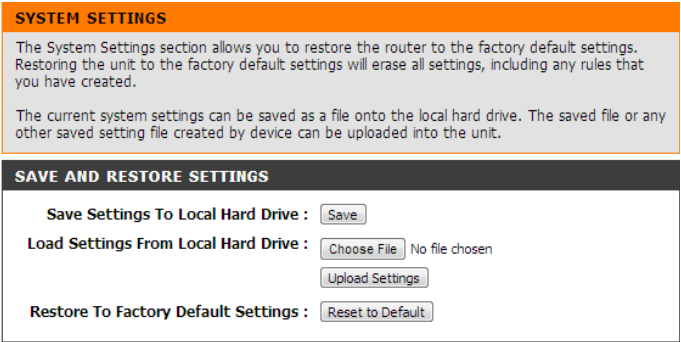

Firmware

Here, you can upgrade the firmware of your router. Make sure the firmware you want to use is on the local hard drive of the computer and then click **Browse** to upload the file. You can check for and download firmware updates at the D-Link support site at <http://support.dlink.com>. After modifying any settings, click **Save Settings** to save your changes.

Current Firmware Version: Displays your current firmware's version.

Current Firmware Date: Displays your current firmware's release date.

Upload: After you have downloaded a new firmware, click **Browse** to locate the firmware on your computer, then click **Upload** to start the firmware upgrade.

Warning: You must use a wired computer to upload the firmware file; do not use a wireless computer. During the upgrade process, do not power off your computer or router, and do not refresh the browser window until the upgrade is complete.

Accept Unofficial Firmware: If the firmware you want to install is not an official D-Link release, you will need to check this checkbox.

Warning: Unofficial firmwares are not supported, and may cause damage to your device. Use of unofficial firmwares is at your own risk.

FIRMWARE UPGRADE

There may be new firmware for your Router to improve functionality and performance.

To upgrade the firmware, locate the upgrade file on the local hard drive with the Browse button. Once you have found the file to be used, click the Save Settings below to start the firmware upgrade.

FIRMWARE INFORMATION

Current Firmware Version :	V2.00
Current Firmware Date :	2013/11/05

FIRMWARE UPGRADE

Note! Do not power off the unit when it is being upgraded.
The upgrade procedure takes about 180 seconds.
When the upgrade is done successfully, the unit will be restarted automatically.

To upgrade the firmware, your PC must have a wired connection to the router. Enter the name of the firmware upgrade file, and click on the Upload button.

Upload : No file chosen

Accept unofficial firmware. ☐

Dynamic DNS

The DDNS feature allows you to host a server (Web, FTP, or Game Server) using a domain name that you have purchased (such as www.exampledomain.com) with your dynamically assigned IP address. You can use one of the listed DDNS service, or you can sign up for D-Link's free DDNS service at www.dlinkddns.com. After modifying any settings, click **Save Settings** to save your changes.

DDNS: Tick this checkbox to enable the DDNS feature.

Provider: Select a DDNS service provider to use.

Host Name: Enter the **Host Name** that you registered with your DDNS service provider.

Username / E-mail: Enter the **Username** for your DDNS account.

Password / Key: Enter the **Password** for your DDNS account.

The screenshot displays the 'DYNAMIC DNS' configuration page. At the top, an orange header contains the title 'DYNAMIC DNS'. Below this, a grey box contains explanatory text: 'The Dynamic DNS feature allows you to host a server (Web, FTP, Game Server, etc...) using a domain name that you have purchased (www.whateveryournameis.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter your host name to connect to your game server no matter what your IP address is.' Below the text are two buttons: 'Save Settings' and 'Don't Save Settings'. The main configuration area has a dark grey header with 'DYNAMIC DNS' in white. It contains the following fields: 'DDNS :' with an unchecked checkbox, 'Provider :' with a dropdown menu showing 'DynDNS.org(Dynamic)', 'Host Name :' with a text input field, 'Username / E-mail :' with a text input field, and 'Password / Key :' with a text input field. At the bottom of this section are two buttons: 'Save Settings' and 'Don't Save Settings'.

System Check

This useful diagnostic utility can be used to check if a computer is connected to the network. It sends ping packets and listens for responses from the specific host. After modifying any settings, click **Save Settings** to save your changes.

Host Name or IP Address: Enter a host name or the IP address that you want to ping and click the **Ping** button. The results of the ping attempt will be displayed in the **PING RESULT** section below.

PING TEST

Ping Test sends "ping" packets to test a computer on the Internet.

Save Settings

Don't Save Settings

PING TEST

Ping Test is used to send "Ping" packets to test if a computer is on the Internet.

Host Name or IP address :

Ping

PING RESULT

Save Settings

Don't Save Settings

Schedules

This section allows you to manage schedule rules for various firewall and parental control features. After modifying any settings, click **Save Settings** to save your changes.

Enable Schedule: Tick this checkbox to enable schedules.

Edit: Click this button to edit the selected rule. (see below)

Delete: Click this button to delete the selected rule.

Previous Page: Click this button to go to the previous page of rules.

Next Page: Click this button to go to the next page of rules.
Click this button to specify the start time, end time, and name of the rule.

Add New Rule...: Click this button to create a new rule. (see below)

Name of Rule #: Enter a name for your new schedule.

Policy: Select Activate or Inactivate to decide whether features that use the schedule should be active or inactive except during the times specified.

Week Day: Select a day of the week for the start time and end time.

Start Time (hh:mm): Enter the time at which you would like the schedule to become active.

End Time (hh:mm): Select the time at which you would like the schedule to become inactive.

After making your changes, click **Save Settings** to save the schedule.

SCHEDULES

The Schedule configuration option is used to manage schedule rules for "Virtual Server", "Outbound Filter" and "Inbound Filter".

SCHEDULE RULE

Enable Schedule : ☒

Rule#	Rule Name	Action
1	test	Edit Delete

SCHEDULES

The Schedule configuration option is used to manage schedule rules for "Virtual Server", "Outbound Filter" and "Inbound Filter".

SCHEDULE RULE SETTING

Name of Rule 2 :

Policy : except the selected days and hours below.

ID	Week Day	Start Time (hh:mm)	End Time (hh:mm)
1	Monday	08:00	19:00
2	Tuesday	08:00	19:00
3	Wednesday	08:00	19:00
4	Thursday	08:00	19:00
5	Friday	08:00	19:00
6	-- choose one --		
7	-- choose one --		
8	-- choose one --		

Connection Reset

This feature allows you to reset the internet connection on your router by periodically resetting the connection. You can choose to have this happen on a predetermined schedule by configuring the options on this page.

Auto-Reboot: Select whether the connection reset feature should be **Enabled** or **Disabled**.

Reboot-Schedule: If the connection reset feature is enabled, select when it should activate via the hour and minute from the dropdown boxes.

Daily Schedule: Select this option if you want the connection reset feature to activate on a daily schedule.

Weekly Schedule Day of Week: Select this option if you want the connection reset feature to activate only on a certain day of the week.


Date of Month: Select this option if you want the connection reset feature to activate only on a certain day of the month.

The screenshot shows the 'CONNECTION RESET' configuration page. At the top, there is an orange header with the title 'CONNECTION RESET'. Below the header, a grey box contains the following text: 'Is possible set Auto-Reboot diary, weekly or monthly but the router must have the currently time. Configure a NTP server to get the time from network on TOOLS-> Time'. Below this box are three buttons: 'Save Settings', 'Don't Save Settings', and 'Reboot Now'. The main configuration area has a dark grey header with the title 'CONNECTION RESET'. It contains the following settings: 'Auto-Reboot' with radio buttons for 'Disable' and 'Enable' (selected); 'Reboot-Schedule' with two dropdown menus showing '3' and '0'; 'Diary Schedule' with a radio button; 'Weekly Schedule Day of Week' with a radio button and a dropdown menu showing 'Monday'; and 'Date of Month' with a radio button and a dropdown menu showing '1'. At the bottom of the configuration area are two buttons: 'Save Settings' and 'Don't Save Settings'.

Vivo Chip

This feature will allow you to select and enable application services that are provided by your ISP.

- Select:** Check the box next to the service you wish to enable and click **Select** to enable it.
- Back:** Click **Back** to view the previous page of available applications.
- Home:** Click **Home** to view the home page for all available applications.

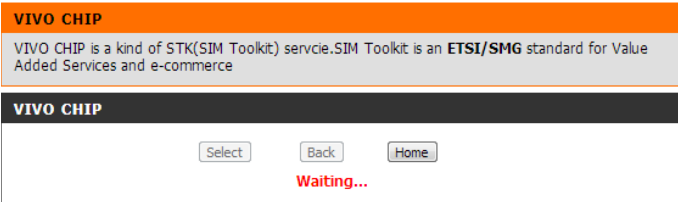

PIN Control

This feature allows you to set up a pin code in order to activate/deactivate or modify an existing pin code. After querying your SIM card for an existing PIN, you can Enable, Disable, or Modify the pin code. Click **Save Settings** to save any changes made.

PIN CONTROL
PIN Control

Query status... Please wait a moment...

Status

The **STATUS** pages allow you to see the current status of the router for various categories, including WAN, 3G, network, and wireless. To view the Status pages, click on **STATUS** at the top of the screen.

Device Info

All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.

- General:** Displays the current time and firmware version.
- WAN:** Displays the WAN connection details of the router.
- 3G Card:** Displays the 3G connection details of the router.
- LAN:** Displays the LAN connection details of the router.
- Wireless LAN:** Displays the wireless LAN connection details of the router
- LAN Computers:** Displays the list of clients connected to the router.

SETUPADVANCEDTOOLSS**STATUS**SUPPORT

DEVICE INFORMATION

All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.

Refresh

GENERAL

Time : Thu Dec 31, 2009 17:17:47 -0800

Firmware Version : V2.00 , 2013/11/05

WAN

Connection Type : 3G

Network Status : Connecting...

Connection Time : N/A

Signal Strength : N/A

IP Address : 0.0.0.0

Subnet Mask : 0.0.0.0

Default Gateway : 0.0.0.0

DNS Server : 0.0.0.0 , 0.0.0.0

3G CARD

Card Info : MTK2

Link Status : Connecting...

Network Name : N/A

LAN

MAC Address : 84:C9:B2:E3:80:1F

IP Address : 192.168.1.99

Subnet Mask : 255.255.255.0

DHCP Server : Disabled

DHCP Server : Disabled

Log

Here, you can view and download the system log.

Previous: Click this button to go to the previous page of the log.

Next: Click this button to go to the next page of the log.

First Page: Click this button to skip to the first page of the log.

Last Page: Click this button to skip to the last page of the log.

Refresh: Click this button to refresh the system log.

Download: Click this button to download the current system log to your computer.

Clear Logs: Click this button to clear the system log.

Link To Log Settings: Click this button to go to the Syslog page. For more, refer to "Syslog" on page 46.

VIEW LOG

View Log displays the activities occurring on the device.

Page: 1/3 (Log Number : 31)

Previous

Next

First Page

Last Page

Refresh

Download

Clear logs

Link To Log Settings

SYSTEM LOG

Time	Message
May 23 21:40:27	kernel: klogd started: BusyBox v1.3.2 (2012-02-16 10:56:57 CST)
May 23 21:40:37	commander: Init NAT Server ...
May 23 21:40:39	nat: Using the packet filter which support IP range
May 23 21:40:41	syslog: Unable to open /var/run/udhcpd.leases for reading
May 23 21:40:41	udhcpd[1816]: udhcpd (v0.9.9-pre) started
May 23 21:40:41	udhcpd[1816]: Unable to open /var/run/udhcpd.leases for reading
May 23 21:40:41	commander: Start UPNP Daemon !!
May 23 21:40:45	commander: STOP WANTYPE Dynamic IP Address
May 23 21:40:45	commander: START WANTYPE Dynamic IP Address
May 23 21:40:46	udhcpc[2016]: udhcpc (v0.9.9-pre) started
May 23 21:40:46	udhcpc[2016]: Lease of 172.17.5.103 obtained, lease time 43200
May 23 21:40:46	init: Starting pid 2115, console /dev/ttyS1: '/bin/ash'
May 23 21:40:47	commander: Start/Restart httpd !
May 23 21:40:48	commander: Synchronization Time Fail. Re-Sync after 10 sec
May 23 21:40:49	commander: Restart UPNP Daemon !!

Statistics

Here you can view the packets transmitted and received passing through your router on both WAN and LAN ports. The traffic counter will reset if the device is rebooted. Click the **Refresh** button to refresh the WAN statistics.

TRAFFIC STATISTICS

Traffic Statistics display Receive and Transmit packets passing through the device.

Refresh

WAN STATISTICS INFORMATION

Statistics	Inbound	Outbound
Octets	4351228	297947
Unicast packets	33034	2004
Multicast packets	7349	0

Wireless

This table displays a list of wireless clients that are connected to your wireless router. It also displays the connection time and MAC address of the connected wireless clients. Click **Refresh** to refresh the list.

WIRELESS CLIENT LIST

View the wireless clients that are connected to the router. (A client might linger in the list for a few minutes after an unexpected disconnect.)

Refresh

WIRELESS CLIENT TABLE

ID	MAC Address
----	-------------

IPv6 Status

The IPv6 page displays a summary of the router’s IPv6 settings and lists the IPv6 address and host name of any IPv6 clients.

IPv6 NETWORK INFORMATION

All of your IPv6 Internet and network connection details are displayed on this page.

IPv6 CONNECTION INFORMATION

IPv6 Connection Type :

6 to 4

Network status :

Connect

Wan IPv6 Address :

/64

Primary IPv6 DNS Server :

Secondary IPv6 DNS Server :

LAN IPv6 Link-Local Address :

LAN IPv6 Address :

Diagnostic

This page shows detailed information that could be used to help your Internet Service Provider (ISP) troubleshoot connection problems related to your 4G LTE / 3G Service.

DIAGNOSTIC
This Page shows some information of SIM card, modem and mobile service. Refresh
SERVICE INFORMATION
Operator : CHUNGHUA TELECOM Cell Broadcast : MCC : 466 MNC : 92 LAC : Cellid : Service Type : HSPA+ Service Prefer Mode : GSM only PS attach(DATA) : Detached CS attach(VOICE) : Detached Download : 0 (Bytes) Upload : 0 (Bytes) IMSI : 466920359874644 SMSC : 886932400821
SIM STATUS
PIN Code Lock : PIN Code Retry Times : -3 PUK Code Retry Times : -3
MODULE STATUS
IMEI : 0123456789012357 FW Version : 2.1.5 Module Name : MTK2

Support

The **SUPPORT** pages provide help information for each section of the device's interface. To view the Support pages, click on **SUPPORT** at the top of the screen.

SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
-------	----------	-------	--------	---------

D-Link

vivo

DWR-712

SETUP

ADVANCED

TOOLS

STATUS

SUPPORT

MENU

SETUP

ADVANCED

TOOLS

STATUS

LOGOUT

Internet
Offline

Telephone
Offline

Reboot

SUPPORT MENU

Setup

Advanced

Tools

Status

SETUP HELP

Internet

Wireless Settings

Network Settings

IPv6 Setup

Message Service

ADVANCED HELP

VIRTUAL SERVER

Application Rules

QoS Engine

MAC Address Filter

URL Filter

Outbound Filter

Inbound Filter

SNMP

Routing

Advanced Wireless

Advanced Network

Network Scan

DMZ

TOOLS HELP

Admin

Time

SysLog

Email settings

System

Firmware

Dynamic DNS

System Check

Schedules

STATUS HELP

Device Info

Log

Statistics

Wireless


Connecting to a Wireless Network

Using Windows® 8


WPA/WPA2

It is recommended that you enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key (Wi-Fi password) being used.

To join an existing network, locate the wireless network icon in the taskbar next to the time display.

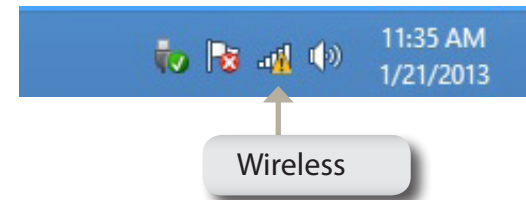



Clicking on this icon will display a list of wireless networks that are within connecting proximity of your computer. Select the desired network by clicking on the network name.

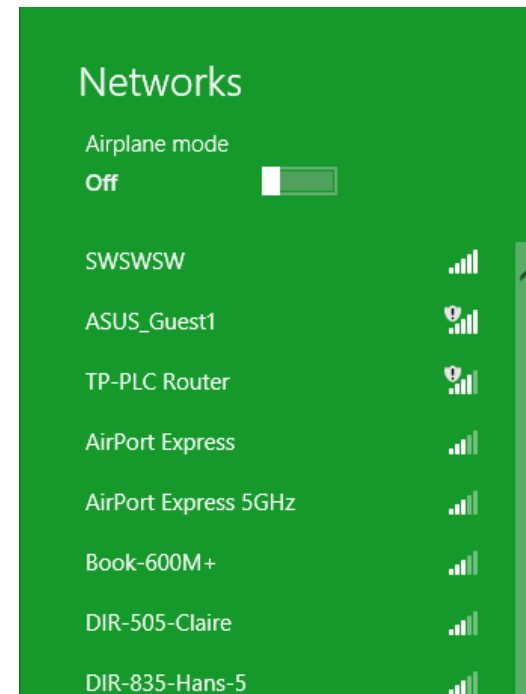

You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Next**.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router during this step to enable the WPS function.

When you have established a successful connection to a wireless network, the word **Connected** will appear next to the name of the network to which you are connected to.

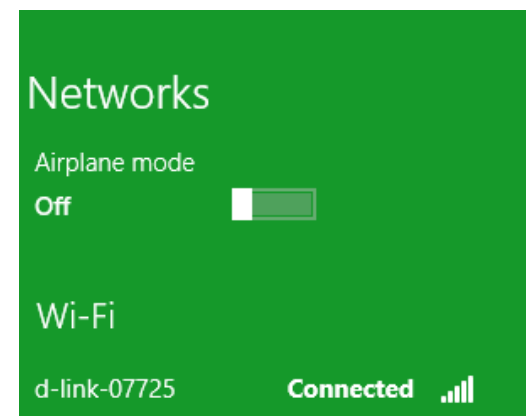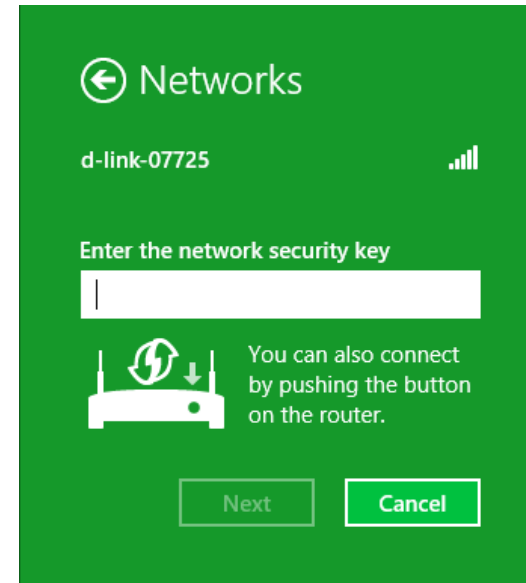


Using Windows® 7

Windows 7 users may use the built-in wireless utility to connect to a wireless network. If you are using another company's utility or Windows 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows 7 utility as seen below.

If you receive the Wireless Networks Detected bubble, click on the center of the bubble to access the utility. You can also click on the wireless icon in your system tray (lower-right corner).

The utility will display any available wireless networks in your area.

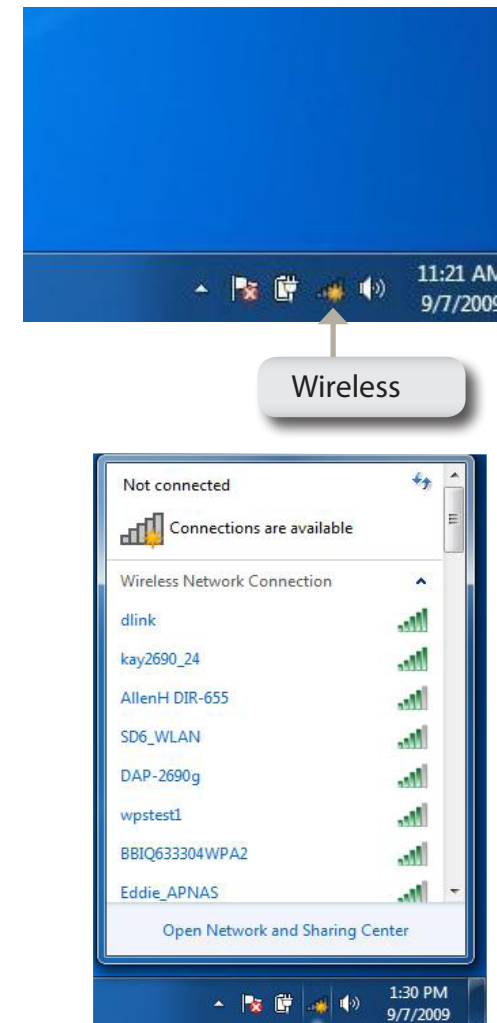

Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.


If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to the Networking Basics section in this manual for more information.



Configuring Wireless Security

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Click on the wireless icon in your system tray (lower-right corner).

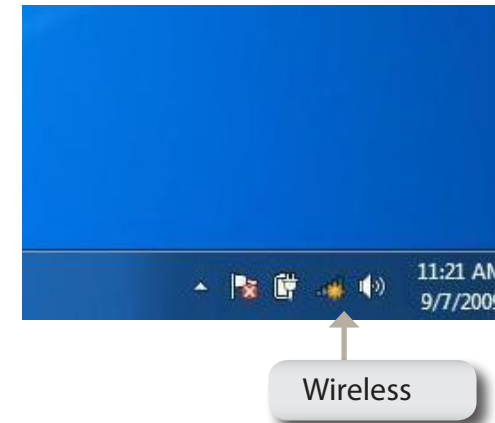


2. The utility will display any available wireless networks in your area.



3. Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.




4. The following window appears while your computer tries to connect to the router.

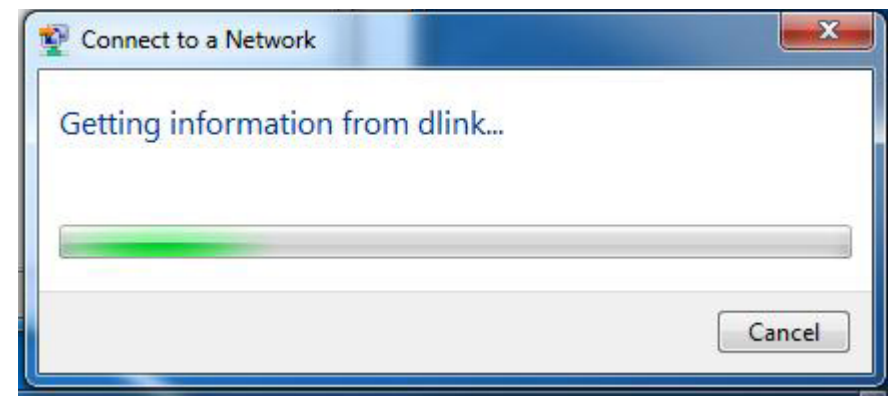

5. Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

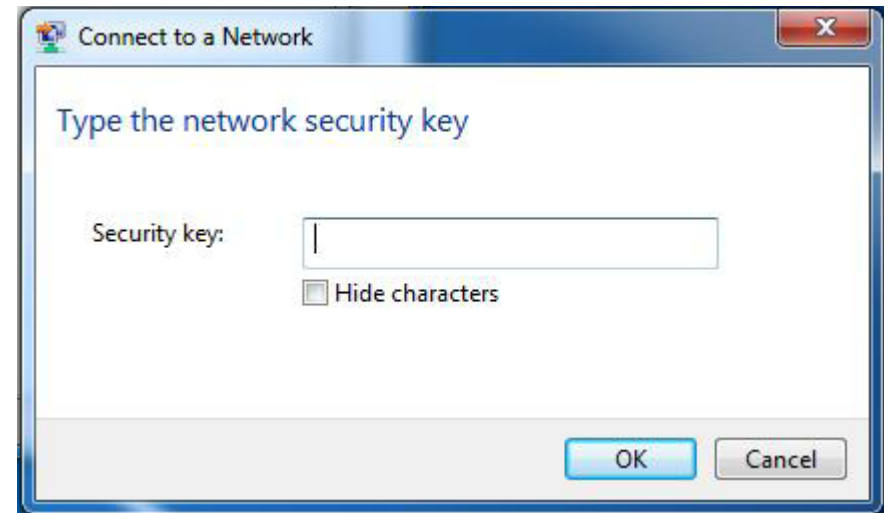

Using Windows Vista™

Windows® Vista™ users may use the built-in wireless utility. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® Vista™ utility as seen below.

If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.


or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **Connect to a network**.



The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.

If you get a good signal but cannot access the Internet, check the TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

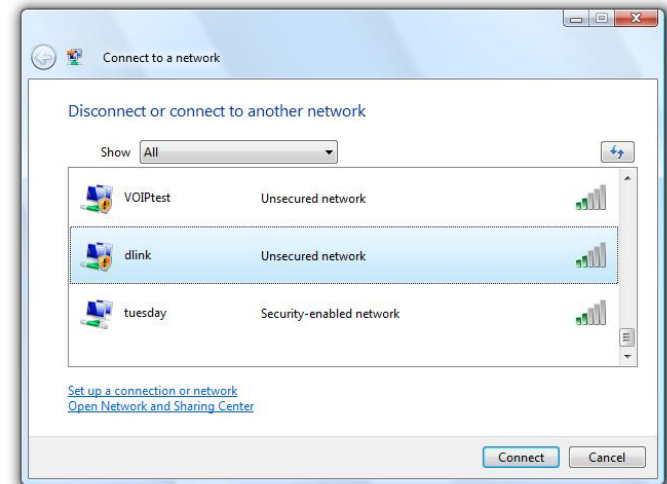


Configuring Wireless Security

It is recommended to enable wireless security (WEP/WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Open the Windows® Vista™ Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower right corner of screen). Select **Connect to a network**.




2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

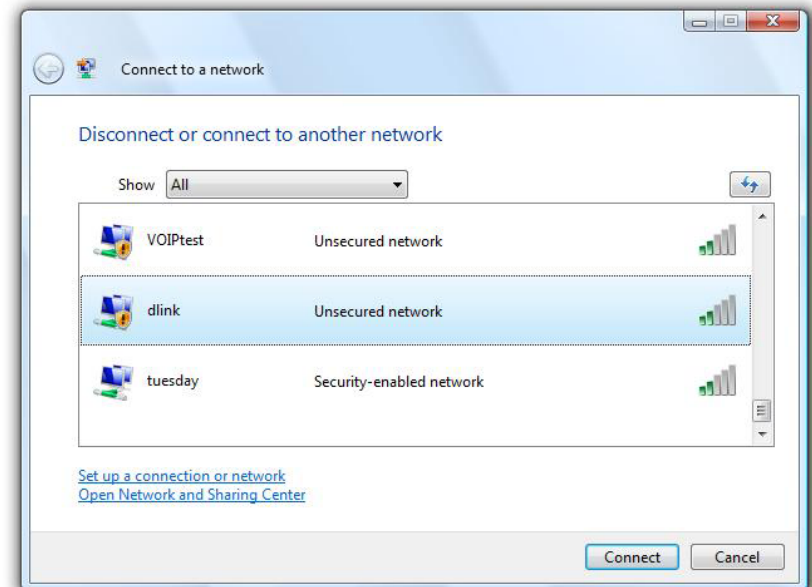

3. Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

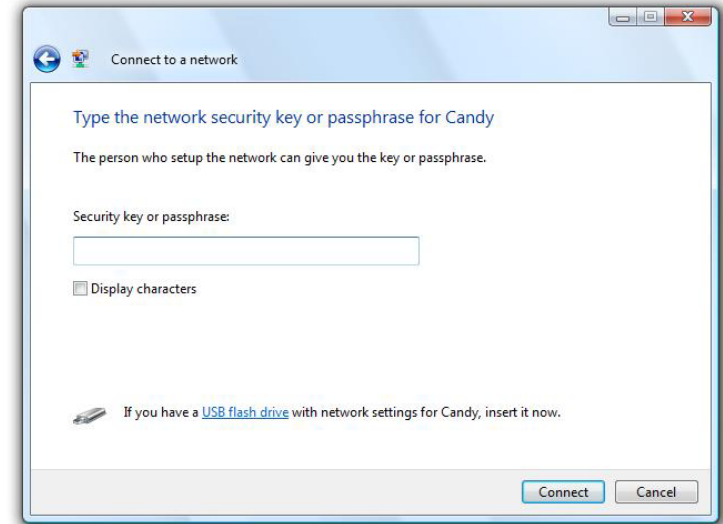

Connect to a Wireless Network Using Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as seen below.




If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check the TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

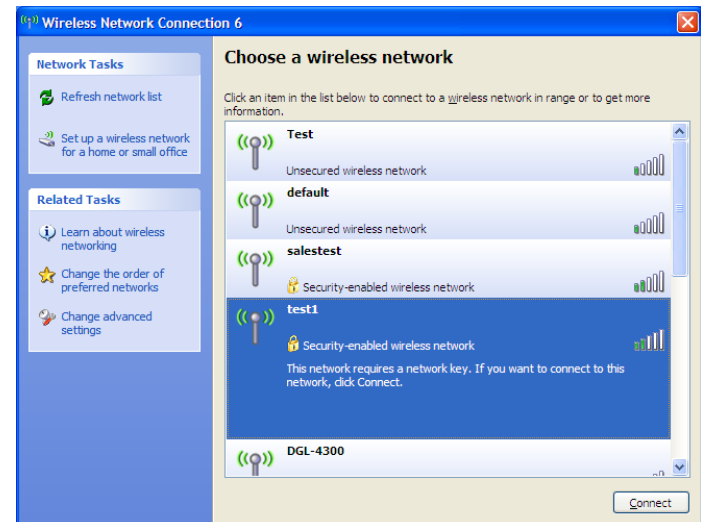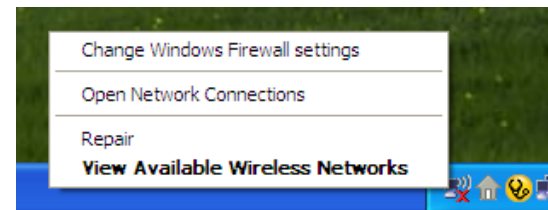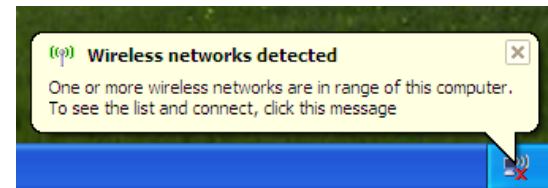


Configure WEP

It is recommended to enable WEP on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.

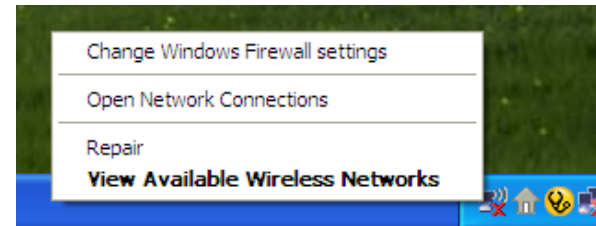


2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

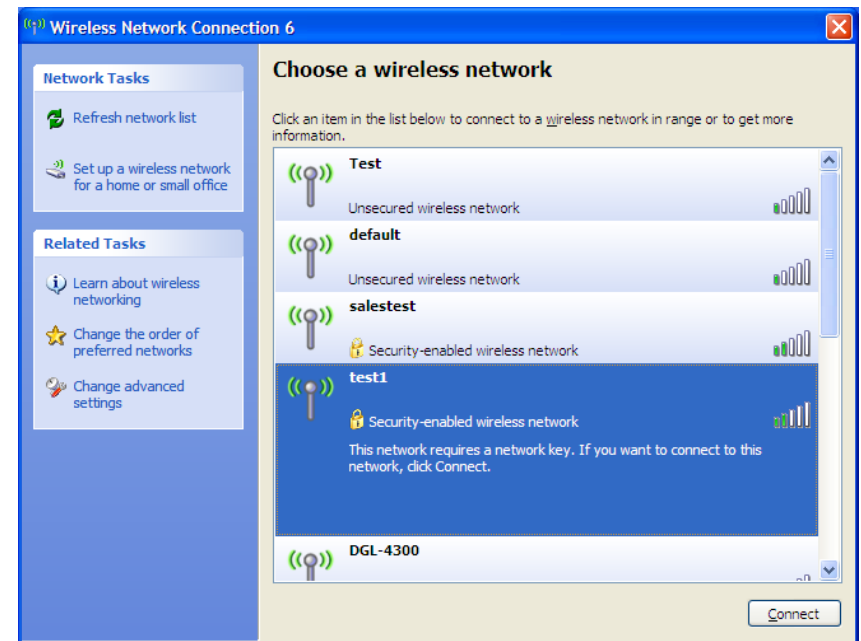

3. The **Wireless Network Connection** box will appear. Enter the same WEP key that is on your router and click **Connect**.



It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WEP settings are correct. The WEP key must be exactly the same as on the wireless router.

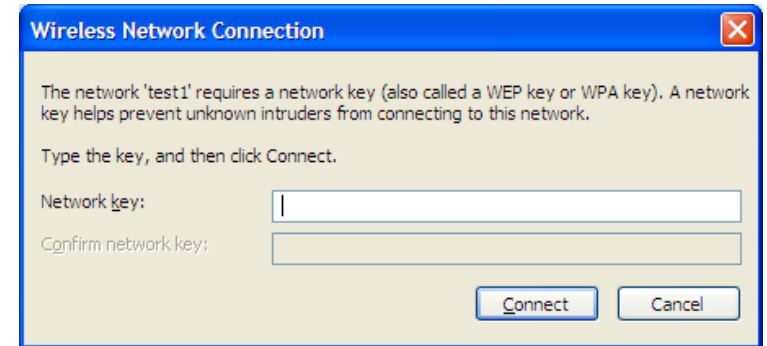

Configure WPA-PSK


It is recommended to enable WPA on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WPA key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.
2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

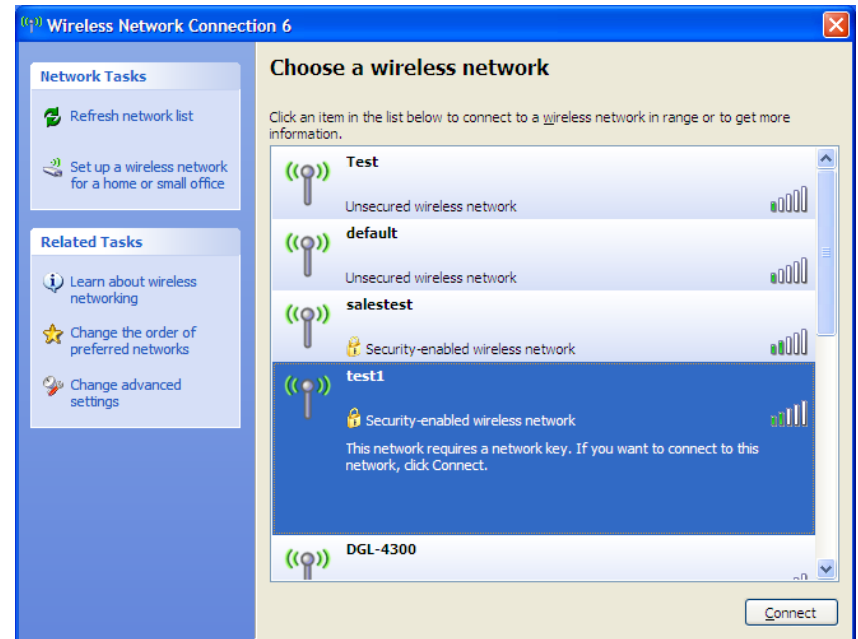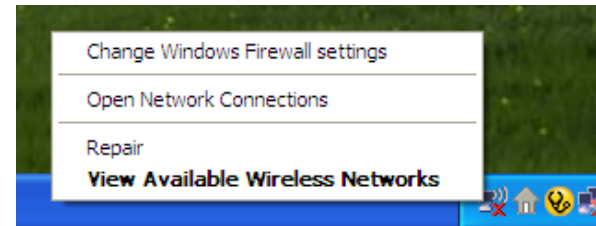

3. The **Wireless Network Connection** box will appear. Enter the WPA-PSK passphrase and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The WPA-PSK passphrase must be exactly the same as on the wireless router.

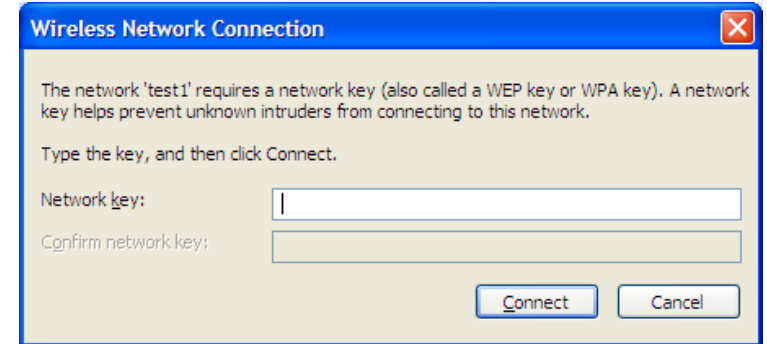

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DWR-712. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows® XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.)

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (192.168.0.1 for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Internet Explorer 6 or higher
 - Netscape 8 or higher
 - Mozilla 1.7.12 (5.0) or higher
 - Opera 8.5 or higher
 - Safari 1.2 or higher (with Java 1.3.1 or higher)
 - Camino 0.8.4 or higher
 - Firefox 1.5 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
 - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the **Security** tab, click the button to restore the settings to their defaults.
 - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
 - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
 - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your the web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. Unfortunately, this process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the rear panel of the unit. With the router powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is 192.168.0.1. When logging in, the username is **admin** and leave the password box empty.

Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A wireless router is a device used to provide this link.

What is Wireless?

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly, so you have the freedom to connect computers anywhere in your home or office network.

Why D-Link Wireless?

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

How does wireless work?

Wireless works similar to how cordless phone work, through radio signals to transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point as seen in the picture, the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, college and high school campuses, airports, golf courses, and many other outdoor venues.

Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away.

Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power which makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it; whether it's for home, office, business, D-Link has a wireless solution for it.

Home

- Gives everyone at home broadband access
- Surf the web, check e-mail, instant message, etc
- Gets rid of the cables around the house
- Simple and easy to use

Small Office and Home Office

- Stay on top of everything at home as you would at the office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

Where is wireless used?

Wireless technology is expanding everywhere not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link Cardbus Adapter with your laptop, you can access the hotspot to connect to Internet from remote locations like Airports, Hotels, Coffee Shops, Libraries, Restaurants, and Convention Centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

Tips

Here are a few things to keep in mind, when you install a wireless network.

Centralize your router or access point

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

Security

Don't let your next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the router. Refer to product manual for detail information on how to set it up.

Wireless Modes

There are basically two modes of networking:

- **Infrastructure** – All wireless clients will connect to an access point or wireless router.
- **Ad-Hoc** – Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more WNA-2330 wireless network Cardbus adapters.

An Infrastructure network contains an access point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An Ad-Hoc network contains only clients, such as laptops with wireless cardbus adapters. All the adapters must be in Ad-Hoc mode to communicate.

Networking Basics


Check your IP address

After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start** > **Run**. In the run box type *cmd* and click **OK**. (Windows® Vista™ users type *cmd* in the **Start Search** box.)

At the prompt, type *ipconfig* and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

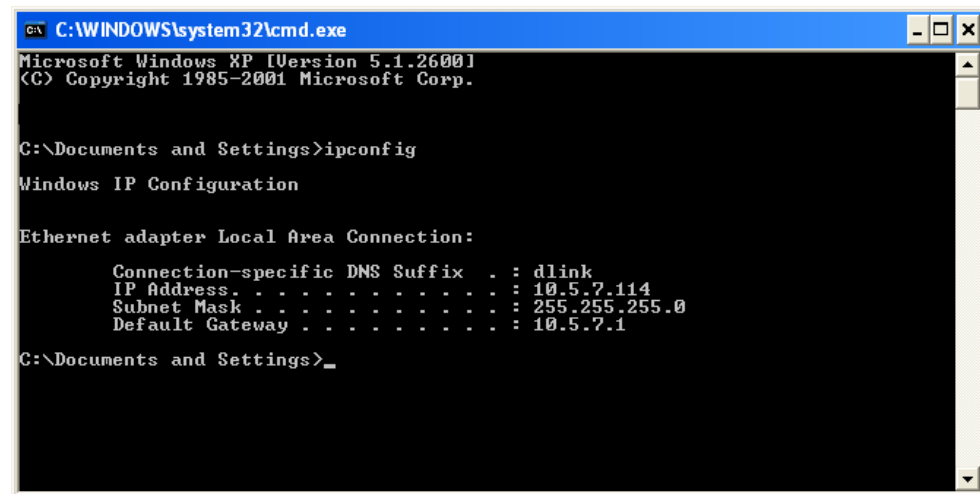

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>
```

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

Step 1

- Windows® Vista™ - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections**.
- Windows® XP - Click on **Start > Control Panel > Network Connections**.
- Windows® 2000 - From the desktop, right-click **My Network Places > Properties**.

Step 2

Right-click on the **Local Area Connection** which represents your network adapter and select **Properties**.

Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties**.

Step 4


Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

Example: If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

Step 5

Click **OK** twice to save your settings.

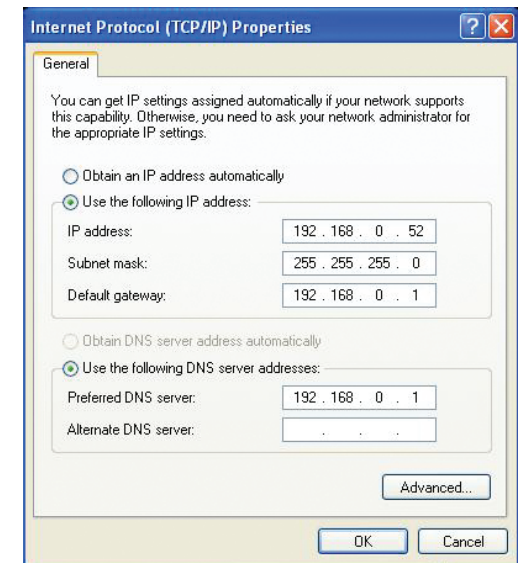

Technical Specifications

GSM Band (GSM/GPRS/EDGE)

- 850 / 900 / 1800 / 1900 MHz
- Power Class 4 (850 / 900 MHz)
- Power Class 1 (1800 / 1900 MHz)

UMTS/HSDPA Band ¹

- 900/2100 MHz or 850/1900/2100 MHz
- Power Class 3

Data Rates ²

- Up to 150 Mbps with 802.11n clients
- 6/9/11/12/18/24/36/48/54 Mbps in 802.11g mode
- 1/2/5.5/11 Mbps in 802.11b mode
- 3G Uplink: Up to 5.76 Mbps
- 3G Downlink: Up to 21 Mbps

Standards

- 802.11b/g, compatible with 802.11n devices
- 802.3
- 802.3u

Wireless Security

- 64/128-bit WEP (Wired Equivalent Privacy)
- WPA & WPA2 (Wi-Fi Protected Access)

Firewall

- Network Address Translation (NAT)
- Stateful Packet Inspection (SPI)

VPN

- L2TP/PPTP/IPSEC/VPN Pass-through

Antenna

- External 3G antenna

Ports

- Four LAN ports (RJ-45)
- WAN port (RJ-45)
- Phone port (RJ-11)

USIM Slot

- Standard 6-pin SIM card interface

LED Status Indicators

- Status
- WAN
- LAN
- WLAN
- 2G
- 3G
- SMS
- Signal

Dimensions (L x W x H)

- 190 x 119 x 22 mm (7.48 x 4.69 x 0.87 inches)

Operating Temperature

- 0 to 40 °C (32 to 104 °F)

Operating Humidity

- 10% to 90% (Non-condensing)

Certifications

- FCC

¹ Supported frequency band is dependent upon regional hardware version.

² Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

Safety Statements

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

1. This device complies with Part 15 of the FCC rules/Industry Canada RSS 210 standard . Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.
3. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

IMPORTANT NOTE : (For Mobile Device Configuration)

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and

operated with minimum distance 20cm between the radiator & your body.

IMPORTANT NOTE : (For Portable Device Configuration)

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.

This Class [*] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [*] est conforme à la norme NMB-003 du Canada.

Industry Canada Caution:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and**
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) il ne doit pas produire de brouillage et**
- (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.**

IC IMPORTANT NOTE : (For Mobile Device Configuration)

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC IMPORTANT NOTE : (For Portable Device Configuration)

IC Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528. This equipment should be installed and operated with minimum distance 1cm between the radiator & your body.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

En vertu de la réglementation de l'industrie du Canada, cet émetteur de radio ne peuvent fonctionner en utilisant une antenne d'un type et maximum (ou moins) Gain approuvé pour l'émetteur par Industrie Canada. Pour réduire risque d'interférence aux autres utilisateurs, le type d'antenne et son gain doivent être choisis de sorte que la puissance isotrope rayonnée équivalente (PIRE) ne dépasse pas ce qui est nécessaire pour la réussite de communication.

附錄(7) 低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。