

P-210

1 of 3



RaiderPro™



Introduction

The RaiderPro™ contents include the controller, warranty information and registration card. If you are missing any of these items, please contact InterAct® Multimedia Products' Customer Service at 1-407-333-1392. Please take the time to fill out your warranty and registration card to receive updates and information on new products from InterAct®.

Setting up in Windows® 95/98:

1. Shut down the computer and attach the 15-pin gameport connector to the gameport on the Sound or Game Card.
2. Start Windows® 95/98.
3. From the START menu, choose SETTINGS and then CONTROL PANEL.
4. Click on the JOYSTICK or GAME CONTROLLERS icon.
5. If there is a Joystick icon, go to line 6. For Game Controllers, go to line 6A.
6. Select Joystick 1 in Current Joystick.
7. Select 2-axis, 4-button Joystick Driver in Joystick Selection. Click on CALIBRATE and follow the on-screen instructions.
8. After the gaming device has been calibrated, select TEST to verify the gaming device has been calibrated properly.
9. Choose APPLY and then OK before exiting.
- 6A. Select ADD and choose 2-axis, 4-button Joystick Driver, then select OK.
- 7A. After selecting OK, the General screen will appear with the selected driver listed. Note: Remove any other drivers listed under Game Controllers on the General screen.
- 8A. Now choose PROPERTIES and then CALIBRATE.
- 9A. Once in the Calibration Utility, follow the on-screen instructions.
- 10A. After the gaming device has been calibrated, choose TEST to verify the gaming device has been calibrated properly.
- 11A. Select APPLY and then OK before exiting.

Setting up in Windows® 3.X and MS-DOS:

Windows® 3.X and MS-DOS games that support gaming devices have their own device drivers integrated into their software. Each Windows® 3.X and MS-DOS game configures the gamepad differently. You will need to refer to the game manual instructions for calibration.

2 of 3



Note: If the game has not been setup for the use of a gaming device, the game will default to the keyboard and mouse.

Troubleshooting

SYMPTOM In Windows® 95/98, the joystick control panel tells me that the RaiderPro™ is not connected properly.

SOLUTION Make sure that your gameport is functioning properly. Go to CONTROL PANEL, then choose SYSTEM. Click on the DEVICE MANAGER tab, and choose SOUND, VIDEO, AND GAME CONTROLLERS. If there is a yellow or red icon next to GAMEPORT JOYSTICK, then this device is not functioning properly. Contact your system manufacturer for information to fix this.

Care for the Unit

The controller is an electronic unit, and should be treated with care when handling. We recommend that you do not store the unit in direct sunlight or at extreme temperatures, or spill any liquids on the unit. Finally, do not open the case of the controller. An InterAct® service technician must do all service and maintenance.

Contact Information

For the U.S. & Canada

Phone : 1-407-333-1392
 Email : pcsupport@gameshark.com
 World Wide Web : <http://www.interact-acc.com/interactpc>
 Mailing Address : InterAct® Accessories, Inc.
 ATTN: CUSTOMER SERVICE
 A RECOTON Company
 2950 Lake Emma Road
 Lake Mary, FL 32746

For United Kingdom (England, Scotland, Wales, and Northern Ireland) and Ireland:

Phone : 44 1204 862 026
 Fax : 44 1204 862 033
 Email : info@rosscp.com
 World Wide Web : www.rosscp.com
 Mailing Address : Ross
 Emlyn St. Farnworth
 Bolton, BL4 7EB
 England

Hours : Monday through Friday 900 hrs. to 1700 hrs.

All trademarks are the property of their respective owners.

Printed in Hong Kong

P-210

3 of 2

FCC REGULATIONS

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart B of Part 15 of FCC rules*, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.*
- Relocate the computer with respect to the receiver.*
- Move the computer away from the receiver.*
- Plug the computer into a different outlet so that computer and receiver are on different branch circuits.*

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

**How to Identify and Resolve Radio-TV Interference Problems.*

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402; Stock No. 004-000-00345-4.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.