

FCC ID: L25301



SUPREME TOYS (H.K.) LTD.

INSTRUCTION

ITEM NO.301

WIRELESS STAGE MICROPHONE & AMPLIFIER

- 1. OPEN THE BATTERY COMPARTMENT AND INSTALL 1 "9V" AND 2 "AA" BATTERIES.**
- 2. TURN ON THE MICROPHONE AND THE SPEAKER BASE.**
- 3. TALK OR SING THROUGH THE MICROPHONE AND YOUR VOICE WILL BE TRANSMITTED THROUGH THE SPEAKER BASE.**
- 4. IF THERE IS "FEED BACK" SOUND, TURN THE VOLUME DOWN OR PLACE THE MICROPHONE AWAY FROM THE BASE.**

REMRK: USER CAN NOT MODIFY THIS PRODUCT.

Hong Kong Office : Rm 907-9, 9/F Tower B, New Mandarin Plaza, 14 Science Museum Road,
Tsimshatsui East, Kowloon, Hong Kong
Tel: 2317 5168 Fax: 2317 6607 E-mail: SUPREMEH@HKSTAR.COM
USA Office: 8348 C. Olive St. Rd.,
St. Louis, MO 63132, USA.
Tel: (314) 567-1777 Fax: (314) 567-1734 E-mail: IABDROB@AOL.COM