 



802.11a – Ant 1

Channel 1 (5955MHz)

The Reference Level

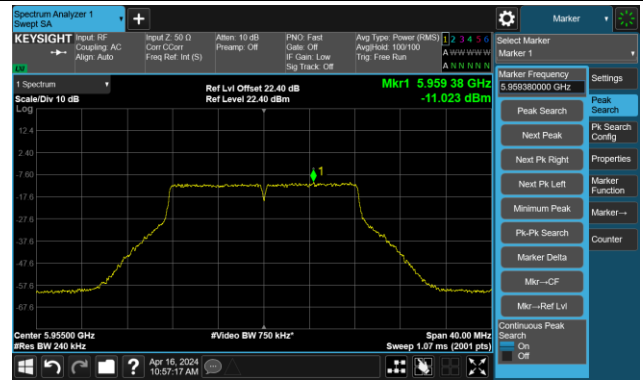


 The Mask Data

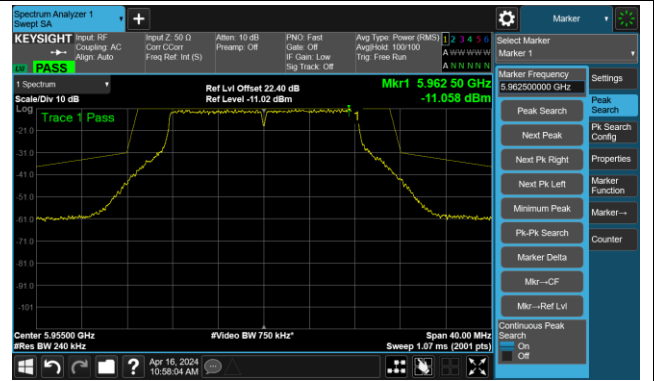


Channel 49 (6195MHz)

 The Reference Level

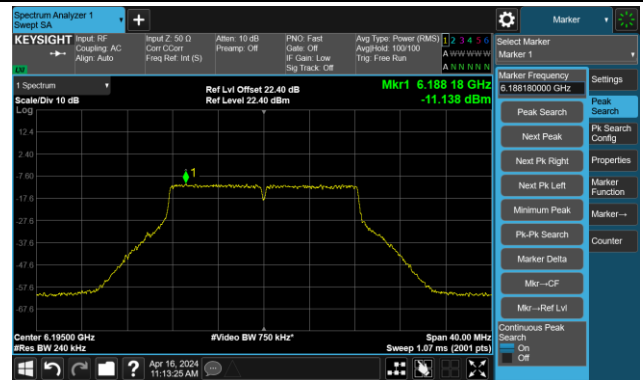


The Mask Data

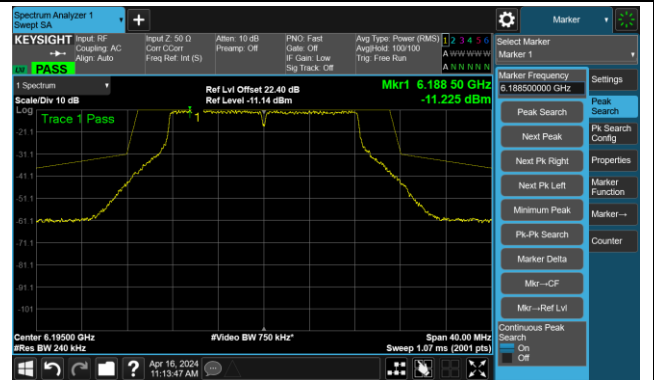 

Channel 93 (6415MHz)

 The Reference Level

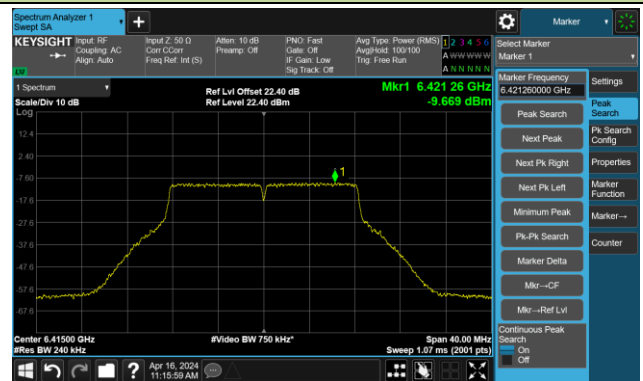


The Mask Data




802.11a – Ant 1

Channel 97 (6435MHz)

 The Reference Level

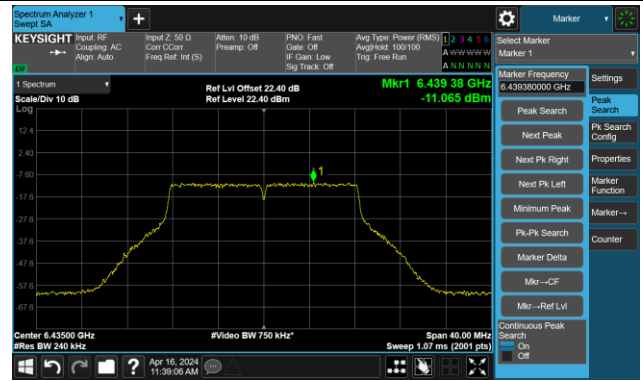


The Mask Data

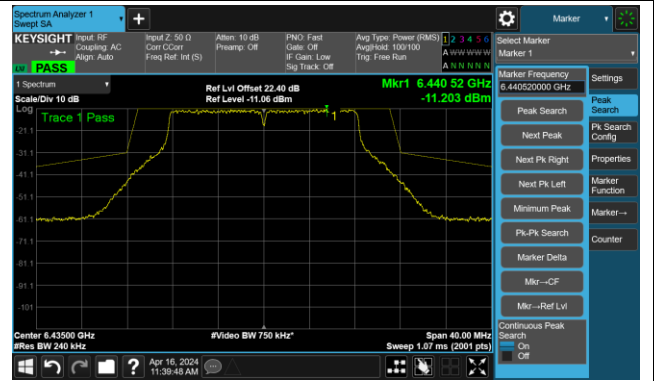 


Channel 105 (6475MHz)

 The Reference Level

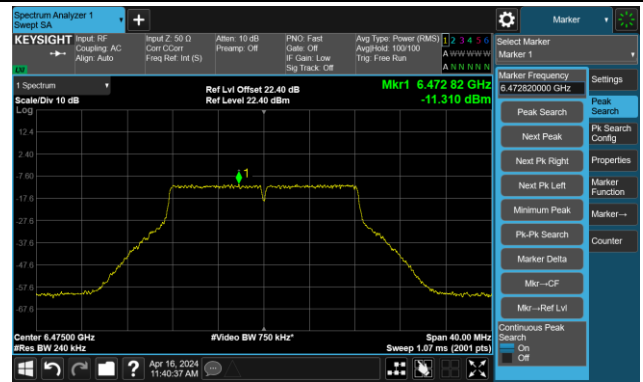


The Mask Data

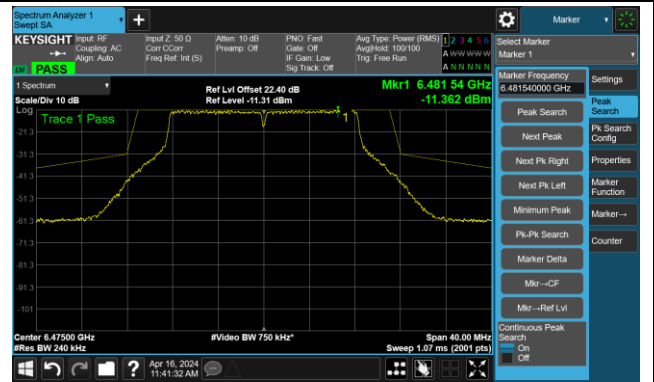 


Channel 113 (6515MHz)

 The Reference Level

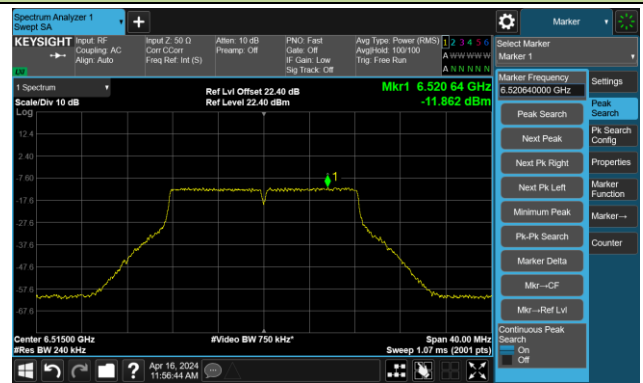


The Mask Data

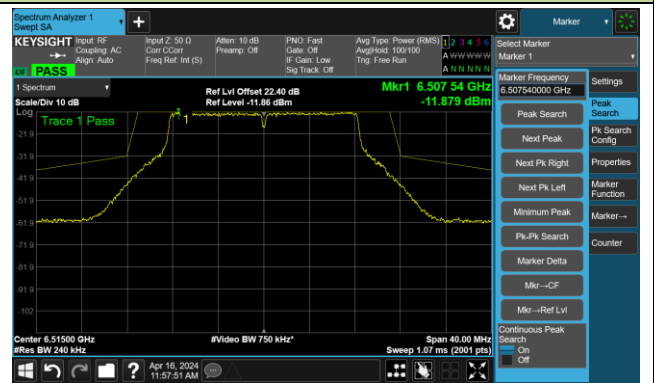 


802.11a – Ant 1

Channel 117 (6535MHz)

 The Reference Level

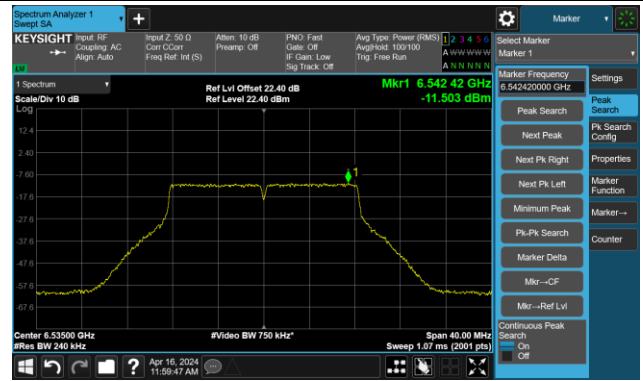


The Mask Data

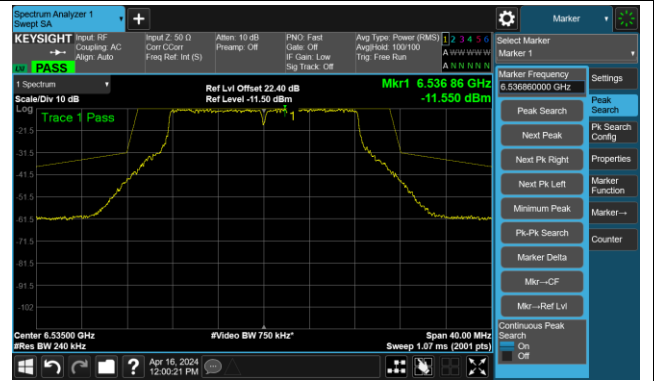 


Channel 149 (6695MHz)

 The Reference Level

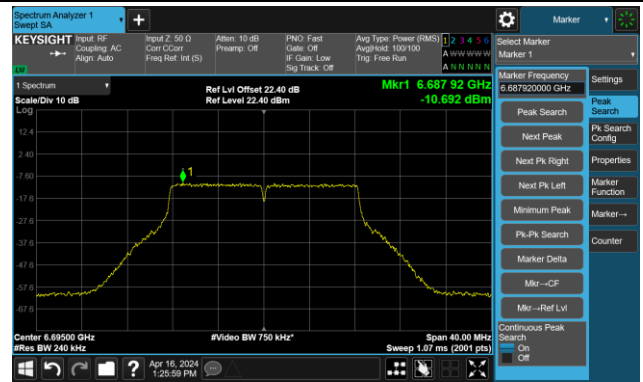


The Mask Data

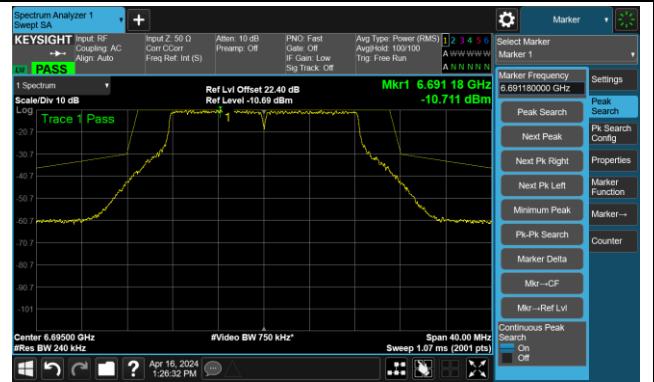 


Channel 181 (6855MHz)

 The Reference Level

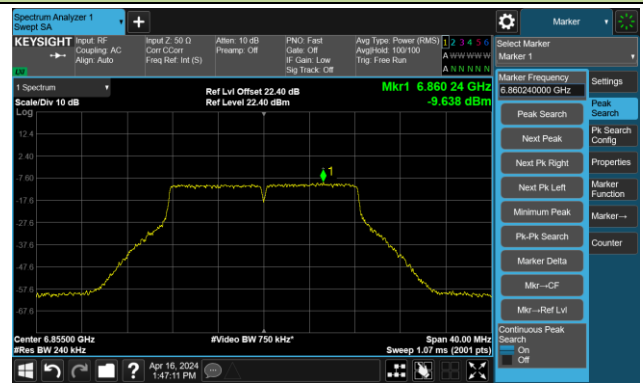


The Mask Data

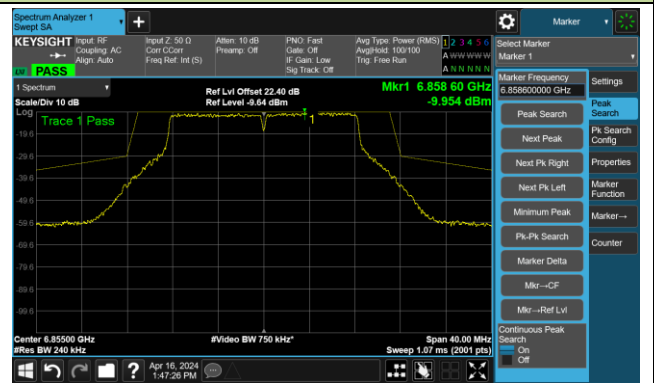 


802.11a – Ant 1

Channel 185 (6875MHz)

 The Reference Level

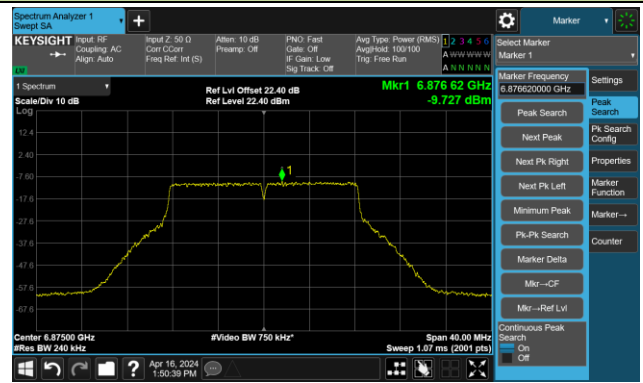


The Mask Data

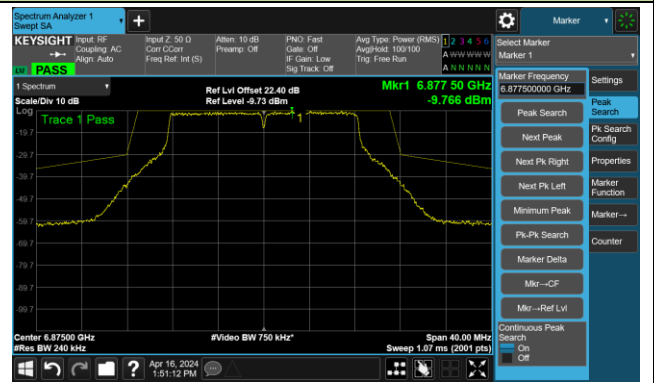 


Channel 189 (6895MHz)

 The Reference Level

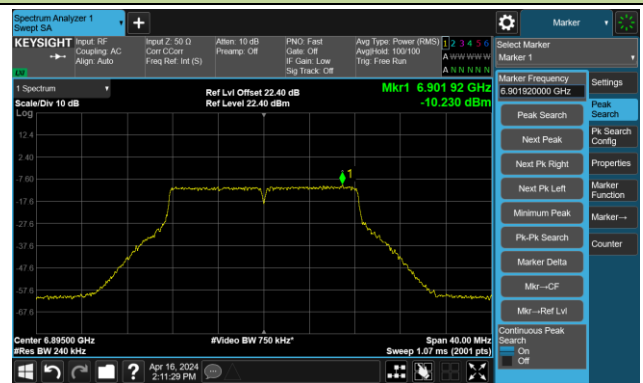


The Mask Data

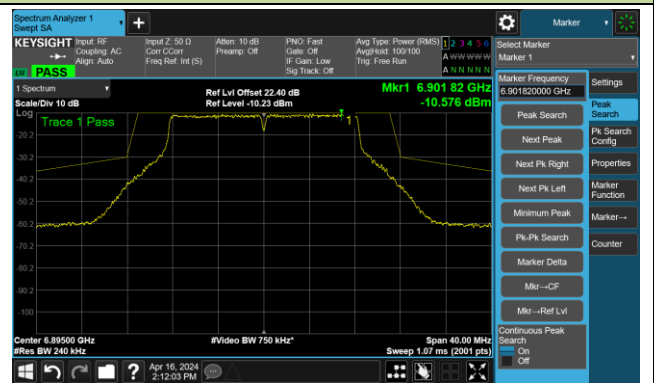 

Channel 209 (6995MHz)

 The Reference Level

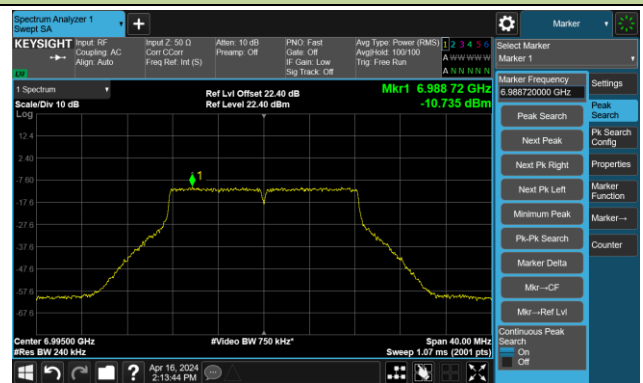


The Mask Data




802.11a – Ant 1

Channel 229 (7095MHz)

 The Reference Level

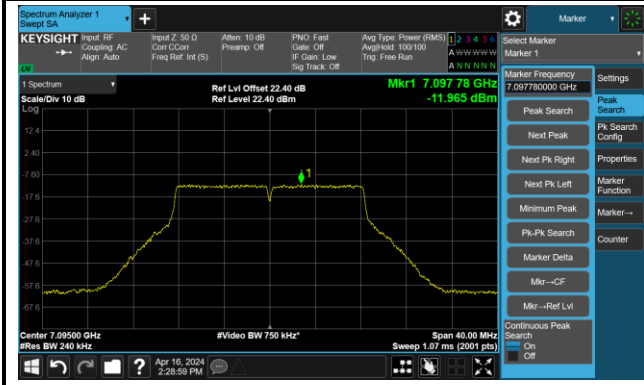


The Mask Data

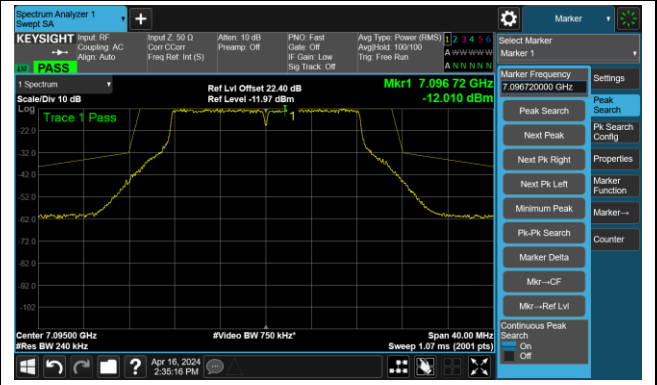 


802.11a – Ant 2

Channel 1 (5955MHz)

 The Reference Level

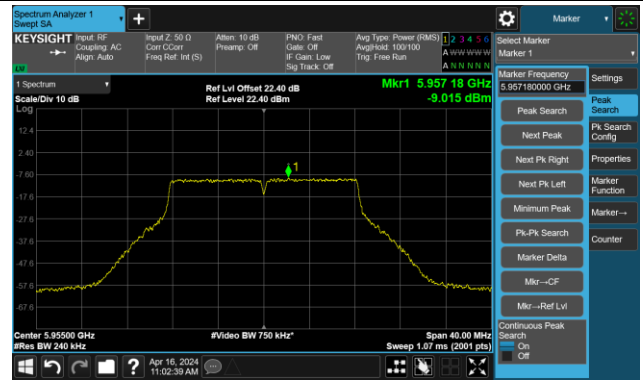


The Mask Data

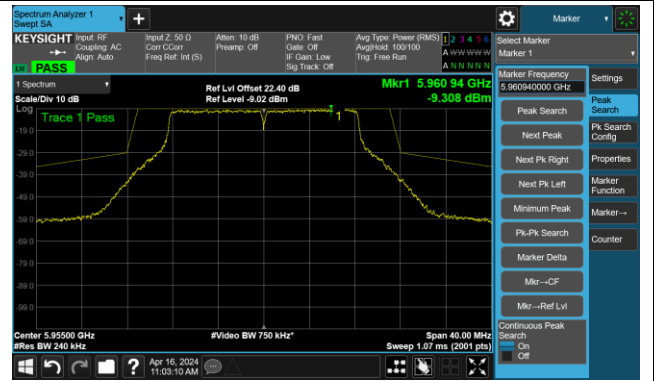 


Channel 49 (6195MHz)

 The Reference Level

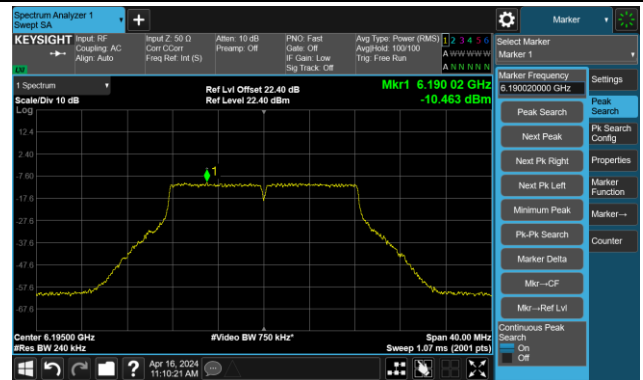


The Mask Data

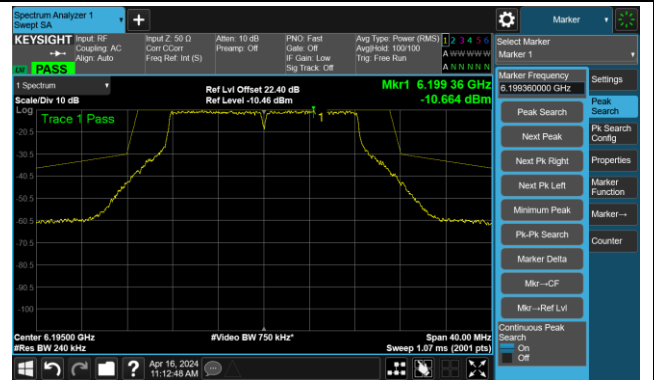 


Channel 93 (6415MHz)

 The Reference Level

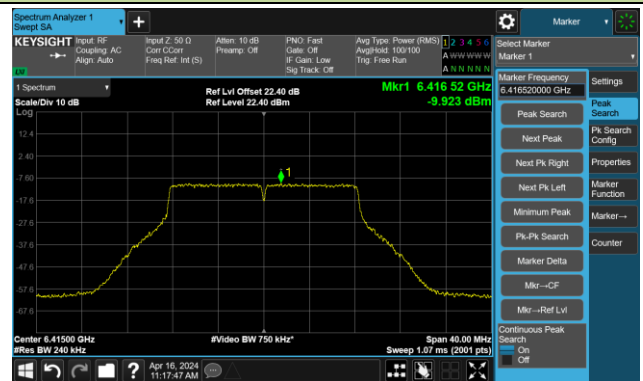


The Mask Data

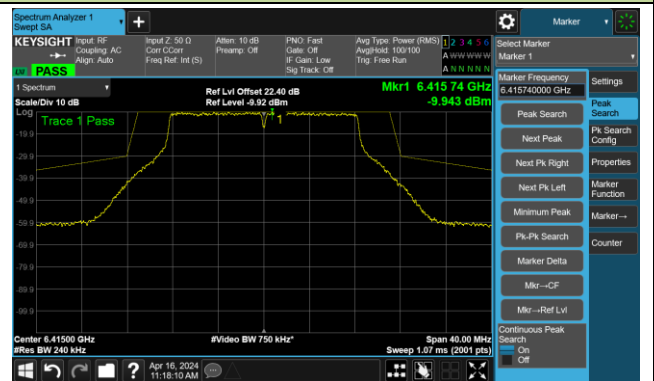 


802.11a – Ant 2

Channel 97 (6435MHz)

 The Reference Level

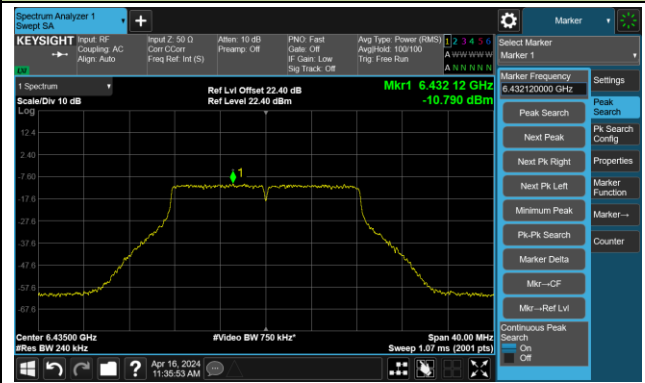


The Mask Data

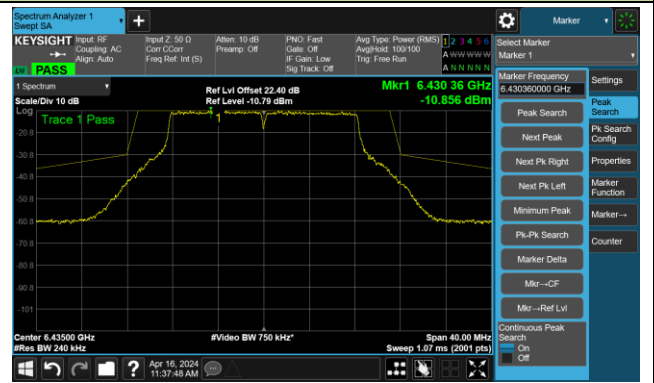 


Channel 105 (6475MHz)

 The Reference Level

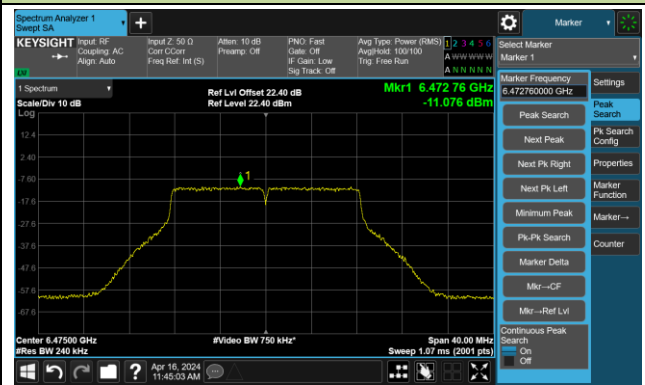


The Mask Data

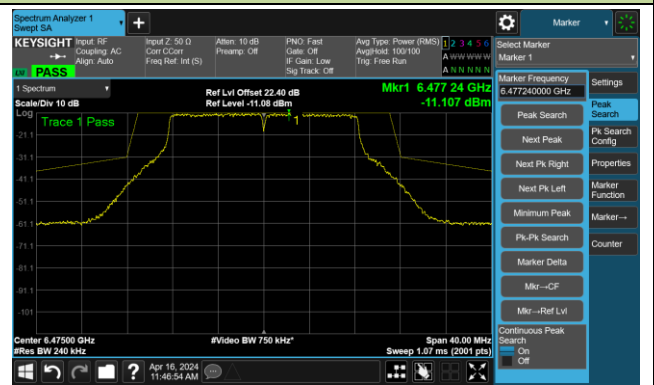 

Channel 113 (6515MHz)

 The Reference Level

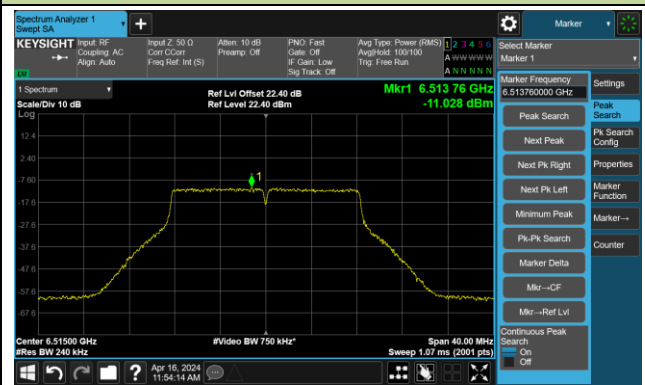


The Mask Data




802.11a – Ant 2

Channel 117 (6535MHz)

 The Reference Level

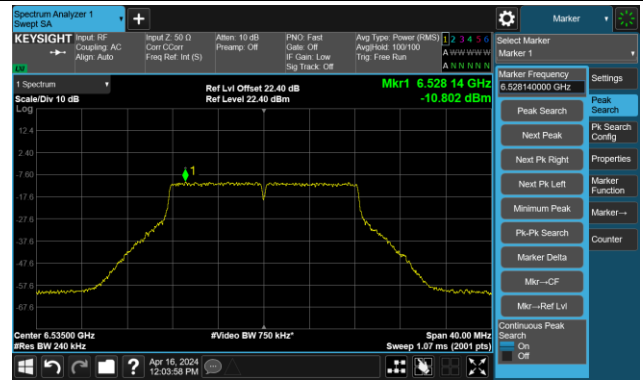


The Mask Data

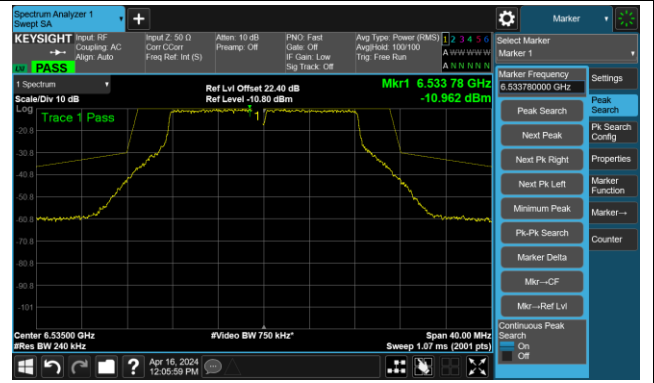 


Channel 149 (6695MHz)

 The Reference Level

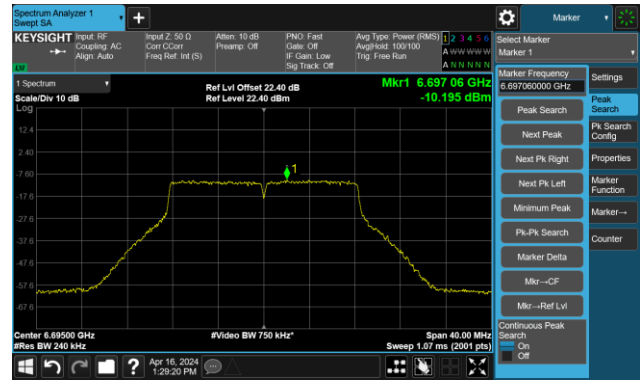


The Mask Data

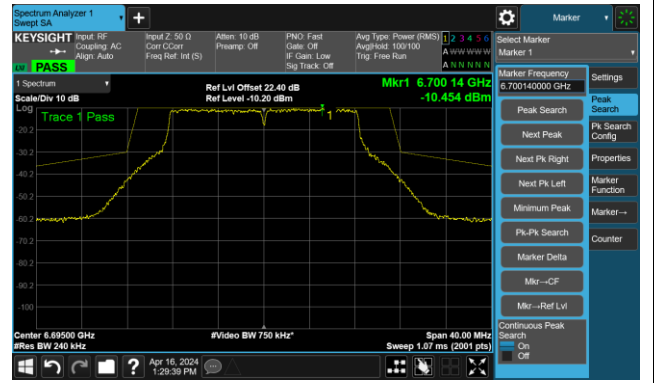 

Channel 181 (6855MHz)

 The Reference Level

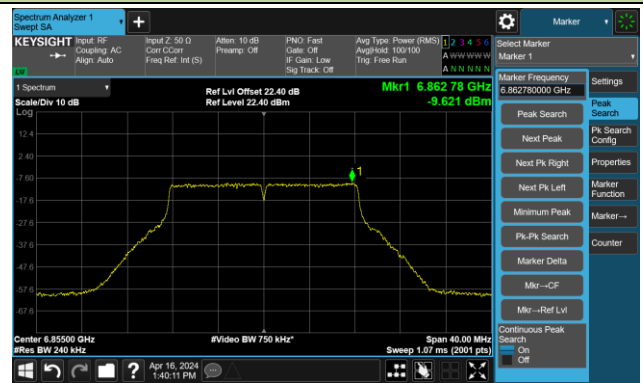


The Mask Data




802.11a – Ant 2

Channel 185 (6875MHz)

 The Reference Level

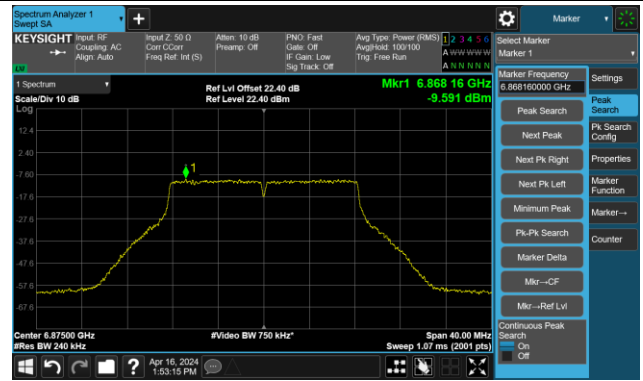


The Mask Data

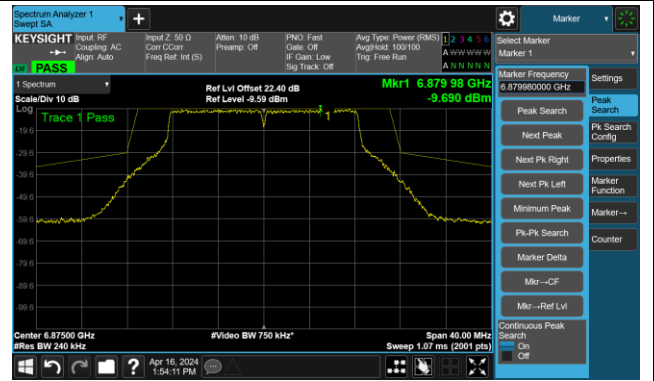 


Channel 189 (6895MHz)

 The Reference Level

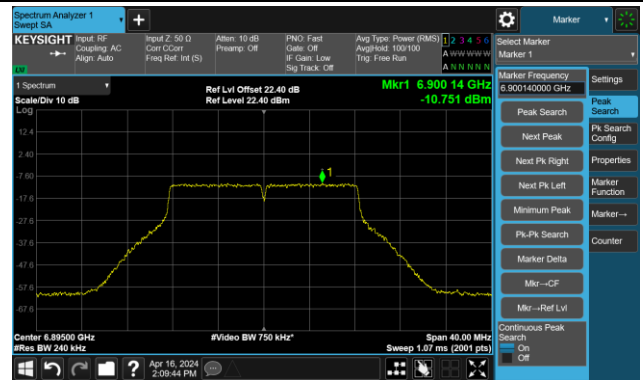


The Mask Data

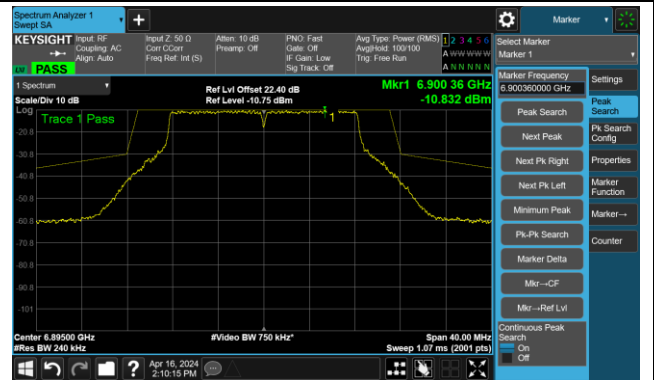 


Channel 209 (6995MHz)

 The Reference Level

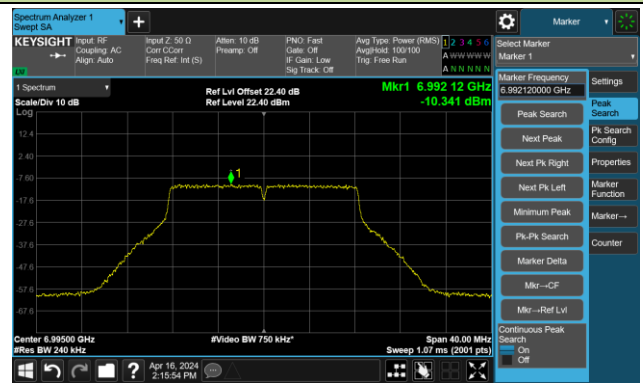


The Mask Data

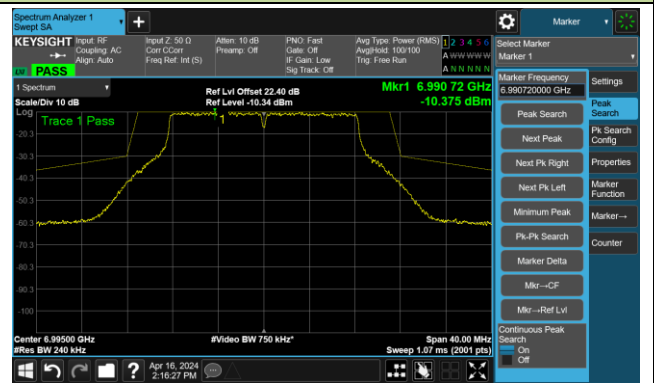 


802.11a – Ant 2

Channel 229 (7095MHz)

 The Reference Level

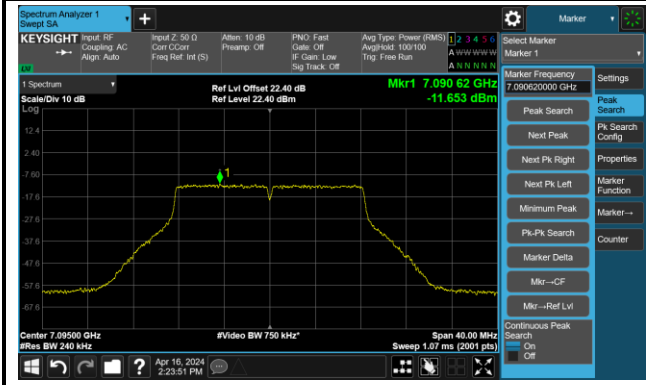


The Mask Data

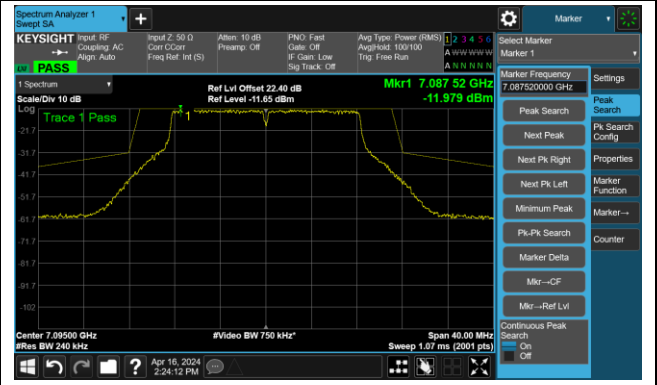 


802.11a – Ant 3

Channel 1 (5955MHz)

 The Reference Level

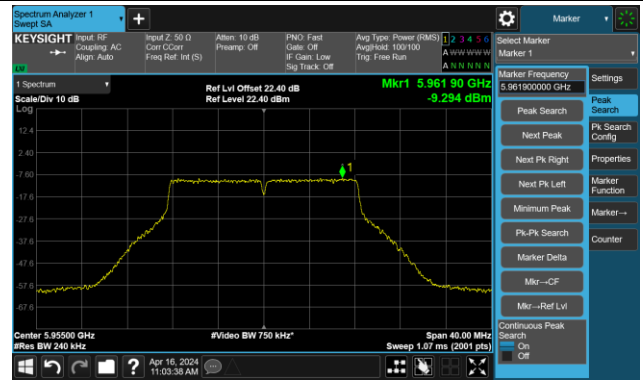


The Mask Data

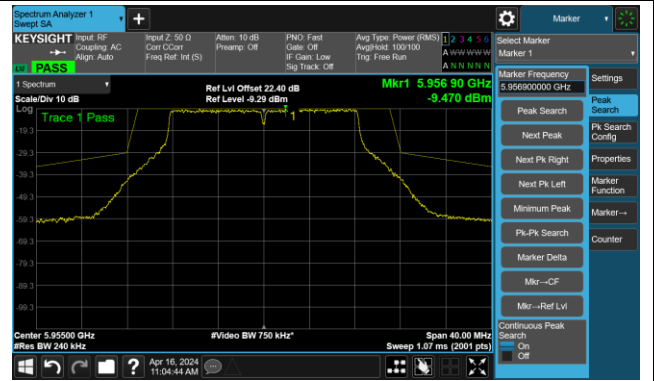 


Channel 49 (6195MHz)

 The Reference Level

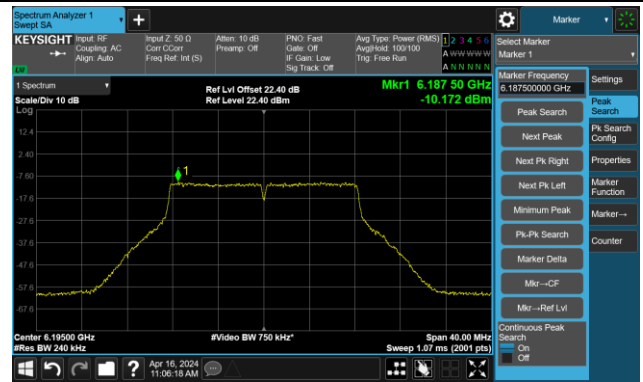


The Mask Data

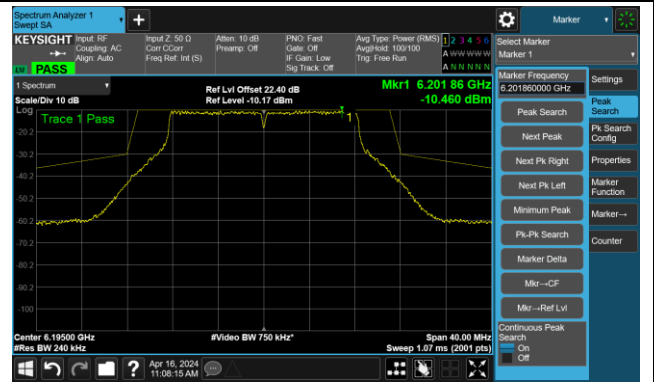 


Channel 93 (6415MHz)

 The Reference Level

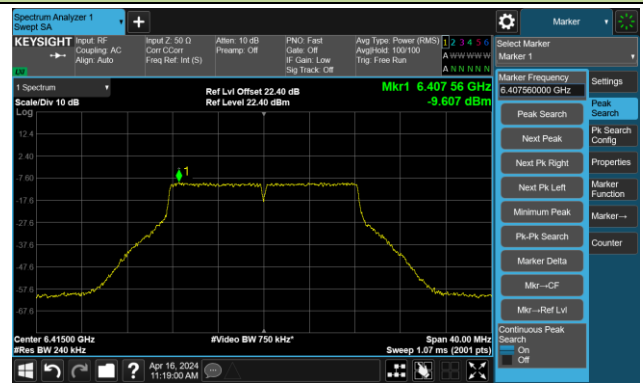


The Mask Data

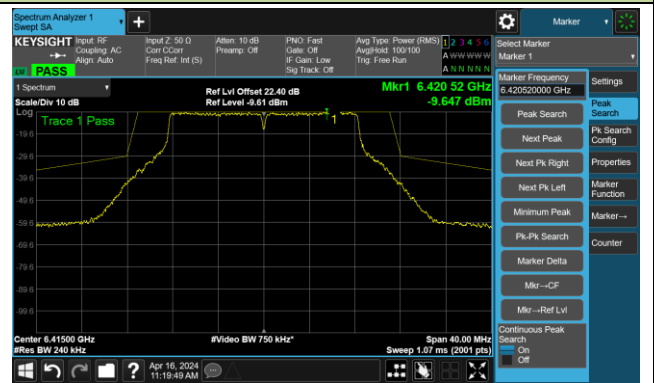 


802.11a – Ant 3

Channel 97 (6435MHz)

 The Reference Level

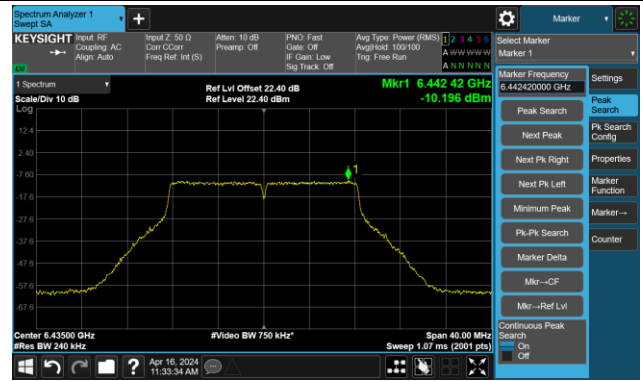


The Mask Data

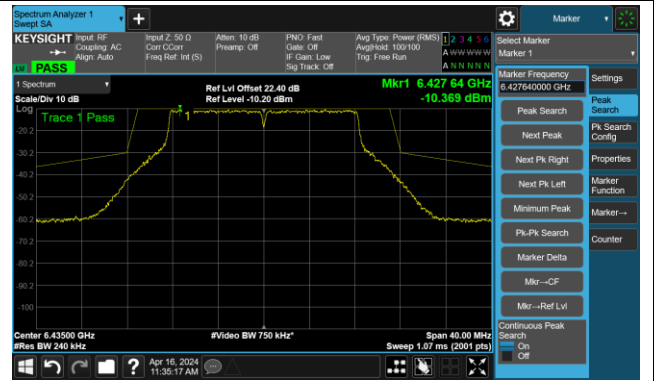 


Channel 105 (6475MHz)

 The Reference Level

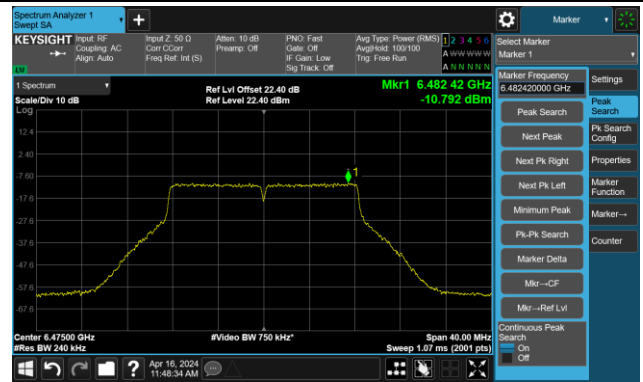


The Mask Data

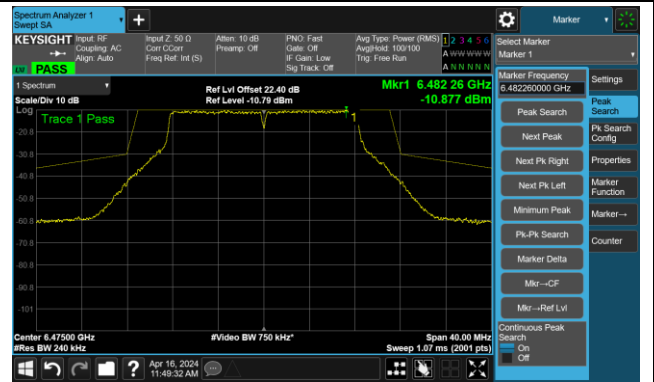 


Channel 113 (6515MHz)

 The Reference Level

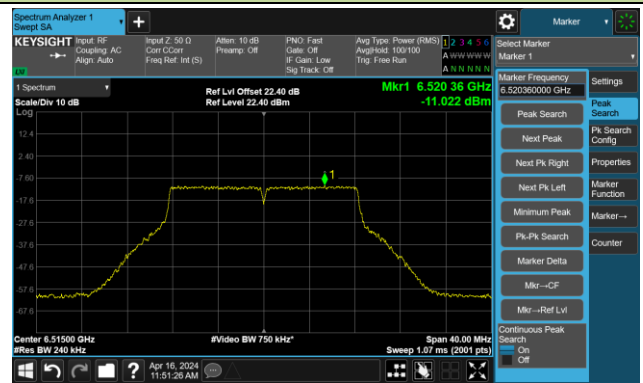


The Mask Data

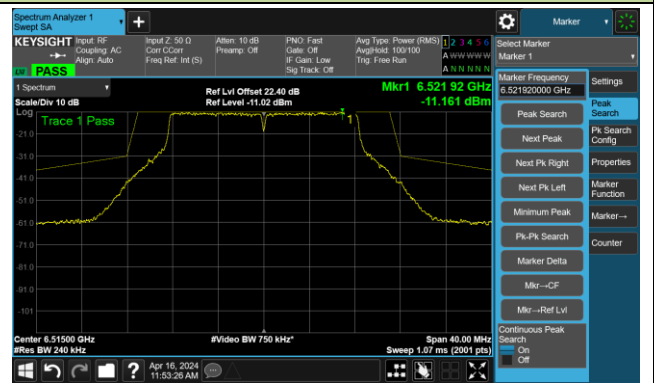 


802.11a – Ant 3

Channel 117 (6535MHz)

 The Reference Level

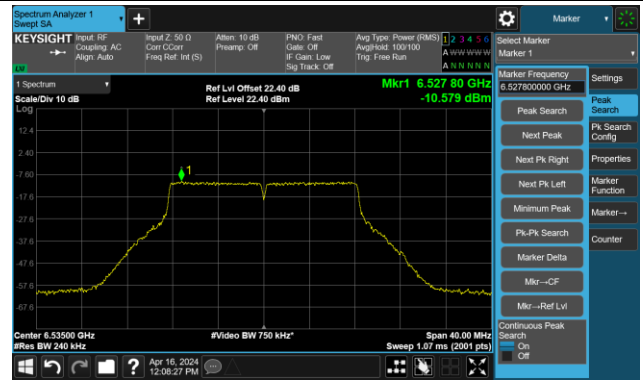


The Mask Data

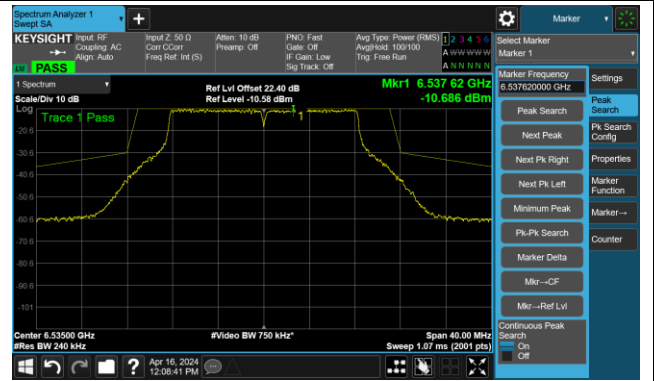 


Channel 149 (6695MHz)

 The Reference Level

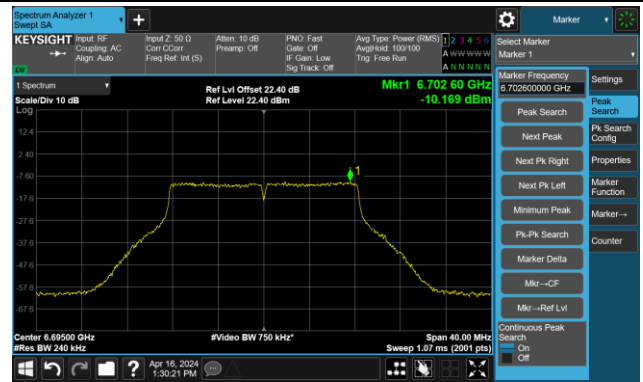


The Mask Data

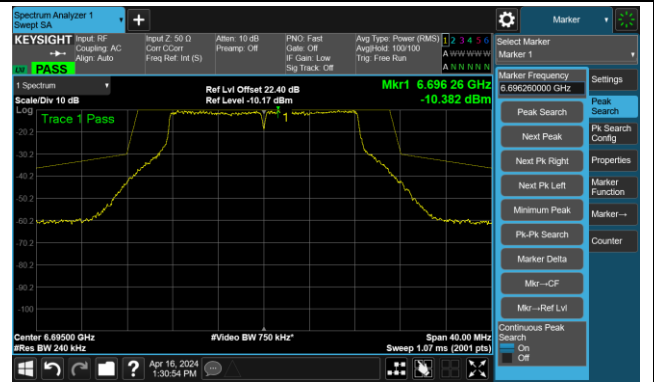 


Channel 181 (6855MHz)

 The Reference Level

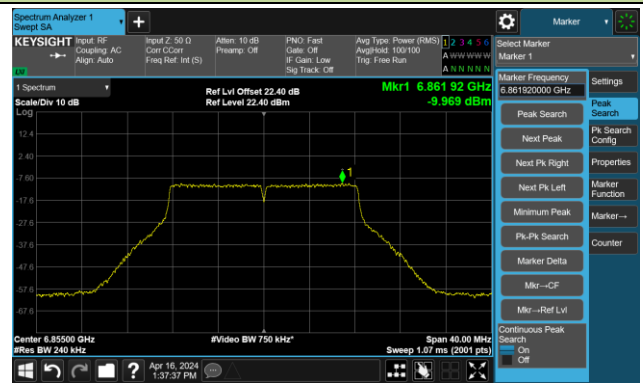


The Mask Data

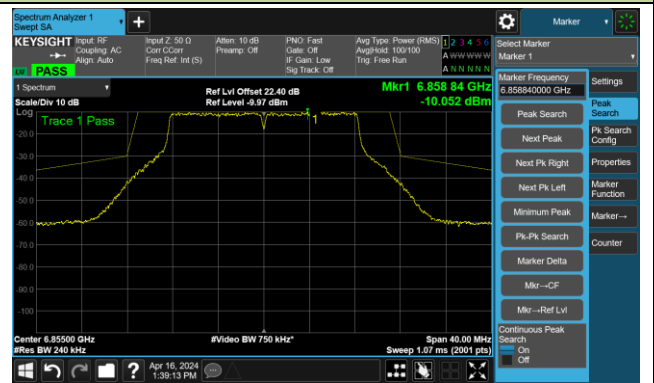 


802.11a – Ant 3

Channel 185 (6875MHz)

 The Reference Level

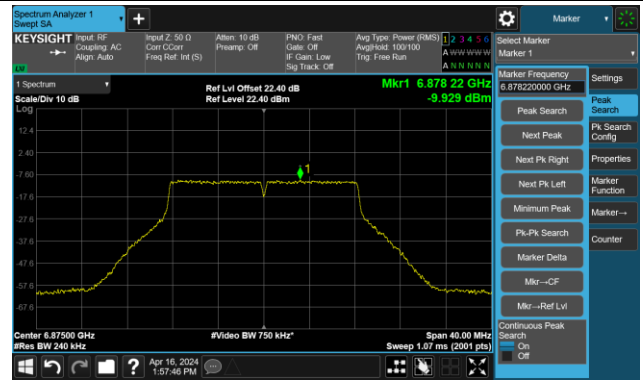


The Mask Data

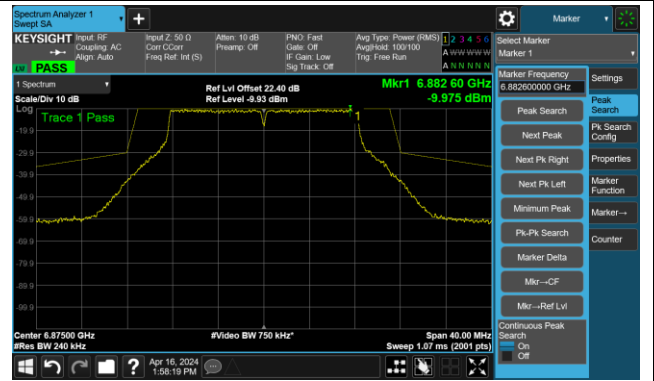 

Channel 189 (6895MHz)

 The Reference Level

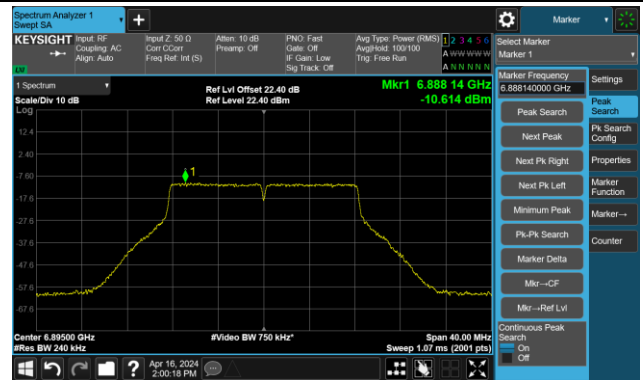


The Mask Data




Channel 209 (6995MHz)

 The Reference Level

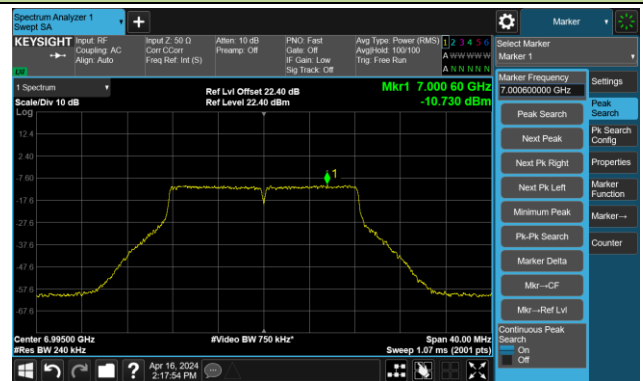


The Mask Data

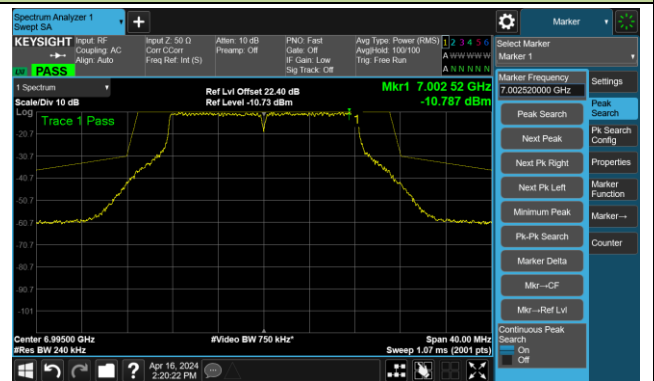 

802.11a – Ant 3

Channel 229 (7095MHz)

 The Reference Level

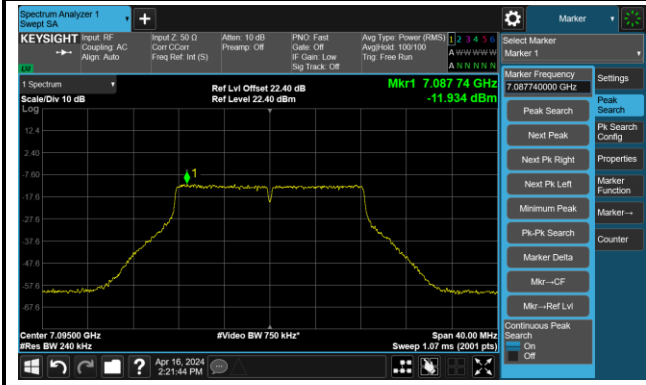

The Mask Data

