

EXHIBIT A

(FCC Ref. 2.1033(b)(5))

"Installation and Operating Instructions  
Furnished to the User"

P.9/10

***Features of your WC801P/802P Wireless Chime***

- **NO installation – easy plug and play.**
- **Up to 150 feet working range.**
- **16 selectable house code.**
- **Built-in three tunes.**

**Push Button INSTALLATION**

Your push button transmitter can be wall mounted or used as a hand-held transmitter. If you choose to mount your push button on a wall, select a mounting location **NO** further than approximately 150 feet from the chime receiver and follow the following procedures:

- A/ Locate the push button next to or near the door. Do not mount the push button on a metal surface.
- B/ Remove the push button back cover piece by inserting the tip of a small screwdriver in the slot at the bottom of the push button and then gently press the push button back cover piece apart from the main housing.
- C/ Choose a level place to locate the push button back cover where you want to mount your push button. Mark the mounting surface with a pencil through the two holes on the back cover piece.
- D/ Drill two 4.76mm (3/16 inch) holes to the previously marked location.
- E/ Insert the wall anchors supplied in the holes and place the push button back cover on the anchors. Tighten the cover on wall with the screws provided.
- F/ Insert the battery (12V A23) into the battery compartment according to the correct polarity (+ & -).
- F/ Re-place the push button to the back cover piece. Position the push button over the back cover so that the “lip” on the back cover engages into the “slot” on the push button housing. Firmly press the push button until it snap fits over the back cover piece.

**Note: Weak Battery** - In normal use the battery in the push button should last approximately two years or more. If your chime starting not to function properly. Please first check if battery of push button is running out.

***Plug-in Receiver INSTALLATION***

- Plug the chime into standard 120V AC outlet only.
- Press the button of the transmitter to make the chime sound.
- If you want tunes change. Please re-set the tune setting jumper(s) on the push button.

***Maintenance***

- The chime receiver should not be used near water and should be kept dry.

P.10/10

- Handle the water-resistant push button transmitter or sensor transmitter and chime receiver carefully. Dropping it can damage the circuit boards and may cause the chime to work improperly.
- The battery should be taken out from the products when not in use for long periods of time.
- Only use the type of battery described in the operation manual.
- User should not change or modify the unit by themselves as it is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.