

Instruction Manual


Ages 6+

INTRODUCTION

Your **Big Foot Ragin' Monster Truck™** is a fabulous all terrain vehicle can run on pavement, grass & dirt! Enjoy the excitement of **Big Foot Ragin' Monster Truck™**, and use the remote control transmitter to make your **Big Foot Ragin' Monster Truck™** to perform amazing stunt, wheelie, somersault, or spin out!

The **Big Foot Ragin' Monster Truck™** comes in two frequencies (27MHz & 49MHz), so you and your friends can drive together and see which one can play better stunt. Check your box to see which frequency you have (Blue **Big Foot Ragin' Monster Truck™** is 27MHz and Red **Big Foot Ragin' Monster Truck™** is 49 MHz).

Fig.1

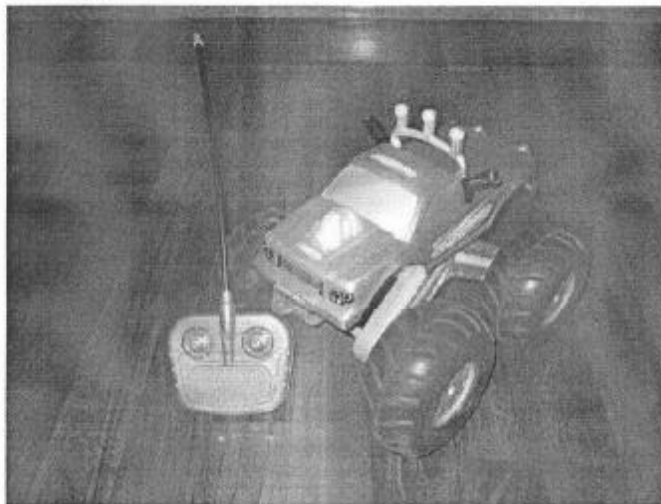

CAUTION – ELECTRICALLY OPERATED PRODUCT – Not recommended for children under 6 years of age.
As with all electric products, precautions should be observed during handling and use to prevent electric shock.

Your **Big Foot Ragin' Monster Truck™** includes:


- one **Big Foot Ragin' Monster Truck™**
- one remote control transmitter
- one 9-volt battery for the remote control transmitter
- one 9.6-volt rechargeable battery pack for the vehicle
- one battery pack charger

INSTALLING BATTERIES

In the remote control transmitter

1. Slide the ON/OFF power switch to OFF position.
2. Use a Philip's head screw driver (not included) to unscrew the battery door and take the door off.
3. Insert the 9-volt battery in the compartment as indicated by the polarity symbols (+ and -) marked inside. (see Fig. 2)

Fig. 2

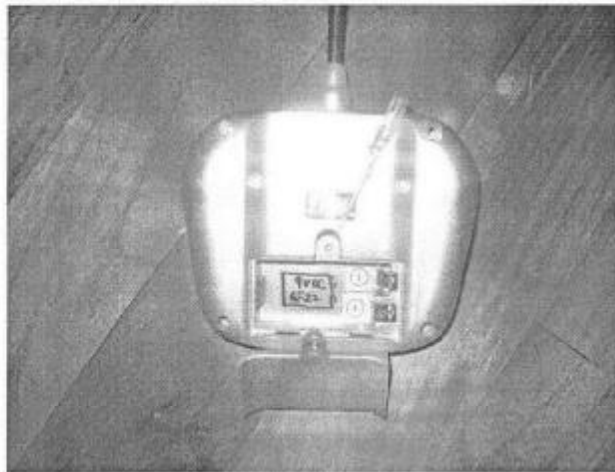

4. Replace the battery door and screw it off.
5. Slide the ON/OFF power switch to ON position and the red LED will be light on.

In the **Big Foot Ragin' Monster Truck™**

You need one 9.6V battery pack to power your **Big Foot Ragin' Monster Truck™**. Before you use the battery pack, you must charge it using 9.6-volt rechargeable battery charger.

Follow the charger's direction to charge the battery pack (see section **BATTERY PACK &**

CHARGER). Then follow these steps to install the battery pack in the **Big Foot Ragin' Monster Truck™**.

1. Slide the vehicle's ON/OFF power switch to OFF position.
2. Use a Philip's head screw driver to unscrew the battery door and take the door off.
3. Attach the battery pack's connector to the vehicle matching connector. Do not force them together! They fit only one way. (see Fig. 3)

Fig. 3



4. Put the battery pack in the battery compartment and screw the battery door off.
5. Slide the ON/OFF power switch to ON position and then you can start playing with your **Big Foot Ragin' Monster Truck™**.
6. As the vehicle loses power, change the battery pack or recharge it according to the battery charger's supplied instruction.

Note:

- Use only a fresh battery of required size and recommended type.
- If you do not plan to use the vehicle for a week or more, remove the battery from the remote control transmitter and battery pack from the vehicle. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the remote control transmitter and vehicle.
- Do not charge or recharge battery pack while it is in the vehicle.
- When you disconnect the battery pack from the vehicle, do not pull on the connector's wires. This can damage the battery pack.
- Do not recharge the battery pack immediately after use (while it is still hot). Allow it to cool