



www.gracobaby.com



OWNER'S MANUAL

Keep Instructions For Future Reference

Warnings to Parents and Other Users

WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death.

- **STRANGULATION HAZARD.** Keep the adapter cords out of the reach of children. Do not use with extension cords.
- **DO NOT** place the Nursery Unit or its cord within your child's reach. Do not put the Nursery Unit inside a crib or playard.
- **Use ONLY with 110-120 volt AC electrical outlets.**
- **Protect the AC adapter cords.** Place them so they are not walked on or pinched by furniture or other items.
- **Allow for proper ventilation when units are in use.** Do not cover the Nursery Unit or Parent Units with any object such as a blanket. Do not place it in a drawer or in any location which would muffle the sound or interfere with the normal flow of air.
- **DO NOT** immerse any part of the Nursery Unit, Parent Units, or docking station in water. Clean only with a dry cloth.
- **DO NOT** place unit near water and moisture. Do not use the Nursery Unit outdoors. Do not use the Nursery Unit near possible wet areas, such as a bathtub, shower, wash basin, sink, laundry tub, swimming pool, wet basement, etc.

- **Keep Nursery Unit away from heat sources**, such as fireplaces, radiators, stoves, and TVs or other appliances. Heat can damage the case or electrical parts.
- Do not use the Nursery Unit if:
 - The adapter cords or plugs have been damaged.
 - The unit has been exposed to liquids.
 - Unit has been dropped or is damaged.
- **DO NOT OPEN THE NURSERY UNIT, PARENT UNIT, NURSERY UNIT BASE OR ADAPTERS.** No user-serviceable parts inside. Risk of electrical shock, fire or death.
- The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm (7.9") from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.



FCC Statement:

⚠ WARNING Modifications not authorized by the manufacturer may void users authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Parts List

 
Adult assembly required.
Tool required: Phillips screwdriver




Parent Unit
(A5066)




Quick Start Manual

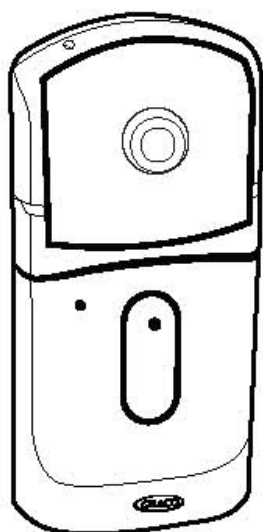


Nursery Unit
(A5083)

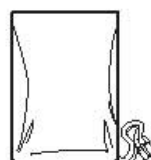 


Parent Unit Battery

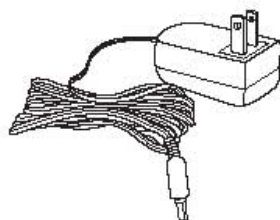 

 
(1) AC Adapter

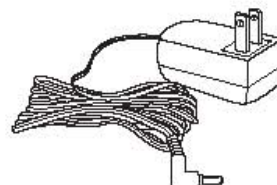

 
(1) AC Adapter

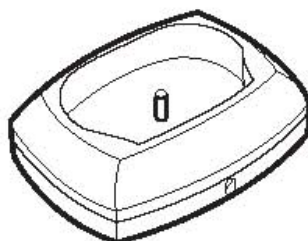

Nursery Unit Base
(A5195)

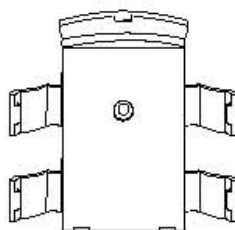 


Wall Mount

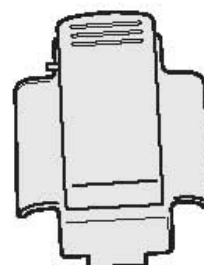 


Belt Clip

 
Parent Unit

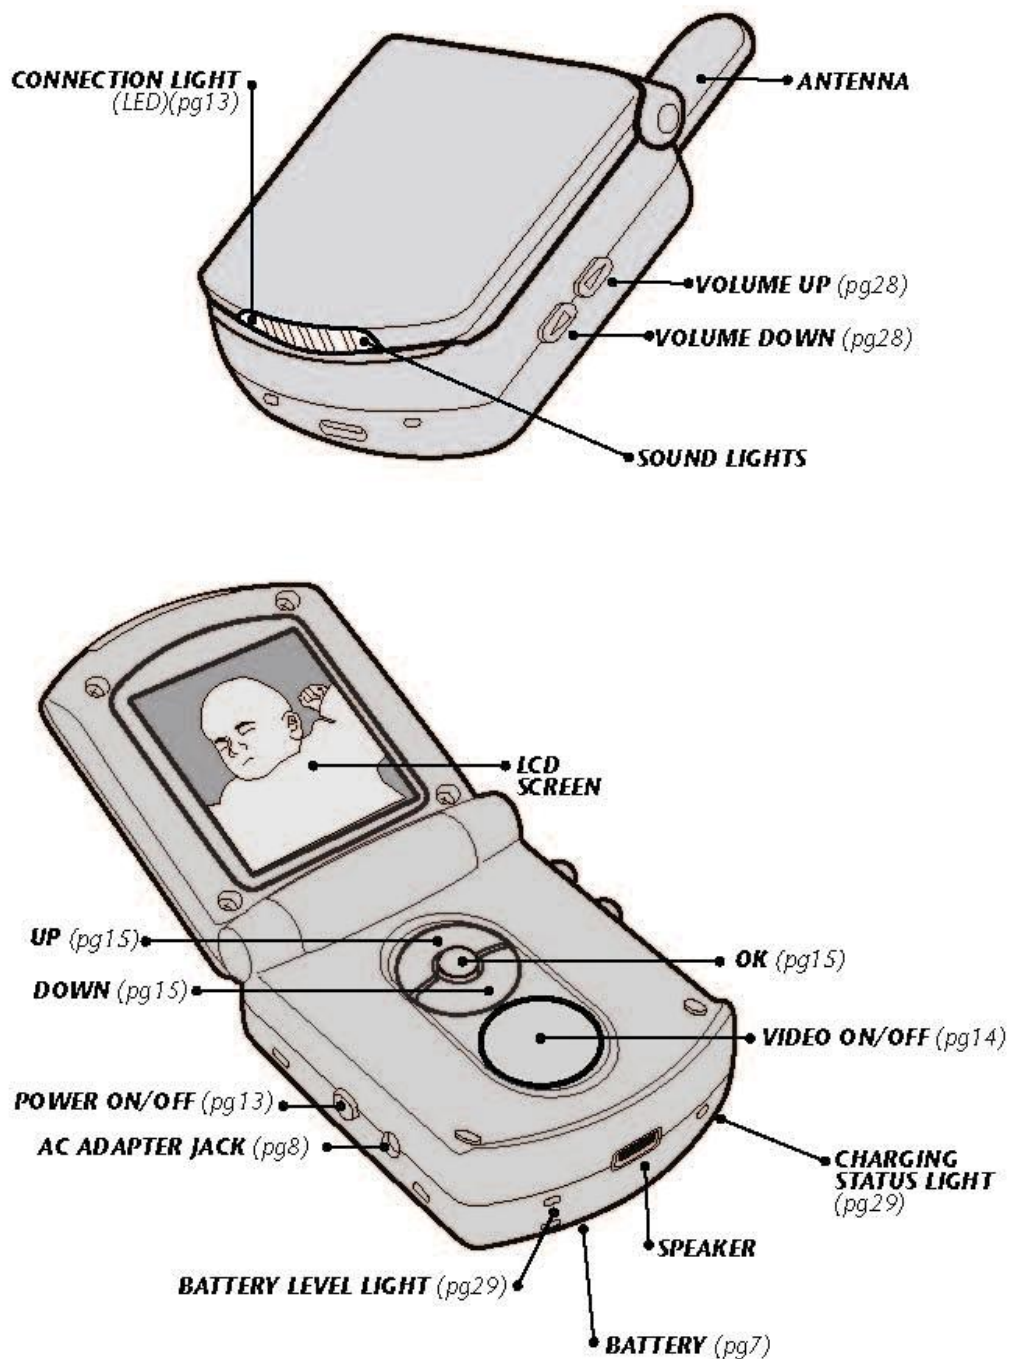


Installing Batteries

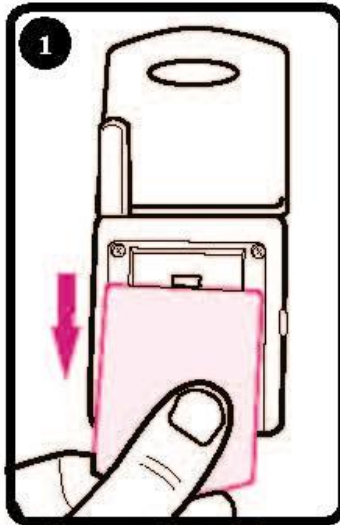 

 
The battery must be plugged into the Parent Unit before the unit will be ready for use. Remove the battery door cover on the Parent Unit by sliding it down.

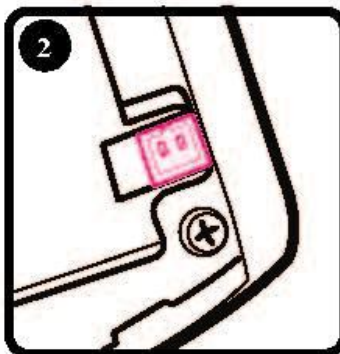


Plug battery into the slot shown in #2.

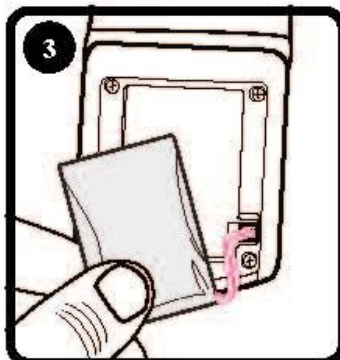 

 Place battery pack into recess and press wire into the slot.

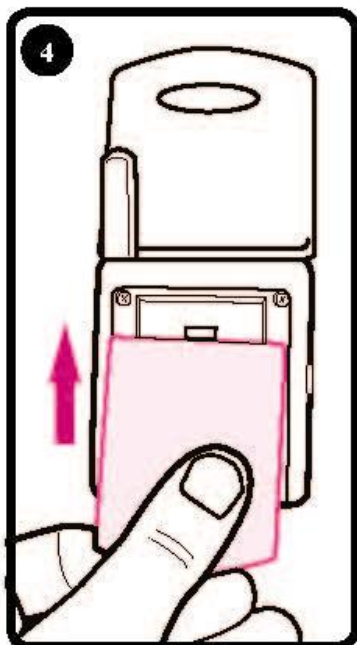


Replace the battery door.

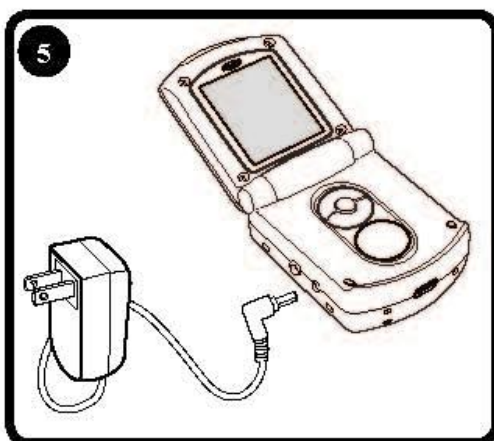 


Attach the AC adapter to the unit and plug into wall to charge the battery. Charge battery for 3 hours.

 Nursery Unit

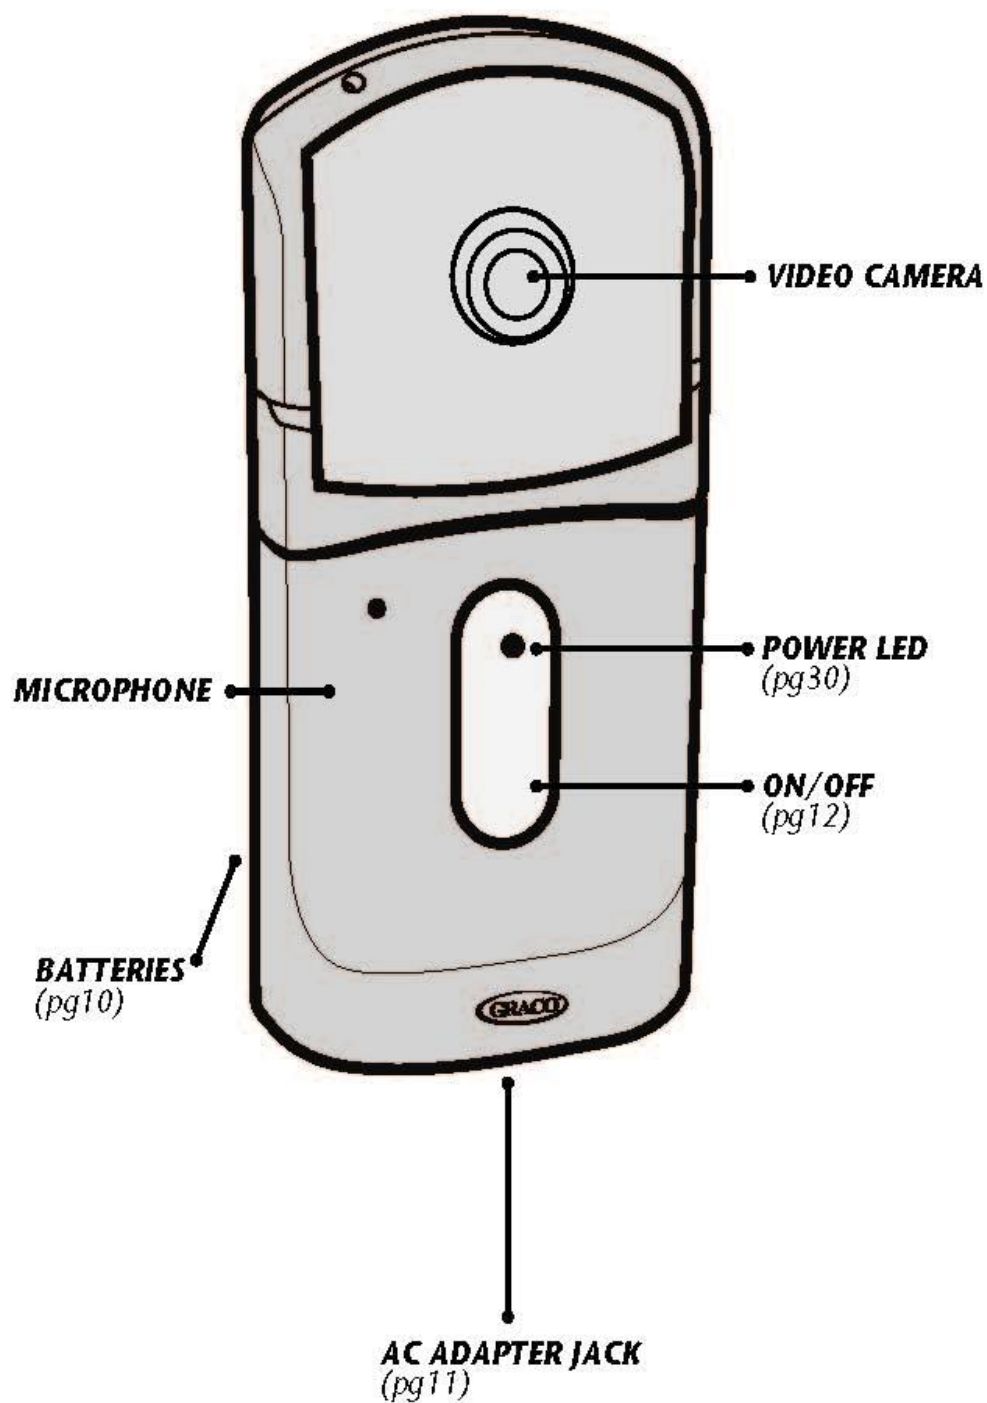


Installing Batteries

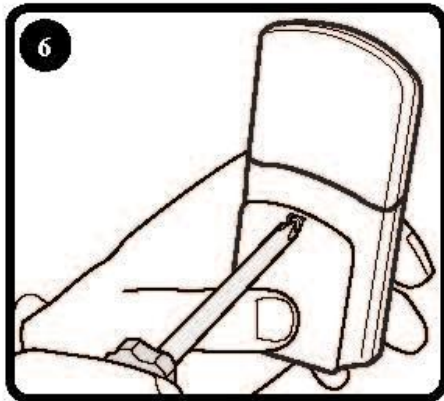 

(Optional)

Use a Phillips head screwdriver to remove the battery door.

 NOTE: Screw should be loosened but stay attached to battery door.

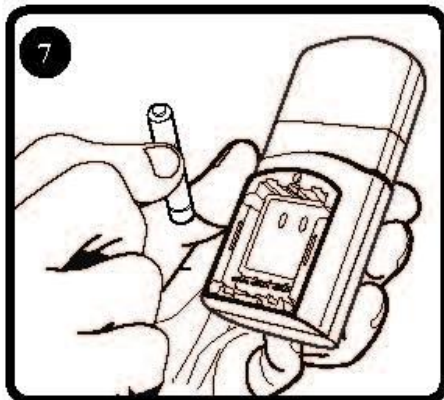


(Optional)


Insert 3 AAA batteries. Make sure they are inserted correctly.

- Batteries can be useful in the case of a power outage.
- Batteries should be replaced periodically.
- Batteries should only be used in case of emergency or for short periods of time.
- To save battery power, only audio functions are active while using batteries.

 Attaching Nursery Unit Base

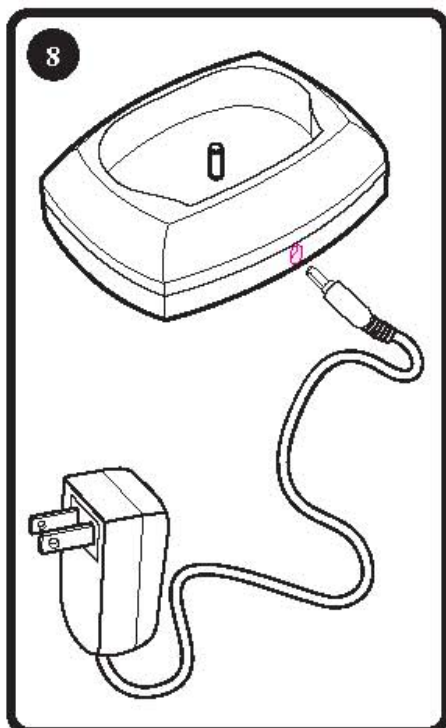


 Attach the AC adapter to the back of the nursery unit base and plug into wall.

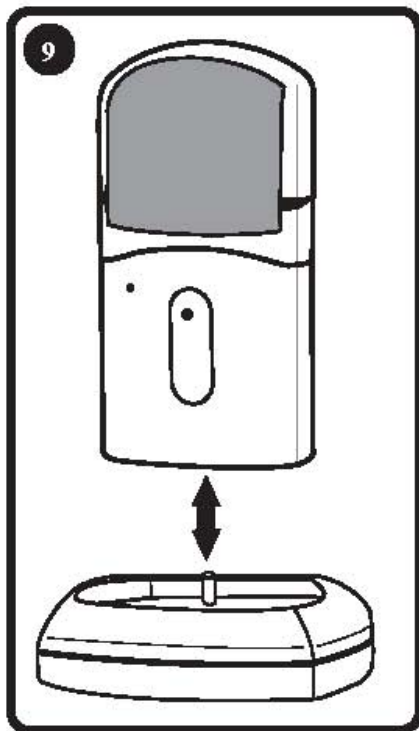


Mount nursery unit onto base to operate.

 Nursery Unit Power On/Off

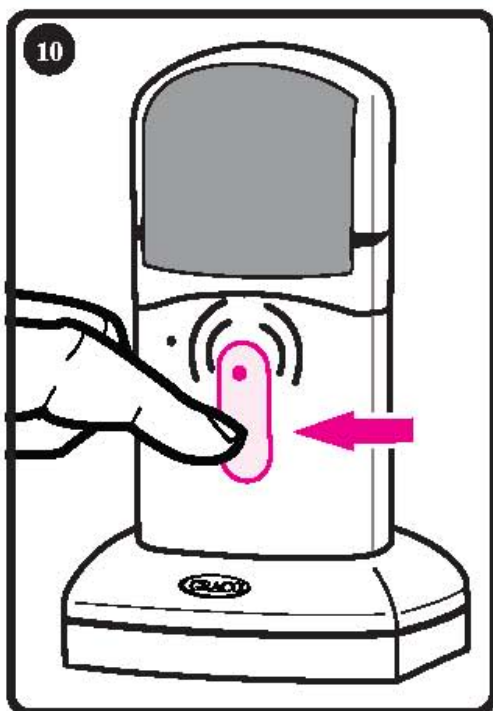


 Depress button for 1 sec. to turn camera on.

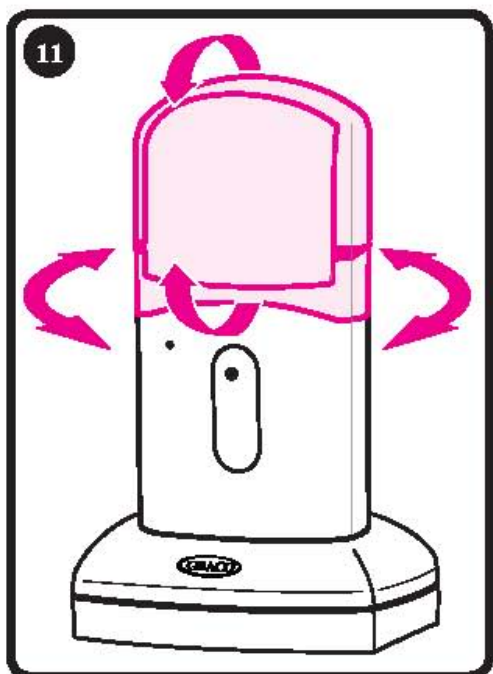

To change camera angle, swivel the nursery unit top in the desired direction. Please note that camera cannot swivel completely around.

 Parent Unit Power On/Off

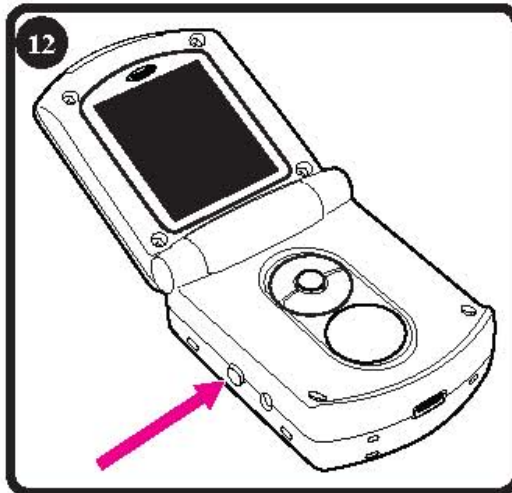


Press and hold ON/OFF button for 1 second. Unit will cycle through intro and begin searching for the Nursery Unit.




Make sure Nursery Unit is turned on. The parent unit will display "searching" on the status screen until the nursery unit is found. The live video feed will then be shown.

 The connection LED will turn from red to green.

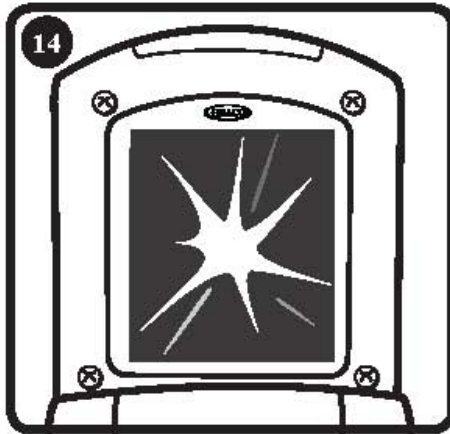


 Press and hold ON/OFF button for 1 second to turn unit off.

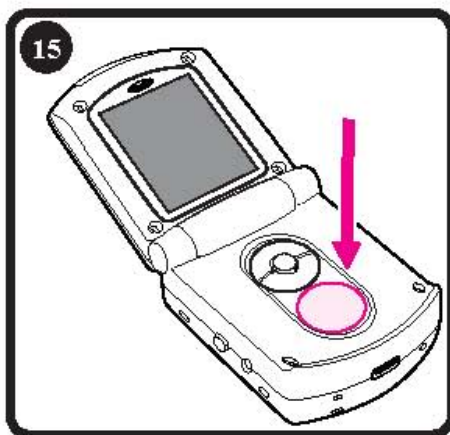


To activate or deactivate the live video feed, press the video button.

 
Pressing the video button will allow the user to view the image from the nursery unit.

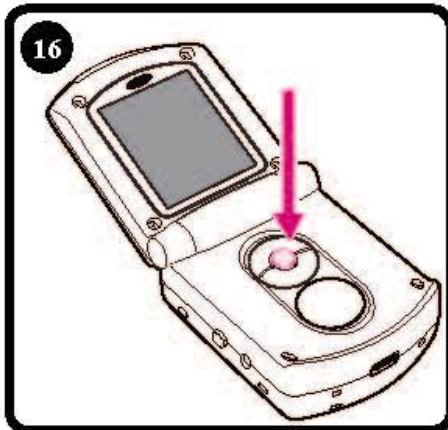

 To set up preferences or change status, press the “OK” button.

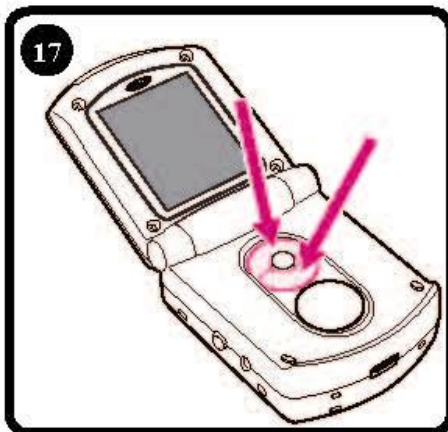

 To cycle through the different choices, press up or down.

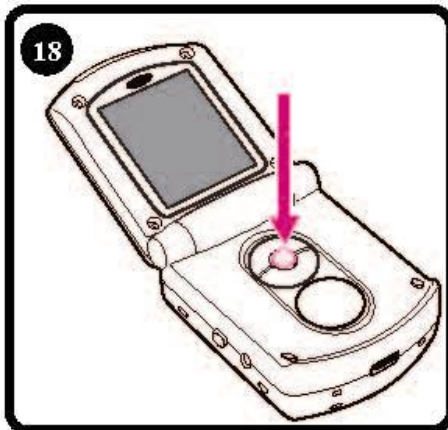

After choosing one of the options, press the “OK” button to make the selection.

NOTE: Once you make a selection (**OK**), the unit will automatically advance you to the next option/screen or return you to the live video feed (if applicable).

Zoom

 
19



Use UP/DOWN to choose, OK to select

Press “**OK**” to open **Menu**.
Choose the **Zoom** option. Press
“**Ok**” to select it.


20

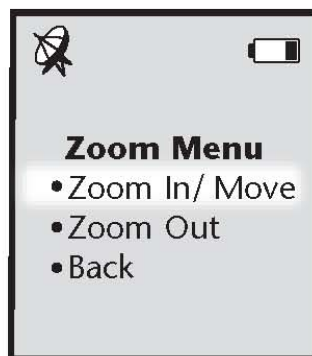

Use UP/DOWN to choose, OK to select

Select Zoom In/Move.

 21

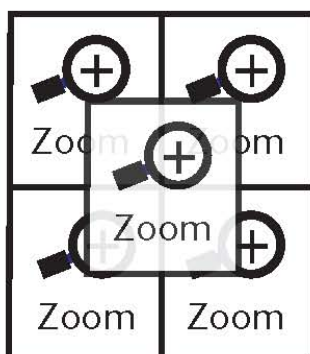

Use Up/Down to choose
an area to Zoom IN/OUT
Press OK to select.

Choose one of the **5 positions**
by pressing **Up/Down**. Press
“**OK**” to select.

22



The Zoom icon should appear at the top the status screen.

Monitor will return to the live video feed if available.

Zoom Out

23



Press “**OK**” to open **Menu**.
Choose the Zoom option and press “Ok” to select it.

24



Choose “**Zoom Out**” and press “**OK**” to select it. Monitor will return to live video screen if available. **Zoom icon will not be visible on the status screen.**

Use UP/DOWN to choose, OK to select

Setting Time

25



Use UP/DOWN to choose, OK to select

Press “OK” to open **Menu**.
Choose “**Settings**” and press
“OK” to select it.

26



Use UP/DOWN to choose, OK to select

Choose “**Time**” and press “OK”
to select it.

27



Use UP/DOWN to choose, OK to select

Choose “**Time**” and press “**OK**” to select it.

28



Use UP/DOWN to choose #, OK to select

Press **Up/Down** to adjust the first digit. Press **OK** to move to the next digit. Monitor will return to the Time Menu after adjusting all digits.

To return to the live video feed (if available), select and press **Back/Back / Exit**, or wait 5 seconds and monitor will return to live video feed on its own.

Time Format

29



Use UP/DOWN to
choose, OK to select

Press “OK” to open **Menu**.
Choose “**Settings**” and press
“OK” to select it.

30



Use UP/DOWN to
choose, OK to select

Choose “**Time**” and press “OK”
to select it.

 
31



Choose **"Time Format"** and press **"OK"** to select it.

Use UP/DOWN to choose, OK to select

32

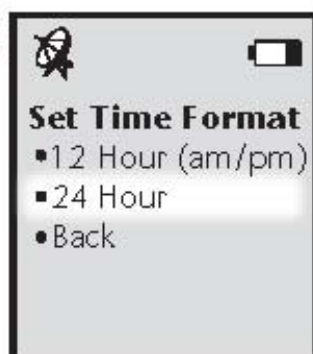

Choose your preferred time display format and press **"OK"** to select it.

Use UP/DOWN to choose, OK to select

To return to live Video feed (if available) select and press: Back/Back/Exit or wait 5 seconds and monitor will return to live video view on it's own.

Setting Alarm

33



Use UP/DOWN to choose, OK to select

Press “OK” to open **Menu**. Choose “**Alarm**” and press “OK” to select it.

34



Use UP/DOWN to choose, OK to select

Select “**Alarm Time**”.

35



Use UP/DOWN to choose #, OK to select

Press **Up/Down** to select the first digit. Press **OK** to move to the next digit. Monitor will return to the Alarm Menu after adjusting all digits.

36



Use UP/DOWN to choose, OK to select

The Alarm will be turned on automatically. The Alarm Icon will be visible at the top of the screen.

37



Use UP/DOWN to choose, OK to select

To activate/deactivate alarm, choose **Alarm On/Alarm Off**. To return to the live video feed (if available), select and press **Back / Exit**, or wait 5 seconds and monitor will return to live video feed on its own.

When Alarm sounds, press any button to deactivate it. Alarm will sound off every 2 seconds for 10 minutes, or until user stops it.

38



Use UP/DOWN to choose, OK to select

Choose “**Time Format**” and press “**OK**” to select it.

39



Use UP/DOWN to choose, OK to select

Choose your preferred time display format and press “**OK**” to select it.

To return to live Video feed (if available) select and press: Back/Back/Exit or wait 5 seconds and monitor will return to live video view on it's own.

Brightness

40



Use UP/DOWN to choose, OK to select

Press "OK" to open Menu. Choose "**Settings**" and press "OK" to select it.

41



Use UP/DOWN to choose, OK to select

Choose "**Brightness**" and press "OK" to select it.

42



Use UP/DOWN to choose #, OK to select

Choose one of 10 levels of brightness and press "OK" to select it.

To return to live Video feed (if available) select and press: Back/Exit or wait 5 seconds and monitor will return to live video view on it's own.

Video Off Time

43



Use UP/DOWN to choose, OK to select

(Feature only works if Parent Unit is not using AC adapter.)

Press “OK” to open Menu.
Choose “Settings” and press “OK” to select it.

44



Use UP/DOWN to choose, OK to select

Choose “Video Off Time” and press “OK” to select it.

45



Use UP/DOWN to choose #, OK to select

Choose the amount of time the LCD screen stays on after pressing the “Video button” by pressing Up/Down. You can choose from 15sec./30sec./60sec./90sec./120sec. by pressing “OK” to select it. **NOTE:** Longer times will reduce battery life faster.

To return to live Video feed (if available) select and press: Back/Exit or wait 5 seconds and monitor will return to live video view on it's own.

Language

46



Use UP/DOWN to choose, OK to select

Press "OK" to open Menu. Choose "Settings" and press "OK" to select it.

47



Use UP/DOWN to choose, OK to select

Choose "Language" and press "OK" to select it.

48



 
Use UP/DOWN to choose, OK to select

Choose a language and press "OK" to select it.

To return to live Video feed (if available) select and press: Back/Exit or wait 5 seconds and monitor will return to live video view on it's own.

Volume Up/Down

- Press the Volume Up or Down button to change the volume.
- The selected volume will be shown on the screen, and the unit will beep.

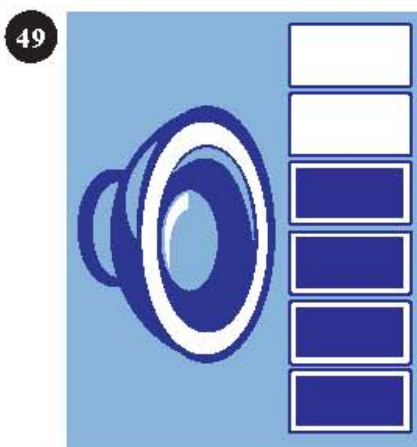

Battery Information


Parent Unit Battery Level

The Battery Icon shows how much power is left in the batteries:

50



 LOW



FULL

- When the batteries are low, the Battery Icon will blink and the monitor will beep once every three seconds.
- When the batteries are extremely low, the screen will display the warning, “Batteries are very low. Turning off...” The unit will then turn off.
- The Battery Level Light will illuminate green when the batteries are OK, red when the batteries are low. The Battery Level Light can be seen easily when the Parent Unit is closed.

Parent Unit Battery Charging

 
- Plug the AC Adapter into the Parent Unit to start charging the batteries.
- The text “Battery is charging...” will be shown on the screen for 5 seconds.
- When the battery is fully charged, the text “Battery is full...” will be shown on the screen for 5 seconds.

- The Charging Light will illuminate red while the batteries are being charged, green when the batteries are fully charged. The Charging Light can be seen easily when the Parent Unit is closed.


Nursery Unit Backup Batteries

- Three AAA batteries can be optionally installed in the Nursery Unit in case AC power is lost.
- When the Nursery Unit is on battery power, only the audio will be transmitted. This helps to extend the battery life.
- The Power LED is green when the batteries are good, red when the batteries are low.
- The Parent Unit will show “Nursery Unit AC Power Disconnected” when the Nursery unit is on battery power.


Accessories/ Wall mount & Belt clip

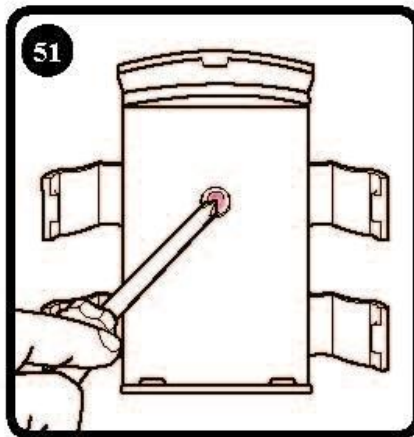

 Attach wall mount to wall using a **#6 screw and drywall anchor**. Make sure all cords are not within child's reach. Make sure there is an electrical outlet readily available to plug in the AC adapter. **DO NOT** use an extension cord.

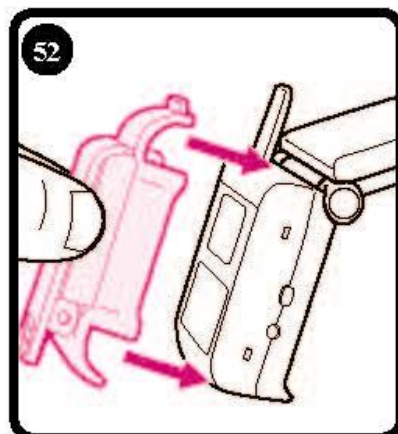

 Attach the belt clip to the parent unit as shown in figure #52.

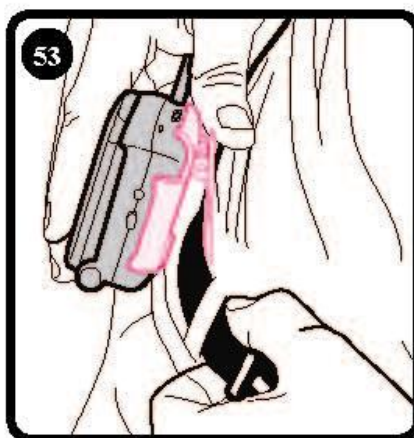

Using the belt clip, you can fasten the parent unit to your waist/belt for hands free use.

Trouble Shooting

Most problems have a simple solution.

First, check that:

- Power is turned ON for both units
- Both units are plugged in (or batteries are fresh in Nursery Unit and fully charged in Parent Unit)
- Electrical outlet works
- Volume is turned up on Parent Unit
- Parent Unit is in range of the Nursery Unit

Parent Unit Only Works With AC Adapter

- Check that the battery is plugged in.

No Sound or No Video

- Batteries dead or weak — replace or use AC adapter.
- AC adapter not properly connected — check the connections.
- Nursery Unit covered or blocked — remove the obstruction.
- If Parent Unit is on battery power, press the Video Button to view the video. Weak Sound, Static or Poor Video.

- Nursery Unit too far from baby — move closer.
- Parent Unit too far from Nursery Unit — move them closer.
- Large objects blocking the signal — try repositioning Nursery Unit.
- Volume setting too low — turn it up.
- Interference from other electrical equipment — eliminate cause of static (TVs, mixers, computers, fans, fluorescent lights, light dimmers, etc.)
- Significant amount of obstructions between Parent Unit and Nursery Unit such as walls, ceilings and buildings. Try moving the Nursery Unit to another part of the room.

Shrill Sound (Feedback)

- Nursery Unit and Parent Unit too close together — move them farther apart.
- Volume set too high — lower the volume.

Pairing the Parent Unit and Child Unit

To ensure privacy, your Parent Unit is paired with your Nursery Unit at the factory. Your Parent Unit will not work with any other Nursery Units.

If your Parent Unit won't lock onto your Nursery Unit, or you purchased a new Parent Unit or Nursery Unit, follow the procedure below to pair the Parent Unit and Nursery Unit. If you purchased a new Parent Unit, skip Step 1. The new Parent Unit is ready to pair with your Nursery Units.

1. Erase the Pairing from the Parent Unit

- Go to the Main Menu You must be at the Main Menu – no other menu will work.
- Press Volume Up, Volume Down, and Video buttons simultaneously for 3 seconds.
- The screen will display “Are you sure you want to disconnect from the Nursery Unit?”
- Select “Yes” and press “OK”.
- The Parent Unit is ready to pair with the Nursery Unit.

2. Pair the Parent Unit with the Nursery Unit

- If the Parent Unit is not on, turn it on now.
- The Parent Unit will display “Looking for a Nursery Unit to pair with. Turn on your Nursery Unit now.”
- Place the Nursery Unit in the same room, as the Parent Unit.
- Turn on the Nursery Unit using the On/Off Button on the side. The green power light should come on.
- Within a few seconds, the Parent Unit will find the Nursery Unit. The Parent Unit will display “Nursery Unit found. Pairing complete.”
- The Parent Unit will begin monitoring normally.

Nothing happened when I turned on the Nursery Unit. What do I do?

- With the Parent Unit on, turn the Nursery Unit off, and then on again.
- If there is still a problem, repeat steps 1 and 2.

Replacement Parts Warranty Information (USA)

To purchase parts or accessories or for warranty information in the United States, please contact us at the following:

Graco Children's Products
150 Oaklands Blvd.
Exton, PA 19341

www.gracobaby.com
or
1-800-345-4109

Product Registration (USA)

To register your Graco product from within the U.S.A. visit us online at

www.gracobaby.com/productregistration.

We currently do not accept product registrations from those living outside the United States of America.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.