

HENA



NID-1080

User Manual

Thank you for your choosing the new device
This guide serves to enable users to get to know and familiar with our product as soon as possible.
Here we have made a brief introduction to the key layout and definitions in figures and words.

Precautions before Use

1. This production is suitable for use in non-tropic areas below 2,000 meters.
2. Prevent the device from falling to the ground or being strongly impacted otherwise.
3. Do not use it in the long term in any environment where the air is too cold, too hot ($<35^{\circ}\text{C}$), too humid or with too much dust. Do not expose the Device to sunlight.
4. Avoid using it in the strong magnetic and strong static environment as much as possible.
5. Once any water or other liquid splashes onto the Device, close it immediately and do not use it until it dries out.
6. Do not clean the Device with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
8. Please back up your important material at any time to avoid loss.
9. Please do not disassemble the Device by yourself; otherwise you will lose the right to warranty.

Product Overview

Features



Browse the Web
Visit your favourite websites



Connect to the Internet wirelessly
High-speed Wi-Fi 802.11 b/g/n networking



Check your e-mail
Keep in touch with friends and family



Enjoy your media library anywhere
Portable powerhouse plays popular music, video, and photos.



Watch YouTube™ videos
Browse the world's most popular video-sharing community

 


Built-in camera
Convenient front-facing camera 2.0MP



Discover thousands of apps for Windows™
Install games, applications and more via the installed Microsoft Store™

now your product

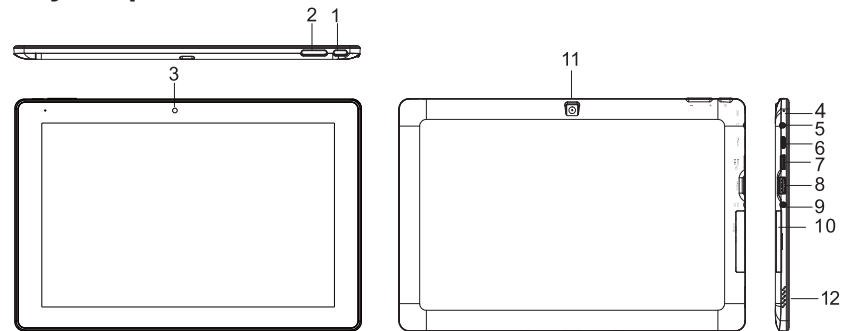

1. POWER

2. Volume+/Volume-

3. FRONT CAMERA

4. IC

5. Headphone

6. TYPE-C

7. HDMI

8. USB

9. DC IN

10. TF CARD

11. REAR CAMERA

12. SPEAKER

Know your Screen



1. **Start Screen**- Display useful information at a glance without opening the app.
2. **Microsoft™ Account** - Change account settings or switch to another user account.
3. **Settings** - View and change any system settings.
4. **Power** - Shut Down, Hibernate or put your PC to sleep.
5. **Search Bar** - Quickly find files, directions, information or the name of a song.
6. **Notification Area** - View all notifications, date and time.
7. **Peek** - Quickly show your desktop



You need to log on your Microsoft account before the application program completely runs.

Using the Laptop

Before First Use

- Before first use, please make sure the Laptop is fully charged. If not, connect the power adaptor, so your Laptop can charge fully.
- Charging time is at least 6 hours the first time, 4 hours there after.



Note: This Laptop contains a Built-in type rechargeable Lithium-ion battery, the charger must be a standard adaptor (12V/2A plug adaptor), this Laptop includes DC charging.

- Ensure that you have a good Wi-Fi connection, with your network name and password available.

Starting up

Press and hold the Power key until the screen turns on. Wait until the Desktop screen appears. The computer is now ready for use.

 
The first time you use your device, the startup wizard will help you set up your device:

- Language
- Date & Time
- Wi-Fi Connection
- Location service options
- Third-party applications
- Necessary Updates
- Account Synchronization

Powerin up the aptop


To turn the aptop on

Press and hold the Power key until the screen turns on.
Wait until the esktop screen appears
the aptop is now ready for use.

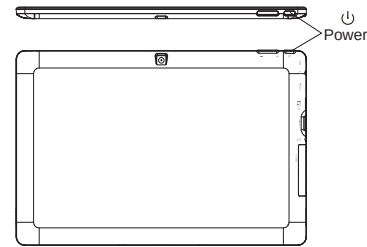

To turn the aptop off

 Press the start button and click on the power icon.
his then gives the option to shutdown, sleep
or restart.

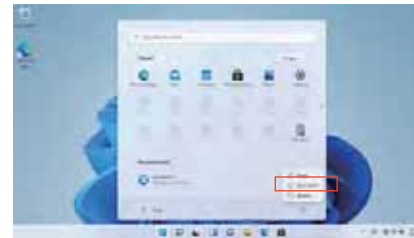

Screen Settings

 
Turning the Screen On or Off

When the laptop is on, you can turn off the screen to conserve power and protect the screen. Simply press the start button and click on the power icon, then choose sleep.



To conserve battery power, the screen can be set to turn off automatically when the laptop is not in use between 1 minute and 1 hour. The screen timeout option can be found in the display menu.

It is strongly recommended that you sign into/register for a Windows account needed for the installation of new apps. When prompted it is also recommended that you agree to backing up your laptop. This creates copies of all of your files should you ever need to restore the laptop.

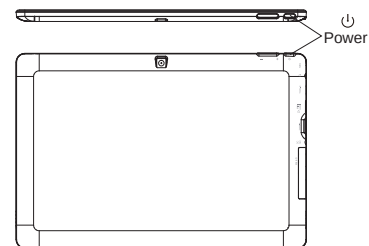

Connect to a Wi-Fi network

The notification bar displays icons that indicate your laptop's internet status.



Connected to a Wi-Fi network. Waves indicate connection strength.



There are no Wi-Fi networks in range, or the Wi-Fi is not connected.

 
 
Open the Settings menu by pressing the start button and clicking on the cog / settings icon ⚙️.

Select your network from the list of available networks.

The laptop will prompt you to confirm connection to the network. Touch Connect to confirm. If the network is secured as indicated by a lock icon, the laptop will prompt you to enter a password or other credentials.



Settings icon can also be found on the desktop. Open the Network and Internet menu and turn the WiFi on.

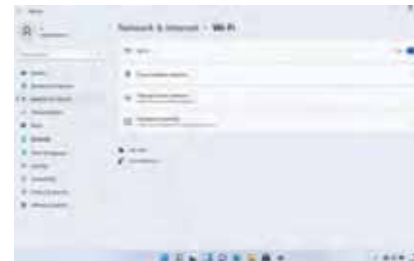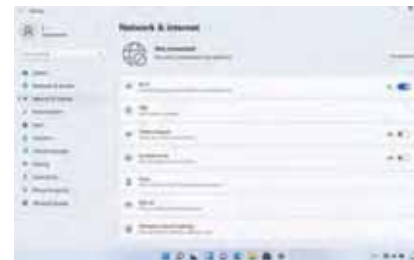

User Interface

Start Menu

To open the start menu select the icon  in the bottom left hand corner of the desktop. Once the menu has been opened you will be greeted with a variety of options.



Applications

In addition to already fixed on the start screen of the application, you can open all applications in the home page.

Adding a shortcut tile to start menu

1. Right-click on properties
2. Select fixed at the beginning of the page



 
Search Box

Right-click the taskbar and go to Taskbar settings. Under Taskbar items, toggle the switch to On/Off next to Search to set up.



Change the taskbar location

Right-click any empty space on the taskbar. Select Taskbar settings > Taskbar behaviors > Taskbar alignment and then select Center or Left.

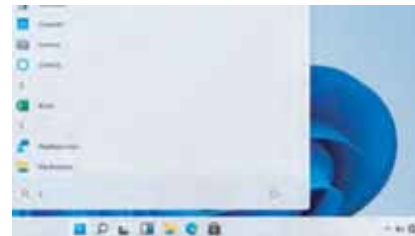

Rearrange taskbar buttons

Drag a button from its current position to a different one.

Menu bar

Expand the menu bar from the screen.
File manager, settings, power supply and all applications, you can sleep / shutdown / restart the device



 
Power



Manage files and applications



Set up your machine

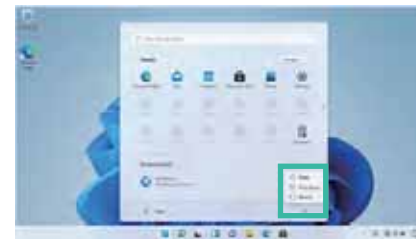

Multitasking operating interface

Click the Desktop task view to operating a multi-operating interface.

Windows Centre

The Action Center is where you can find application notifications and quick actions. On the bottom right corner of the screen, look for the Action Center icon.

The Action Center allows access to quick settings, in the form of small boxes at the bottom of the panel.

Notifications within the action centre are sorted into categories by app.

The Action Center also supports actionable notifications, such as recent text messages, emails or social media integration.



Personalising

Changing your wallpaper and themes

Press start  and select the settings icon . Select the personalisation menu where you will be greeted with the options to change your background/theme for the Desktop and lockscreen. In this section you also have the option to change the Windows accent colours and choose which elements will use the colour.



To download new apps

To install new apps approved by Windows, click the Windows Store icon on the bottom task bar. There you will find over 1 million apps including many of which are free. Even if you only going to use free apps you will still need to create a Windows account but you don't need to enter your credit card details to do this.

pecifications

Processor	Intel® i7-1020	
Storage	8 GB	128 GB
	eMMC	UFS 2.1
Display	6.5" IPS LCD, 1080 x 2400	
Wi-Fi Networking	Wi-Fi 6E, Bluetooth 5.2	
Bluetooth	Bluetooth 5.2	
Camera	Front	16 MP
	Rear	64 MP
USB Host	USB-C 3.2, USB-A 2.0	
HDMI	HDMI 2.1	
Audio Output	3.5 mm Headphone	
Speaker	2 x 1W Speaker	
Power	Rechargeable Li-Polymer Battery, 4500mAh	
Operating System	Android 11	

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to the user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 15.105 Information for the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connecting the equipment to a socket on a circuit different from that to which the receiver is connected.
- Contact with the provider or a radio f TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be

- used in portable exposure condition without restriction.