

Remotec

Remotec Technology Ltd.

To: 175 - Mr. Lawrence Chow

Fax: 27855487

Jan. 03, 02

1301, Swire & MacLaine House, 19-23 Austin Avenue,
TST, Kowloon, Hong Kong.
Tel: (852) 2314-0330 Fax: (852) 2314-1006

Your ref:

Our ref:

Date:

Intertek Testing Services Hong Kong Ltd.
2/F., Garment Centre,
576 Castle Peak Road,
Kowloon, Hong Kong.
Attn: Mr. Lawrence Chow

RECEIVED DIVISION			
Incoming Date:		3 Jan 02	
		Action By	
		Lawrence	

Date: Jan. 02, 01.

Quotation ref: Q0111304

Model No: BW6311 [A/V Master 6000]
BW2112 [Remote Control Extender (Receiver)]

Re: Label and Manual additional wordings for FCC approval

This letter is issued on behalf of Remotec Technology Ltd. in declaration that the following wordings will be added on the product and manual for the models BW6311 A/V Master 6000 BW2112 Remote Control Extender (Receiver)

BW6311

Back Label Content:

FCC ID: M7N-BW6311TX-00

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Manual Content:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

P.1/3

1301, Swire & Macleins House, 19-23 Austin Avenue,
TST, Kowloon, Hong Kong.
Tel: (852) 2314-0330 Fax: (852) 2314-1006

Your ref:

Our ref:

Date:

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- [1] Reorient or relocate the receiving antenna.
- [2] Increase the separation between the equipment and receiver.
- [3] Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- [4] Consult the dealer or an experienced radio/TV technician for help.

BW2112

Back Label Content:

FCC ID: M7N-BW2112RX-00

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Manual Content:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

P.2/3

Remotec

Remotec Technology Ltd.

1301, Swire & MacLaine House, 19-23 Austin Avenue,
TST, Kowloon, Hong Kong.
Tel: (852) 2314-0330 Fax: (852) 2314-1006

Your ref:


Our ref:

Date:

- [1] Reorient or relocate the receiving antenna.
- [2] Increase the separation between the equipment and receiver.
- [3] Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- [4] Consult the dealer or an experienced radio/TV technician for help.

For and on behalf of Remotec Technology Ltd.

Joel Lau
R&D Manager

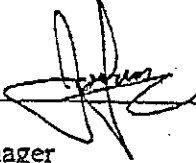

P.3/3

English

Congratulations! Your Universal Remote Control (URC) is a state-of-the-art device which integrates many different infra-red remote controls to deliver instant A/V action to your fingertips.

Before operating the remote, please read thoroughly this manual. Then reserve them for future reference.

1 HOW TO INSTALL BATTERIES

Alkaline batteries recommended. The number of battery required stated at the back of the coversheet.

1. Remove the battery cover on the back of your URC.
2. Observe the polarity of the batteries and the "+" / "-" marks inside the battery compartment.
3. Insert the batteries.
4. Push the battery cover back in place.

Battery Low

If the indicator flashes twice slowly after your invoking of any command, it shows that the battery level is low. You must replace them with new batteries to ensure proper functioning.

2 HOW TO SET UP THE URC

By entering Device Code

You may setup the URC by the following code entering instructions.

1. Refer to the DEVICE CODE LIST, look up the 4-digit Device Code which corresponds to the brands of your A/V equipment. If there are more than one Device Code listed under your brand, try from the first code.
2. Press a desired Device Mode Key (e.g. **TV**).
3. Hold down **+** and **=** on the URC together simultaneously for 2 seconds until the indicator lights up.
4. Use the number keys **0-9** to enter your 4-digit Device Code, the indicator should go out immediately.

Turn on your device (e.g. TV), try the function keys on the URC. If your device (e.g. TV) responds to your invoked function correctly, you have entered the right Device Code. Otherwise, repeat the above setup instructions with the rest available Device Codes until your device (e.g. TV) responds to your invoked function, and most keys work correctly.

- Simply repeat the above procedures to enter the Device Codes for your VCR, SAT, CD or CTV. (Remember to press a correct Device Mode Key in step 2 above)

Note:

- CD, CTV and other Device Codes can be entered into any device modes except "TV" & "VCR" modes. Just simply press the device mode key and enter your 4-digit device code for CD, CTV and other devices. If the indicator flashes twice in step 4, a wrong Device Code has been entered. You are required to repeat step 2 to 4 again.

Suggestion:

- If you cannot find a correct Device Code for your equipment, see **2** HOW TO SET UP THE URC - By Searching Through the Library.
- You are recommended to jot down your Device Codes in the space provided on back label after setting up the URC correctly for future reference.

English

By Searching Through the Library

If you cannot identify a correct Device Code for your equipment from the Device Code list, you may search the code through the library:-

1. Turn on your device manually (e.g. TV).
2. Press a desired Device Mode Key (e.g. **TV**).
3. Hold down **+** and **=** on the URC together simultaneously for 2 seconds until the indicator lights up.
4. Enter a corresponding Magic Search Code from following table. The indicator should go out immediately.

DEVICE TYPE:	TV	VCR	SAT	CTV	CD
MAGIC SEARCH CODE:	0001	0002	0003	0004	0005

(e.g. press **TV** device mode key, then press **+** and **=**, and enter TV Magic Search Code 0001.)

5. Press the same desired device mode key again as in step 2 above. (e.g. **TV**)
 6. Hold down **+** and **=** together simultaneously for 2 seconds until the indicator lights up, and your URC is ready to start searching.
 7. Aim the URC at your device (e.g. TV), press the **0** key repeatedly, slowly and patiently until the device has been turned off.
- Once your device has been turned off, immediately press **+** and **=** to lock in code and the indicator should go out.

- Simply repeat the above setup procedures to search the Device Code for your VCR, SAT, CD or CTV. (Remember to press a correct Device Mode Key and correct Magic Search Code in step 2-5 above)

IMPORTANT:

- If the power on/off function of your device is not infra-red controlled - you need to follow steps 2 to 6 above and start searching:-

- Press **0** and another important function key alternately until your device responds to the expected function, press **+** and **=** to lock in the code.

e.g. Press **0** " & " 1 " alternately, or ;
Press **0** " & " > " alternately.

Note:

- CD, CTV and other device codes can be searched and locked into any device modes except "TV" & "VCR" modes. Just simply press the corresponding device mode key in step 2 & 5 and enter an appropriate Magic Search Code for your CD, CTV and other devices.

- Each time you press the **0**, the URC will skip to the next code and send out a POWER signal trying to turn off your device.

- If you failed to stop pressing **0** in time when your device has been turned off, turn on your device again immediately. Before the indicator goes out, press **0** on the URC to skip backward. Repeat the step 7 above and lock in code.

- If the indicator flashes twice after your pressing of **0** key, you are already at the last code of the library. Press **+** and **=** to resume the URC and repeat carefully the above procedures to search again.

Remotec

MODEL 0156211

- Released for
- ☐ PRELIMINARY INFORMATION
- ☐ QUOTATION ONLY
- ☐ MOCK UP ONLY
- ☐ HARD/SOFT TOOLING
- ☐ TOOL MODIFICATION
- ☐ TECHNICAL MANUAL
- ☐ MANUFACTORY
- ☐ PRINTING

MARKETING ITS

Prepared by

Date: Dec 10, 2001

Approved by

Signature

3 OPERATING THE URC

Normal Operation

Once you have set up the URC for your AV equipment, it works like your original remote controls. To operate, just aim it at your equipment, press an appropriate device mode key and invoke the desired function by pressing a corresponding key on the URC. The indicator flashes during signal transmission and as confirmation of key touch.

Punch Through

Punch through allows you to operate TV's volume and mute functions without having to switch the device modes repeatedly even when your URC is in other operating modes.

4 ADVANCED OPERATION

Secondary Function

Symbols of secondary function are printed in different colors on the panel, and a SECONDARY FUNCTION TABLE is included on page 23. To invoke a secondary function, press **SHIFT** followed by a corresponding function key.

5 MAINTENANCE

1. Do not expose your URC to dust, strong sun light, humidity, high temperature, or mechanical shock.
2. Do not use old and new batteries together as old batteries tend to leak.
3. Do not use corrosive or abrasive cleansers on your URC.
4. Keep the unit dust free by wiping it with a soft, dry cloth.
5. Do not disassemble your URC, it contains no user-serviceable parts.

6 TROUBLESHOOTING

- A. My URC does not work at all
Check your AV device, if the device's main switch is turned off, your URC could not operate your device.
- A. Check whether your batteries are inserted properly and are in correct +/− marks.
- A. Check whether you have pressed the corresponding device mode key for your device.
- A. If the batteries are low, replace the batteries.
- Q. If several Device Codes listed under the brand of my AV device, how can I select the correct Device Code?
A. To seek the correct Device Code for your AV device, test the code one by one until most keys work properly.
- Q. My AV equipment responds only to some of the commands.
A. You have set a code for which only some commands work properly but some do not. Try other codes until most keys work properly.

DEVICE CODE		TV Brands		Code			
Model	ADIRAL	Model	ADIRAL	Code	ADIRAL	Model	ADIRAL
DEGRAAF	1351	DEGRAAF	1351	0451	1351	DEGRAAF	1351
DIXI	0981	DIXI	0981	0981	0981	DIXI	0981
DORFOS	0101	DORFOS	0101	0101	0101	DORFOS	0101
DORIC	1031	DORIC	1031	1031	1031	DORIC	1031
DUAL	0601	DUAL	0601	0601	0601	DUAL	0601
DUAL-TEC	1641	DUAL-TEC	1641	1641	1641	DUAL-TEC	1641
DUMONT	2111	DUMONT	2111	2111	2111	DUMONT	2111
DYNATRON	0521	DYNATRON	0521	0521	0521	DYNATRON	0521
ELBE	1021	ELBE	1021	1021	1021	ELBE	1021
ELECTRO TECH	1081	ELECTRO TECH	1081	1081	1081	ELECTRO TECH	1081
ELEKTRONISKA	2121	ELEKTRONISKA	2121	2121	2121	ELEKTRONISKA	2121
ELKAN	1551	ELKAN	1551	1551	1551	ELKAN	1551
ELTA	1971	ELTA	1971	1971	1971	ELTA	1971
EMERSON	0771	EMERSON	0771	0771	0771	EMERSON	0771
EMERSON	1621	EMERSON	1621	1621	1621	EMERSON	1621
EUROPHON	0261	EUROPHON	0261	0261	0261	EUROPHON	0261
EUROPHON	0771	EUROPHON	0771	0771	0771	EUROPHON	0771
FENNER	0581	FENNER	0581	0581	0581	FENNER	0581
FENNER	1031	FENNER	1031	1031	1031	FENNER	1031
FIDELITY (UK)	0101	FIDELITY (UK)	0101	0101	0101	FIDELITY (UK)	0101
FIDELITY (UK)	0281	FIDELITY (UK)	0281	0281	0281	FIDELITY (UK)	0281
FIDELITY (UK)	0651	FIDELITY (UK)	0651	0651	0651	FIDELITY (UK)	0651
FIDELITY (UK)	0771	FIDELITY (UK)	0771	0771	0771	FIDELITY (UK)	0771
FIDELITY (UK)	1031	FIDELITY (UK)	1031	1031	1031	FIDELITY (UK)	1031
FIDELITY (UK)	1511	FIDELITY (UK)	1511	1511	1511	FIDELITY (UK)	1511
FIDELITY (UK)	1621	FIDELITY (UK)	1621	1621	1621	FIDELITY (UK)	1621
FIDELITY (UK)	1971	FIDELITY (UK)	1971	1971	1971	FIDELITY (UK)	1971
FIDELITY (UK)	2001	FIDELITY (UK)	2001	2001	2001	FIDELITY (UK)	2001
FIDELITY (UK)	2121	FIDELITY (UK)	2121	2121	2121	FIDELITY (UK)	2121
FIDELITY (UK)	2281	FIDELITY (UK)	2281	2281	2281	FIDELITY (UK)	2281
FIDELITY (UK)	2341	FIDELITY (UK)	2341	2341	2341	FIDELITY (UK)	2341
FIDELITY (UK)	2451	FIDELITY (UK)	2451	2451	2451	FIDELITY (UK)	2451
FIDELITY (UK)	2561	FIDELITY (UK)	2561	2561	2561	FIDELITY (UK)	2561
FIDELITY (UK)	2671	FIDELITY (UK)	2671	2671	2671	FIDELITY (UK)	2671
FIDELITY (UK)	2781	FIDELITY (UK)	2781	2781	2781	FIDELITY (UK)	2781
FIDELITY (UK)	2891	FIDELITY (UK)	2891	2891	2891	FIDELITY (UK)	2891
FIDELITY (UK)	2901	FIDELITY (UK)	2901	2901	2901	FIDELITY (UK)	2901
FIDELITY (UK)	2911	FIDELITY (UK)	2911	2911	2911	FIDELITY (UK)	2911
FIDELITY (UK)	2921	FIDELITY (UK)	2921	2921	2921	FIDELITY (UK)	2921
FIDELITY (UK)	2931	FIDELITY (UK)	2931	2931	2931	FIDELITY (UK)	2931
FIDELITY (UK)	2941	FIDELITY (UK)	2941	2941	2941	FIDELITY (UK)	2941
FIDELITY (UK)	2951	FIDELITY (UK)	2951	2951	2951	FIDELITY (UK)	2951
FIDELITY (UK)	2961	FIDELITY (UK)	2961	2961	2961	FIDELITY (UK)	2961
FIDELITY (UK)	2971	FIDELITY (UK)	2971	2971	2971	FIDELITY (UK)	2971
FIDELITY (UK)	2981	FIDELITY (UK)	2981	2981	2981	FIDELITY (UK)	2981
FIDELITY (UK)	2991	FIDELITY (UK)	2991	2991	2991	FIDELITY (UK)	2991
FIDELITY (UK)	3001	FIDELITY (UK)	3001	3001	3001	FIDELITY (UK)	3001
FIDELITY (UK)	3011	FIDELITY (UK)	3011	3011	3011	FIDELITY (UK)	3011
FIDELITY (UK)	3021	FIDELITY (UK)	3021	3021	3021	FIDELITY (UK)	3021
FIDELITY (UK)	3031	FIDELITY (UK)	3031	3031	3031	FIDELITY (UK)	3031
FIDELITY (UK)	3041	FIDELITY (UK)	3041	3041	3041	FIDELITY (UK)	3041
FIDELITY (UK)	3051	FIDELITY (UK)	3051	3051	3051	FIDELITY (UK)	3051
FIDELITY (UK)	3061	FIDELITY (UK)	3061	3061	3061	FIDELITY (UK)	3061
FIDELITY (UK)	3071	FIDELITY (UK)	3071	3071	3071	FIDELITY (UK)	3071
FIDELITY (UK)	3081	FIDELITY (UK)	3081	3081	3081	FIDELITY (UK)	3081
FIDELITY (UK)	3091	FIDELITY (UK)	3091	3091	3091	FIDELITY (UK)	3091
FIDELITY (UK)	3101	FIDELITY (UK)	3101	3101	3101	FIDELITY (UK)	3101
FIDELITY (UK)	3111	FIDELITY (UK)	3111	3111	3111	FIDELITY (UK)	3111
FIDELITY (UK)	3121	FIDELITY (UK)	3121	3121	3121	FIDELITY (UK)	3121
FIDELITY (UK)	3131	FIDELITY (UK)	3131	3131	3131	FIDELITY (UK)	3131
FIDELITY (UK)	3141	FIDELITY (UK)	3141	3141	3141	FIDELITY (UK)	3141
FIDELITY (UK)	3151	FIDELITY (UK)	3151	3151	3151	FIDELITY (UK)	3151
FIDELITY (UK)	3161	FIDELITY (UK)	3161	3161	3161	FIDELITY (UK)	3161
FIDELITY (UK)	3171	FIDELITY (UK)	3171	3171	3171	FIDELITY (UK)	3171
FIDELITY (UK)	3181	FIDELITY (UK)	3181	3181	3181	FIDELITY (UK)	3181
FIDELITY (UK)	3191	FIDELITY (UK)	3191	3191	3191	FIDELITY (UK)	3191
FIDELITY (UK)	3201	FIDELITY (UK)	3201	3201	3201	FIDELITY (UK)	3201
FIDELITY (UK)	3211	FIDELITY (UK)	3211	3211	3211	FIDELITY (UK)	3211
FIDELITY (UK)	3221	FIDELITY (UK)	3221	3221	3221	FIDELITY (UK)	3221
FIDELITY (UK)	3231	FIDELITY (UK)	3231	3231	3231	FIDELITY (UK)	3231
FIDELITY (UK)	3241	FIDELITY (UK)	3241	3241	3241	FIDELITY (UK)	3241
FIDELITY (UK)	3251	FIDELITY (UK)	3251	3251	3251	FIDELITY (UK)	3251
FIDELITY (UK)	3261	FIDELITY (UK)	3261	3261	3261	FIDELITY (UK)	3261
FIDELITY (UK)	3271	FIDELITY (UK)	3271	3271	3271	FIDELITY (UK)	3271
FIDELITY (UK)	3281	FIDELITY (UK)	3281	3281	3281	FIDELITY (UK)	3281
FIDELITY (UK)	3291	FIDELITY (UK)	3291	3291	3291	FIDELITY (UK)	3291
FIDELITY (UK)	3301	FIDELITY (UK)	3301	3301	3301	FIDELITY (UK)	3301
FIDELITY (UK)	3311	FIDELITY (UK)	3311	3311	3311	FIDELITY (UK)	3311
FIDELITY (UK)	3321	FIDELITY (UK)	3321	3321	3321	FIDELITY (UK)	3321
FIDELITY (UK)	3331	FIDELITY (UK)	3331	3331	3331	FIDELITY (UK)	3331
FIDELITY (UK)	3341	FIDELITY (UK)	3341	3341	3341	FIDELITY (UK)	3341
FIDELITY (UK)	3351	FIDELITY (UK)	3351	3351	3351	FIDELITY (UK)	3351
FIDELITY (UK)	3361	FIDELITY (UK)	3361	3361	3361	FIDELITY (UK)	3361
FIDELITY (UK)	3371	FIDELITY (UK)	3371	3371	3371	FIDELITY (UK)	3371
FIDELITY (UK)	3381	FIDELITY (UK)	3381	3381	3381	FIDELITY (UK)	3381
FIDELITY (UK)	3391	FIDELITY (UK)	3391	3391	3391	FIDELITY (UK)	3391
FIDELITY (UK)	3401	FIDELITY (UK)	3401	3401	3401	FIDELITY (UK)	3401
FIDELITY (UK)	3411	FIDELITY (UK)	3411	3411	3411	FIDELITY (UK)	3411
FIDELITY (UK)	3421	FIDELITY (UK)	3421	3421	3421	FIDELITY (UK)	3421
FIDELITY (UK)	3431	FIDELITY (UK)	3431	3431	3431	FIDELITY (UK)	3431
FIDELITY (UK)	3441	FIDELITY (UK)	3441	3441	3441	FIDELITY (UK)	3441
FIDELITY (UK)	3451	FIDELITY (UK)	3451	3451	3451	FIDELITY (UK)	3451
FIDELITY (UK)	3461	FIDELITY (UK)	3461	3461	3461	FIDELITY (UK)	3461
FIDELITY (UK)	3471	FIDELITY (UK)	3471	3471	3471	FIDELITY (UK)	3471
FIDELITY (UK)	3481	FIDELITY (UK)	3481	3481	3481	FIDELITY (UK)	3481
FIDELITY (UK)	3491	FIDELITY (UK)	3491	3491	3491	FIDELITY (UK)	3491
FIDELITY (UK)	3501	FIDELITY (UK)	3501	3501	3501	FIDELITY (UK)	3501
FIDELITY (UK)	3511	FIDELITY (UK)	3511	3511	3511	FIDELITY (UK)	3511
FIDELITY (UK)	3521	FIDELITY (UK)	3521	3521	3521	FIDELITY (UK)	3521
FIDELITY (UK)	3531	FIDELITY (UK)	3531	3531	3531	FIDELITY (UK)	3531
FIDELITY (UK)	3541	FIDELITY (UK)	3541	3541	3541	FIDELITY (UK)	3541
FIDELITY (UK)	3551	FIDELITY (UK)	3551	3551	3551	FIDELITY (UK)	3551
FIDELITY (UK)	3561	FIDELITY (UK)	3561	3561	3561	FIDELITY (UK)	3561
FIDELITY (UK)	3571	FIDELITY (UK)	3571	3571	3571	FIDELITY (UK)	3571
FIDELITY (UK)	3581	FIDELITY (UK)	3581	3581	3581	FIDELITY (UK)	3581
FIDELITY (UK)	3591	FIDELITY (UK)	3591	3591	3591	FIDELITY (UK)	3591
FIDELITY (UK)	3601	FIDELITY (UK)	3601	3601	3601	FIDELITY (UK)	3601
FIDELITY (UK)	3611	FIDELITY (UK)	3611	3611	3611	FIDELITY (UK)	3611
FIDELITY (UK)	3621	FIDELITY (UK)	3621	3621	3621	FIDELITY (UK)	3621
FIDELITY (UK)	3631	FIDELITY (UK)	3631	3631	3631	FIDELITY (UK)	3631
FIDELITY (UK)	3641	FIDELITY (UK)	3641	3641	3641	FIDELITY (UK)	3641
FIDELITY (UK)	3651	FIDELITY (UK)	3651	3651	3651	FIDELITY (UK)	3651
FIDELITY (UK)	3661	FIDELITY (UK)	3661	3661	3661	FIDELITY (UK)	3661
FIDELITY (UK)	3671	FIDELITY (UK)	3671	3671	3671	FIDELITY (UK)	3671
FIDELITY (UK)	3681	FIDELITY (UK)	3681	3681	3681	FIDELITY (UK)	3681
FIDELITY (UK)	3691	FIDELITY (UK)	3691	3691	3691	FIDELITY (UK)	3691
FIDELITY (UK)	3701	FIDELITY (UK)	3701	3701	3701	FIDELITY (UK)	3701
FIDELITY (UK)	3711	FIDELITY (UK)	3711	3711	3711	FIDELITY (UK)	3711
FIDELITY (UK)	3721	FIDELITY (UK)	3721	3721	3721	FIDELITY (UK)	3721
FIDELITY (UK)	3731	FIDELITY (UK)	3731	3731	3731	FIDELITY (UK)	3731
FIDELITY (UK)	3741	FIDELITY (UK)	3741	3741	3741	FIDELITY (UK)	3741
FIDELITY (UK)	3751	FIDELITY (UK)	3751	3751	3751	FIDELITY (UK)	3751
FIDELITY (UK)	3761	FIDELITY (UK)	3761	3761	3761	FIDELITY (UK)	3761
FIDELITY (UK)	3771	FIDELITY (UK)	3771	3771	3771	FIDELITY (UK)	3771
FIDELITY (UK)	3781	FIDELITY (UK)	3781	3781	3781	FIDELITY (UK)	3781
FIDELITY (UK)	3791	FIDELITY (UK)	3791	3791	3791	FIDELITY (UK)	3791
FIDELITY (UK)	3801	FIDELITY (UK)	3801	3801	3801	FIDELITY (UK)	3801
FIDELITY (UK)	3811	FIDELITY (UK)	3811	3811	3811	FIDELITY (UK)	3811
FIDELITY (UK)	3821	FIDELITY (UK)	3821	3821	3821	FIDELITY (UK)	3821
FIDELITY (UK)	3831	FIDELITY (UK)	3831	3831	3831	FIDELITY (UK)	3831
FIDELITY (UK)	3841	FIDELITY (UK)	3841	3841	3841	FIDELITY (UK)	3841
FIDELITY (UK)	3851	FIDELITY (UK)	3851	3851	3851	FIDELITY (UK)	3851
FIDELITY (UK)	3861	FIDELITY (UK)	3861	3861	3861	FIDELITY (UK)	3861
FIDELITY (UK)	3871	FIDELITY (UK)	3871	3871	3871	FIDELITY (UK)	3871
FIDELITY (UK)	3881	FIDELITY (UK)	3881	3881	3881	FIDELITY (UK)	3881
FIDELITY (UK)	3891	FIDELITY (UK)	3891	3891	3891	FIDELITY (UK)	3891
FIDELITY (UK)	3901	FIDELITY (UK)	3901	3901	3901	FIDELITY (UK)	3901
FIDELITY (UK)	3911	FIDELITY (UK)	3911	3911	3911	FIDELITY (UK)	3911
FIDELITY (UK)	3921	FIDELITY (UK)	3921	3921	3921	FIDELITY (UK)	3921
FIDELITY (UK)	3931	FIDELITY (UK)	3931	3931	3931	FIDELITY (UK)	3931
FIDELITY (UK)	3941	FIDELITY (UK)	3941	3941	3941	FIDELITY (UK)	3941
FIDELITY (UK)	3951	FIDELITY (UK)	3951	3951	3951	FIDELITY (UK)	3951
FIDELITY (UK)	3961	FIDELITY (UK)	3961	3961	3961	FIDELITY (UK)	3961
FIDELITY (UK)	3971	FIDELITY (UK)	3971	3971	3971	FIDELITY (UK)	3971
FIDELITY (UK)	3981	FIDELITY (UK)	3981	3981	3981	FIDELITY (UK)	3981
FIDELITY (UK)	3991	FIDELITY (UK)	3991	3991	3991	FIDELITY (UK)	3991
FIDELITY (UK)	4001	FIDELITY (UK)	4001	4001	4001	FIDELITY (UK)	4001
FIDELITY (UK)	4011	FIDELITY (UK)	4011	4011	4011	FIDELITY (UK)	4011
FIDELITY (UK)	4021	FIDELITY (UK)	4021	4021	4021	FIDELITY (UK)	4021
FIDELITY (UK)	4031	FIDELITY (UK)	4031	4031	4031	FIDELITY (UK)	4031
FIDELITY (UK)	4041	FIDELITY (UK)	4041	4041	4041	FIDELITY (UK)	4041
FIDELITY (UK)	4051	FIDELITY (UK)	4051	4051	4051	FIDELITY (UK)	4051
FIDELITY (UK)	4061	FIDELITY (UK)	4061	4061	4061	FIDELITY (UK)	4061
FIDELITY (UK)	4071	FIDELITY (UK)	4071	4071	4071	FIDELITY (UK)	4071
FIDELITY (UK)	4081	FIDELITY (UK)	4081	4081	4081	FIDELITY (UK)	4081
FIDELITY (UK)	4091	FIDELITY (UK)	4091	4091	4091	FIDELITY (UK)	4091
FIDELITY (UK)	4101	FIDELITY (UK)	4101				

[illegible][illegible]

TEKNIKA	1171	1231	1261	BANG & OLUFSEN	0042	0062	0812	KARCHER	0052	0072	0812	REX	0042	0142	0782
TELE	1141	0651	0731	BAUR	0052	0062	0252	KENDO	0492	1142	0572	RICOH	0042	0142	0782
TELEAVIA	1821	0651	0731	BLAUPUNKT	0062	0672	0392	KENWOOD	1142	1162	1172	SABA	0042	0142	0782
TELEFUNKEN	0291	0301	0311	BRIONVEGA	0032	0282	0332	LIFETEC	0432	0002	0072		0632	0732	0742
	0551	0731	1131	BUSH	0062	0512	0972	LLOYD	0002	0092	0152		0762	0772	0782
	1471	1591	1791	BUSH (UK)	0082	0332		LOEWE OPTA	0002	0072	0442	SAISHO	0792	0872	0292
	1801	1811	1821	CAPEHART	0082	0512	0972	LOGIK	0002	0072	0442		0162	0202	0292
	1991	2161	2171	CCE	0012	0432	0762	LUMA	0492	0072	0812		0442	0512	0522
	2181	2191	2201	CRAIG	0042	0432		LUXOR	0492	0072	0812		0192	0572	0812
	2251	2271	2521	DAEWOO	0012	0432	0762	MELETRONIC	0492	0072	0812		0192	0572	0812
TELETECH	2631	2651	2671	DANSAL	0012	0432	0762	MAGNETIC	0492	0072	0812		0192	0572	0812
TEMPEST	2301	2321	2341	DAYTRON	0012	0432	0762	MARANTZ	0492	0072	0812		0192	0572	0812
	2391	2401		DECCA	0012	0432	0762	MARK	0492	0072	0812		0192	0572	0812
TENSAI	1331	2091		DECCA (UK)	0042	0432		MARTA	0492	0072	0812		0192	0572	0812
TEXTET	0601	0481	0531	DEGRAAF	0052	0132	0432	MATSUI	0012	0442	0512	SBR	0052	0152	0182
THOMSON	0331	0631	0651	DIXI	0052	0532	0602	MEDION	0522	0442	0512	SCHAUER LORENZ	0052	0042	0052
	0571	0901	1241	DUMONT	0442	0632	0532	MEMOREX	0012	0442	0512	SCHNEIDER	0002	0012	0052
	1571	1591	1791	DYNATECH	0042	0632	0532		0012	0442	0512		0002	0012	0052
THORN	1811	1821	1891	ELIN	0042	0632	0532	METZ	0482	0092	0932	SEG	0002	0072	
	1941	2531	2091	EMERSON	0042	0632	0532	MICROMAXX	0482	0092	0932	SEISNUDYNE	0002	0072	
THORN-FERGUSON	0741	0861	2091	ERRES	0042	0632	0532	MINERVA	0482	0092	0932	SHARP	0012	0172	
	0751	0871	0881	FERGUSON	0042	0632	0532	MITSUBISHI	0482	0092	0932	SHINTOM	0002	0072	
	0761	0881	0891	FIDELITY	0042	0632	0532	MITC	0482	0092	0932	SINUDYNE	0002	0072	
	0771	0881	0891	FINLUX	0042	0632	0532	MULTITECH	0482	0092	0932	SONITRON	0002	0072	
	0781	0881	0891	FIRST LINE	0042	0632	0532	MURPHY	0482	0092	0932	SONOKO	0002	0072	
	0791	0881	0891	FISHER	0042	0632	0532	NATIONAL	0482	0092	0932	SONY	0002	0072	
	0801	0881	0891	FORNITH-Phoenix	0042	0632	0532	NECKERMANN	0482	0092	0932	ST'S	0002	0072	
	0811	0881	0891	FRONTTECH	0042	0632	0532	NIKKAI	0482	0092	0932	SUNSTAR	0002	0072	
	0821	0881	0891	FUNAI	0042	0632	0532	NOBLIKO	0482	0092	0932	SYMPHONIC	0002	0072	
	0831	0881	0891	GBC (UK)	0042	0632	0532	NOKIA	0482	0092	0932	TANDBERG	0002	0072	
	0841	0881	0891	GEC (UK)	0042	0632	0532	NORDMENDE	0482	0092	0932	TASHIKO	0002	0072	
	0851	0881	0891	GENERAL TECHNIC	0042	0632	0532		0482	0092	0932	TEMPEST	0002	0072	
	0861	0881	0891	GOLDSTAR	0042	0632	0532		0482	0092	0932	THOMSON	0002	0072	
	0871	0881	0891	GOODMANS	0042	0632	0532	OLYMPUS	0482	0092	0932	THORN-FERGUSON	0002	0072	
	0881	0881	0891	GOODMANS (UK)	0042	0632	0532	ORION	0482	0092	0932		0002	0072	
	0891	0881	0891	GRATZ	0042	0632	0532	OSAKA	0482	0092	0932		0002	0072	
	0901	0881	0891	GRANADA	0042	0632	0532	OSAKI	0482	0092	0932		0002	0072	
	0911	0881	0891	GRANADA (UK)	0042	0632	0532	OTTO VERSAND	0482	0092	0932		0002	0072	
	0921	0881	0891	GRUNDIG	0042	0632	0532	PANASONIC	0482	0092	0932		0002	0072	
	0931	0881	0891	HANSEATIC	0042	0632	0532	PENTAX	0482	0092	0932		0002	0072	
	0941	0881	0891	HARMAN/KARDON	0042	0632	0532	PHILCO	0482	0092	0932		0002	0072	
	0951	0881	0891	HCM	0042	0632	0532	PHILIPS	0482	0092	0932		0002	0072	
	0961	0881	0891	HINARI	0042	0632	0532	PHONOLA	0482	0092	0932		0002	0072	
	0971	0881	0891	HITACHI	0042	0632	0532	PIONEER	0482	0092	0932		0002	0072	
	0981	0881	0891	IMPERIAL	0042	0632	0532	PROLINE	0482	0092	0932		0002	0072	
	0991	0881	0891	INGERSOL	0042	0632	0532	PYE	0482	0092	0932		0002	0072	
	1001	0881	0891	INTERLINK	0042	0632	0532	QUARTZ	0482	0092	0932		0002	0072	
	1011	0881	0891	INTERVIEW	0042	0632	0532	QUELLE	0482	0092	0932		0002	0072	
	1021	0881	0891	ITT	0042	0632	0532	RADIONETTE	0482	0092	0932		0002	0072	
	1031	0881	0891	ITT-NOKIA	0042	0632	0532	REALISTIC	0482	0092	0932		0002	0072	
	1041	0881	0891	JENSEN	0042	0632	0532	RET	0482	0092	0932		0002	0072	
	1051	0881	0891	JVC	0042	0632	0532		0482	0092	0932		0002	0072	
	1061	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1071	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1081	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1091	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1101	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1111	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1121	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1131	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1141	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1151	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1161	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1171	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1181	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1191	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1201	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1211	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1221	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1231	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1241	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1251	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1261	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1271	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1281	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1291	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1301	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1311	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1321	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1331	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1341	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1351	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1361	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1371	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1381	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1391	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1401	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1411	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1421	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1431	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1441	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1451	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1461	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1471	0881	0891		0042	0632	0532		0482	0092	0932		0002	0072	
	1481	0881	0891												


Infrared Transmission Unit (■)

Where to use:
Use in the room where A/V equipment should be controlled.

How to set-up:


1. Locate the LED indicator side of the unit on the front of the equipment that you want to control.
2. Put the AC power plug of Infrared Transmission Unit (■) into a wall socket.
3. The LED indicator should light up.

TV, VCR, Satellite Receiver, Cable TV Converter, HiFi, CD Player, LD Player, etc.

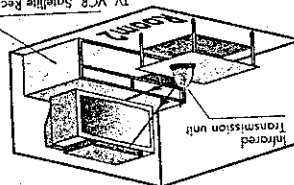

Extension IR Jack

820202300000

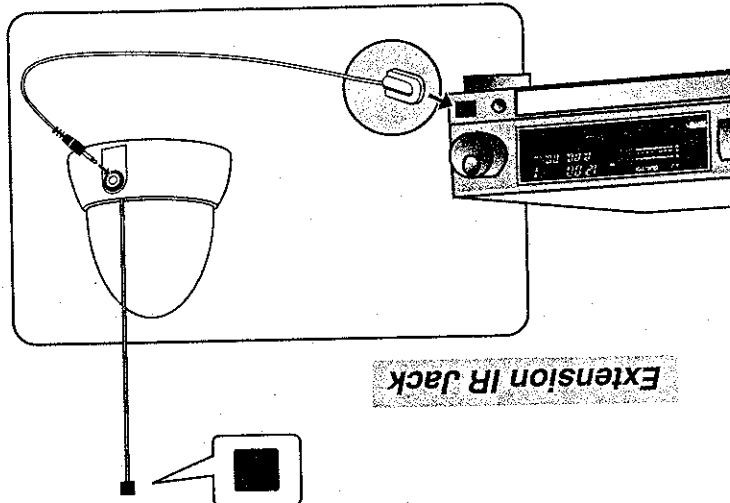

Remotec

MODEL 820202300000

Released for

PRELIMINARY INFORMATION

QUOTATION ONLY

MOCK UP ONLY

HARD/SOFT TOOLING

TOOL MODIFICATION

TECHNICAL MANUAL

MANUFACTORY

PRINTING

MARKETING

Prepared by

Date: Dec 1991

Approved by

Date: Dec 1991

Desig