


## USER MANUAL

This is a copy of the user's manual where the FCC statement is included:

### How to use MySIMcopier?

**Preparation**


- Remove your (U)SIM card from your mobile phone.
- Detach your new (U)SIM from the card body.
- Remove the transparent plastic tab located on the upper left of the MySIMcopier.

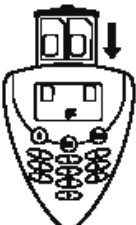

- Insert the 2 (U)SIM cards in the drawer:  
Left Drawer: old (U)SIM  
Right Drawer: new (U)SIM  
Press "OK".
- Enter PIN 1 of the old (U)SIM card. Press "OK".
- Enter PIN 2 of the new (U)SIM card. Press "OK".
- The copy process (phone book & SMS) is displayed by small dots moving between the 2 SIMs.
- When "END, OK" appears on the screen, the copy has been successful. You may remove the cards.

### How to change batteries?

- Remove the 3 screws.
- Pull the drawer out firmly towards you.
- Separate the front and rear covers as shown.
- Remove the old batteries and replace them, taking into account polarity.
- Put the front and rear covers together and click them into place.
- Re-insert the drawer and the 3 screws.

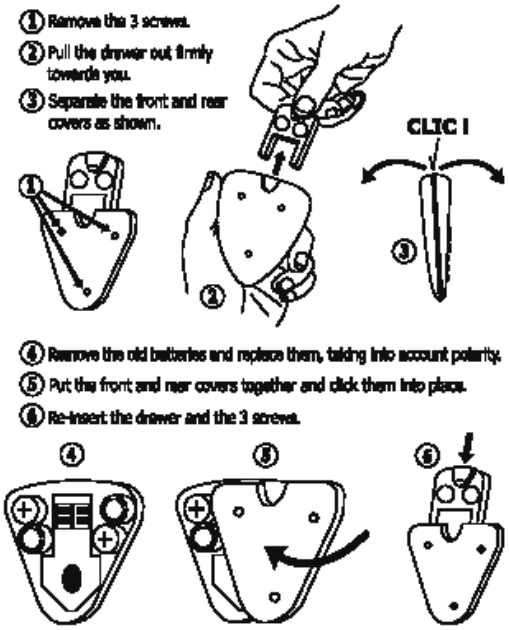

### FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:  
1- This device may not cause harmful interference, and 2- this device must accept any interference received, including interference that may cause undesired operation.  
This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:  
- Reorient or relocate the radio or television antenna.  
- Increase the separation between the equipment and the receiver.  
- Make sure that all your peripheral devices are also FCC Class B certified.  
- Consult your equipment dealer or an experienced radio / television technician for help.  
Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### Canadian Statement

This Class B digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulations.  
Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

### Troubleshooting

#### 2. ERROR2/ERROR3

**a) Unauthorized operator network**  
You have entered a new (U)SIM which does not belong to your operator's network.

**b) Only one remaining attempt to enter the PIN code**  
You are not allowed to continue because you will block your (U)SIM. If you wrongly enter your PIN again. You should replace the (U)SIM into your mobile phone in order to re-enter the PIN code. Then, put the (U)SIM back into the MySIMcopier and re-enter the PIN.

**c) Old generation card**  
You may have inserted the cards or you are trying to copy a new generation (3G) card onto an old generation card (GSM), which is impossible.

#### 3. Non compliant (U)SIM card: ERROR12/ERROR23

One of your (U)SIM card does not allow you to make the copy or it has been damaged.

### 1. ERROR/ERROR1

**a) Cards Inverted**  
If the cards are not correctly inserted in the drawers, 2 arrows will flash until the correct card is repositioned in the correct drawer.

**b) Wrong PIN code**  
You have entered a wrong PIN code. Press OK and re-enter the right PIN code. After 2 failed attempts, you will need to re-insert the (U)SIM into your mobile phone in order to confirm the PIN code. Then, replace the (U)SIM and re-enter the PIN into MySIMcopier and start again.  
(This security protects you from blocking your (U)SIM)

**c) Empty/opened drawer or unknown (U)SIM**  
You have either omitted to enter a (U)SIM, left the drawer open or entered a non-functional card.




Detail view of the FCC statement:

### FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:  
1- This device may not cause harmful interference, and 2- this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protections against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one of more of the following measures:

- Reorient or relocate the radio or television antenna.
- Increase the separation between the equipment and the receiver
- Make sure that all your peripheral devices are also FCC Class B certified
- Consult your equipment dealer, or an experienced radio / television technician for help

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### Troubleshoot

### Canadian Statement

This Class B digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulations.  
Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## 1. ERROR/ERROR1