 


URC7880
CODELIST

CODELIST TV	
TV	
3M	0724
Accurian	1803
Advent	1570
Affinity	3870, 3717
Akai	0702, 0812, 1675, 2232, 1385, 1688
AOC	2014
Apex Digital	2397, 4350
Audiovox	1865, 2413, 1766, 1769, 1868, 3410
Aumark	0060
Aventura	0171
Aves	3593
Blusens	2735
Broksonic	1892
Casio	1205
Champion	1362
Coby	3627, 2344, 2315, 3478, 3629, 1538, 2314
Commercial Solutions	1447
Curtis	2855, 3895, 2466, 4035, 1326, 2559, 3595, 3636
Curtis Mathes	0702
Daewoo	3115, 3183, 0661
Daytek	3651
Dukane	0724, 1430
Dumont	0017
Durabrand	0171, 1665, 0178
Dynex	2049, 2184, 1463
Eiki	1649, 1647, 4649
Electrohome	1670, 1570
Elektra	0017
Element	4635, 4910, 2964
Elite	1457
Emerson	1963, 1864, 1886, 1944, 1394, 0171, 1665
Emprex	1665
Epson	1422, 1822
ESA	4250, 1122
Faroudja	1944, 1963, 0171
Favi	1297
Fujitsu	3382
Funai	0683
GE	0171, 2861, 1394, 1963
General Electric	1447
GFM	1447
Gibralter	0017
Go Video	0060
GoldStar	0178
GPX	3980, 3977, 4586
Haier	2309, 1753, 3429, 4398, 4120, 1749, 1748
Hallmark	0178
Hannspree	2786, 1348
Hewlett Packard	1642
Hiear	3817
Hightong	3253
Hisense	3519, 4618, 4740, 4398, 40
Hitachi	4149
	1145, 0724, 1643, 4398, 13
	4455, 2756, 2207

B – SET UP BY CODE

 
If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:

- Turn your device on (not on standby).
-  Locate the brand of your device in the code list. Codes are listed by Device Type and Brand.
-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
-  Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.
-  Enter the first 4 digit code listed for your brand (e.g. 2049 for a Insignia TV).
-  The LED will blink twice and go out.
-  Now aim the remote towards your device and press the POWER key.
- If the device turns off, your remote is ready to use. If not, repeat steps 3-7 with the next code in the list.

* Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list.

B – CONFIGURACIÓN POR CÓDIGO

Si no encuentra la marca de su dispositivo en la sección A, puede configurar su dispositivo probando códigos individuales. Para ello:

- Encienda su dispositivo (no lo deje en modo de espera).
-  Busque la marca de su dispositivo en la lista de códigos. Los códigos se muestran por tipo de dispositivo y marca.
-  Mantenga pulsado el botón MAGIC hasta que el LED situado bajo el dispositivo parpadee dos veces. El LED que se encuentra bajo el botón del modo activo se mantendrá encendido.
-  Pulse el botón DEVICES varias veces hasta que el indicador LED del dispositivo que desea configurar se encienda.
-  Introduzca el primer código de 4 dígitos de su marca (por ej. 2049 para un televisor Insignia).
-  El LED parpadeará dos veces y se apagará.
-  Oriente el mando hacia su dispositivo y pulse el botón de encendido (POWER).
- Si el dispositivo se apaga, ya puede usar el mando. De lo contrario, repita los pasos 3-7 con el siguiente código de la lista.

* Algunos códigos son muy similares. Si observa que uno o más botones no funcionan como es debido, repita el proceso desde el paso 3 con el siguiente código de la lista.

B – CONFIGURATION A L'AIDE D'UN CODE

Si la marque de votre appareil n'est pas répertoriée dans la section A, vous pouvez configurer ce dernier à l'aide de codes. Procédez comme suit:

- Allumez votre appareil (celui-ci ne doit pas être en veille).
-  Dans la liste des codes, recherchez la marque de votre appareil. Les codes sont affichés en fonction du type d'appareil et de la marque.
-  Maintenez le bouton MAGIC enfoncé, jusqu'à ce que le voyant situé sous l'appareil clignote deux fois. Le voyant associé au mode en question reste allumé.
-  Appuyez plusieurs fois sur le bouton DEVICES, jusqu'à ce que le voyant correspondant à l'appareil que vous souhaitez configurer s'allume.
-  Saisissez le premier code à 4 chiffres indiqué pour la marque concernée (par exemple, 2049 pour un téléviseur Bennett).
-  Le voyant clignote deux fois, puis s'éteint.
-  Dirigez la télécommande vers l'appareil et appuyez sur le bouton d'alimentation.
- Si l'appareil s'éteint, votre télécommande est prête à l'emploi. Sinon, répétez les étapes 3 à 7 avec le code suivant dans la liste.

* Certains codes sont similaires. Si un ou plusieurs boutons ne fonctionnent pas comme prévu, reprenez la procédure à partir de l'étape 3, avec le code suivant dans la liste.

CODELIST TV

TV	
3M	0724
Accurian	1803
Advent	1570
Affinity	3870, 3717
Akai	0702, 0812, 1675, 2232, 1385, 1688
AOC	2014
Apex Digital	2397, 4350
Audiovox	1865, 2413, 1766, 1769, 1868, 3410
Aumark	0060
Aventura	0171
Axess	3593
Blusens	2735
Broksonic	1892
Casio	1205
Champion	1362
Coby	3627, 2344, 2315, 3478, 3629, 1538, 2314
Commercial Solutions	1447
Curtis	2855, 3895, 2466, 4035, 1326, 2559, 3595, 3636
Curtis Mathes	0702
Daewoo	3115, 3183, 0661
Daytek	3651
Dukane	0724, 1430
Dumont	0017
Durabrand	0171, 1665, 0178
Dynex	2049, 2184, 1463
Eiki	1649, 1647, 4649
Electrohome	1670, 1570
Elektra	0017
Element	4635, 4910, 2964
Elite	1457
Emerson	1963, 1864, 1886, 1944, 1394, 0171, 1665
Emprex	1422, 1822
Epson	4250, 1122
ESA	1944, 1963, 0171
Faroudja	1297
Favi	3382
Fujitsu	0683
Funai	0171, 2861, 1394, 1963
GE	1447
General Electric	1447
GFM	1963
Gibralter	0017
Go Video	0060
GoldStar	0178
GPX	3980, 3977, 4586
Haier	2309, 1753, 3429, 4398, 4120, 1749, 1748
Hallmark	0178
Hannspree	2786, 1348
Hewlett Packard	1642
Hiear	3817
Hightong	3253
Hisense	3519, 4618, 4740, 4398, 4054, 4621, 4149
Hitachi	1145, 0724, 1643, 4398, 1345, 3644, 4455, 2756, 2207
HP	1642
iLo	1990, 1463
InFocus	4609, 1430, 0736, 0775, 3524
Initial	1990
Insignia	2049, 4487, 1780, 1641, 1963, 2002, 3227, 1326, 1892, 2416, 2751, 0171, 1423, 1517
Inteq	0017
iSymphony	3429, 3382, 3094
JC Penney	0060, 0178
Jensen	3204
JVC	1774, 1601, 4107, 3393, 3854, 2321, 2271, 3650, 1670, 3841
KDS	1687
Konka	1385
LeEco	4007, 4137
LG	2731, 1840, 3571, 1423, 1860, 3398, 4397, 3397, 1265, 4398, 2424, 0017, 0178
Lloyd's	3382
MAG	1687
Magnavox	3623, 1963, 1944, 1454, 2372, 1866, 4395, 3708, 1990
Matsushita	0250, 0650
Megatron	0178
Memorex	1670, 0060, 0877, 1570, 1665
MGA	0150, 0178
Midland	0017
Mintek	1990, 1603
Mitsubishi	0150, 1250, 0178, 1797
Mitsubishi Electric	0150, 1250, 0178, 1797
Naxa	2104, 2735, 3382
NEC	3257, 3000, 1797, 4693, 4380, 1398
Nikko	0178, 0017
Nimbro	2104
Norcent	0824
NuVision	2158
oCOSMO	4139
Ölevia	1610, 1144
Optimus	0250, 0650
Optoma	4609, 4658
Orion	1463
Panasonic	1480, 1291, 0250, 0650, 1271, 4743, 0178
Peerless	4254
Peerless-AV	4254
Penney	0060, 0178
Philco	1963
Philips	3069, 1867, 2800, 3396, 1454, 3623, 3678, 1455, 2372, 1394, 1744, 0017
Pioneer	0679, 1260, 1457
Polaroid	1769, 1523, 1538, 3942, 1766, 2002, 3382, 1286, 1326, 1385, 1687, 4035
Power Acoustik	1865
Prima	1753
Proscan	1447, 2256, 3895, 4035, 3636, 4490, 4491, 4483, 4492, 4495, 2634, 3382, 3717, 4375, 4493, 3429, 4494
Proviev	1687
Pulsar	0017
Pyle	2196
QuantumFX	2337, 3593
Quasar	0250, 0650, 3382
Qumi	0775, 4649, 1369
RCA	1447, 2634, 4214, 2746, 3895, 2187, 2932, 4079, 2434, 4394, 4623, 4625, 2247, 3382, 4035, 1868, 2002, 3717, 4488, 1670, 3894, 4490, 4492
Runco	0017
Sampo	1597, 1755
Samsung	2051, 3993, 3970, 0812, 0702, 1632, 0060
Sansui	1670, 3564, 1463, 1892, 3377, 0171
Sanyo	1142, 1649, 3488, 4168, 1647, 4740
Sceptre	2337, 3899, 4886, 2528, 4139
Sears	0178, 0171
Seiki	4635, 3953, 4794
Seiko Epson	4250, 1122
Sens	1865
Sharp	2360, 4618, 4740, 4507, 3394, 4892, 3519, 4121, 4398
SIM2 Multimedia	1297
SkyVue	4135, 2360

CODELIST TV | STB

Skyworth	3253	Bowling Cable TV	1877
Sole	1623	Bright House	1877, 1376
Sony	0810, 4448, 4189, 4151, 0834	Bright House Networks	1877, 1376
Spectroniq	1687	Bristol Tennessee	
Squareview	0171	Essential Services	1877
Superscan	1944	Buckeye Cable System	1376, 2187
Supersonic	3593, 2104, 1753, 3595, 3894	Buford Media Group	1877
Sylvania	1963, 1944, 1886, 1864, 1394, 2861, 0171	BWTelecom	1877
Symphonic	1944, 1963, 0171	Cable America	1877
Syntax	1144	Cable Axion Digital	1376
Tatung	1286	Cable One	1376, 3560, 1877
TCL	4398, 3183	Cable Vision Services	1877
Technics	0250, 0017, 0650	Cablevision	3885
Teknika	0060	Cablevision du Nord	1376
Telefunken	0702	Cablevision Mexico	1376
TNGi	0017	Cablovision	
Toshiba	2006, 2724, 1524, 1656, 3945, 4885, 1265, 1369, 0060, 0736	Warwick	1877
TruTech	3410	CCAP	1877
Venturer	1868, 1865	CDE Lightband	1998
Victor	0150, 0250	Cellcom	1877
Viewsonic	3791, 4938, 4319, 2014, 2049, 0724, 0864	CenturyLink	1998, 0858
Viore	2352, 3429, 3382, 3094, 2104, 3118, 4829	Charter	1877, 1376, 5651, 2187, 3560, 5756, 5757
VisionQuest	3380	Charter Spectrum	1877, 1376, 5651, 2187, 3560, 5756, 5757
Vivitek	0775, 4649, 1369	Cincinnati Bell	1877, 3068, 1376
VIZIO	3758, 4723, 1758, 4905, 3358	Cisco	1877, 0858, 3028, 2947, 1982, 2345, 2378, 5484, 2506, 3294, 4514, 5757
Wards	0017	Click Network	1877
Westinghouse	4797, 3411, 1300, 1712	Cogeco	1376, 1982, 3560
Xiahua	1753	Comcast	1982, 1376, 1877, 3560, 2187
Xococo	1753	Comporium	1877, 3560, 2187
Zenith	0017, 1145, 0178, 1265, 1463, 1423	Consolidated Communications	1877, 1998, 2187, 0858, 3426
STB		Consolidated Telecommunications Company	1998
Access	1376	CoopTel	1998
Communications	1376	Corn Belt Telephone	1877
Adams Cable TV	3246, 2254, 2586	Cox	1877, 1376, 3774, 1982, 3765
ADB		Cox Communications	1877, 1376, 3774, 1982, 3765
Advocate		Crossman Cable	1877
Communications	1877	CTC	1998
Alta Utilities	1877	Darien	
Americable		Communications	1877
International	1877	Delta Cable	1376
Amino	1615, 1481, 1898, 3605	Digeo	2187
Arledge Electronics	0775	DIRECTV	1377, 3724
Armstrong	1376, 3560	DISH	0775
Arris	1376, 1998, 2187, 2378, 1982, 3765, 5097, 5537, 5756, 0858, 5131	DISH Mexico	0775
Astound		DISH Network	0775
Broadband	1877, 3560	Dishpro	0775
AT&T	0858	EastLink	1376
AT&T U-verse	0858	Easton Cable	1877
ATC		Eatel	1877, 3028
Communications	3560	Echostar	0775
Atlantic Broadband	1877, 3560	Evolution	3426, 3048, 3068
ATMC	1376, 3028	Evolution Digital	2479, 2746
Axtel	4458	FairPoint	2479, 2746
Ballard Rural Telephone		Communications	1877
Cooperative	0775	Fayetteville	
Beehive Broadband	1877	Electric System	1877
Bell	0775, 1998	Foothills	
Bell Fibe TV	1998, 5097, 5537	Broadband	1877
Bell MTS	1998, 5097, 5537		
Bell Satellite TV	0775		
Bellaliant	1998		
Bend Broadband	2187		
Blue Ridge			
Communications	1877, 3560		
BlueBridge Media	1877		

CODELIST STB

FootHills Rural Telephone Cooperative	1877	NfinityLink Communications	1877
ForeSite Wireless	1877	North State Communications	0858
Fort Randall Telephone Company	1877	Northland Cable TV	3560
Frontier	2378, 1998, 3560	Northland Communications	1376
Frontier Communications	2378, 1998, 3560	Northwest Iowa Telephone	1877
GCI	3560, 1376	Northwestel	1376
General Communications	3560, 1376	Novus	1376
General Instrument	0869	NuLink	1877
GOI	0775	NuVisions	0775
Google	3666	Oakview Cable	1877
Grande Communications	1877, 3560, 1376	Optimum	3885
Greenlight Community Broadband	1877	Ozona Cable & Broadband	1877
HTS	0775	Pace	1376, 1982, 1877, 0858, 1377, 1998, 3560, 4537, 0887
Huawei	4589	Palmetto Rural Telephone Cooperative	0858
Humax	1377, 5651, 3560	Panasonic	1982
ImOn Communications	1877	PennVideo Network	3560
Innovative Systems	1898	Philips	2378, 3560
Insight	1376, 1877	Pioneer	1877
Inter Mountain Cable	1877	Provincial Cable	1877
Izzi Mexico	1376	Qwest	1377
Izzi Telecom	1376	RadioShack	0869
JVC	0775	Rails Technologies	1877
K2 Communications	3560	RCN	1376, 3560
Kaon	4458, 2746	Rogers	1877, 5484, 1376
Kaon Media	4458, 2746	Sac County Mutual Telephone	1877
Knology	1877	Samsung	1877, 1377, 1982, 2947
Lafayette	1877	SaskTel	1998
Utilities System	1998	Schurz Communications	1877
Layer3 TV	5370	Scientific Atlanta	1877, 0858, 1982, 2345, 3028, 2378
Long Lines	1877	Service Electric	1376, 1982
Lucas Valley Cable	3560	Shaw	1376, 1877, 2187
Lumos Networks	1998	Shaw Direct	0869
MCV Broadband	1877	Sky Mexico	0887, 1377, 0856, 3469
Media Cast	1877	Source Cable	1376
Mediacom	1376, 3560, 1877	Spectrum	1877, 1376, 5651, 2187, 3560, 5756, 5757
Megacable	1376, 4514	Star Choice	0869
megasenal	4682	Sterling Cable	1877
Mega señal	4682	Stratford Mutual Telephone	1877
Merrimac Communications	1376	Suddenlink	1877, 3560, 1376
MetroCast	1376	SureWest	1877, 1998
Cablevision	1877, 1998	Tbaytel	1998
MetroNet	1877, 1998	TDS Telecom	0775
Mid-State		Technicolor	1377, 5651, 5484
Community TV	3560	TeleCable	1376
Midcontinent Communications	1376, 3560, 1982	TELUS	3028, 0775
Milford		TiFiNet	1877
Communications	1877	Time Warner	1877, 1376, 5651, 2187
Minerva Networks	3118	Time Warner Cable	1877, 1376, 5651, 2187
MINET	1877	TiVo	3560, 3724
Morristown		Totalplay	4634, 4589, 4591
Utility Systems	1877	Toxaway Cable	1877
Motorola	1376, 0869, 1998, 2378, 0858, 1982, 5097, 5756	Triangle Communication System	0775
		TV Cable of Rensselaer	3560
Moxi		TWC	1877, 1376, 5651, 2187
Nelson County		U-verse	0858
Cablevision	3560	Verizon	2378
Netgem	4634	Vianet TV	3246
Next Level	0869	Videotron	1877, 2947
NextGen Communications	1877	Village Cable	1877

CODELIST STB | BLU | DVD | AUDIO | S.BAR

Vision Systems	1877	Optimus	0059
Vista III Media	1982	Panasonic	1579, 0490, 1641, 3641
Vyve Broadband	1376	Philco	0675
Washington Cable	3560	Philips	2056, 0646, 2789, 1506, 2434, 3488, 3274, 0675, 0739, 0539
Wave Broadband	1376, 3560	Pioneer	0059, 0631, 2854, 1571, 2847, 4199, 0142
Western Iowa Telephone	1877	Polk Audio	0539
Western Montana CommunityTel	1877	Presidian	0675
Westman Communications	1376, 2187	Proscan	0522
WideOpenWest	1376, 1877, 2187	RCA	0522, 0717, 1769, 3464
Williamstown Cable	3560	RCN	0739
Windom		RE-BL	2555
Communications	1877	Rotel	0623
WistronNeWeb	3118	Samsung	0199, 1075, 2069, 2489, 1044, 2269, 2369, 4108, 0490, 1573, 0573, 2329, 2843
WOW!	1877, 1376, 2187, 5131	Sanyo	0675
Xfinity	1982, 1376, 3765, 1877, 3560, 2187	Schneider	0646
Zenith	0856	Sharp	0630, 0675, 2250
ZTE	3068	Sony	1633, 1516, 1033, 0864, 1070, 0772, 1533, 4009
		SV2000	0675
		Sylvania	0675, 0630
		Symphonic Technics	0675
		TiVo	0490
		Toshiba	0503, 2277, 1769, 2006, 3857, 3157, 3957
		TruTech	0675
		Urban Concepts	0503
		VIZIO	2563
		Wards	0869
		Daewoo	0869
		Denon	1634, 0059, 3851, 0490
		DIRECTV	0739
		Disney	3246, 0675
		Electrohome	1702
		Emerson	0675
		Frontier	0739
		Communications	0739
		Funai	0675
		GE	0717
		General Electric	0675
		GFM	0675
		Go Video	0869, 1075, 1044, 0741, 0717
		GoldStar	0741, 0869
		Greenhill	0717
		Harman/Kardon	3744, 0702
		Humax	0739
		Initial	0717
		Insignia	2095, 2596
		Integra	0627, 1769
		Irradio	0646
		JBL	0702, 3744
		JVC	1550, 1602, 0623
		Kenwood	0490, 0534
		LG	0741, 0869, 1602
		Logitech	2639
		Magnavox	0675, 0646, 1506, 0539
		Marantz	3444, 0539
		Memorex	1702, 3031, 2213
		Microsoft	2083, 2627, 0522
		Mintek	0059, 1521
		Mitsubishi	0059, 1521
		Mitsubishi Electric	0059, 1521
		NAD	2572, 0059, 0741
		Nesa	0717
		New Acoustic Dimension	2572, 0059, 0741
		Onkyo	0627, 1769
		Oppo	2545

BLU | DVD

Accurian	0675
Akai	0675
Allegro	0869
Apex Digital	0672, 0717
Audio Authority	2555
Audiovox	0717
Blaupunkt	0717
CineVision	0869
Daewoo	0869
Denon	1634, 0059, 3851, 0490
DIRECTV	0739
Disney	3246, 0675
Electrohome	1702
Emerson	0675
Frontier	0739

Communications	0739
Funai	0675
GE	0717
General Electric	0675
GFM	0675
Go Video	0869, 1075, 1044, 0741, 0717
GoldStar	0741, 0869
Greenhill	0717
Harman/Kardon	3744, 0702
Humax	0739
Initial	0717
Insignia	2095, 2596
Integra	0627, 1769
Irradio	0646
JBL	0702, 3744
JVC	1550, 1602, 0623
Kenwood	0490, 0534
LG	0741, 0869, 1602
Logitech	2639
Magnavox	0675, 0646, 1506, 0539
Marantz	3444, 0539
Memorex	1702, 3031, 2213
Microsoft	2083, 2627, 0522
Mintek	0059, 1521
Mitsubishi	0059, 1521
Mitsubishi Electric	0059, 1521
NAD	2572, 0059, 0741
Nesa	0717
New Acoustic Dimension	2572, 0059, 0741
Onkyo	0627, 1769
Oppo	2545

AUDIO | S.BAR

Acoustic Audio	4683, 4907
Aiwa	0121, 0158, 0157, 0189
Alco	1390
Altec Lansing	1485
AMC	1077
Anthem	3835, 2220
Anthem Statement	3835, 2220
Apex Digital	4334
Apple	1115
Arcam	4549, 1189, 0189
Audio Control	4475
AudioControl	4475
Audioengine	4311
AudioSource	3721
Audiotronic	1189
Audiovox	1390
Aura	4293
Axess	4095
B & W	3965, 2441, 3943
Bose	4307, 3708, 1841, 3959, 4124, 4024, 1933, 3706, 3832, 1629
Boston Acoustics	3698
Bowers & Wilkins	3965, 2441, 3943
BÖHM	4280
California	
Cambridge Audio	0029
Carver	4029
Coby	0189, 0121, 1189
Craig	3654
Curtis	4465, 4466
	3942

CODELIST AUDIO | S.BAR | GAME | MEDIA

Definitive Technology	4415, 3645, 4026	Pioneer	1123, 1935, 3057, 2432, 4015, 1023, 1384, 2743, 0823, 0032, 3956
Denon	1360, 2857, 3347, 2516, 2820, 3642, 3380, 3643, 2706, 2502, 4530, 4025, 3947, 0003, 4054, 0034, 2279	Polk Audio	3429, 1289, 2242, 0892, 4431, 0189, 0157
DMX Electronics	0157	Proficient	3661
Durabrand	1561	Proscan	1254
Dynavox	3231	Proton	0157
Dynex	3951	Pyle	4333, 4242
Emotiva	3763, 4059, 4100, 4101, 4102, 4641	QED	0157
Endave Audio	4800	Quad	0157
Energy	3915	RCA	1254, 2655, 2719, 1123, 3969, 3281, 0420, 2041, 0823, 1023, 2611, 2544, 1390, 2743
Energy Sistem	3915		3896, 4260, 4028
Epworth	0121, 0158, 0157, 0189	Rotel	0157
Focal	4021	SAE	2660, 2809, 2948, 3320, 3154, 2137, 4011, 3540, 1868, 1304
Gateway	1537	Samsung	0189
GoldStar	1537	Sansui	4176
Haier	3516	Sanyo	3736, 3097, 3929, 3381
Harman/Kardon	0110, 2241, 1304, 0892, 2443, 4186, 3418, 3756, 4178, 3391, 3779, 0189, 4040, 3045, 3517, 0157	Sharp	3763
iLive	3175	Sherbourn	1077, 1567, 3120, 3136, 2169, 3679, 3793, 4022, 4090, 3755, 3770, 4771
Inkel	3770, 4090, 3793	Sherwood	
Innovative Technology	3848	Newcastle	1567, 2169
Insighia	3951, 2472, 2169, 1893, 2929, 3104, 3770, 4022, 4424, 2175	Sonos	3919
	1805, 3860, 2730, 4023, 1320, 4581, 2503, 4014, 3992, 0135	Sony	0158, 1441, 1759, 2172, 2475, 2522, 3700, 1758, 0000, 1622, 2860, 4315, 2582, 3487, 4366, 4457, 2610, 4107, 3986, 4285, 1822, 3257
Jamo	3915	SpeakerCraft	3661
JBL	3756, 3535, 0110, 2241	Stereophonics	1023
JVC	1676, 1374, 2040, 3049, 2239, 2331, 3365, 0072, 1871	Sunfire	0313
Kenwood	0313, 1570, 1670, 0190, 0028	Sylvania	0157
Klipsch	3915, 4941, 4198, 4200	Tascam	0420
Left Coast	0892	Teac	0420, 1390
Left Coast		Technics	0309, 0029, 1633
Products	0892	Thorens	1189
Lennox	1561	Toshiba	3627, 1123
LG	2676, 1537, 3509, 3217, 4043, 3996, 4478, 2284, 2197	Toshiba TruAudio	4940
	0189, 0157	Venturer	1390
Linn	1408	Victor	0072
Logitech	0189, 1269, 1189, 0157, 1831	VIZIO	2454, 3935, 4911
Magnavox	1289, 2114, 0189, 2138, 4121, 3772, 1189, 0892, 1269, 3998, 3347	Wards	0158, 0189
Marantz		Yamaha	0176, 1276, 3580, 2061, 2467, 0376, 0036, 3030, 2116, 4008, 2458, 3325, 3917, 2592, 2021, 0187
Martin Logan	3526		
McIntosh	1289	Zenith	1293
Micromega	1189	Zonda	0157
Mint	4286	ZVOX	2332, 3913, 2334
Miro	0000		
Monoprice	4505		
Myriad	1189		
NAD	1989, 0320, 1767		
New Acoustic Dimension	1989, 0320, 1767		
Nu Force	3968		
Onkyo	1805, 0135, 1320, 2730, 3860, 4023, 2503, 4041, 4581, 4014, 4533, 4574, 3984, 3992		
	1023, 0823, 0032		
Optimus	0309, 3323, 1275, 3055, 2452, 3309, 3973		
Outlaw	1633, 2967, 3767, 0029, 2105, 1676, 1763		
Panasonic	4536, 3526, 4846		
	0420		
Paradigm	0189, 1269, 2434, 4105, 2459, 3379, 3962, 1189, 2675, 3801, 0157, 3227, 4012, 1831, 2311, 0892, 2289		
Parasound			
Philips	3774, 3728		

CODELIST GAME | MEDIA

Edal	4666	Ortek	3122
Gateway	1272	Panasonic	3760
Geniatech	4339	Pixel Magic	5155
Hewlett Packard	1272	Popcorn Hour	2260
Howard Computers	1272	RCA	3335
HP	1272	Ricavision	1272
Hush	1272	Rikomagic	5425
iBUYPOWER	1272	RKM	5425
iView	2759	Roku	3061, 1486, 2371
KM8	4666	Seagate	2698
LG	3373	Sling Media	5295, 2612
Linksys	1272	Sony	1272, 2713
Logitech	3272	Stack 9	1272
Magic TV	5155	Systemax	1272
Magnavox	3339	Tagar Systems	1272
Matricom	4899	Tibo	4339
Media Center PC	1272	Toshiba	1272
Mediabox	5155	Touch	1272
MediaGate	4525	Uebo	3350
Mediasonic	2095	Vensmile	4899
Mi	3982	Viewsonic	4249, 1272
Microsoft	4000, 1272, 2049	VIZIO	3670
Milliet	3982	Voodoo	1272
Mind	1272	Western Digital	2558
Minix	4413, 3884	Xbox	4000, 2049, 1272
MyGica	5057	Xiaomi	3982
Netgear	3324, 2036, 3292	Zappiti	5536, 5538
NiveusMedia	1272	ZT Group	1272
Northgate	1272		

THE OFA APP

Your One For All Smart Control contains codes for all popular devices and brands, but new codes are added to our online database every day. Using the One For All App on your iPhone or Android phone will allow you to upgrade any new codes into your remote using Bluetooth Smart, also known as Bluetooth Low Energy*. This will ensure that the remote will never become obsolete. You can also use the app to set up all devices, giving you the ability to enter the model numbers of your equipment to get the right code first time.

If you would like to download the app, follow the links below:

* Please ensure your phone is compatible with Bluetooth Smart.

LA APLICACIÓN OFA

Su mando a distancia One For All Smart Control contiene códigos de todos los dispositivos y marcas más populares, y a diario se añaden nuevos códigos a nuestra base de datos en línea. Si instala la aplicación One For All en su dispositivo Android o iPhone, podrá actualizar su mando con nuevos códigos a través de Bluetooth Smart, también conocido como Bluetooth Low Energy*.

Hacerlo le garantiza que su mando a distancia nunca se quedará anticuado.

La aplicación también le proporciona acceso a funciones adicionales, como por ejemplo configuración de actividades.

WARRANTY / GUARANTEE

WARRANTY / GUARANTEE INFORMATION
Terms and Conditions for "100% Guaranteed To Work" policy, and the separate 1 Year Limited Warranty against defects in material and workmanship can be found at www.oneforall.com/remoteguarantee, or you may request hard copies by calling 855-716-2573, or via mail to UEI Technical Support Service, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Please include your full name, product information, and contact information in your request communication.

LEGAL NOTICES
FCC STATEMENT:
This equipment has been tested and found to comply with the limits for a Class B digital