



 
Quick Connection Two Way Monitor System

08041

User Guide

Questions? Comments?
Missing Parts? Contact Us:

www.safety1st.com
(800) 544-1108

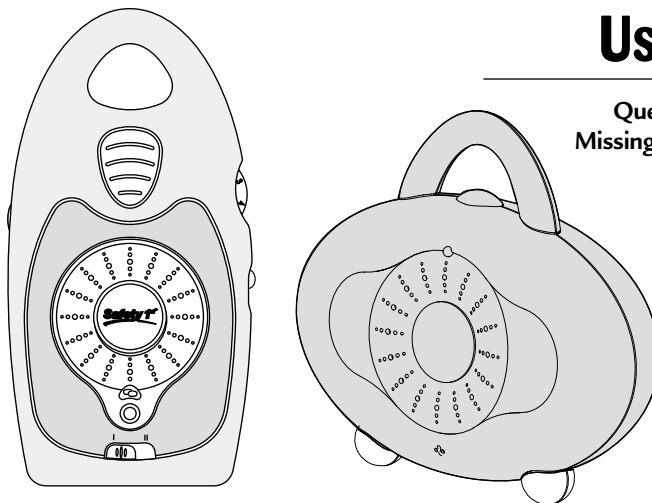

©2003 Dorel Juvenile Group

Made in CHINA

www.safety1st.com

(800) 544-1108

Styles and colors may vary.

Distributed by Dorel Juvenile Group, Inc.,

2525 State Street,

Columbus, IN 47201-7494

In Canada: 12345 Albert-Hudon, Suite

100, Montreal-N, QC Canada H1G 3K9

10/03

 WARNING

PLEASE READ THE FOLLOWING WARNINGS AND ALL ASSEMBLY INSTRUCTIONS CAREFULLY BEFORE USING THE QUICK CONNECTION TWO WAY MONITOR. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

TERMS USED IN WARNINGS: The term "Receiver" corresponds to "Parent Unit" and the term "Transmitter" corresponds to "Child Unit" in the rest of this instruction booklet.

- The Quick Connection Two Way Monitor is not intended to replace responsible and proper parental supervision.
- Check your child's activity at regular intervals as this monitor will not alert parents to the silent activities of a child.
- Before using your Quick Connection Two Way Monitor:
 - Read and follow all instructions carefully.
 - Read and observe all warnings on the product and in this instruction booklet.
- To prevent entanglement with the adapter cord, **NEVER** place the cord in or near a crib or playpen. **DO NOT** place the Receiver anywhere its AC adapter cord are within reach of children.
- **ALWAYS** KEEP THE TRANSMITTER, RECEIVER AND AC ADAPTERS OUT OF REACH OF CHILDREN.
- This product is not intended to be used as a medical monitor and its use should not replace adult supervision. It is important that an adult stay within the viewing range of the Quick Connection Two Way Monitor at all times during use.
- It is essential to check reception regularly. Please see the Testing Reception section for complete instructions.
- The Receiver is intended for indoor use only.
- **NEVER** use the Transmitter or Receiver near water. For example, do not use near a bathtub, bathroom sink, laundry tub, kitchen sink, in a wet basement, etc.
- Always unplug the AC adapters from wall outlets during long periods of non-use.
- Position the Transmitter, Receiver and AC adapters to allow adequate ventilation and prevent these components from overheating.
- To prevent overheating, keep the Transmitter, Receiver and AC adapters away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) which produce heat. Also keep these components out of direct sunlight.
- Use only the AC adapters provided. Use of any other adapters may damage the Transmitter and/or Receiver. Plug the AC adapters into standard household current only (120V AC outlet)! To prevent entanglement and overheating, **DO NOT** use extension cords.
- The AC adapters may become slightly warm to the touch during operation. This is normal.
- Position the AC adapter cords so that they are not walked on or pinched by items placed upon or against them, paying particular attention to cords at AC adapter plugs, wall plugs, and the point at which the cords attach to the Transmitter and Receiver.

- This product should be serviced only by qualified service personnel at Dorel Juvenile Group when:
 - An AC adapter or its plug is damaged,
 - The Transmitter or Receiver have fallen,
 - Liquid has spilled into the Transmitter or Receiver or
 - The Transmitter or Receiver do not appear to operate normally or exhibit a marked change in performance
- **DO NOT** attempt to service this product beyond that described in the Troubleshooting section at the end of these instructions. All other servicing should be referred to qualified personnel at Dorel Juvenile Group.

NOTE: The LEDs emit IR (infra red) light that is not harmful.



CAUTION



TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER OR BACK OF TRANSMITTER. NO SERVICEABLE PARTS INSIDE. REFER SERVICING TO DOREL JUVENILE GROUP CONSUMER RELATIONS (800) 544-1108.



WARNING



TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE. NEVER ATTEMPT TO OPEN THE CASE OF THE PRODUCT. THIS IS DANGEROUS AND WILL VOID THE WARRANTY.

FCC Compliance Information

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna,
- Increase the separation between the equipment and receiver,
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by Dorel Juvenile Group could void the user's authority to use the equipment.

Parts List

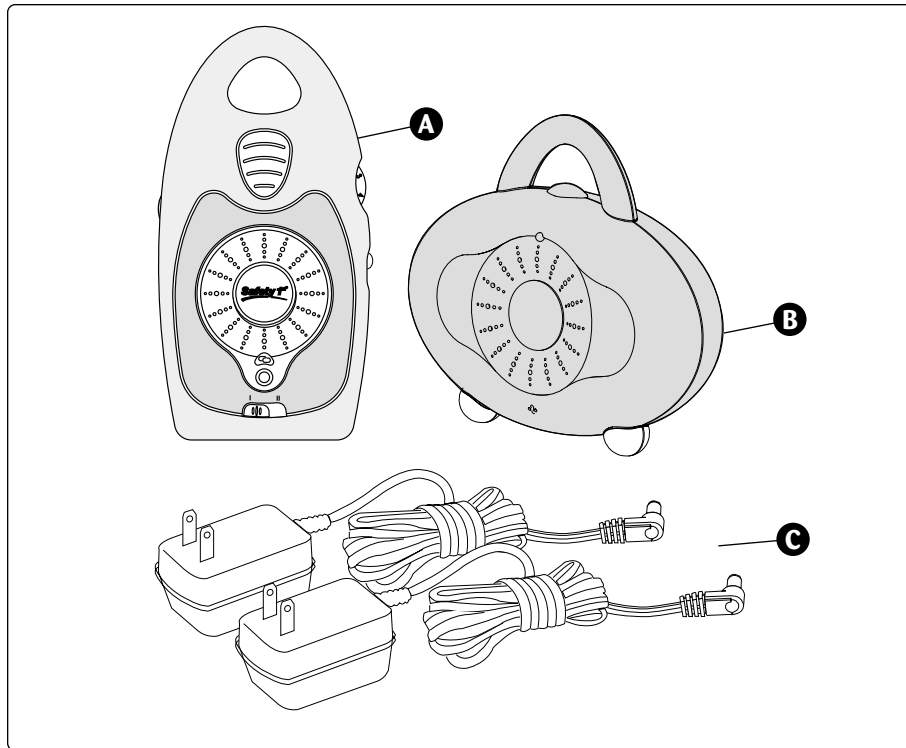

- A** Parent Unit
- B** Child Unit
- C** AC Adapter (2)

Keep These Instructions for Future Use

- Lay out and identify all parts.
- Do not return this product to the place of purchase. If any parts are missing, or if you are having difficulty using product visit our web site at **www.safety1st.com**. Or call Consumer Relations at **(800) 544-1108**. Have the model number (08041) and date code (manufacturing date) ready before you call. The date code is located on the bottom of the Child Unit.

Installing Your Quick Connection Two Way Monitor

 
To Set Up Your Child Unit:

WARNING



- To prevent entanglement, only mount the Child Unit in a location where it and its AC adapter cord are **OUT OF REACH OF CHILDREN**.
- **DO NOT** mount the Child Unit directly above heating vents, other heat producing sources or in direct sunlight.
- To prevent entanglement and overheating, **NEVER** use an extension cord.

1. Locate the Child Unit and its AC adapter. Connect the AC adapter into the back of the Child Unit.

CAUTION: DO NOT use an adapter that did not come with this product.

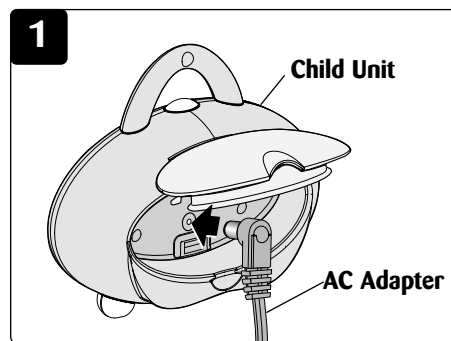

  2. Wrap the excess cord onto built in cord shortener (Figure 2). Allow enough cord to reach the outlet and connect the AC adapter into a power outlet. Allow the cord to exit the hole and close the door.

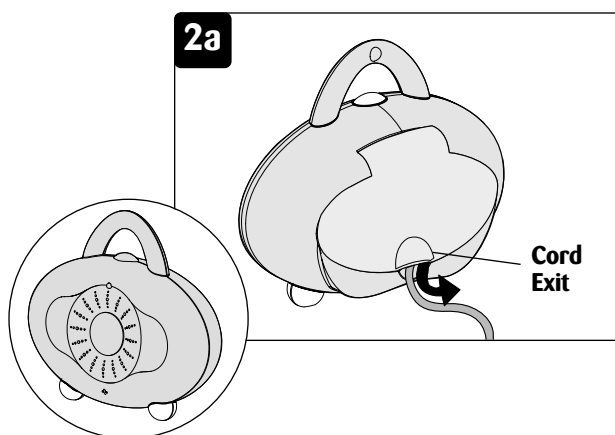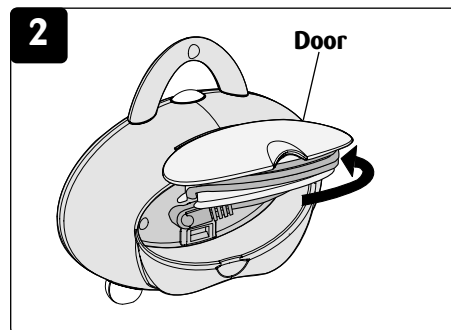

Installing Your Quick Connection Two Way Monitor

To Set Up Your Parent Unit:

CAUTION

- When using batteries, check batteries regularly. Amber LED indicates the batteries are low. **DO NOT** rely on Parent Unit when batteries are low.

 
 
NOTE: The Parent Unit may use either the AC adapter or batteries. When plugged in, the AC adapter will be the source of power.

- 1. For AC Power Use:** Locate the Parent Unit and its AC adapter. Connect the AC adapter into the side of the Parent Unit. Connect the AC adapter into a power outlet (Figure 1).

CAUTION: DO NOT use an adapter that did not come with this product.

For Battery Use: Locate the center screw at the back of the Parent Unit. Unscrew the screw. Pull off the battery door and insert three AAA batteries (see positive and negative diagram on the Parent Unit). Secure the door with the screw (Figure 1a).


NOTE: If desired, slide the belt clip over your belt.

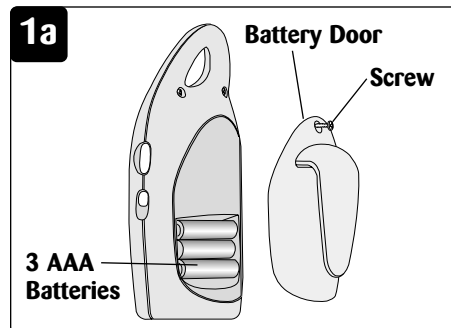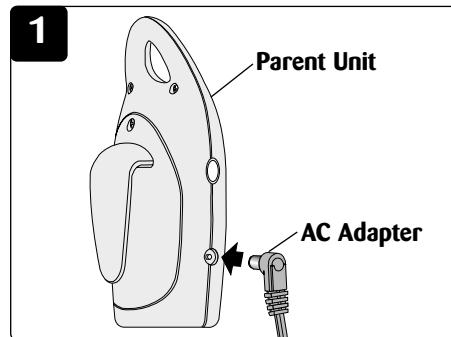

Choose a Location:

IMPORTANT: When choosing a location to set up your Child Unit and Parent Unit follow these guidelines:

 
- For best sound quality place the Child Unit 4 to 6' (1.5 to 2 m) away from the child.
- Use the Parent Unit far enough away from the Child Unit so as not to get feedback.
- **DO NOT** use the Parent Unit more than 1000' (304.8 m) away from the Child Unit.

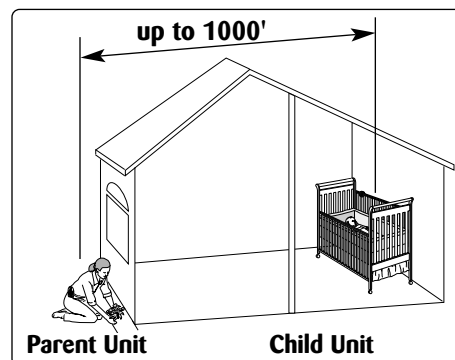

Operating Your Quick Connection Two Way Monitor

To Use Your Child Unit and Parent Unit:

 1. Turn the Parent Unit and the Child Unit to the On position. Choose a channel. Be sure that the same channel is selected on both the Child Unit and the Parent Unit.

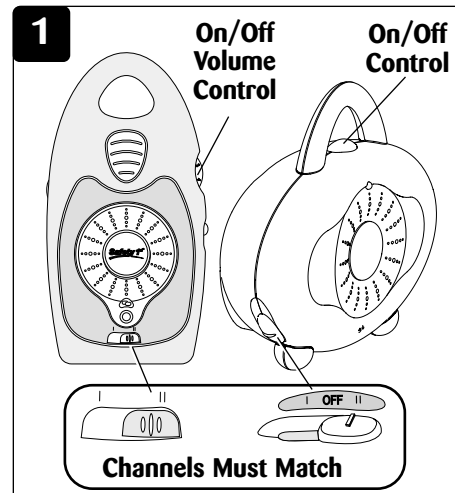


2. Adjust the volume by turning the knob on the side of the Parent Unit. To talk, press and hold the talk button. Release button to listen.

If desired, turn the vibrate feature on. Vibrate overrides sound, therefore no sound will be heard when vibrate is on.

CAUTION: Test the Parent Unit before each use. It is essential to check reception regularly.

 IMPORTANT: The first time you use your Child Unit, go through the section "Test the Reception" with two adults.

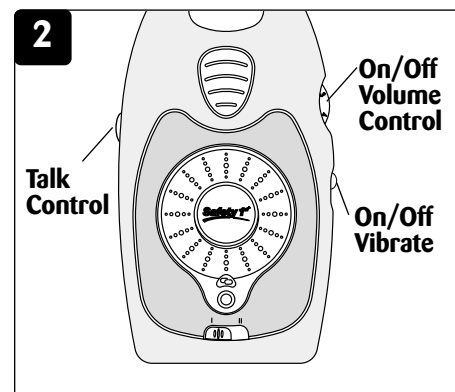


Operating Your Quick Connection Two Way Monitor

To Test the Reception:

NOTE: It is essential to check reception regularly.

 1. Place the Child Unit 4 to 6' (1.5 to 2m) away. Have an adult speak into the Child Unit at various levels (soft to loud) while another adult checks the Parent Unit for the proper sound and reception (Figure 1). Turn vibrate to the On position and test the vibrate feature. Press the talk and hold the talk control and your voice will be heard on the Child Unit. Try the Parent Unit in every location that it will be used. It is best to follow these guidelines for good reception:

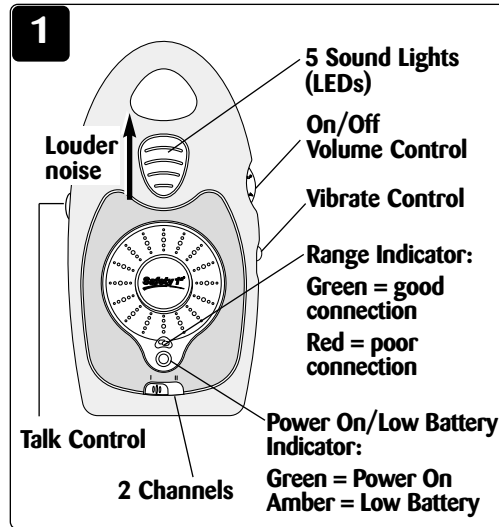

Guidelines for Good Reception:

- Place your Child Unit 4 to 6' (1.5 to 2m) away from the child.
- Be certain the Parent Unit and Child Unit are set on the same channel.
- Have one adult speak (from a whisper to a yell) into the microphone on the front of the Child Unit while another checks the volume and the sound LEDs on the Parent Unit. The more noise your baby makes, the more sound lights will illuminate (Figure 1).
- Adjust the volume to a comfortable level for your environment.
- Use the Parent Unit far enough away from the Child Unit so as not to get feedback.
- Do not place the Parent Unit more than 1000' (304.8 m) away from the Child Unit.
- If one channel has poor reception try the other channel.

NOTE: It is possible for the Parent Unit to pick up sounds or interference from other signal producing devices including other audio or video monitors which broadcast in the 900 MHz range. To minimize this potential problem, two independent channels have been provided.

If you experience interference while using one channel setting, simply switch the Parent Unit and Child Unit to another channel. Selecting a channel is usually a one-time adjustment. If interference persists on both channels, please refer to the Troubleshooting section at the end of these instructions.

CAUTION: To protect your privacy, always turn the Child Unit off when not in use. Always remember that you are using public airwaves. Sound may be broadcast to other receiving devices. Conversations, even from rooms near by, may be broadcast.

Troubleshooting

Problem	Possible Cause	Solution
Parent Unit's power indicator does not illuminate	Parent Unit is not turned on	Slide the button on the side of Parent Unit to the on position
	Batteries are dead/ Power is turned off	Make certain that any light switches that control the power flow to the wall outlet are on (when using AC) Make certain that house fuses and circuit breakers are on (when using AC)
	AC Adapter not properly connected	Check AC Adapter jack-to-socket and plug-to-outlet connections
Parent Unit has no sound	Volume not turned up	Adjust the volume control on the Parent Unit
	Channel switches are not on the same setting (I or II)	Check the channel switches on the Child Unit and Parent Unit to confirm they are on the same channel (I or II)
	Signal interference due to monitors, cellular or cordless telephones, etc.	Try the other channel Turn the Child Unit and Parent Unit off, wait a moment then turn them back on
	Out of range	Bring Parent Unit closer to Child Unit
	Child Unit near metal concentration	Test reception by moving the Child Unit to different locations throughout the house
Audio feedback (squealing)	Child Unit is too close to the Parent Unit	Move the Child Unit further away from the Parent Unit
		Lower the volume on the Parent Unit
Parent Unit not functioning or static or power LED is amber	Batteries are low	If amber LED lights or no LED at all, change the batteries
	Wrong AC adapter used	If you are not using batteries, be certain that you are using the correct AC adapter
	Not within 1000' (304.8 m) range	Move closer to the Child Unit
Vibrate feature / talk feature not working	Batteries are low	Change the batteries
	Vibrate not switched to On position / talk button not held down while talking	Turn vibrate On / hold down talk button while you talk; let go to listen
	Not within 1000' (304.8 m) range	Move closer to the Child Unit

NOTE: Do not return this product to the place of purchase. If you are having difficulty using product visit our web site at www.safety1st.com or contact Consumer Relations at (800) 544-1108.

One-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (Quick Connection Two Way Monitor), is free from material and workmanship defects when used under normal conditions for a period of one (1) year from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Relations Department at the address noted below and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse.

This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.