



AnyWear Compact Monitor

08046

 
Model: 08046R(Parent unit)

08046T(Baby unit)

User Guide

Questions? Comments?
Missing Parts? Contact Us:

www.safety1st.com
(800) 544-1108

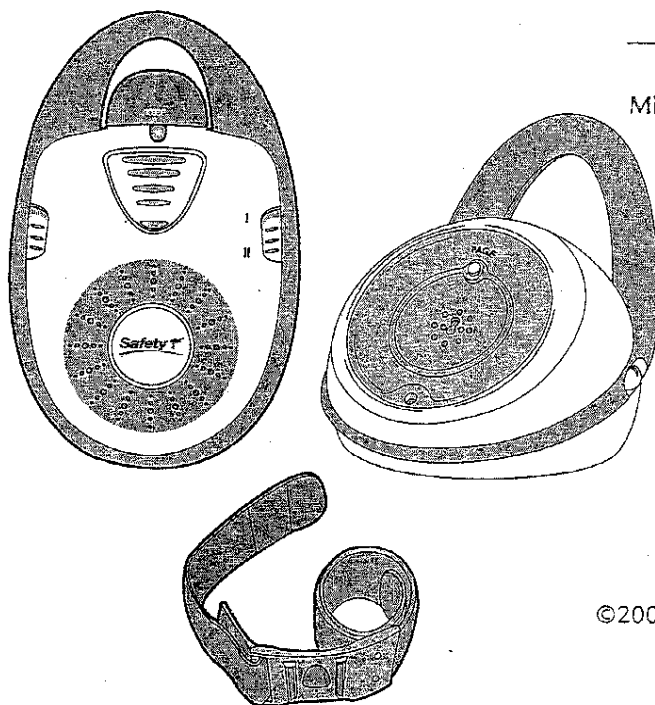

©2004 Dorel Juvenile Group
Made in CHINA
www.safety1st.com
(800) 544-1108

Styles and colors may vary.

Distributed by Dorel Juvenile Group, Inc.,
2525 State Street,
Columbus, IN 47201-7494

In Canada: 12345 Albert-Hudon, Suite 100,
Montreal-N, QC Canada H1G 3K9
09/04 4358-5348

Tel: 781-3643100, Fax: 781-3643835

WARNING

PLEASE READ THE FOLLOWING WARNINGS AND ALL ASSEMBLY INSTRUCTIONS CAREFULLY BEFORE USING THE ANYWEAR COMPACT MONITOR. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

TERMS USED IN WARNINGS: The term "Receiver" corresponds to "Parent's Unit" and the term "Transmitter" corresponds to "Baby's Unit" in the rest of this instruction booklet.

- The AnyWear Compact Monitor is not intended to replace responsible and proper parental supervision.
- Check your child's activity at regular intervals as this monitor will not alert parents to the silent activities of a child.
- Before using your AnyWear Compact Monitor:
 - Read and follow all instructions carefully.
 - Read and observe all warnings on the product and in this instruction booklet.
- To prevent entanglement with the adapter cord, **NEVER** place the cord in or near a crib or playpen. **DO NOT** place the Receiver anywhere its AC adapter cord are within reach of children.
- **ALWAYS** KEEP THE TRANSMITTER, RECEIVER AND AC ADAPTERS OUT OF REACH OF CHILDREN.
- This product is not intended to be used as a medical monitor and its use should not replace adult supervision. It is important that an adult stay within the viewing range of the AnyWear Compact Monitor at all times during use.
- It is essential to check reception regularly. Please see the Testing Reception section for complete instructions.
- The Receiver is intended for indoor use only.
- **NEVER** use the Transmitter or Receiver near water. For example, do not use near a bathtub, bathroom sink, laundry tub, kitchen sink, in a wet basement, etc.
- Always unplug the AC adapters from wall outlets during long periods of non-use.
- Position the Transmitter, Receiver and AC adapters to allow adequate ventilation and prevent these components from overheating.
- To prevent overheating, keep the Transmitter, Receiver and AC adapters away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) which produce heat. Also keep these components out of direct sunlight.
- Use only the AC adapters provided. Use of any other adapters may damage the Transmitter and/or Receiver. Plug the AC adapters into standard household current only (120V AC outlet)! To prevent entanglement and overheating, **DO NOT** use extension cords.
- The AC adapters may become slightly warm to the touch during operation. This is normal.
- Position the AC adapter cords so that they are not walked on or pinched by

items placed upon or against them, paying particular attention to cords at AC adapter plugs, wall plugs, and the point at which the cords attach to the Transmitter and Receiver.

- This product should be serviced only by qualified service personnel at Dorel Juvenile Group when:
 - An AC adapter or its plug is damaged,
 - The Transmitter or Receiver have fallen,
 - Liquid has spilled into the Transmitter or Receiver or
 - The Transmitter or Receiver do not appear to operate normally or exhibit a marked change in performance
- **DO NOT** attempt to service this product beyond that described in the Troubleshooting section at the end of these instructions. All other servicing should be referred to qualified personnel at Dorel Juvenile Group.

NOTE: The LEDs emit IR (infra red) light that is not harmful.

CAUTION

TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER OR BACK OF TRANSMITTER. NO SERVICEABLE PARTS INSIDE. REFER SERVICING TO DOREL JUVENILE GROUP CONSUMER RELATIONS (800) 544-1108.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE. NEVER ATTEMPT TO OPEN THE CASE OF THE PRODUCT. THIS IS DANGEROUS AND WILL VOID THE WARRANTY.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The carrier frequencies for this product are: channel I 906 MHz, channel II 906.6 MHz.
The field strength is less than or equal to 94 dB micro-volts per meter of 3 meters.

RADIO AND TELEVISION INTERFERENCE

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commissions rules.

WARNING: Changes or modifications to this unit not expressly approved by Dorel Juvenile Group could void the user's authority to use the equipment.

Features and Components

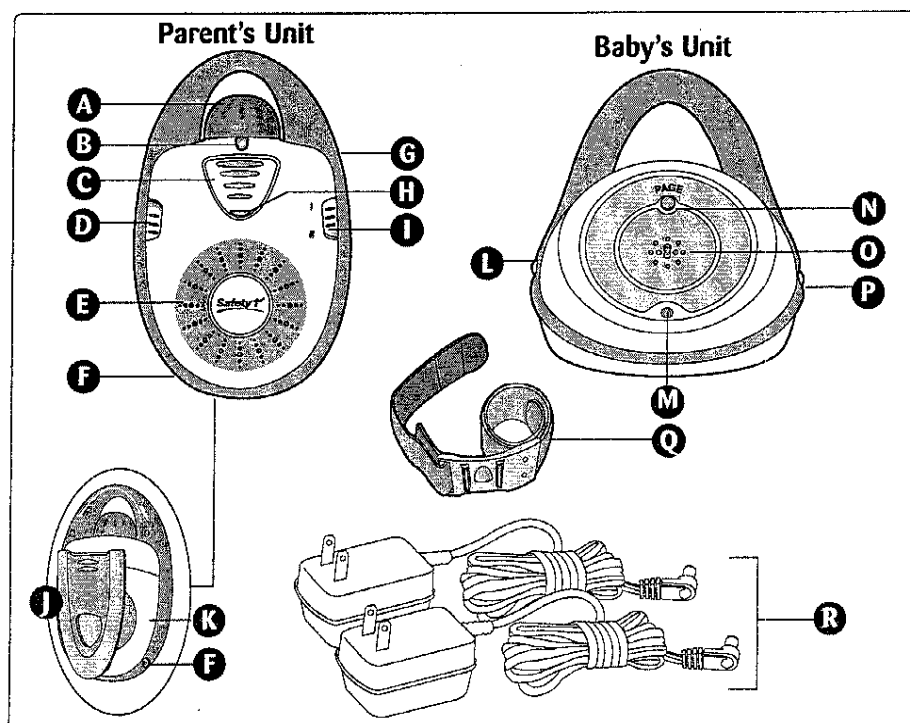

- | | |
|---|---|
| A On/Off Volume Control | J Rotatable Belt Clip |
| B Power On/Low Battery Indicator | K Battery Compartment (batteries not included) |
| C Secure Sound Lights | L Channel Selector |
| D Vibration Switch | M Power On Indicator |
| E Speaker | N Pager Button |
| F AC Port | O Microphone |
| G Headphone Port (headphones not included) | P On/Off Switch |
| H In Range Indicator | Q Arm Band |
| I Channel Selector | R AC Adapter (2) |

Keep These Instructions for Future Use

- Lay out and identify all parts.
- Do not return this product to the place of purchase. If any parts are missing, or if you are having difficulty using product visit our web site at www.safety1st.com. Or call Consumer Relations at (800) 544-1108. Have the model number (08046) and date code (manufacturing date) ready before you call. The date code is located on the bottom of the Parent's Unit and on the back of the Baby's Unit.
- If desired, you can purchase a recharging battery, part number NI-NH750mAh, 3.6V. Request SKU #23-961, available at electronics store such as Radio Shack, or call Consumer Relations for assistance. 3 AAA batteries are required, (not included).

Installing Your AnyWear Compact Monitor

Before You Begin: What to know before you get started:

AC Adapters: The two AC adapters included are not identical. Match the picture on each AC adapter with the Parent's Unit and Baby's Unit.

Choose Locations:

IMPORTANT: When choosing locations to set up the Baby's Units and Parent's Units follow these guidelines:

- For best sound quality and safety, place Baby's Unit 4 to 6' (1.5 to 2 m) away from the baby.
- Be certain the Parent's Unit and Baby's Unit are set on the same channel (both Units are preset on channel 1 when packaged).
- Check reception regularly.
- Adjust the volume to a comfortable level for your environment.
- Use the Parent's Unit far enough away from the Baby's Unit so as not to get feedback.
- During use of the monitor, if the sound quality deteriorates you may be reaching the limits of the monitor's range. If this happens, you will need to move the Parent's Unit in closer proximity to the Baby's Unit.

 
To Set Up the Baby's Unit:

WARNING

- To prevent entanglement, only mount the Baby's Unit in a location where it and its AC adapter cord are **OUT OF REACH OF CHILDREN**.
- **DO NOT** mount the Baby's Unit directly above heating vents, other heat producing sources or in direct sunlight.
- To prevent entanglement and overheating, **NEVER** use an extension cord.

1. Locate the Baby's Unit and its AC adapter. Connect the AC adapter into the bottom of the Baby's Unit (Figure 1). If desired, wrap the excess cord onto the cord shortener provided. Connect the AC adapter into a power outlet. Place the Baby's Unit on a flat surface 4 to 6' (1.5 to 2 m) away from the baby.

CAUTION: DO NOT use an adapter that did not come with this product.

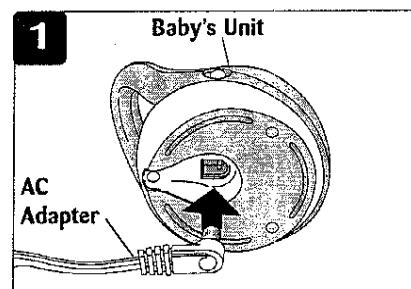

Installing Your AnyWear Compact Monitor

To Set Up the Parent's Unit:

CAUTION

- When using batteries, check batteries regularly. Amber LED indicates the batteries are low. **DO NOT** rely on Parent's Unit when batteries are low.

NOTE: The Parent's Unit may use either the AC adapter or batteries. When plugged in, the AC adapter will be the source of power.

- 2. For AC Power Use:** Locate the Parent's Unit and its AC adapter. Connect the AC adapter into the side of the Parent's Unit. Connect the AC adapter into a power outlet (Figure 2).

CAUTION: DO NOT use an adapter that did not come with this product.

 
 
 
For Battery Use: Rotate belt clip and unscrew the screw at the back of the Parent's Unit (Figure 3). Pull off the battery door.

AAA Batteries: Insert three AAA batteries (see positive and negative diagram on the Parent's Unit).

Rechargeable Batteries: Insert with wires at lower left. Plug connector into port. Tuck wires in (Figure 3a).

Secure the door with the screw.

NOTE: If desired, slide the belt clip over your belt or over the arm band.

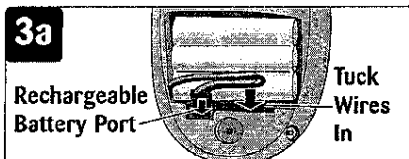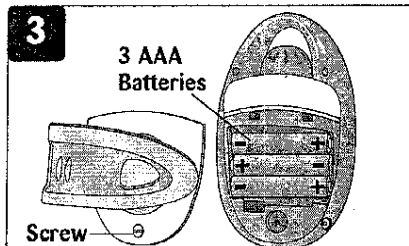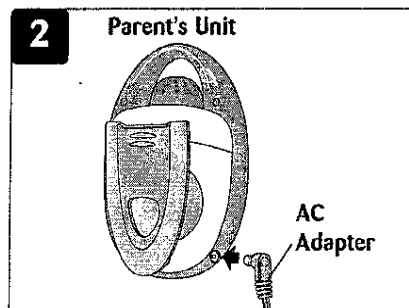

Operating Your AnyWear Compact Monitor

 
To Use the Baby's Unit and Parent's Unit:

- 3.** Turn the Parent's Unit and the Baby's Unit to the **On** position. Choose a channel. Be sure that the same channel is selected on both units (Figure 4).

- 4.** Adjust the volume by turning the knob on the top of the Parent's Unit.

Vibration Feature:

- 5.** The Parent's Unit includes a Vibration feature, which is activated by the noise level of the baby. To turn on the vibration feature, slide the switch to the **On** position.

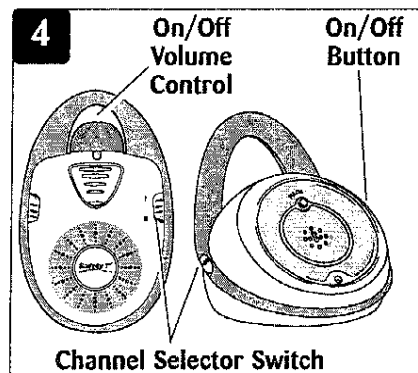

Operating Your AnyWear Compact Monitor

Page Feature:

6. The Page feature on the Baby's Unit causes the Parent's Unit to beep. Use pager to find misplaced Parent's Unit. The pager beep will automatically shut off after a brief period.

Secure Sound Lights:

7. The 4 sound lights on the Parent's Unit indicate the sound level of the baby. The more noise your baby makes, the more sound lights will illuminate.

Headphone, Belt Clip and Arm Band Feature:

8. The AnyWear Compact Monitor comes with a headphone port, belt clip and an arm band, providing many options for hands free use. Belt clip rotates to become a stand so Parent's Unit can stand upright on flat surface.

In Range Indicator Feature:

9. The In Range Indicator feature on the Parent's Unit lets the parent know the quality of the connection between the Parent's and Baby's Units. If the indicator is green, there is a good connection. If the indicator is red, there is a poor connection.

CAUTION: Test the Parent's Unit before each use. It is essential to check reception regularly.

To Test the Reception:

IMPORTANT: The first time you use your Baby's Unit, go through the section "Test the Reception" with two adults.

10. Place the Baby's Unit at least 20' (6 m) away from Parent's Unit. Have an adult speak into the Baby's Unit at various levels (soft to loud) while another adult checks the Parent's Unit for the proper sound and reception. Try the Parent's Unit in every location that it will be used. It is best to follow these guidelines for good reception:

Guidelines for Good Reception:

- Place your Baby's Unit 4 to 6' (1.5 to 2 m) away from the baby.
- Be certain the Parent's Unit and Baby's Unit are set on the same channel.
- Check reception regularly by following step 10 above.
- Adjust the volume to a comfortable level for your environment.
- Use the Parent's Unit far enough away from the Baby's Unit so as not to get feedback.
- During use of the monitor, if the sound quality deteriorates you may be reaching the limits of the monitor's range. If this happens, you will need to move the Parent's Unit in closer proximity to the Baby's Unit.
- If one channel has poor reception try the other channel.

NOTE: It is possible for the Parent's Unit to pick up sounds or interference from other signal producing devices including other audio or video monitors which broadcast in the 900 MHz range. To minimize this potential problem, two independent channels have been provided.

If you experience interference while using one channel setting, simply switch the Parent's Unit and Baby's Unit to another channel. Selecting a channel is usually a one-time adjustment. If interference persists on both channels, please refer to the Troubleshooting section at the end of these instructions.

CAUTION: To protect your privacy, always turn the Baby's Unit off when not in use. Always remember that you are using public airwaves. Sound may be broadcast to other receiving devices. Conversations, even from rooms near by, may be broadcast.

Troubleshooting

Problem	Possible Cause	Solution
Parent's Unit power indicator does not illuminate	Parent's Unit is not turned on	Slide the button on the side of Parent's Unit to the on position
	Batteries are dead/ Power is turned off	Make certain that any light switches that control the power flow to the wall outlet are on (when using AC) Make certain that house fuses and circuit breakers are on (when using AC)
	AC Adapter not properly connected	Check AC Adapter jack-to-socket and plug-to-outlet connections
Power/low battery indicator is amber	Batteries are low	Replace batteries
Parent's Unit has no sound or static	Volume not turned up	Adjust the volume control on the Parent's Unit
	Channel switches are not on the same setting (I or II)	Check the channel switches on the Baby's Unit and Parent's Unit to confirm they are on the same channel (I or II)
	Signal interference due to monitors, cellular or cordless telephones, etc.	Try the other channel Turn the Baby's Unit and Parent's Unit off, wait a moment then turn them back on
	Out of range	Bring Parent's Unit closer to Baby's Unit
Audio feedback (squealing)	Baby's Unit is too close to the Parent's Unit	Move the Baby's Unit further away from the Parent's Unit
		Lower the volume on the Parent's Unit
Vibrate feature not working	Batteries are low	Replace batteries
	Vibrate not switched to On position	Turn vibrate On
	Out of range	Move closer to the Baby's Unit
Page feature not working	Batteries are low	Replace batteries
	Page button not pressed	Hold down page button
	Out of range	Operate Parent's Unit closer to the Baby's Unit

NOTE: Do not return this product to the place of purchase. If you are having difficulty using product visit our web site at www.safety1st.com or contact Consumer Relations at (800) 544-1108.

One-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (AnyWear Compact Monitor), is free from material and workmanship defects when used under normal conditions for a period of one (1) year from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Relations Department at the address noted on front page and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse.

This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.