

OWNER'S MANUAL (DRAFT)

Operating instructions for this system, named Engine Immobilizer System, will be contained in the owner's manual of the vehicle and its contents will be as follows:

ENGINE IMMOBILIZER SYSTEM

The engine immobilizer system is a theft prevention system. When you insert the key in the ignition switch, the transponder chip in the key's head transmits an electronic code to the vehicle. The engine will start, only when the electronic code in the chip corresponds to the registered ID code for the vehicle.

The system is automatically set when the key is removed from the ignition switch. Inserting the registered key in the ignition switch automatically cancels the system, which enables the engine to start.

For your Toyota dealer to make you a new key with build-in transponder chip, your dealer will need your key number and master key. However, there is a limit to the number of additional keys your Toyota dealer can make for you.

If you make your own duplicate key, you will not be able to cancel the system or start the engine.

For vehicles sold in U.S.A.

FCC ID: MOZ RI-9BTY-1
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference,
and (2) this device must accept any interference
received, including interference that may cause
undesired operation.

CAUTION

Changes or modifications not expressly approved by
the party responsible for compliance could void the
user's authority to operate the equipment.

For vehicles sold in Canada

This device complies with RSS-210 of industry
Canada.
Operation is subject to the following two conditions:
(1) this device may not cause interference, and (2)
this device must accept any interference, including
interference that may cause undesired operation of
the device.