

Use Modes	Mode of Operation	Explanation	Frequency of Transmission
Consumer	Normal	Transmitter in normal operation – wheel is rotating.	8 packets every minute
Consumer	Stationary	Transmitter enters mode when wheel is not rotating. Vehicle is stopped.	8 packets every 60 minutes.
Consumer	Alert	Transmitter enters this mode when a 0.8PSi change in pressure is detected.	8 Packets every 15 seconds while pressure continues to change.
Factory/Setup	Normal	Activated with 125 kHz signal	40 packets per initiation.