



REPUBLIC OF  
GAMERS

Q15092

# QUICK START GUIDE

ROG Rapture GT-AC2900 Dual-band Gaming Router

ASUS

**Table of contents**

Package contents ..... 3

A quick look at your router ..... 3

Preparing your modem..... 4

Setting up your router ..... 5

    A. Wired connection .....5

    B. Wireless connection .....6

Remembering your wireless router settings ..... 8

FAQ ..... 8

Networks Global Hotline Information .....80

**This QSG contains these languages:**

|            |           |
|------------|-----------|
| English    | Ελληνικά  |
| Dansk      | Italiano  |
| Nederlands | Norsk     |
| Français   | Português |
| Suomi      | Español   |
| Deutsch    | Svenska   |

 
## Package contents

- |                                                                              |                                                           |
|------------------------------------------------------------------------------|-----------------------------------------------------------|
| <input checked="" type="checkbox"/> GT-AC2900 Wireless Router                | <input checked="" type="checkbox"/> 3 * wireless antennas |
| <input checked="" type="checkbox"/> AC adapter                               | <input checked="" type="checkbox"/> Network cable (RJ-45) |
| <input checked="" type="checkbox"/> Wall mounting / standing dual usage base | <input checked="" type="checkbox"/> 1 * Screwdriver       |
| <input checked="" type="checkbox"/> Quick Start Guide                        |                                                           |



**NOTE:** If any of the items is damaged or missing, contact your retailer.

## A quick look at your router

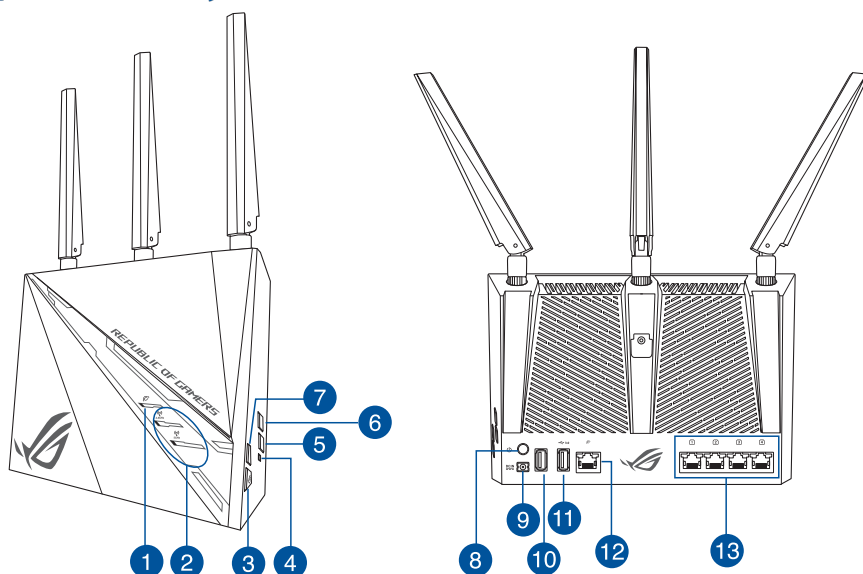


|                            |                         |
|----------------------------|-------------------------|
| 1. WAN (Internet) LED      | 8. Power button         |
| 2. 2.4GHz / 5GHz Wi-Fi LED | 9. Power (DC-IN) port   |
| 3. ROG Boost Key           | 10. USB 2.0 port        |
| 4. Reset button            | 11. USB 3.0 port        |
| 5. Wi-Fi On/Off button     | 12. WAN (Internet) port |
| 6. WPS button              | 13. LAN ports           |
| 7. LED On/Off button       |                         |


## Preparing your modem

 1. **Unplug the power cable/DSL modem. If it has a battery backup, remove the battery.**


**NOTE:** If you are using DSL for Internet, you will need your username/password from your Internet Service Provider (ISP) to properly configure the router.

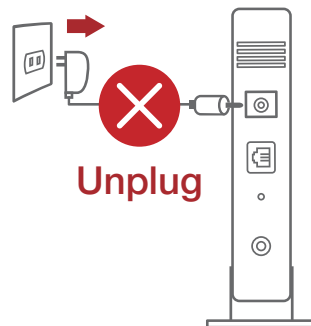

 2. **Connect your modem to the router with the bundled network cable.**

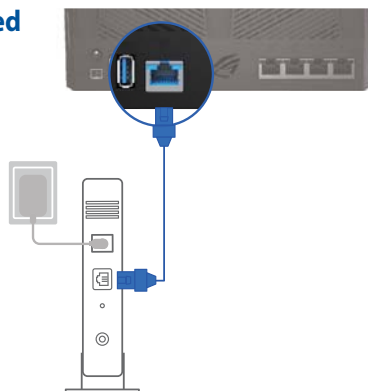

 3. **Power on your cable/DSL modem.**
4. **Check your cable/DSL modem LED lights to ensure the connection is active.**

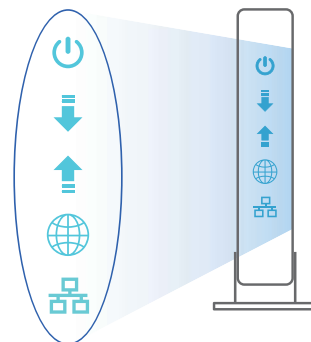


## Setting up your router

You can set up your router via wired or wireless connection.

### A. Wired connection

 1. Plug your router into a power outlet and power it on. Connect the network cable from your computer to a LAN port on your router.

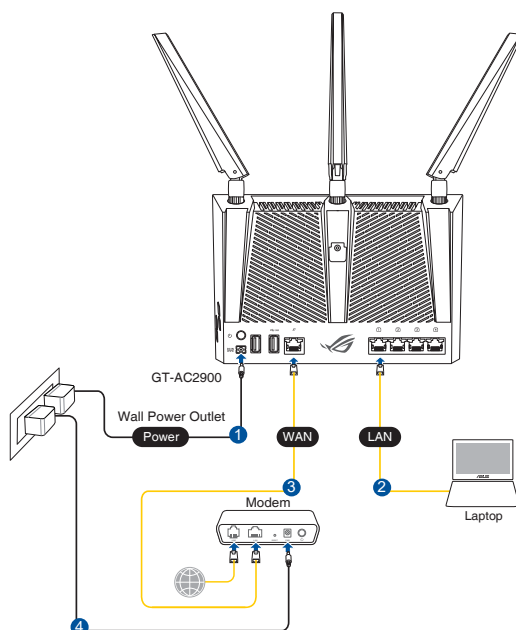

### NOTES:

- Use only the adapter that came with your package. Using other adapters may damage the device.
- **Specifications:**

|                              |                                         |         |        |
|------------------------------|-----------------------------------------|---------|--------|
| <b>DC Power adapter</b>      | DC Output: +19V with max. 1.75A current |         |        |
| <b>Operating Temperature</b> | 0~40°C                                  | Storage | 0~70°C |
| <b>Operating Humidity</b>    | 50~90%                                  | Storage | 20~90% |

2. The web GUI launches automatically when you open a web browser. If it does not auto-launch, enter <http://router.asus.com>
3. Set up a password for your router to prevent unauthorized access.

 
**Login Information Setup**

Change the router password to prevent unauthorized access to your ASUS wireless router.

|                   |                                                                 |
|-------------------|-----------------------------------------------------------------|
| Router Login Name | <input type="text" value="admin"/>                              |
| New Password      | <input type="password"/>                                        |
| Retype Password   | <input type="password"/> <input type="checkbox"/> Show password |

## B. Wireless connection

1. Plug your router into a power outlet and power it on.

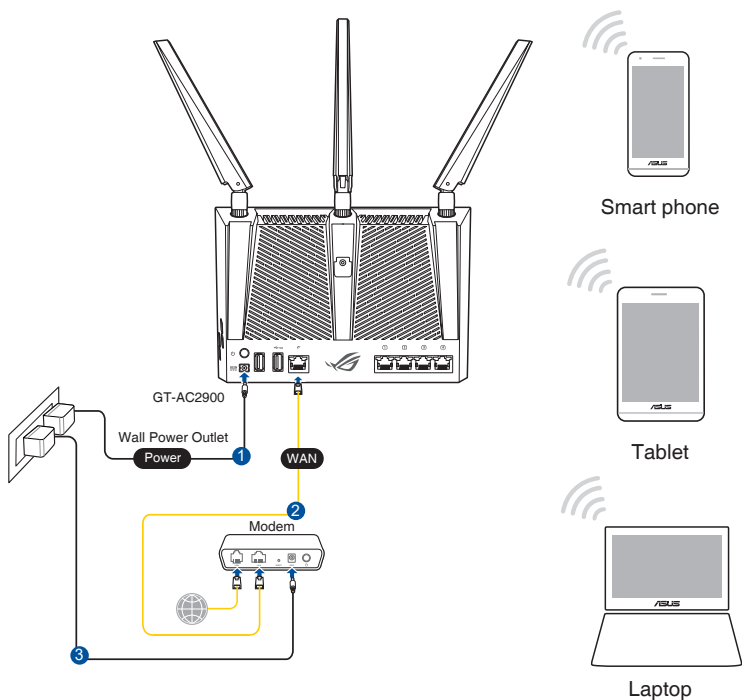

2. **Connect to the network name(SSID) shown on the product label on the bottom side of the router. For better network security, change to a unique SSID and assign a password.**



|                         |            |
|-------------------------|------------|
| 2.4G Wi-Fi Name (SSID): | ASUS_XX_2G |
| 5G Wi-Fi Name (SSID):   | ASUS_XX_5G |

- \* **XX** refers to the last two digits of 2.4GHz MAC address. You can find it on the label at the bottom of your router.

3. **Once connected, the web GUI launches automatically when you open a web browser. If it does not auto-launch, enter <http://router.asus.com>.**
4. **Set up a password for your router to prevent unauthorized access.**

**Login Information Setup**

Change the router password to prevent unauthorized access to your ASUS wireless router.

|                   |                                                                 |
|-------------------|-----------------------------------------------------------------|
| Router Login Name | <input type="text" value="admin"/>                              |
| New Password      | <input type="password"/>                                        |
| Retype Password   | <input type="password"/> <input type="checkbox"/> Show password |

## Remembering your wireless router settings

- Remember your wireless settings as you complete the router setup.

|                       |           |
|-----------------------|-----------|
| Router Name:          | Password: |
| 2.4 GHz network SSID: | Password: |
| 5GHz network SSID:    | Password: |

## FAQ

1. Where can I find more information about the wireless router?
  - Online FAQ site: <http://support.asus.com/faq>
  - Technical support site: <http://support.asus.com>
  - Customer hotline: refer to the Support Hotline section in this Quick Start Guide

## ASUS Recycling/Takeback Services

ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment. We believe in providing solutions for you to be able to responsibly recycle our products, batteries, other components, as well as the packaging materials. Please go to <http://csr.asus.com/english/Takeback.htm> for the detailed recycling information in different regions.

## REACH

Complying with the REACH (Registration, Evaluation, Authorisation, and Restriction of Chemicals) regulatory framework, we published the chemical substances in our products at ASUS REACH website at <http://csr.asus.com/english/REACH.htm>

## Federal Communications Commission Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



---

**WARNING!** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

## Prohibition of Co-location

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

### IMPORTANT NOTE:

**Radiation Exposure Statement:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC exposure compliance requirement, please follow operation instruction as documented in this manual.

## Declaration of Conformity for R&TTE directive 1999/5/EC

Essential requirements – Article 3

Protection requirements for health and safety – Article 3.1a

Testing for electric safety according to EN 60950-1 has been conducted. These are considered relevant and sufficient.

Protection requirements for electromagnetic compatibility – Article 3.1b

Testing for electromagnetic compatibility according to EN 301 489-1 and EN 301 489-17 has been conducted. These are considered relevant and sufficient.

Effective use of the radio spectrum – Article 3.2

Testing for radio test suites according to EN 300 328- 2 has been conducted. These are considered relevant and sufficient.

## Declaration of Conformity for Ecodesign directive 2009/125/EC

Testing for eco-design requirements according to (EC) No 1275/2008 and (EU) No 801/2013 has been conducted. When the device is in Networked Standby Mode, its I/O and network interface are in sleep mode and may not work properly. To wake up the device, press the Wi-Fi on/off, LED on/off, reset, or WPS button.

## CE Mark Warning

This is a Class B product, in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. Operation Channels: CH1~11 for N. America; Ch1~13 for Japan; CH1~13 for Europe (ETSI)

This equipment may be operated in AT, BE, CY, CZ, DK, EE, FI, FR, DE, GR, HU, IE, IT, LU, MT, NL, PL, PT, SK, SL, ES, SE, GB, IS, LI, NO, CH, BG, RO, RT.

## Canada, Industry Canada (IC) Notices

This Class B digital apparatus complies with Canadian ICES-003 and RSS-210.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Radio Frequency (RF) Exposure Information

The radiated output power of the ASUS Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The ASUS Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has been evaluated for and shown compliant with the IC Specific Absorption Rate ("SAR") limits when installed in specific host products operated in portable exposure conditions (antennas are less than 20 centimeters of a person's body).

This device has been certified for use in Canada. Status of the listing in the Industry Canada's REL (Radio Equipment List) can be found at the following web address:

<http://www.ic.gc.ca/app/sitt/reitel/srch/nwRdSrch.do?lang=eng>

Additional Canadian information on RF exposure also can be found at the following web:

<http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf08792.html>

## Canada, avis d'Industry Canada (IC)

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210.

Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

## Informations concernant l'exposition aux fréquences radio (RF)

La puissance de sortie émise par l'appareil de sans fil ASUS est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Utilisez l'appareil de sans fil ASUS de façon à minimiser les contacts humains lors du fonctionnement normal.

Ce périphérique a été évalué et démontré conforme aux limites SAR (Spécifique Absorption Rate – Taux d'absorption spécifique) d'IC lorsqu'il est installé dans des produits hôtes particuliers qui fonctionnent dans des conditions d'exposition à des appareils portables (les antennes se situent à moins de 20 centimètres du corps d'une personne).

Ce périphérique est homologué pour l'utilisation au Canada. Pour consulter l'entrée correspondant à l'appareil dans la liste d'équipement radio (REL - Radio Equipment List) d'Industry Canada rendez-vous sur:

<http://www.ic.gc.ca/app/sitt/reletel/srch/nwRdSrch.do?lang=eng>

Pour des informations supplémentaires concernant l'exposition aux RF au Canada rendez-vous sur:

<http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf08792.html>

## Safety Notices

- Use this product in environments with ambient temperatures between 0°C(32°F) and 40°C(104°F).
- Refer to the rating label on the bottom of your product and ensure your power adapter complies with this rating.
- DO NOT place on uneven or unstable work surfaces. Seek servicing if the casing has been damaged.
- DO NOT place or drop objects on top and do not shove any foreign objects into the product.
- DO NOT expose to or use near liquids, rain, or moisture. DO NOT use the modem during electrical storms.
- DO NOT cover the vents on the product to prevent the system from getting overheated.
- DO NOT use damaged power cords, accessories, or other peripherals.
- If the Adapter is broken, do not try to fix it by yourself. Contact a qualified service technician or your retailer.
- To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.

NCC 警語

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

「產品之限用物質含有情況」之相關資訊，請參考下表：

| 單元                                  | 限用物質及其化學符號 |           |           |                            |               |                 |
|-------------------------------------|------------|-----------|-----------|----------------------------|---------------|-----------------|
|                                     | 鉛<br>(Pb)  | 汞<br>(Hg) | 鎘<br>(Cd) | 六價鉻<br>(Cr <sup>6+</sup> ) | 多溴聯苯<br>(PBB) | 多溴二苯醚<br>(PBDE) |
| 印刷電路板及電子組件                          | -          | ○         | ○         | ○                          | ○             | ○               |
| 結構組件（金屬 / 塑膠）                       | ○          | ○         | ○         | ○                          | ○             | ○               |
| 其他組件（如天線/ 指示燈/連接線）                  | ○          | ○         | ○         | ○                          | ○             | ○               |
| 其他及其配件（如電源供應器）                      | -          | ○         | ○         | ○                          | ○             | ○               |
| 備考1. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 |            |           |           |                            |               |                 |
| 備考2. “-” 係指該項限用物質為排除項目。             |            |           |           |                            |               |                 |

DFS 警語

操作在 5.15-5.35/5.47-5.85GHz 之無線資訊傳輸設備 (802.11a/ac 產品)，應避免影響附近雷達系統之操作。

MPE

本產品電磁波曝露量 (MPE) 標準值 1mW/cm<sup>2</sup>，送測產品實測值為 0.32982mW/cm<sup>2</sup>，建議使用時至少距離人體 20cm。

安全說明：

- 請在溫度為 0° C (32° F) 至 40° C (104° F) 之間的環境中使用本產品。
- 請依照產品上的電源功率貼紙說明使用正確的電源變壓器，如果使用錯誤規格的電源變壓器有可能會造成內部零件的損毀。
- 請勿將產品放置於不平坦或不穩定的表面，若產品的機殼毀損，請聯絡維修服務人員。
- 請勿在產品上放置其他物品，請勿將任何物品塞入產品內，以避免引起元件短路或電路損毀。
- 請保持機器在乾燥的環境下使用，雨水、溼氣、液體等含有礦物質將會腐蝕電子線路，請勿在雷電天氣下使用數據機。
- 請勿堵塞產品的通風孔，以避免因散熱不良而導致系統過熱。
- 請勿使用破損的電源線、附件或其他周邊產品。
- 如果電源已毀損，請不要嘗試自行修復，請將其交給專業技術服務人員或經銷商來處理。
- 為了防止電擊風險，在搬動主機之前，請先將電源線插頭暫時從電源插座上拔除。



电子电气产品有害物质限制使用标识要求：图中之数字为产品之环保使用期限。仅指电子电气产品中含有的有害物质不致发生外泄或突变从而对环境造成污染或对人身、财产造成严重损害的期限。

产品中有害物质的名称及含量

| 部件名称                                                                                                                                                                                                           | 有害物质  |       |       |                 |               |                 |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|-------|-------|-----------------|---------------|-----------------|
|                                                                                                                                                                                                                | 铅(Pb) | 汞(Hg) | 镉(Cd) | 六价铬<br>(Cr(VI)) | 多溴联苯<br>(PBB) | 多溴二苯醚<br>(PBDE) |
| 印刷电路板及其电子组件                                                                                                                                                                                                    | ×     | ○     | ○     | ○               | ○             | ○               |
| 外壳                                                                                                                                                                                                             | ○     | ○     | ○     | ○               | ○             | ○               |
| 电源适配器                                                                                                                                                                                                          | ×     | ○     | ○     | ○               | ○             | ○               |
| 外部信号连接头及线材                                                                                                                                                                                                     | ×     | ○     | ○     | ○               | ○             | ○               |
| 中央处理器与内存                                                                                                                                                                                                       | ×     | ○     | ○     | ○               | ○             | ○               |
| <p>本表格依据 SJ/T 11364 的规定编制。</p> <p>○：表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。</p> <p>×：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求，然该部件仍符合欧盟指令 2011/65/EU 的规范。</p> <p>备注：此产品所标示之环保使用期限，系指在一般正常使用状况下。</p> |       |       |       |                 |               |                 |

#### 安全说明：

- 请在温度为 0° C (32° F) 至 40° C (104° F) 之间的环境中使用本产品。
- 请依照产品上的电源功率贴纸说明使用正确的电源适配器，如果试用错误规格的电源适配器可能会造成内部零件的损坏。
- 请勿将产品放置于不平坦或不稳定的表面，若产品的外壳损坏，请联系维修服务人员。
- 请勿在产品上放置其他物品，请勿将任何物品塞入产品内，以避免引起组件短路或电路损坏。
- 请保持机器在干燥的环境下使用，雨水、湿气、液体等含有矿物质会腐蚀电子线路，请勿在雷电天气下使用调制解调器。
- 请勿堵塞产品的通风孔，以避免因散热不良而导致系统过热。
- 请勿使用破损的电源线、附件或其他周边产品。
- 如果电源已损坏，请不要尝试自行修复，请将其交给专业技术服务人员或经销商来处理。
- 为了防止电击风险，在搬动主机前，请先将电源线插头暂时从电源插座上拔除。

# Networks Global Hotline Information

| Region | Country                    | Hotline Number                          | Service Hours                              |
|--------|----------------------------|-----------------------------------------|--------------------------------------------|
| Europe | Cyprus                     | 800-92491                               | 09:00-13:00;<br>14:00-18:00 Mon-Fri        |
|        | France                     | 0033-170949400                          | 09:00-18:00 Mon-Fri                        |
|        | Germany                    | 0049-1805010920                         | 09:00-18:00 Mon-Fri<br>10:00-17:00 Mon-Fri |
|        |                            | 0049-1805010923<br>(component support ) |                                            |
|        |                            | 0049-2102959911 (Fax)                   |                                            |
|        | Hungary                    | 0036-15054561                           | 09:00-17:30 Mon-Fri                        |
|        | Italy                      | 199-400089                              | 09:00-13:00 ;<br>14:00-18:00 Mon-Fri       |
|        | Greece                     | 00800-44142044                          | 09:00-13:00 ;<br>14:00-18:00 Mon-Fri       |
|        | Austria                    | 0043-820240513                          | 09:00-18:00 Mon-Fri                        |
|        | Netherlands/<br>Luxembourg | 0031-591570290                          | 09:00-17:00 Mon-Fri                        |
|        | Belgium                    | 0032-78150231                           | 09:00-17:00 Mon-Fri                        |
|        | Norway                     | 0047-2316-2682                          | 09:00-18:00 Mon-Fri                        |
|        | Sweden                     | +46-858769407                           | 09:00-18:00 Mon-Fri                        |
|        | Finland                    | 00358-969379690                         | 10:00-19:00 Mon-Fri                        |
|        | Denmark                    | 0045-38322943                           | 09:00-18:00 Mon-Fri                        |
|        | Poland                     | 0048-225718040                          | 08:30-17:30 Mon-Fri                        |
|        | Spain                      | 0034-902889688                          | 09:00-18:00 Mon-Fri                        |
|        | Portugal                   | 00351-707500310                         | 09:00-18:00 Mon-Fri                        |
|        | Slovak Republic            | 00421-232162621                         | 08:00-17:00 Mon-Fri                        |
|        | Czech Republic             | 00420-596766888                         | 08:00-17:00 Mon-Fri                        |
|        | Switzerland-German         | 0041-848111010                          | 09:00-18:00 Mon-Fri                        |
|        | Switzerland-French         | 0041-848111014                          | 09:00-18:00 Mon-Fri                        |
|        | Switzerland-Italian        | 0041-848111012                          | 09:00-18:00 Mon-Fri                        |
|        | United Kingdom             | 0044-1442265548                         | 09:00-17:00 Mon-Fri                        |
|        | Ireland                    | 0035-31890719918                        | 09:00-17:00 Mon-Fri                        |
|        | Russia and CIS             | 008-800-100-ASUS                        | 09:00-18:00 Mon-Fri                        |
|        | Ukraine                    | 0038-0445457727                         | 09:00-18:00 Mon-Fri                        |

# Networks Global Hotline Information

| Region       | Country     | Hotline Numbers                        | Service Hours           |
|--------------|-------------|----------------------------------------|-------------------------|
| Asia-Pacific | Australia   | 1300-278788                            | 09:00-18:00 Mon-Fri     |
|              | New Zealand | 0800-278788                            | 09:00-18:00 Mon-Fri     |
|              | Japan       | 0800-1232787                           | 09:00-18:00 Mon-Fri     |
|              |             |                                        | 09:00-17:00 Sat-Sun     |
|              |             | 0081-570783886<br>(Non-Toll Free)      | 09:00-18:00 Mon-Fri     |
|              | Korea       |                                        | 09:00-17:00 Sat-Sun     |
|              |             | 0082-215666868                         | 09:30-17:00 Mon-Fri     |
|              | Thailand    |                                        | 09:00-18:00 Mon-Fri     |
|              |             | 0066-24011717<br>1800-8525201          |                         |
|              | Singapore   |                                        | 11:00-19:00 Mon-Fri     |
|              |             | 0065-64157917                          | 11:00-19:00 Mon-Fri     |
|              |             | 0065-67203835<br>(Repair Status Only)  | 11:00-13:00 Sat         |
|              | Malaysia    | 1300-88-3495                           | 9:00-18:00 Mon-Fri      |
|              | Philippine  | 1800-18550163                          | 09:00-18:00 Mon-Fri     |
|              | India       |                                        | 09:00-18:00 Mon-Sat     |
|              |             | 1800-2090365                           | 09:00-21:00 Mon-Sun     |
| Americas     | Indonesia   |                                        | 09:30-17:00 Mon-Fri     |
|              |             | 0062-2129495000<br>500128 (Local Only) | 9:30 – 12:00 Sat        |
|              | Vietnam     |                                        | 08:00-12:00             |
|              |             | 1900-555581                            | 13:30-17:30 Mon-Sat     |
|              | Hong Kong   | 00852-35824770                         | 10:00-19:00 Mon-Sat     |
|              | USA         |                                        | 8:30-12:00 EST Mon-Fri  |
|              | Canada      | 1-812-282-2787                         | 9:00-18:00 EST Sat-Sun  |
|              | Mexico      |                                        | 08:00-20:00 CST Mon-Fri |
|              |             | 001-8008367847                         | 08:00-15:00 CST Sat     |

# Networks Global Hotline Information

| Region               | Country            | Hotline Numbers      | Service Hours       |
|----------------------|--------------------|----------------------|---------------------|
| Middle East + Africa | Egypt              | 800-2787349          | 09:00-18:00 Sun-Thu |
|                      | Saudi Arabia       | 800-1212787          | 09:00-18:00 Sat-Wed |
|                      | UAE                | 00971-42958941       | 09:00-18:00 Sun-Thu |
|                      | Turkey             | 0090-2165243000      | 09:00-18:00 Mon-Fri |
|                      | South Africa       | 0861-278772          | 08:00-17:00 Mon-Fri |
|                      | Israel             | *6557/00972-39142800 | 08:00-17:00 Sun-Thu |
|                      |                    | *9770/00972-35598555 | 08:30-17:30 Sun-Thu |
| Balkan Countries     | Romania            | 0040-213301786       | 09:00-18:30 Mon-Fri |
|                      | Bosnia Herzegovina | 00387-33773163       | 09:00-17:00 Mon-Fri |
|                      | Bulgaria           | 00359-70014411       | 09:30-18:30 Mon-Fri |
|                      |                    | 00359-29889170       | 09:30-18:00 Mon-Fri |
|                      | Croatia            | 00385-16401111       | 09:00-17:00 Mon-Fri |
|                      | Montenegro         | 00382-20608251       | 09:00-17:00 Mon-Fri |
|                      | Serbia             | 00381-112070677      | 09:00-17:00 Mon-Fri |
|                      |                    | 00368-59045400       | 08:00-16:00 Mon-Fri |
| Baltic Countries     | Slovenia           | 00368-59045401       | 08:00-16:00 Mon-Fri |
|                      |                    | 00372-6671796        | 09:00-18:00 Mon-Fri |
|                      | Estonia            | 00371-67408838       | 09:00-18:00 Mon-Fri |
|                      | Latvia             | 00370-37329000       | 09:00-18:00 Mon-Fri |
|                      | Lithuania-Kaunas   | 00370-522101160      | 09:00-18:00 Mon-Fri |
|                      | Lithuania-Vilnius  |                      |                     |

NOTES:

- UK support e-mail: **network support uk@asus.com**
- For more information, visit the ASUS support site at: **<https://www.asus.com/support>**

The image features the ASUS logo in a light gray, sans-serif font, centered horizontally. The background is a dark, textured surface with a diagonal line of bright orange light running from the bottom left towards the right. The overall aesthetic is sleek and modern.

ASUS