

Model: RT-AC68U V3
FCC ID: MSQ-RTACIB00
IC ID: 3568A-RTACIB00



ASUS Input: 12V \equiv 2.5A
Wireless-AC1900 Dual Band Gigabit Router
Model: RT-AC68U V3 ASUSTek Computer Inc

Factory default setting:
(a) <http://router.asus.com>
(b) User name: admin / Password: admin
(c) 2.4GHz SSID : ASUS / 5GHz SSID : ASUS_5G

Guide to RT-AC68U buttons:
(a) **WPS button:** Press to setup Wi-Fi connection with other wireless devices.
(b) **Reset button:** Press to restore the system to factory default settings.
(c) **Wi-Fi on/off button:** Press to turn on /off the Wi-Fi connection.
(d) **LED on/off:** Press to turn on/off the LEDs.

① (a) (b) (c) (d)

① ② ③ ④

FC **ASUS**
RT-AC68U V3
FCC ID: MSQ-RTACIB00
IC: 3568A-RTACIB00
CAN ICES-3 (B)/NMB-3(B)

ASUSTEK COMPUTER INC.
1F., No. 15, Lida Rd.,
Beihou Dist., Taipei City
112, Taiwan

ASUS COMPUTER GmbH
HARKORT STR. 21-23, 40880
RATINGEN, GERMANY

ASUS Computer International
(America)
48720 Kato Rd., Fremont,
California 94538, USA
Tel: +1-510-739-3777
Fax: +1-510-608-4505
<http://usa.asus.com>

LED on/off

148000188400MA5 R01 XXX