 



Quick Start Guide

RT-BE58 Go
BE3600 Dual Band WiFi Router

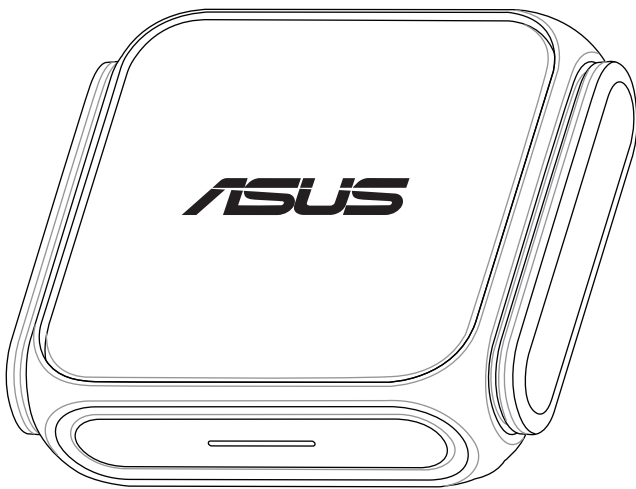


Hardware Explanations

 I/O Ports Overview

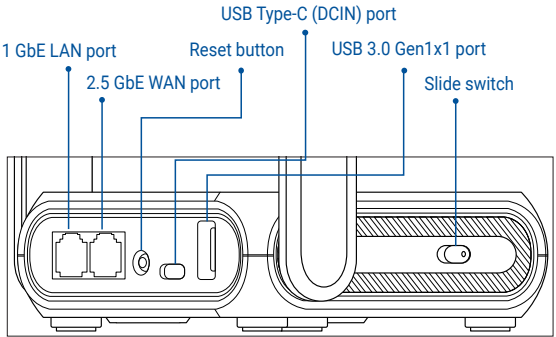

LED Lights Overview

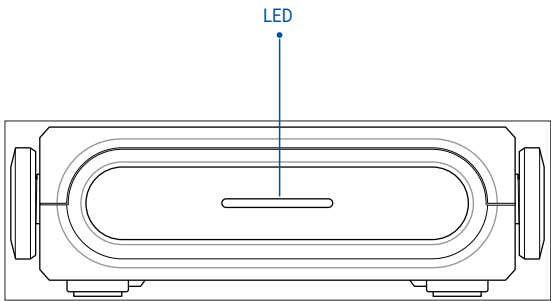 

Specifications:

DC Power adapter	DC Output: +12V with 2A current		
Operating Temperature	0~40°C	Storage	0~70°C
Operating Humidity	50~90%	Storage	20~90%

LED indications

 
 
 
- Breathing green:** Your RT-BE58 Go is starting up
- Solid blue (Standby):** Your RT-BE58 Go is ready for setup
- Solid white:** Your RT-BE58 Go has connected to Internet
- Solid red:** Your RT-BE58 Go has disconnected from Internet
- Breathing blue:** Your RT-BE58 Go is connecting to a public WiFi (WISP mode)
- Blinking yellow:** Your RT-BE58 Go is resetting to factory defaults

Router Setup Steps



01 Prepare your Modem

- 1 Unplug the power of cable / DSL modem. If it has a battery backup, remove the battery.
- 2 Connect your modem to WAN port at the back side of the router with the network cable provided.
- 3 Power on the modem. Plug modem to the power outlet and power on.
- 4 Check the modem LED lights to ensure the connection is active.

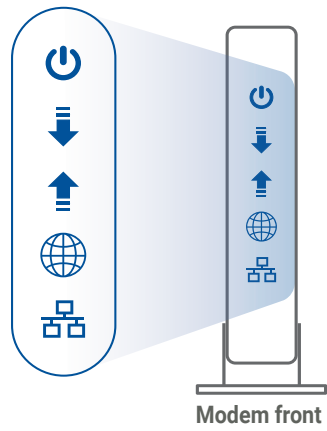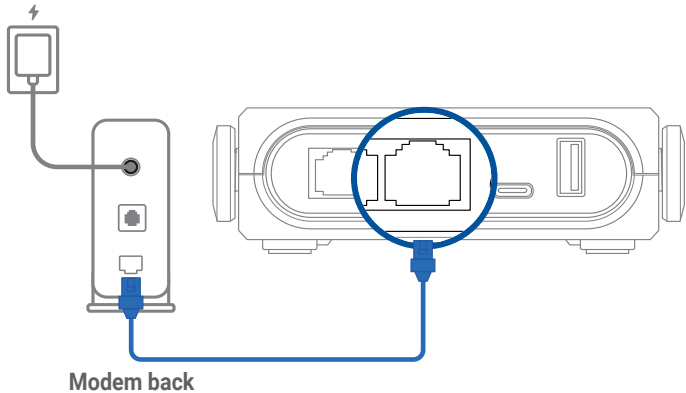
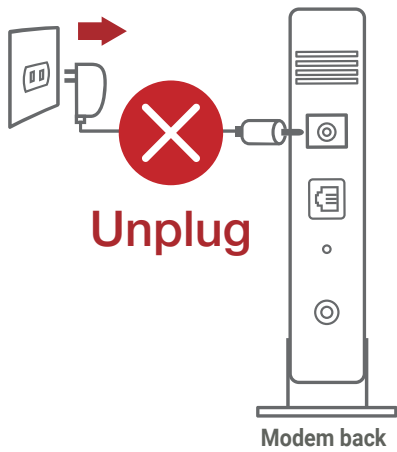


- 1 If you are using DSL for internet, you will need your username / password from your Internet service provider (ISP) to properly configure your router.




02 Install your Router

  - 1 Plug the adapter into the DCIN port.
- 2 The LED will light up when the hardware is ready.

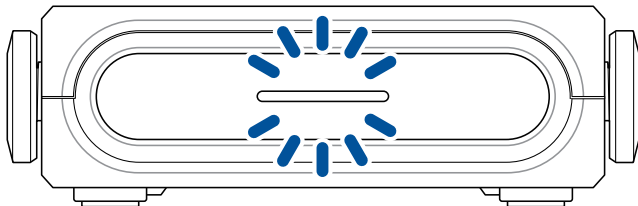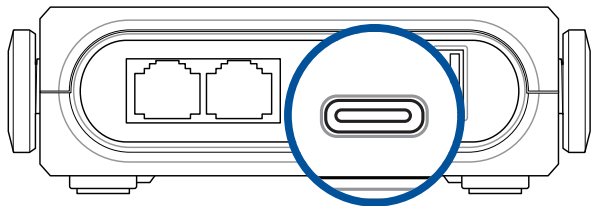


– Via app

 - 3 **[App]** On your iOS or Android mobile device, go to the app store, search for **ASUS Router**, and download the app.
- 4 **[App]** On your iOS or Android mobile device, tap **Settings > Wi-Fi**, connect to the default network SSID shown on the product label on the bottom of the router. Or scan the code on the product label to connect the default network SSID.
- 5 **[App]** Launch **ASUS Router** app and follow the instructions to complete the setup.

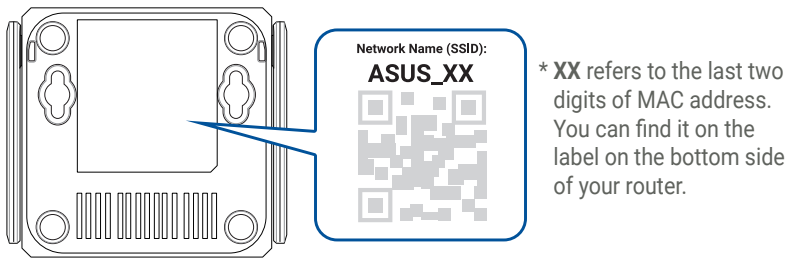

 * XX refers to the last two digits of MAC address. You can find it on the label on the bottom side of your router.

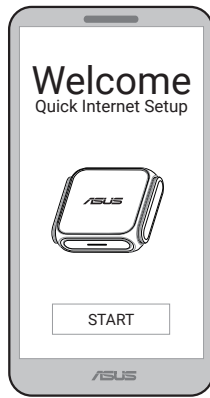

– Or via web browser

- 3 **[Wired]** Connect your PC to LAN port at the back side of the router using an additional network cable.
- 4 **[Wired / Wireless]** Open a web browser.

[Wireless] Connect to the network with default SSID shown on the product label on the bottom side of your router “ASUS_XX”.

You will be redirected to the ASUS Setup Wizard. If not, navigate to <http://www.asusrouter.com>.

Follow the instructions to complete the setup.

