

Viewing your videos



 
You can play and view all saved videos in the **My Video** folder.

To open the **My Video** folder from the Camera menu:

Go to the Camera menu, select **My Video** from the menu, then press .

OR

In the **Camera** menu, press  to open **My Video**.

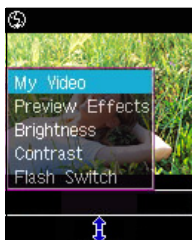

To open the **My Video** folder from the video recorder display:

When in the video recorder, press  (Option), select **My Video**, then press .



The phone remains in camera mode when you access the **My Video** folder from the video recorder display.



To play a video:

1. Use  (up) or  (down) to select the video you want to play, then press . The video plays on the screen.
2. Press  (Option) to access the video settings menu. Otherwise press  (Back) to return to **My Video**.


Using the video options

The video options allow you to view, delete, and rename video files saved in the My Video folder. You can also use this menu to set a video as power on or off animation.

To access the video options:

1. From **My Video**, press  (Option) to display the video options menu.
2. Use  (up) or  (down) to select an option, then press . Refer to the table below for a description of each option.

Option	Allows you to
View	open a video file
Change View	view videos in namelist or thumbnail modes
Set as	save a video file as power on or off animation
Delete	delete a video file
Delete All	delete all video files in the My Video folder
Rename	rename a video file
Detail	view the video file details including the file name, size, format, etc.
Storage	view the My Video storage status

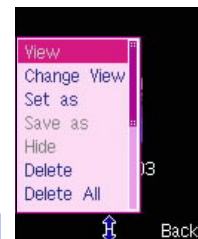 



9 M303

This chapter provides information on how to use the phone organizer for your daily activities.

Organizing your stuff

Chapter summary

Organizer	244
Launching the Organizer	244
Calendar	245
Displaying the calendar options	246
Adding a calendar event or record	247
Viewing all calendar events or records	248
Deleting calendar events or records	248
Setting the start of the week day	249
Setting a holiday	250
Viewing set holiday(s)	250
Listing horoscopes	251
Alarm	252
Setting an alarm	252
Turning off an alarm.....	254
World Clock	255
Changing the local time	256
Viewing other locations	257
Calculator	258
Text Memo	259
Creating a text memo	259

Voice Memo	261
Creating a voice memo	261
Listening to a voice memo	263
Sending a voice memo using MMS	264
Deleting a voice memo(s)	265
Memory Status	266
Viewing the memory status	266
Voice Recognition	267
Recording a voice for name dialing	267
Recording voice commands	269
Currency Exchange	270
Adding an exchange rate	270
Calculating an exchange rate	271
Adding an exchange currency	272
Stopwatch	273
Using the split stopwatch	274
Using the lap stopwatch	275

Organizer

The **Organizer** menu allows you to organize your daily activities through helpful applications such as the Calendar, Voice and Text Memo, Calculator, Currency Exchange, Alarm, World Clock, etc.

Launching the Organizer

To open the **Organizer** menu:

1. Put the phone in idle mode, then press  to display the main menu.
2. Use the navigation keys to select the **Organizer** icon , then press  to display the **Organizer** menu.

OR

Press  to display the **Organizer** menu.



The **Organizer** menu consists of 10 menu items that you can select using  (up) or  (down), or by using the keypad to press the number preceding each menu item.



Calendar

The Calendar menu allows you to manage your daily schedule with settings that you can customize according to your needs



 
To open the **Calendar**:

From the **Organizer** menu, use (up) or (down) to select **Calendar**, then press .

OR

Press to display the **Calendar**.

Calendar display

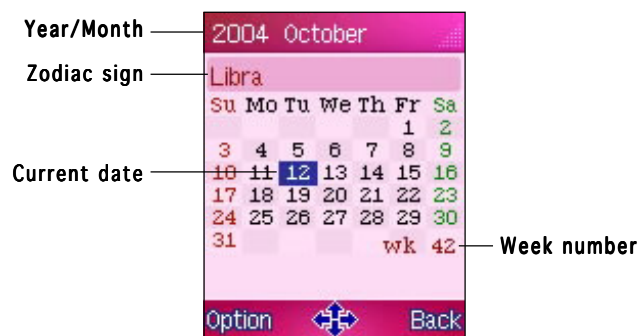

Displaying the calendar options

To display the phone book menu options:

1. In the **Calendar**, press  (Option) to display the calendar options.
2. Use  (up) or  (down) to highlight an item, then press .
Refer to the table below for a brief description of each item.
Otherwise, press  (Back) to return to the **Organizer** menu.




Options	Allows you to
Add	add a calendar event or record
Highlight Toggle	enable or disable the the calendar event/record highlight design
Set Weeks Start	set the week start to Sunday or Monday
Set Holiday	set a holiday in the calendar
List Holiday	view all set holidays in the calendar
List Horoscopes	list the zodiac signs
View All	view all events and records in the calendar
Delete Past	delete past calendar events or records
Delete All	delete all calendar events or records
Go To Date	move to a specified date
Storage	view the calendar memory information

Adding a calendar event or record

To add a calendar event or record:

 1. In the **Calendar**, press  (Option) to display the calendar options.
2. Use  (up) or  (down) to highlight **Add**, then press . The **Add Record** screen appears.
3. The **Add Record** window allows you to customize the following calendar event/record information. Select an information field, press , then modify the information as desired.

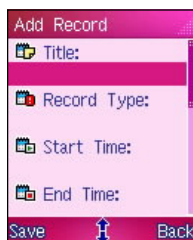

Information	Sets the calendar event
 Title	title
 Record Type	type (birthday, meeting, etc.) and importance (low, normal, high)
 Start Time	start time
 End Time	end or finish time
 Repeat Type	frequency
 Play Ringtone	turns the calendar event ring tone option on or off
 Reminder time	reminder time
 Ringtone	ringtone
 Content	content or other remarks

4. After you finish filling-up all the required calendar event/record fields, press  (Save) to save the calendar event/record.
5. Go to the specified calendar event/record date using the **Go To Date** command. Depending on your **Highlight Toggle** settings, the date is highlighted in a different color for easy recognition.

Viewing all calendar events or records

 
To view all calendar events or records:

1. In the **Calendar**, press  (Option) to display the calendar options.
2. Use  (up) or  (down) to highlight **View All**, then press . The **View All** screen appears and displays a list of all calendar events/records. Take note of the icon that precedes a calendar event or record.
 -  this calendar event/record has reached its reminder time
 -  this calendar event/record has not reached its reminder time
3. Use  (up) or  (down) to highlight an event/record, then press  to view the event/record details.
4. When finished, press  (Back) to return to the **View All** menu.

Deleting calendar events or records


To delete all **past** calendar events or records:

1. In the **Calendar**, press  (Option) to display the calendar options.
2. Use  (up) or  (down) to highlight **Delete Past**, then press .
3. When prompted, press  (Yes) to delete all past calendar events and records. A **Deleted successfully!** message appears to indicate that all past calendar events or records has been deleted. The screen returns to the **Calendar**.

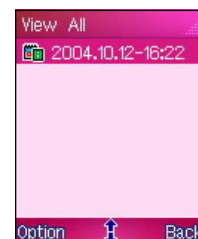

To delete all calendar events or records:

 1. In the **Calendar**, press  (Option) to display the calendar options.
2. Use  (up) or  (down) to highlight **Delete All**, then press .
3. When prompted, press  (Yes) to delete all calendar events and records. A **Deleted successfully!** message appears to indicate that all calendar events or records has been deleted. The screen returns to the **Calendar**.

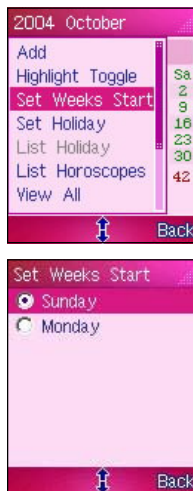

Setting the start of the week day

To set the start of the week day:

1. In the **Calendar**, press  (Option) to display the calendar options.
2. Use  (up) or  (down) to highlight **Set Weeks Start**, then press . The **Set Weeks Start** screen appears.
3. Press  (up) or  (down) to select **Sunday** or **Monday** as the start of the week day, then press .
4. When finished, press  (Back) to return to the calendar.

 
Setting a holiday

To set a holiday:

1. In the **Calendar**, press  (Option) to display the calendar options.
2. Use  (up) or  (down) to highlight **Set Holiday**, then press .
3. Key-in the holiday date and name in the respective fields, then press  (Save). A **Data Saved!** message appears to indicate that the holiday has been set. The screen returns to the Calendar.



Depending on your **Highlight Toggle** settings, the holiday is displayed in a different color for easy recognition.

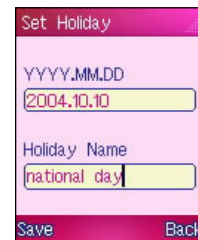


Viewing set holiday(s)

To view all set holiday(s):

 1. In the **Calendar**, press  (Option) to display the calendar options.
2. Use  (up) or  (down) to highlight **List Holiday**, then press . The **List Holiday** screen appears displaying a list of all listed holidays.



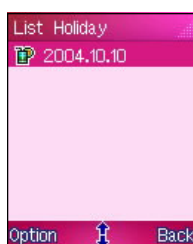

3. Use (up) or (down) to highlight a holiday, then press to view the holiday details.
4. When finished, press (Back) to return to the **List Holiday** menu.

Listing horoscopes

To view a list of horoscopes:

1. In the **Calendar**, press (Option) to display the calendar options.
2. Use (up) or (down) to highlight **List Horoscopes**, then press .



3. Scroll through the horoscopes using (up) or (down).



Alarm

The **Alarm** menu allows you to set five alarms with different frequency, time, and alarm tone, so you are notified of important events anytime.

To open the **Alarm**:

From the **Organizer** menu, use  (up) or  (down) to select **Alarm**, then press .

OR

Press  to display the **Alarm** menu.



Setting an alarm

To set an alarm:

 
1. In the **Alarm** menu, press  (up) or  (down) to highlight an alarm number, then press . The box preceding the alarm number is checked out.
2. Press  (Option), select **Alarm Time** from the menu, then press .
3. Key-in the alarm time using the keypad, then press  when finished. The display returns to the **Alarm** menu with the alarm time displayed at the bottom left corner of the display.



4. Press  (Option), select **Alarm Type** from the menu, then press .



5. Use  (up) or  (down) to highlight the alarm frequency, then press .
6. Press  (Back) to return to the **Alarm** menu.

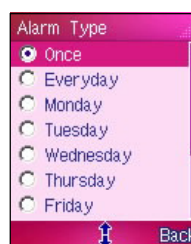

7. Press  (Option), select **Ringtone** from the menu, then press .



8. Use  (up) or  (down) to highlight the alarm ring tone, then press .
9. Press  (Back) to return to the **Alarm** menu.



- If the phone is off and an alarm reaches its specified time, the phone automatically turns on and sounds the alarm ring tone.
- If the phone is on during an alarm, press  to turn off the alarm, or press  to put the alarm in lazy mode. In lazy mode, the alarm sounds every five minutes until you press . You can put an alarm to lazy mode five times.

Turning off an alarm

To turn-off an alarm:

1. In the **Alarm** menu, use  (up) or  (down) to highlight the alarm you wish to turn off, then press  to uncheck the box preceding the alarm.
2. Press  (Back) to return to the **Organizer** menu.

World Clock

The **World Clock** lets you know the time in other countries and cities. This menu allows you to set the local time or view the time in other parts of the world with the local time as reference.



 
To open the **World Clock** screen:

From the **Organizer** menu, use (up) or (down) to select **World Clock**, then press .

OR

Press to display the **World Clock** screen.

World Clock display

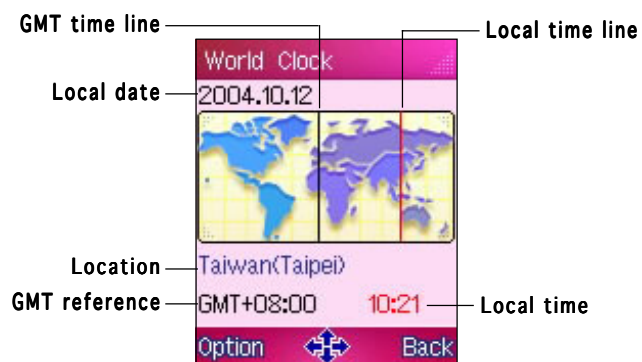


Changing the local time

To change the local time using the time line:

1. Press  (left) or  (right) to move the local time line across the world map until it is over the desired location.
2. The selected location and time information are shown below the world map. Press  to change the local time.
3. When prompted, press  (Yes) to confirm the local time change. A message appears on screen telling you that the local time has been changed.

 
The display returns to the **World Clock** screen.

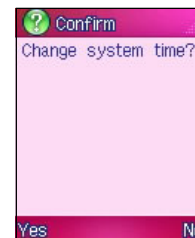

To change the local time using the World Clock option:

1. Press  (left) or  (right) to move the local time line across the world map until it is over the desired location.
2. The selected location and time information are shown below the world map. Press  (Option), select **Set as Local** from the pop-up menu, then press .
3. When prompted, press  (Yes) to confirm the local time change. A message appears on screen telling you that the local time has been changed.

 The display returns to the **World Clock** screen.

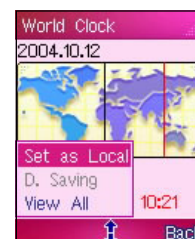


Viewing other locations



If you cannot locate your city or country using the time line, you can view other locations using the World Clock options. To do this:

1. In the **World Clock** screen, press  (Option), select **View All** from the pop-up menu, then press . A list of all available cities and countries appears.
2. To specify your search, tap  (Option), select the continent of location, then press . A list of all available cities and countries in the selected continent is displayed.
3. Select the city or country of location, then press  to set the local time.
4. When prompted, press  (Yes) to confirm the local time change. A message appears on screen telling you that the local time has been changed.

 The display returns to the **World Clock** screen.

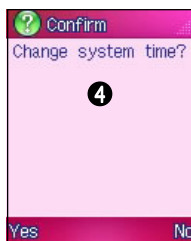

Calculator

The calculator allows you to compute simple mathematical operations.

To open the **Calculator**:

From the **Organizer** menu, use  (up) or  (down) to select **Calculator**, then press .


OR

Press  to display the **Calculator**.

The function of the following keys changes when the phone is in calculator mode.



Key	Function	Key	Function
	[+] add		[-] subtract
	[÷] divide		[x] multiply
	[.] decimal point		C / AC
	Clear		Back
	[=] equal		

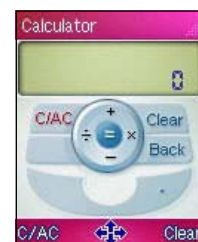 

The calculator functions like a normal calculator. Use the keypad to key-in the numerals, then select a mathematical operation to use.

Press  to return to the **Organizer** menu.

Text Memo

The text memo menu allows you to create short memos containing important notices or reminders.



To open the **Text Memo**:

From the **Organizer** menu, use (up) or (down) to select **Text Memo**, then press .

OR

Press to display the **Text Memo**.



You can create a text memo of up to 70 characters.

Creating a text memo



 
To create a text memo:

1. In the **Text Memo** screen, use (up) or (down) to highlight a blank text memo, then press .

OR

Press (Option), select **Edit** from the menu, then press .

The blank text memo screen appears.

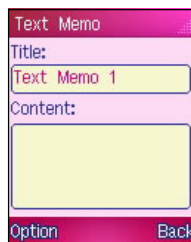


3. Press  (Option), select **Edit Title** from the menu, then press .
4. When prompted, key-in the text memo title then press .




5. Press  (Option), select **Edit Content** from the menu, then press .



 
6. When prompted, key-in the text memo content then press .

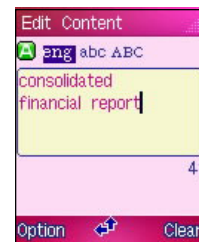

 7. When finished, press  (Option), select **Save** from the menu, then press .

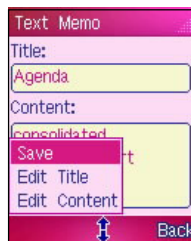

 8. The title of the created text memo now appears in the text memo list. Press  (Back) to return to the **Organizer** menu.

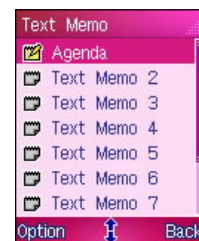




5. A **Saved successfully!** screen appears to indicate that the currency exchange rate has been saved.



The display returns to the **Currency Exchange** screen showing the created currency conversion and rate.



 Calculating an exchange rate

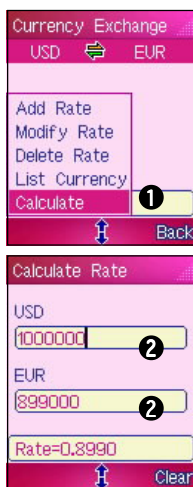


To calculate for the exchange rate:

1. In the **Currency Exchange** screen, press (Option), highlight **Calculate** from the pop-up menu, then press . The **Calculate** screen appears.
2. Select a reference currency field using (up) or (down), then key-in the amount of currency to be exchanged.
3. When finished, press to calculate the equivalent amount on the other currency using the exchange rate.
4. When finished, press (Clear) to clear the currency field(s) and compute a new exchange rate. Otherwise, press (Back) to return to the **Currency Exchange** screen.

Adding an exchange currency

To add an exchange currency:

 1. In the **Currency Exchange** screen, press  (Option), highlight **List Currency** from the pop-up menu, then press . The **Currency** screen appears with the list of available currencies.
2. In the **Currency** screen, press  (Option), highlight **Add** from the pop-up menu, then press . The **Modify Currency** screen appears.
3. Key-in the currency name using the keypad, then press . A currency name is limited to only four characters. The display returns to the **Currency** screen with the created currency.

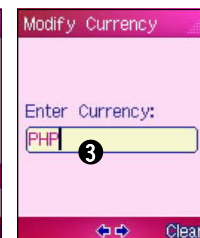

Stopwatch

The **Stopwatch** allows you to record time in split and lap modes.

 
To open the **Stopwatch**:

From the **Organizer** menu, use  (up) or  (down) to select **Stopwatch**, then press .


OR

Press  to display the **Stopwatch** screen.

You can switch the stopwatch from **split** to **lap** mode or vice versa by pressing  (up) or  (down).

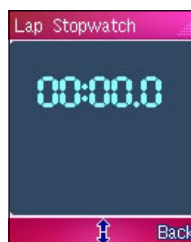

Lap mode

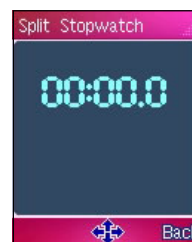 


Split mode

Lap stopwatch is commonly used for timing races and other sports that are divided into laps, such as car racing. Split stopwatch is used to determine the time for an individual to finish a given task, such as in a speech competition.


Using the split stopwatch

To use the split stopwatch:

 1. In the **Stopwatch** screen, select the split stopwatch mode by pressing  (up) or  (down).
2. Press  to start the stopwatch.
3. Press  (Mark) to mark a specific time. The marked time is displayed at the bottom of the screen. You can create a maximum eight marks for a given time. You can also view the time marks by pressing  (left) or  (right) while the stopwatch is in progress.
4. Press  to stop the stopwatch.
5. After recording the time, press  (Reset) to reset the stopwatch.

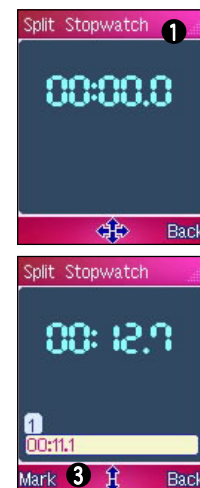

Using the lap stopwatch

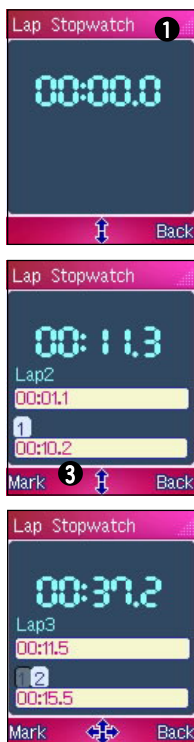 

To use the lap stopwatch:

1. In the **Stopwatch** screen, select the lap stopwatch mode by pressing (up) or (down).
2. Press to start the stopwatch.
3. Press (Mark) to mark the first lap time. The lap time is displayed at the bottom of the screen. When necessary, press (Mark) to mark the second lap time, and so on. The screen displays the latest two laps.
4. Press to stop the stopwatch.
5. After recording the time, press (Reset) to reset the stopwatch.

FCC Regulations:

● This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

● This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

● This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► RF Exposure Information (SAR)

This model phone meets the government's requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.15 W/kg and when worn on the body, as described in this user guide, is 0.357 W/kg. (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: MSQM303.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.