



Final flat size: 400 × 240 mm
Final fold size: 80 × 120 mm



INSIGNIA™

Quick Setup Guide | NS-CAHBTSPORT/NS-CAHBTSPORT-C
Bluetooth Earbuds

INSIGNIA™

Guide d'installation rapide | NS-CAHBTSPORT/NS-CAHBTSPORT-C
Écouteurs Bluetooth



PACKAGE CONTENTS

- Bluetooth earbuds
- USB charging cable
- Quick Setup Guide

FIND YOUR USER GUIDE ONLINE!

Go to www.insigniaproducts.com, then click **Support & Service**. Enter **NS-CAHBTSPORT** in the box under *Manual, Firmware, Drivers & Product Information*, then click ►.

FEATURES

- Bluetooth 4.1
- Up to six hours battery life for music playback
- In-line control, built-in mic
- MicroUSB charging

CHARGING YOUR EARBUDS

- When the red indicator LED blinks three times every one minute, the battery is low. To charge the battery, plug the microUSB charging cable into your computer and into the microUSB port on your earbuds. The red LED turns on to indicate that the battery is charging and turns off when fully charged.

USING YOUR EARBUDS

Turning your earbuds on and off

- 1 Place the earbud cable around your neck, then clip the cable clamp to your collar. The inline control falls naturally in front of your right shoulder.
- 2 Press and hold the **MFB** for three seconds. The LED blinks blue (when turned on) or red (when turned off) and the voice prompt says "Power on," or "Power off."

BLUETOOTH BASIC INDICATION

ACTION	OPERATION	LED INDICATION	SOUND
Power on	Press and hold MFB more than two seconds	Blue LED on 1.5 seconds	"power on"
Power off	Press and hold MFB more than three seconds	Red LED on 1.5 seconds	"power off"
Pairing mode	Press and hold MFB more than four seconds in power off mode	Blue and red LED blinking alternately	Two short beeps
Play/Pause Volume Up/Down	Press and release MFB button Press and release ▲ / ▼ button		Two high beeps for maximum volume.
Next Track/ Previous Track	Press and hold ▲ / ▼ button		
Incoming call		Blue LED blinks three times every five seconds when a call is received	Ring tones
Answer call	Press and release MFB when a call is incoming		One short beep
Reject call	Press and hold MFB when a call is incoming		Two short beeps
Redial	Double press MFB		Two short beeps
Reset device list	Press and hold MFB more than 10 seconds in power off mode	Red LED flash 10 times when reset to default	

Pairing with a Mac computer

Note: Before you pair the headphones with the computer, make sure that the computer is Bluetooth compatible. Refer to the computer's documentation or contact the computer manufacturer for more information. If your computer is not Bluetooth compatible, install a Bluetooth USB adapter (dongle).

- 1 Turn on Bluetooth on the computer. For instructions, see the computer's documentation or contact the computer manufacturer.
- 2 Click the **Bluetooth status** menu.
- 3 Click **Set up Bluetooth Device**. The *Bluetooth Setup Assistant* opens.
- 4 Click **Continue**.
- 5 Select **Headset** as the device type, then click **Continue**.
- 6 With the earbuds turned off, press and hold **MFB** for four seconds. The LED blinks blue and red alternately. Pairing mode is activated.
- 7 Select **NS-CAHBTSPORT**, then click **Continue**. The computer gathers information.
- 8 Click **Continue**.
- 9 Enter **0000** (four zeros) into the **Passkey** field, then click **Continue**.
- 10 Click **Quit** to finish.
Note: To use the earbuds, they must be selected as the default input and output device on the computer.
- 11 Click **System Preferences**, then click **Sound**.
- 12 Under **Input**, select **NS-CAHBTSPORT**, then under **Output**, select **NS-CAHBTSPORT**.

For more information on using your headphones with Skype, refer to your *User Guide*.

RESETTING YOUR EARBUDS

- To reset your earbuds, with your earbuds turned off, press and hold **MFB** for 10 seconds.

SPECIFICATIONS

Bluetooth version:	Bluetooth 4.1	Operating time:	Talk: 8 hours Music: 8 hours, playback music track
Supported profiles:	A2DP, AVRCP, HFP, HSP	Standby time:	100 hours
Frequency spectrum:	2.4 ~ 2.4835 GHz ISM Band	Weight:	0.388 oz (11g)
Working distance:	Up to 33 ft. (10 m)	Average charging time:	2 hours
Operating temperature:	23 ~ 122° F (-5 ~ 50° C)		

TROUBLESHOOTING

- Reset your BT headphone
- Plug microUSB cable for charging

LEGAL NOTICES

FCC statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RSS-Gen & RSS-247 Statement:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RSS-102 Statement

This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme à l'exposition aux rayonnements Industrie Canada limites établies pour un environnement non contrôlé.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

1-877-467-4289 (U.S. and Canada)

01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies. Distributed by Best Buy Purchasing, LLC

©2016 Best Buy. All rights reserved. **Made in China**



#	DESCRIPTION	FUNCTION
1	▲ Volume Up Next Track	Press to ▲ increase the volume. Press to ▲ skip to the next track.
2	Micro USB port	Plug the micro USB connector into this port to charge your earbuds.
3	Multi-function button (MFB) (Power/Talk/Play/Pause/Pairing)	Press to turn on your earbuds. If you receive a phone call, press to talk. Press to turn off your earbuds.
4	▼ Volume Down Previous Track	Press to ▼ decrease the volume. Press to ▼ skip to the previous track.
5	Indicator LED	Shows the current status of the earbuds.
6	Microphone	Allows you to talk on the telephone.

Before using your new product, please read these instructions to prevent any damage.

PAIRING YOUR EARBUDS

Notes:

- Range is 33 feet (10 meters)
- Supports easy pairing
- Prompts you by saying "Device Connected," when connected
- Supports a battery indicator icon on an iOS device

Pairing with a cell phone or MP3 player

- 1 With your earbuds turned off, press and hold **MFB** for four seconds. The blue and red LEDs blink alternately.
- 2 On your phone or MP3 player, select **NS-CAHBTSPORT** from the list of discovered devices, then enter the passwrd **0000** (four zeros) (if required) to pair your earbuds. For more information on pairing Bluetooth devices to your cell phone or MP3 player, see the device's documentation.

Note: After the earbuds have been successfully paired with the cell phone or MP3 player, the earbuds will automatically reconnect to the phone or MP3 player.

Pairing with a computer running Windows

Note: Before you pair the earbuds with the computer, make sure that the computer is equipped with Bluetooth. Refer to the computer's documentation or contact the computer manufacturer for more information. If your computer is not Bluetooth compatible, install a Bluetooth USB adapter (dongle).

- 1 Turn on Bluetooth on the computer. For instructions, see the computer's documentation or contact the computer manufacturer.
- 2 Double-click the **Bluetooth** icon in the system tray, then click **Add a device (Add Wireless Device** using Windows Vista).
- 3 With the earbuds turned off, press and hold **MFB** for four seconds. The LED blinks blue and red alternately. Pairing mode is activated.
- 4 Double-click the **NS-CAHBTSPORT** icon on the computer or highlight the icon, then click **Next**.
Note: If you are unable to locate the **NS-CAHBTSPORT** icon, click the **Search Again** button.
- 5 If required, enter **0000** (four zeros) in the **Bluetooth security code** field, then click **Next**.
- 6 After the earbuds have been paired, click **Close**. If you are using Windows XP, continue with steps 7 through 9.
- 7 Select one of the Bluetooth hands-free types shown on the *Add a Bluetooth Device Wizard* screen, then click **Next**.
- 8 Select the services shown on the wizard screen to use with your Bluetooth earbuds, then click **Finish**.
- 9 To connect the device, double-click the **NS-CAHBTSPORT Hands-Free Unit** icon or the **NS-CAHBTSPORT Stereo Audio** icon.

Note: The earbuds should be automatically selected as the default playback device (Windows® 8, Windows® 7, or Windows Vista™) or the default recording and playback device (Windows XP). To make those settings manually, refer to the *User Guide*.

