

TO: LTS
 ATTN: ADA CHAN / ANTHONY CHAN
 FROM: WILD PLANET / VICTOR CHAN
 Re: revise instructions AGES 6 & UP
 of Lights Off 92003

LIGHTS OFF'

1/2

FEATURES:

1. Hand held remote transmitter with activation light.
2. Lights Off' receiver includes blinking lights to tell when it is ON and ready.
3. Attaches on your existing light switch in your room.
4. Attaches to either paddle or toggle style switches, single, or multiple switch plates.
5. Installs without screws.
6. Can activate without the remote transmitter.
7. Lights Off' receiver easily removed, just unsnap.
8. Operates up to 20 feet

BATTERY INFORMATION

1. One (1) 9V (6LR61) battery required for the remote transmitter.
2. Three (3) 1.5V "AAA" (LR03) batteries required for the receiver.
3. Do not mix alkaline, standard carbon zinc or rechargeable batteries.
4. Do not mix old and new batteries.
5. Only use batteries of the same or equivalent type.
6. Do not short-circuit the battery supply terminals.
7. Insert batteries matching the correct polarity.
8. Remove exhausted batteries from the toy.
9. Do not recharge non-rechargeable batteries.
10. Do not use rechargeable batteries.
11. Alkaline batteries recommended for longer life.
12. Only adults should install and replace batteries.

PARENTS: TO INSTALL BATTERIES

IN THE REMOTE TRANSMITTER

1. Using a small Phillips screwdriver, completely loosen the battery door screw. This screw cannot remove from the battery door.
2. Remove the battery door.
3. Snap contact onto new battery and place it into the battery compartment.
4. Replace battery door and tighten screw.

IN THE RECIEVER

1. Using a small Phillips screwdriver, completely loosen the battery door screw. This screw cannot remove from the battery door.
2. Remove the battery door.
3. Insert new batteries per the marking in the battery compartment.
4. Replace battery door and tighten screw.

P.2/2

INSTALLATION

1. We recommend that an adult install the Lights Off' receiver.
2. Lights Off' receiver mounts to a standard 2-3/4 X 4-1/2 switch plate. Replace switch plate with correct size if needed.
3. Clean the switch plate. Apply window cleaner to a cloth or towel and clean thoroughly, then dry. Never spray window cleaner directly onto the switch plate.
4. Turn the light switch to the ON position.
5. Look to see that the switch lever on the Receiver is in the UP position. Turn on the Receiver and press the manual activation button once to move to UP position if needed. Turn Receiver OFF to keep switch lever from activating during remainder of installation.
6. Align rib with edge (top or bottom edge depending on orientation of the receiver) of the switch plate and hold receiver firmly to switch plate. This step assists you to assure the proper fit before attaching with the adhesive tabs.
7. Remove the Receiver, turn over, and remove the protective liner from the fasteners.
8. Align rib with edge of the switch plate and press Receiver firmly to switch plate.
9. To insure fasteners are securely stuck to the switch plate, remove the Receiver and press firmly with your thumb on each fastener piece.
10. Place Receiver on the switch plate and press firmly until you hear a "SNAP" sound. This indicates the Receiver firmly mounted in place and ready for use.

TO OPERATE

1. Turn on the Receiver. Lights will blink to let you know the Receiver is ON and ready.
2. Press button on the Remote Transmitter once to turn your lights ON or OFF.

FCC ID : N3ELIGHTSOFF92003

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Lights Off
92003-4000PR-3/18/02
Wild Planet Toys, Inc.

For questions please call us or access our Web site.
Tel: 1-800-247-6570
Web: www.wildplanet.com