



Spy Link

Ages 8 and up
70643

Important: keep these instructions. Do not discard.

1. Use 2 9-volt battery required per Spy Link. Batteries not included.
Only adults should install and replace batteries.
Alkaline batteries recommended for longer life.
Do not use rechargeable batteries.
Do not recharge non-rechargeable batteries.
Remove alkaline batteries from the toy.
Insert batteries with the correct polarity (as shown in Figure 2).
Do not short-circuit the battery supply terminals.

Spy Link features

1. Earbuds with microphones
(wear on left ear only)
2. Belt clip (on back)
3. Head-on/walkie-talkie
4. Hi/Low/Off switch



earbuds with microphones
wear on left ear only, as shown



Hi / Low / Off
switch



belt clip



Parents: to install batteries

Spy Link requires two 9-volt alkaline batteries, one battery for each unit (batteries not included).

1. With a small Phillips screwdriver, remove the screw and battery door on the back of Spy Link (Figure 1).
2. Snap battery clip on battery as shown (Figure 2).
3. Place battery into battery compartment.
4. Replace the battery door and tighten the screw.



Fig. 1

To use the walkie-talkie

1. Place the red switch on Low (Low/High/Off) location.
You will hear a click, this means that it is on.
2. You can talk with your friend through the microphones.
3. To turn off your Spy Link push the red switch to Off position.

Warning Changes or modifications to this toy that are not expressly approved by Fisher-Price Toys, Inc., could void the user's authority to operate the toy.



⚠ WARNING:

**CHOKING HAZARD: Small Parts.
Not for Children Under 3 Years.**

Spy Link 70643-0000 12/00/03

IF YOU NEED ANY ASSISTANCE, PLEASE CONTACT US AT:
1-800-345-3453
WWW.FISHERPRICE.COM
©2002 Fisher-Price Toys, Inc.