

# ADXV-R-25VU-U2 + ADXV-R-3378P-U2 User Manual\_Additional PSR-ANN-U2

---

Version 0.1



3116 West Vanowen St.  
Burbank, CA 91505  
Tel: 818-840-8131  
Fax: 818-840-8138

[www.adrftech.com](http://www.adrftech.com)



*Information in this document is subject to change without notice.*

*Advanced RF Technologies, Inc. 1996-2022.  
All rights reserved.*

- Please send comments to:

E-Mail: [info@adrfttech.com](mailto:info@adrfttech.com)

Phone: (818) 840-8131

(800) 313-9345

Fax: (818) 840-8138

- Address:

Advanced RF Technologies, Inc.  
Attention: Technical Publications Department  
3116 Vanowen St.  
Burbank, CA 91505  
USA  
[www.adrfttech.com](http://www.adrfttech.com)

## Revision History

| Version | Author  | Descriptions    | Date       |
|---------|---------|-----------------|------------|
| 0.1     | BY PARK | Initial Release | 11/14/2024 |
|         |         |                 |            |
|         |         |                 |            |
|         |         |                 |            |
|         |         |                 |            |
|         |         |                 |            |
|         |         |                 |            |
|         |         |                 |            |
|         |         |                 |            |
|         |         |                 |            |
|         |         |                 |            |

## Change List

| Version | Change list | Contents |
|---------|-------------|----------|
|         |             |          |
|         |             |          |
|         |             |          |
|         |             |          |

## Table of Contents

|       |                                                            |                        |
|-------|------------------------------------------------------------|------------------------|
| 1.    | Introduction .....                                         | 7                      |
| 1.1   | Highlights .....                                           | 7                      |
| 1.2   | ADXV-R-25VU-U2 Parts List .....                            | 8                      |
| 1.3   | ADXV-R-25VU-U2 Quick View .....                            | 9                      |
| 1.3.1 | ADXV-R-25VU-U2 Ports .....                                 | 10                     |
| 1.4   | ADXV-R-3378P-U2 Parts List .....                           | 오류! 책갈피가 정의되어 있지 않습니다. |
| 1.5   | ADXV-R-3378P-U2 Quick View .....                           | 오류! 책갈피가 정의되어 있지 않습니다. |
| 1.5.1 | Ports .....                                                | 오류! 책갈피가 정의되어 있지 않습니다. |
| 1.6   | Warnings and Hazards .....                                 | 11                     |
| 2.    | Cable Connection & Installation .....                      | 14                     |
| 2.1   | ADXV-R-25VU-U2 Wiring Compartment .....                    | 14                     |
| 2.1.1 | Wire Terminals .....                                       | 15                     |
| 2.1.2 | AC 100-240V Terminal Block .....                           | 16                     |
| 2.2   | External Alarm .....                                       | 17                     |
| 2.3   | UL IN .....                                                | 18                     |
| 2.4   | DL OUT / SERVER .....                                      | 18                     |
| 2.5   | Optic .....                                                | 19                     |
| 2.6   | Battery .....                                              | 21                     |
| 2.7   | Grounding .....                                            | 22                     |
| 2.8   | ADXV-R-3378P-U2 Wiring Compartment .....                   | 오류! 책갈피가 정의되어 있지 않습니다. |
| 2.8.1 | Wire Terminals .....                                       | 오류! 책갈피가 정의되어 있지 않습니다. |
| 2.8.2 | AC 100-240V Terminal Block .....                           | 오류! 책갈피가 정의되어 있지 않습니다. |
| 2.9   | External Alarm .....                                       | 오류! 책갈피가 정의되어 있지 않습니다. |
| 2.10  | SERVER .....                                               | 오류! 책갈피가 정의되어 있지 않습니다. |
| 2.11  | Optic .....                                                | 오류! 책갈피가 정의되어 있지 않습니다. |
| 2.12  | Battery .....                                              | 오류! 책갈피가 정의되어 있지 않습니다. |
| 2.13  | Grounding .....                                            | 오류! 책갈피가 정의되어 있지 않습니다. |
| 3.    | RF EXPOSURE WARNING .....                                  | 오류! 책갈피가 정의되어 있지 않습니다. |
| 4.    | Installation .....                                         | 23                     |
| 5.    | Specifications .....                                       | 24                     |
| 5.1   | ADXV-R-25VU-U2 Specifications .....                        | 24                     |
| 5.2   | ADXV-H-POIL-78P-U2 or ADXV-R-3378P-U2 Specifications ..... | 오류! 책갈피가 정의되어 있지 않습니다. |
| 5.3   | PSR-ANN-U2 ANNUNCIATOR Specifications .....                | 오류! 책갈피가 정의되어 있지 않습니다. |
| 5.3.1 | Mechanical Specifications .....                            | 오류! 책갈피가 정의되어 있지 않습니다. |

|       |                                                |                        |
|-------|------------------------------------------------|------------------------|
| 5.3.2 | PIN Description (2ERJVC-3.5-2P X3) .....       | 오류! 책갈피가 정의되어 있지 않습니다. |
| 6.    | Mechanical DRAWING .....                       | 25                     |
| 6.1.1 | ADXV-R-25VU-U2 Mechanical drawing .....        | 25                     |
| 6.1.2 | ADXV-R-3378-U2 Mechanical drawing .....        | 오류! 책갈피가 정의되어 있지 않습니다. |
| 6.1.3 | PSR-ANN-U2 ANNUNCIATOR Mechanical drawing..... | 오류! 책갈피가 정의되어 있지 않습니다. |
| 6.1.4 | ADXV-H-POIL-78P-U2 Mechanical drawing .....    | 오류! 책갈피가 정의되어 있지 않습니다. |

## Figures

|             |                                                                       |                        |
|-------------|-----------------------------------------------------------------------|------------------------|
| Figure 1-1  | ADXV-R-25VU-U2 Parts List .....                                       | 8                      |
| Figure 1-2  | ADXV-R-25VU-U2 Quick View (Bottom) .....                              | 9                      |
| Figure 1-3  | PSR-ANN-U2 Annunciator.....                                           | 10                     |
| Figure 1-4  | ADXV-R-3378P-U2 Parts List .....                                      | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 1-5  | ADXV-R-3378P-U2 Quick View (Bottom) .....                             | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-1  | Wiring Compartment Cutout Holes.....                                  | 14                     |
| Figure 3-2  | ADXV-R-25VU-U2 Terminal Wiring Diagram.....                           | 15                     |
| Figure 3-3  | AC 100-240V Terminal Block .....                                      | 16                     |
| Figure 3-4  | External Alarm port .....                                             | 17                     |
| Figure 3-6  | UL IN .....                                                           | 18                     |
| Figure 3-6  | DL OUT / SERVER .....                                                 | 18                     |
| Figure 3-7  | Optic port.....                                                       | 19                     |
| Figure 3-8  | Optic Connector Cleaning (left) and Optic Port Cleaning (right) ..... | 20                     |
| Figure 3-9  | SC/APC Optic Connector Dust Cap .....                                 | 20                     |
| Figure 3-10 | Battery Backup Port.....                                              | 21                     |
| Figure 3-11 | Battery Switch.....                                                   | 21                     |
| Figure 3-12 | Protective Earthing Conductor .....                                   | 22                     |
| Figure 3-13 | Wiring Compartment Cutout Holes.....                                  | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-14 | ADXV-R-3378P-U2 Terminal Wiring Diagram .....                         | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-15 | AC 100-240V Terminal Block .....                                      | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-16 | External Alarm port .....                                             | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-17 | SERVER port.....                                                      | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-18 | Optic port.....                                                       | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-19 | Optic Connector Cleaning (left) and Optic Port Cleaning (right).....  | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-20 | SC/APC Optic Connector Dust Cap .....                                 | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-21 | Battery Backup Port.....                                              | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-22 | Battery Switch.....                                                   | 오류! 책갈피가 정의되어 있지 않습니다. |
| Figure 3-23 | Protective Earthing Conductor .....                                   | 오류! 책갈피가 정의되어 있지 않습니다. |

# Terms and Abbreviations

The following is a list of abbreviations and terms used throughout this document.

| Abbreviation/Term | Definition                                                                                                 |
|-------------------|------------------------------------------------------------------------------------------------------------|
| <b>AGC</b>        | Automatic Gain Control                                                                                     |
| <b>ALC</b>        | Automatic Level Control                                                                                    |
| <b>AROMS</b>      | ADRF Repeater Operation and Management System                                                              |
| <b>BCU</b>        | Band Combiner Unit                                                                                         |
| <b>BTS</b>        | Base Transceiver Station                                                                                   |
| <b>BDA</b>        | Bi-directional Amplifier                                                                                   |
| <b>CDMA</b>       | Code Division Multiple Access                                                                              |
| <b>CHC</b>        | Channel combiner                                                                                           |
| <b>CW</b>         | Continuous Wave (un-modulated signal)                                                                      |
| <b>DAS</b>        | Distributed Antenna System                                                                                 |
| <b>DL</b>         | Downlink                                                                                                   |
| <b>Downlink</b>   | The path covered from the Base Transceiver Station (BTS) to the subscribers' service area via the repeater |
| <b>HE</b>         | Head End                                                                                                   |
| <b>HPA</b>        | High Power Amplifier                                                                                       |
| <b>HW</b>         | Hardware                                                                                                   |
| <b>IF</b>         | Intermediate Frequency                                                                                     |
| <b>LNA</b>        | Low Noise Amplifier                                                                                        |
| <b>LTE</b>        | Long Term Evolution                                                                                        |
| <b>MS</b>         | Mobile Station                                                                                             |
| <b>NMS</b>        | Network Management System                                                                                  |
| <b>ODU</b>        | Optical Donor Unit which is located in ADXV-HE.                                                            |
| <b>OEU</b>        | Optic Expansion Unit                                                                                       |
| <b>PLL</b>        | Phased Locked Loop                                                                                         |
| <b>POI</b>        | Point of Interface                                                                                         |
| <b>PSU</b>        | Power Supply Unit                                                                                          |
| <b>RF</b>         | Radio Frequency                                                                                            |
| <b>RU</b>         | Remote Unit which is composed of master RU and multiple slaves RU                                          |
| <b>RM</b>         | Remote Module                                                                                              |
| <b>SW</b>         | Software                                                                                                   |
| <b>UL</b>         | Uplink                                                                                                     |
| <b>Uplink</b>     | The path covered from the subscribers' service area to the Base Transceiver Station (BTS) via the repeater |
| <b>VSWR</b>       | Voltage Standing Wave Ratio                                                                                |

## **1. INTRODUCTION**

The optical signal is distributed to multiple ADXV-R-25VU-U2B remote units where the optical signal is converted back to RF and amplified. The amplified signal is then connected to server antennas at the coverage locations.


### **1.1 Highlights**

- ADXV-R-25VU-U2B and Headend supporting VHF/UHF Public Safety bands in one body
- Passive Fanless Cooling
- Air convection cooling without fans
- Web-based GUI Interface; No 3rd party GUI software is required
- Web-GUI connectivity via DHCP in host mode
- programmable Alarm Function supporting dry contacts

## 1.2 ADXV-R-25VU-U2B Parts List

**Table 1-1 Parts List**

| Label | Quantity | Description               |
|-------|----------|---------------------------|
| A     | 1        | ADXV-25VU-U2B             |
| B     | 1        | Wall Mount Bracket        |
| C     | 1        | Mounting Bracket Template |
| D     | 6        | Anchor Bolt               |

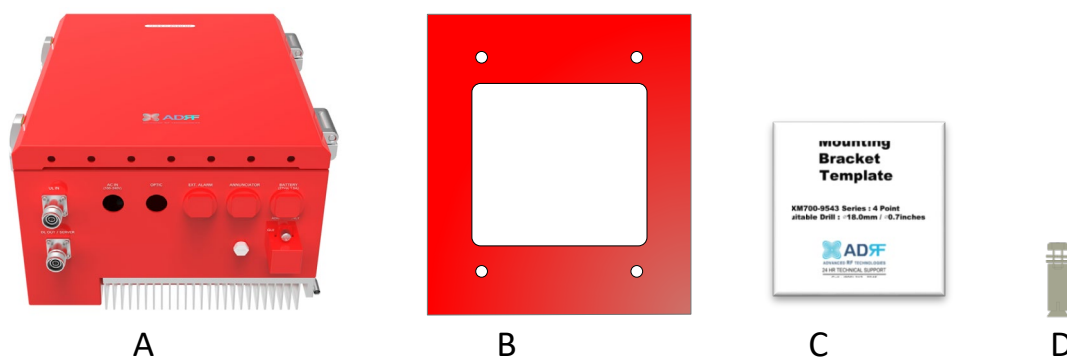

**Figure 1-1 ADXV-R-25VU-U2B Parts List**

The ADXV-R-25VU-U2B can support up to (2) PSR-ANN-U2 annunciators, however, they must be purchased separately. The ADXV-R-25VU-U2 can also support AAI dry contact alarming at the remote unit, however, the alarming cable must be purchased separately.

### 1.3 ADXV-R-25VU-U2B Quick View



Figure 1-2 ADXV-R-25VU-U2B Quick View (Bottom)


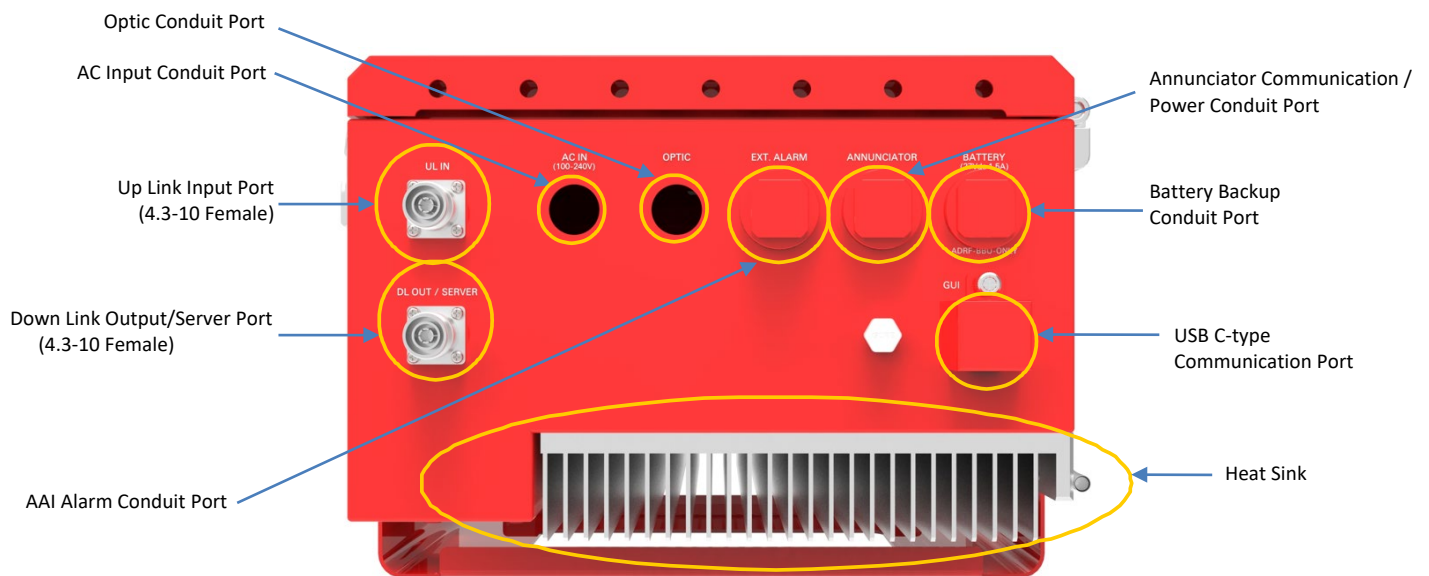


Figure 1-2 ADXV-R-25VU-U2B Quick View (front and bottom)

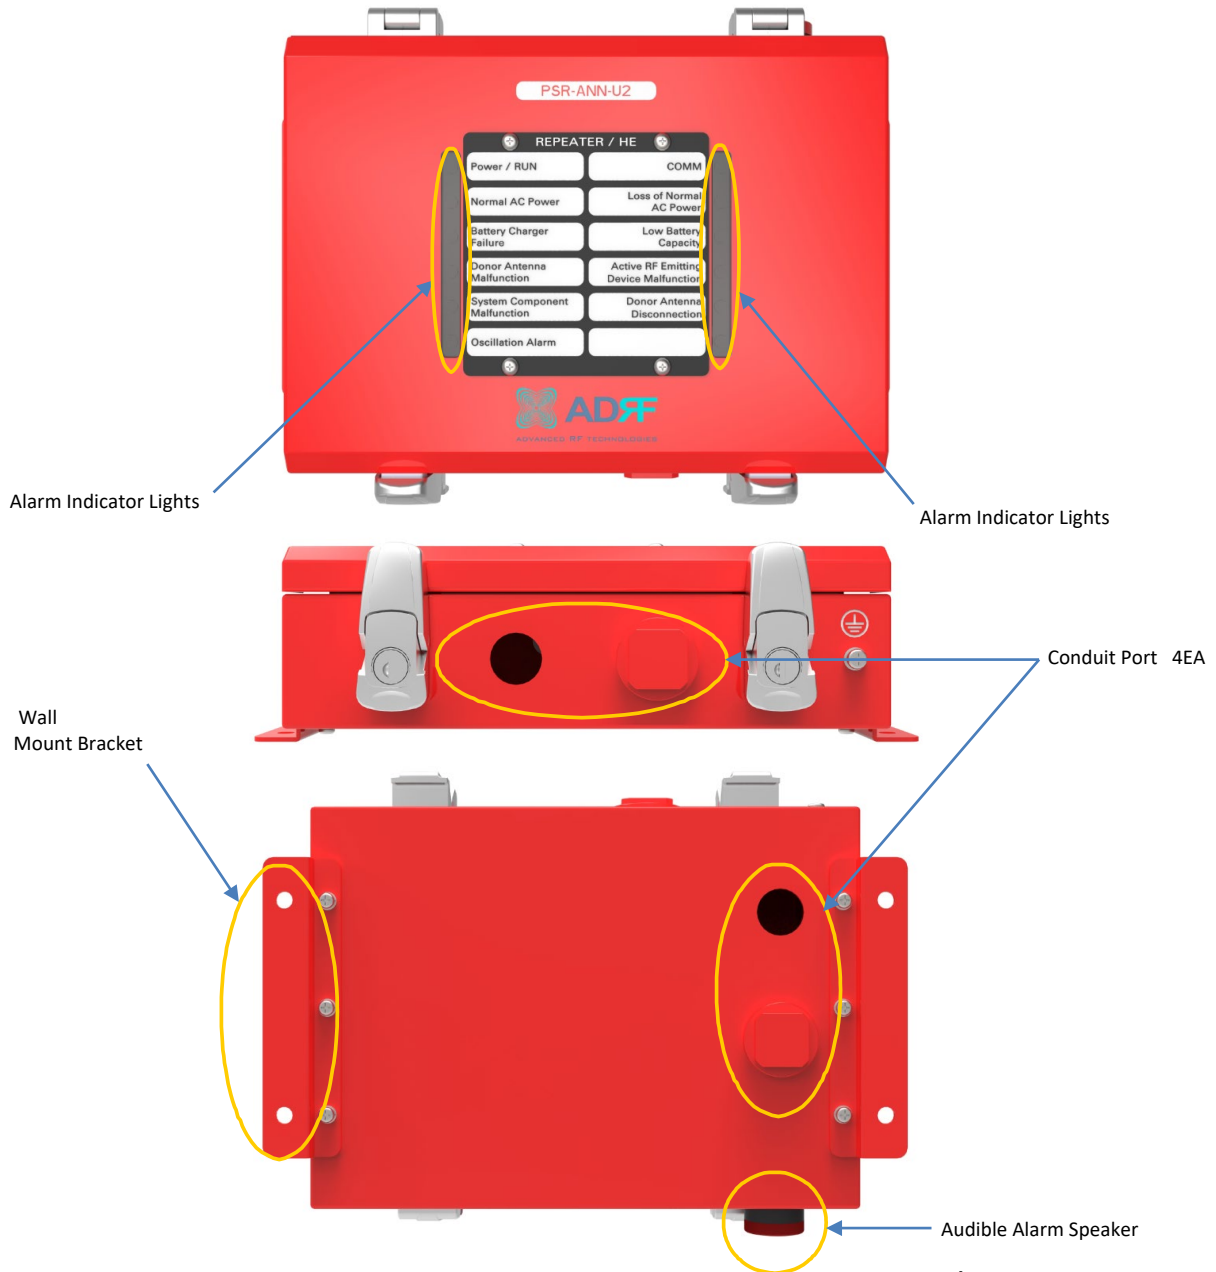

**Figure 1-3 PSR-ANN-U2 Annunciator Quick View (front and bottom)**

### 1.3.1 ADXV-R-25VU-U2B Ports


- **OPTIC:** Conduit hole which is to be used for the optic cables for remote units.
- **AC 100~240V:** Conduit hole for AC power line.
- **BATTERY:** Conduit hole for DC power battery backup line.
- **UL IN:** 4.3-10 female connector where the Server antenna is connected.
- **DL OUT/SERVER:** 4.3-10 female connector where the Server antenna is connected.
- **ANNUNCIATOR:** Conduit hole for the PSR-ANN-U2 line.
- **Ext. ALARM:** Connector for the AAI dry contact alarming for the ADXV-R-25VU-U2 alarms.
- **GUI:** USB C-type Communication.

## 1.4 Warnings and Hazards



### WARNING! ELECTRIC SHOCK

Opening the ADXV-R-25VU-U2B, ADXV-R-3378P-U2 could result in electric shock and may cause severe injury.

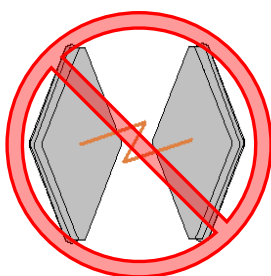

### WARNING! DAMAGE TO REPEATER

Operating the ADXV-R-25VU-U2B, ADXV-R-3378P-U2 with antennas in very close proximity facing each other could lead to severe damage to the repeater.

## WARRANTY

Opening or tampering ADXV-R-25VU-U2B, ADXV-R-3378P-U2 will void all warranties.

**Lithium Battery: CAUTION. RISK OF EXPLOSION IF BATTERY IS REPLACED BY INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS.**

**Ethernet Instructions:** This equipment is for indoor use only. All cabling should be limited to inside the building. Ethernet connection can only be used for programming/troubleshooting purposes only and is not to be connected during normal operation. If an Ethernet cable is connected to this port during normal operation, then the cable must not exceed 30 meters.

**Preclude indications that Home/ personal use are prohibited.**

Use of unauthorized antennas, cables, and/or coupling devices not conforming with ERP/EIRP is prohibited.

### **FCC Part 15.21**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### **FCC Part 15.19**

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Part 15 Class A**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

### **RF Radiation Exposure**

**FCC RF Radiation Exposure Statement:**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 30 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

(DL: Omni-Directional Antenna Max. peak gain:UHF(1.8 dBi), VHF(2.0 dBi))

## RF Radiation Exposure

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 30 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas require larger separation distances.

(DL: Omni-Directional Antenna Max. peak gain:UHF(1.8 dBi), VHF(2.0 dBi))

L'antenne (ou les antennes) doit être installée de façon à maintenir à tout instant une distance minimum de au moins 30 cm entre la source de radiation (l'antenne) et toute personne physique. Cet appareil ne doit pas être installé ou utilisé en conjonction avec une autre antenne ou émetteur.

(DL: Omni-directionnelle Antenne Gain maximal de crête : UHF(1.8 dBi), VHF(2.0 dBi))

## ◆ LABEL WARNING ◆

Part 90 Signal Boosters

This is A 90.219 CLASS B DEVICE

**WARNING. THIS is NOT a CONSUMER device.** It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You **MUST** have an FCC LICENSE or express consent of an FCC Licensee to operate this device. You **MUST** register Class B signal boosters (as defined in 47 CFR 90.219) online at [www.fcc.gov/signal-boosters/registration](http://www.fcc.gov/signal-boosters/registration). Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

## Power Reduction Warning Statement

This 3.5dB back off is only required when multiple carriers are present in the pass-band.

**CAUTION: Double pole, neutral fusing. Disconnect mains before servicing**

**Attention : bipolaire, fusible neutre. Débranchez le secteur avant l'entretien.**

## 2. CABLE CONNECTION & INSTALLATION

### 2.1 ADXV-R-25VU-U2B Wiring Compartment

The bottom of the ADXV-R-25VU-U2B is a wiring compartment with pre-cut holes. These holes are designed to be used in conjunction with conduit hubs to prevent water ingress. A total of 5 pre-cut holes are available to use for the various cables that will be needed for the proper operation of the ADXV-R-25VU-U2B.

To maintain UL 2524 Listed status, unused ports must be properly weatherproofed.

**Table 3-1 Pre-cut hole size and labels**

| Silkscreen Label | Location | Diameter      |
|------------------|----------|---------------|
| AC 100-240V      | BOTTOM   | 22.2mm (7/8") |
| ANNUNCIATOR      | BOTTOM   | 22.2mm (7/8") |
| BATTERY          | BOTTOM   | 22.2mm (7/8") |
| OPTIC            | BOTTOM   | 22.2mm (7/8") |
| EXT.ALARM        | BOTTOM   | 22.2mm (7/8") |



**Figure 3-1 Wiring Compartment Cutout Holes**

### 2.1.1 Wire Terminals

Red is the AC power line and DC battery line is blue. Yellow is the Optic line and black is the Alarm line

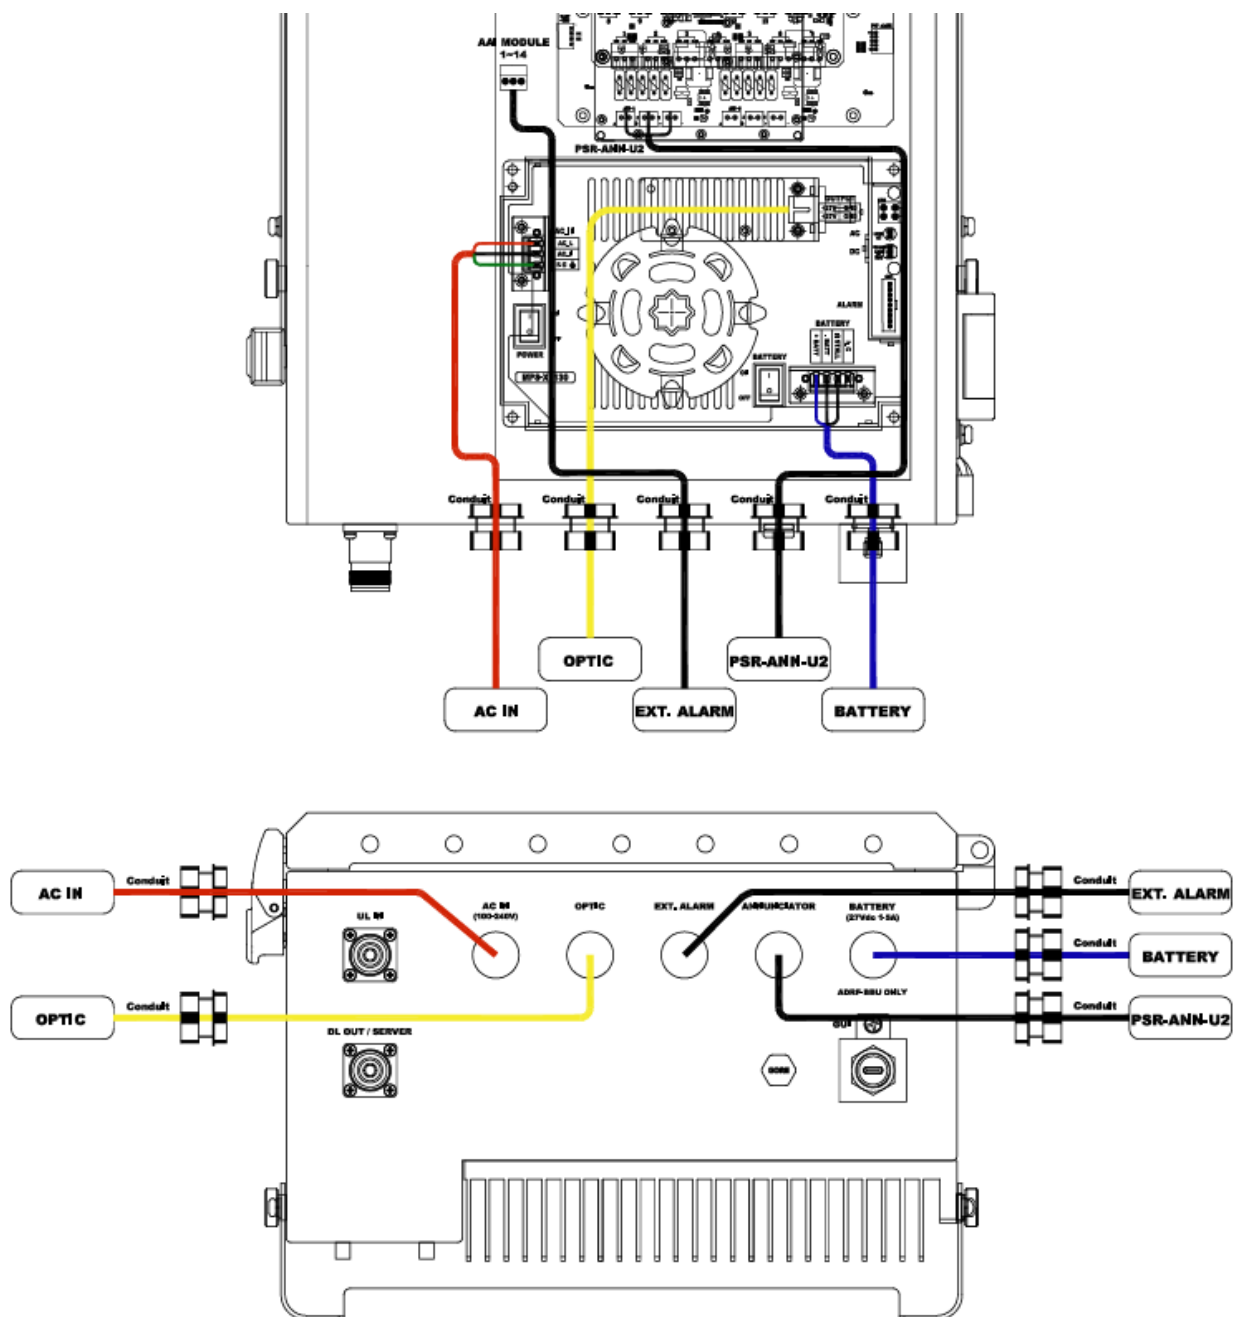


Figure 3-2 ADXV-R-25VU-U2 Terminal Wiring Diagram

### 2.1.2 AC 100-240V Terminal Block

The AC 100-240V terminal block is located on the left side of the wiring room. It is fixed to the terminal block on the power supply. It can support cable gauges up to 14 AWG.

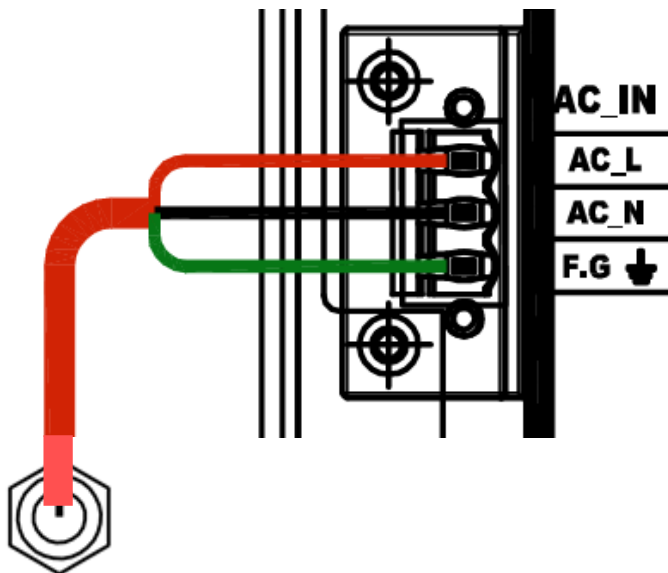


Figure 3-3 AC 100-240V Terminal Block

Table 3-2 120V AC Terminal Block Definition

| Silkscreen Label | Line Type   | Max Supported AWG | Comment |
|------------------|-------------|-------------------|---------|
| AC_L             | Neutral     | 14AWG             |         |
| AC_N             | Line or Hot | 14AWG             |         |
| F.G              | Ground      | 14AWG             |         |

Table 3-3 240V AC Terminal Block Definition

| Silkscreen Label | Line Type   | Max Supported AWG | Comment |
|------------------|-------------|-------------------|---------|
| AC_L             | Line or Hot | 14AWG             |         |
| AC_N             | Line or Hot | 14AWG             |         |
| F.G              | Ground      | 14AWG             |         |

## 2.2 External Alarm



Figure 3-4 External Alarm port

This port is to be connected to the fire alarm control panel (FACP) and will provide the alarming status of the ADXV-R-25VU-U2. Can support cable gauges up to 14 AWG

Table 3-3 External Alarm Port Pin Description

| AAI Number | Connector Pin Number | Alarm Description            | Selection Pin Description |
|------------|----------------------|------------------------------|---------------------------|
| 1          | 1                    | Donor antenna malfunction    | OPEN                      |
| 1          | 2                    | Donor antenna malfunction    | COM                       |
| 1          | 3                    | Donor antenna malfunction    | CLOSE                     |
| 2          | 1                    | Active RF device malfunction | OPEN                      |
| 2          | 2                    | Active RF device malfunction | COM                       |
| 2          | 3                    | Active RF device malfunction | CLOSE                     |
| 3          | 1                    | Low battery capacity         | OPEN                      |
| 3          | 2                    | Low battery capacity         | COM                       |
| 3          | 3                    | Low battery capacity         | CLOSE                     |
| 4          | 1                    | System component malfunction | OPEN                      |
| 4          | 2                    | System component malfunction | COM                       |
| 4          | 3                    | System component malfunction | CLOSE                     |
| 5          | 1                    | Normal AC Power              | OPEN                      |
| 5          | 2                    | Normal AC Power              | COM                       |
| 5          | 3                    | Normal AC Power              | CLOSE                     |
| 6          | 1                    | Loss of normal AC Power      | OPEN                      |
| 6          | 2                    | Loss of normal AC Power      | COM                       |
| 6          | 3                    | Loss of normal AC Power      | CLOSE                     |
| 7          | 1                    | Battery charger failure      | OPEN                      |
| 7          | 2                    | Battery charger failure      | COM                       |
| 7          | 3                    | Battery charger failure      | CLOSE                     |
| 8          | 1                    | Donor Antenna Disconnect     | OPEN                      |
| 8          | 2                    | Donor Antenna Disconnect     | COM                       |
| 8          | 3                    | Donor Antenna Disconnect     | CLOSE                     |
| 9          | 1                    | ANN Disconnection            | OPEN                      |
| 9          | 2                    | ANN Disconnection            | COM                       |
| 9          | 3                    | ANN Disconnection            | CLOSE                     |

|    |   |                   |       |
|----|---|-------------------|-------|
| 10 | 1 | Summary Alarm     | OPEN  |
| 10 | 2 | Summary Alarm     | COM   |
| 10 | 3 | Summary Alarm     | CLOSE |
| 11 | 1 | Oscillation Alarm | OPEN  |
| 11 | 2 | Oscillation Alarm | COM   |
| 11 | 3 | Oscillation Alarm | CLOSE |
| 12 | 1 | AAI Alarm Spare 1 | OPEN  |
| 12 | 2 | AAI Alarm Spare 1 | COM   |
| 12 | 3 | AAI Alarm Spare 1 | CLOSE |
| 13 | 1 | AAI Alarm Spare 2 | OPEN  |
| 13 | 2 | AAI Alarm Spare 2 | COM   |
| 13 | 3 | AAI Alarm Spare 2 | CLOSE |
| 14 | 1 | AAI Alarm Spare 3 | OPEN  |
| 14 | 2 | AAI Alarm Spare 3 | COM   |
| 14 | 3 | AAI Alarm Spare 3 | CLOSE |

Normal Operation; For Open, connect signal lines to Open Pin and Com Pin; For Close, connect signal lines to Closed Pin and Com Pin.

Com pin is used in common and is selected between open and close pins.

### 2.3 UL IN



Figure 3-5 UL IN

The RF connector is a 4.3-10 female connector. The RF connector labeled "UL IN" should be connected to the server antenna in the coverage area when the MPLX is not in use.

RF connection shall be made via a cable with a characteristic impedance of 50 ohms.

### 2.4 DL OUT / SERVER

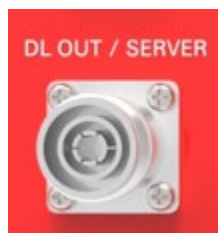


Figure 3-6 DL OUT / SERVER

The RF connector is a 4.3-10 female connector. When using a MPLX, an RF connector labeled "DL OUT/SERVER" must be connected to the server antenna in the coverage area.  
RF connection shall be made via a cable with a characteristic impedance of 50 ohms.

## 2.5 Optic


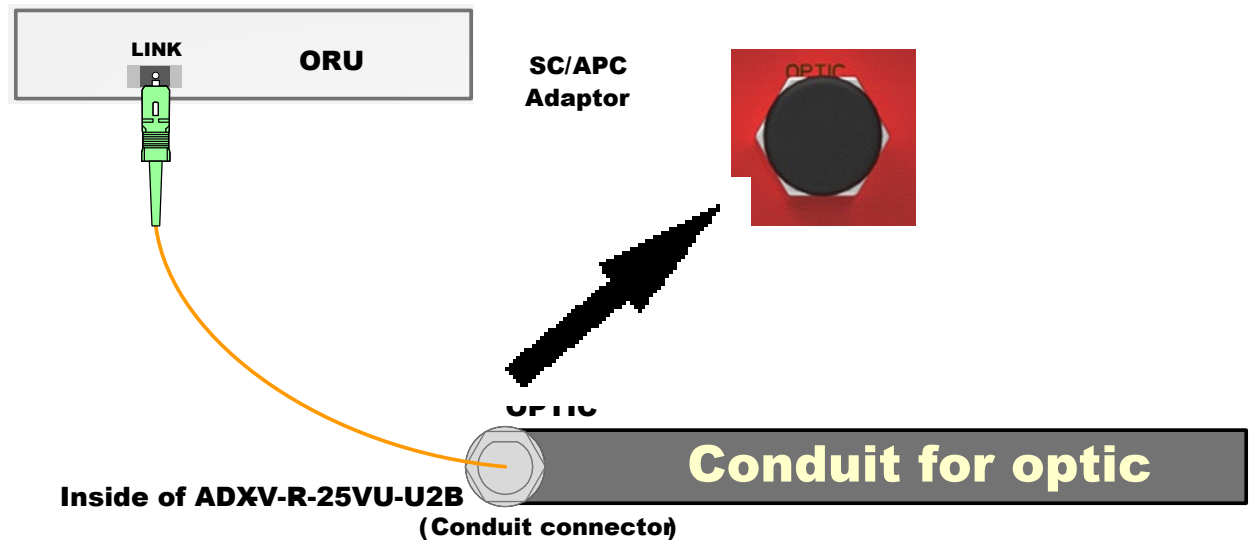



Figure 3-7 Optic port

ORU located inside of equipment has 1 optic port (SC/APC type) for the link to the ADXV-HE.  
Optical connectors and ports must be kept clean and should be cleaned before any connections are made. In addition, please ensure that the optical cable is free of any sharp bends to prevent optical power from reflecting back to the unit and minimize the about of optic loss between the ADXV-HE and the ADXV-R-25VU-U2.

- We recommend cleaning the optic connectors using a dry optical cleaning swab or tissue in a dry environment as needed. We recommend cleaning the optic connectors only if the expected optic loss is higher than the loss reported in the Web-GUI by 1.5dB<sub>o</sub>. (Figure 3-8)
- When optic connectors are not in use, the port should be covered with a protective dust cap. (Figure 3-9)

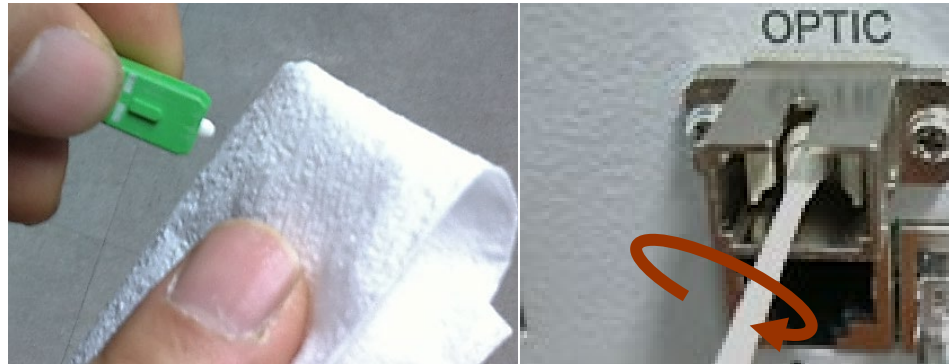

**Figure 3-8 Optic Connector Cleaning (left) and Optic Port Cleaning (right)**

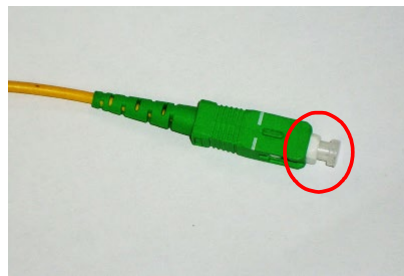

**Figure 3-9 SC/APC Optic Connector Dust Cap**

## 2.6 Battery

This port connects to an ADRF 24V battery backup unit via a dedicated cable provided by the ADRF.

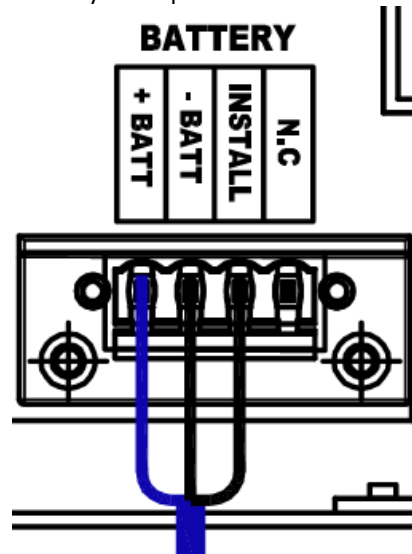


Figure 3-10 Battery Backup Port

If an ADRF 24V battery backup unit is connected to the repeater, the battery switch on the PSU must be switched to the ON position. This will enable the repeater to charge the ADRF 24V battery backup when AC power is present.

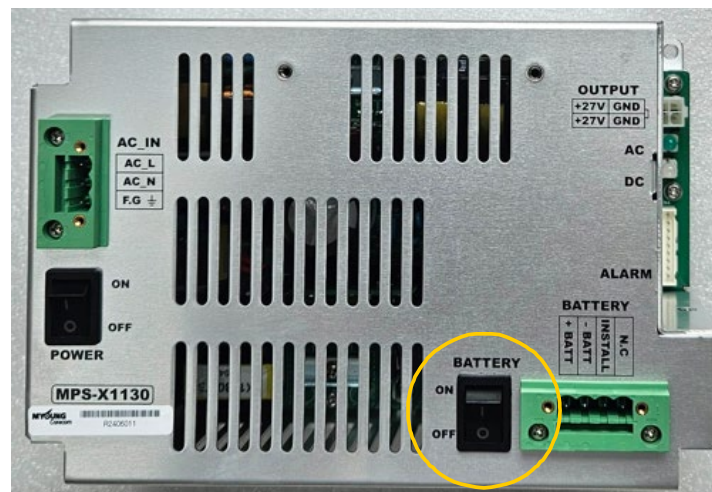


Figure 3-11 Battery Switch

The ADXV-R-25VU-U2B can be connected to an ADRF 24V battery backup unit to provide power during a power failure.

**(WARNING: The circuit breaker switch on the ADRF battery backup unit must be set to the OFF position before connecting it to the ADXV-R-25VU-U2 to prevent damage to the repeater, the ADRF battery backup unit, or personal injury.)**

Note: Please contact ADRF Technical Support for assistance if you are unfamiliar with the installation procedure of the battery box.

## 2.7 Grounding

A ground cable is included in the box. The grounding terminals are located on the lower right-hand side of the equipment. The grounding cable should be properly connected before powering on the equipment.



**Figure 3-12 Protective Earthing Conductor**

Ground terminals located on the side consisted of a 16mm<sup>2</sup>(6AWG) and should be permanently connected to the earth (Protective earthing conductor).

### 3. INSTALLATION



**WARNING.** This is **NOT** a **CONSUMER** device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an FCC Licensee to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

1. To mount on a wall. Using appropriate screws and anchors, attach the BDA to the wall at the four mounting holes
  2. Ensure that the isolation between the donor antenna and the service antenna is at least 15 dB greater than the BDA gain.
  3. Connect the cable from the donor antenna to the BDA connector labeled “DONOR” and the cable from the service antennas to the BDA connector labeled “SERVER”.
  4. Connect the AC power to the BDA and turn on the switch on the left-hand of the PSU.
  5. Installation of the equipment is now complete. Adjust the gain controls to suit the specific signal environment through GUI on your PC.
- To prevent feedback, the donor and server antennas must be separated by an appropriate distance to provide sufficient isolation. Isolation is attained by separating antennas at a sufficient distance so that the output of one antenna does not reach the input of the other. This distance is dependent on the gain of the repeater.
  - Before equipment use the service must be registered with the FCC. This can be done through the FCC’s website at <https://signalboosters.fcc.gov/signal-boosters>)

## 4. SPECIFICATIONS

### 4.1 ADXV-R-25VU-U2 Specifications

| Parameters                         |               | VHF/UHF                                        |
|------------------------------------|---------------|------------------------------------------------|
| Frequency                          | Downlink      | VHF 138-174MHz<br>UHF 406.1-521MHz             |
|                                    | Uplink        | VHF 138-174MHz<br>UHF 406.1-521MHz             |
| Input Power Range @POIL            | Power Mode    | +25~ -15dBm                                    |
| System Gain                        | Downlink      | ADXV-H-POIL-VU to R-25VU-U2: 0~40dB            |
|                                    | Uplink        | -20~10dB                                       |
| Maximum Composite Output Power(DL) |               | 25dBm (Tolerance $\pm 0.5$ dB)                 |
| Maximum Composite Output Power(UL) |               | -35dBm(Typical)                                |
| Noise Figure                       |               | $\leq 6$ dB @maximum gain, Center Frequency    |
| VSWR                               |               | $\leq 1.5:1$                                   |
| Optical Loss                       |               | 0~5dBo                                         |
| System Delay                       |               | < 2 $\mu$ s                                    |
| Spurious                           |               | Meet FCC Rules                                 |
| Dimension (WXDXH)                  | H-POIL-VU     | 2.6 x 17.1 x 6.85 inches                       |
|                                    | R-25VU-U2     | 12.61 x 15.76 x 8.43 inches                    |
| Weight                             | H-POIL-VU     | 6.61 lbs                                       |
|                                    | R-25VU-U2     | TBD                                            |
| Operating Temperature              | H-POIL-VU     | 32 ~ 122°F(0 ~ 50°C)                           |
|                                    | R-25VU-U2     | -22 ~ 131°F(-30 ~ 55°C)                        |
| Operating Humidity                 |               | 5~90%RH                                        |
| Power Supply                       | Head-End / RU | 110/220V, 50-60Hz with battery backup function |
| Network Management System          |               | C-Type                                         |
| RF connector                       | H-POIL-VU     | 4.3-10 (Female)   SMBL (Female)                |
|                                    | R-25VU-U2     | 4.3-10 (Female)                                |

## 5. MECHANICAL DRAWING

### 5.1.1 ADV-R-25VU-U2B Mechanical drawing

