

# **User's guide for a RKE RF SYSTEM**

Type designation of the transmitter : **S0084-A**

Trade mark : **VALEO**

Car Manufacturer : **HONDA**

## **Introduction**

The system called RKE (Remote Keyless Entry) has two separate units : a transmitter and a receiver.

Its function consists in allowing the remote control of the door lock and unlock of a car by operating on the controls of a central unit.

The transmitter electronic circuit is introduced in a key which is attached to the ignition key.

## **Door lock**

To lock the doors, press and release the lock button on the key.

## **Door unlock**

To unlock the doors, press and release the unlock button on the key

## **Other function of the buttons (trunk, windows, others.....)**

Others optionally functions can be used for example for unlocking the trunk or opening and closing the windows.